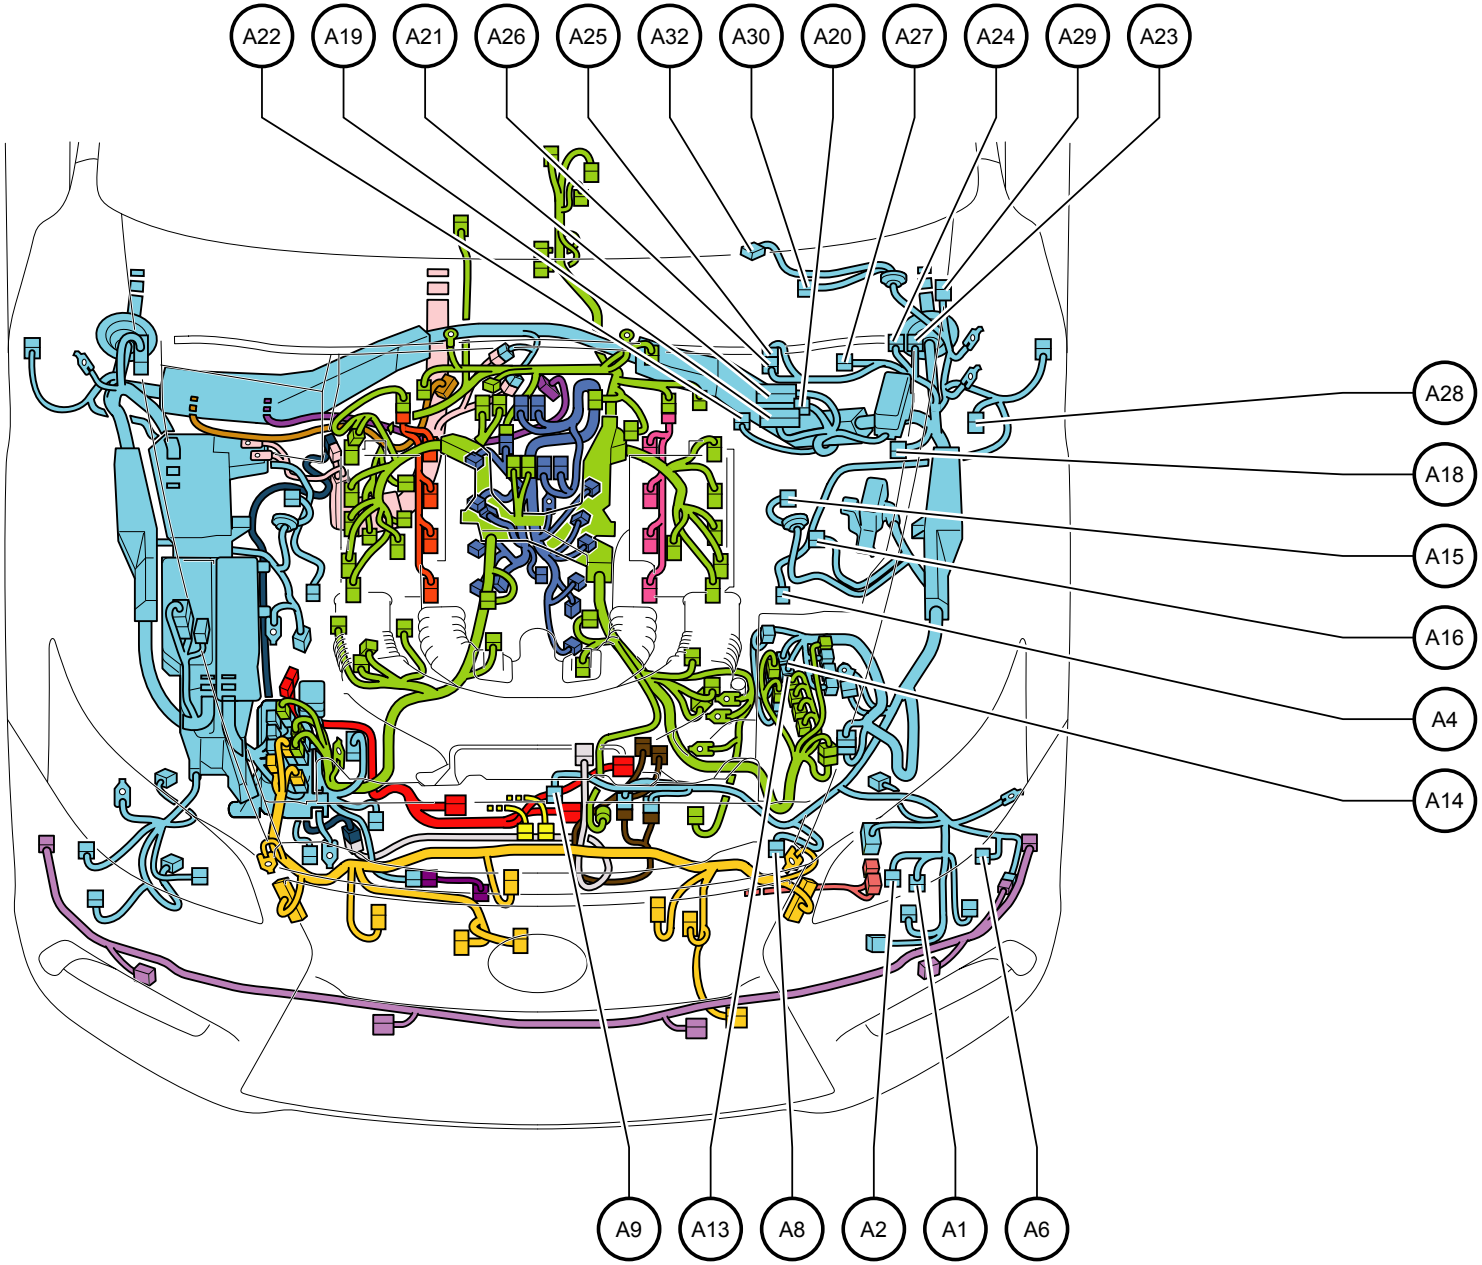
A22
A19
A21
A26
A25
A32
A30
A20
A27
A24
A29
A23
A28
A18
A15
A16
A4
A14
A9
A13
A8
A2
A1
A6

A 1 Windshield Washer Motor and Pump Assembly
A 2 Level Warning Switch Assembly
A 4 Front Height Control Sensor Sub-Assembly LH
A 6 Headlight Cleaner Relay
A 8 Front Airbag Sensor LH
A 9 Cooling Fan ECU
A 13 ECM
A 14 ECM
A 15 Front Absorber Control Actuator LH
A 16 Fuel Pump Resistor
A 18 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A 19 Skid Control ECU Assembly
A 20 Skid Control ECU Assembly
A 21 Skid Control ECU Assembly
A 22 Brake Stroke Simulator
A 23 Brake Booster Pump Assembly
A 24 Brake Booster Pump Assembly
A 25 Short Connector (Brake Stroke Simulator)
A 26 Short Connector (Brake Stroke Simulator)
A 27 Brake Actuator Assembly
A 28 Wireless Door Lock Buzzer
A 29 Security Horn Assembly
A 30 Front Wiper Deicer (Windshield Glass)
A 32 Windshield Wiper Motor Assembly

A 1
Black

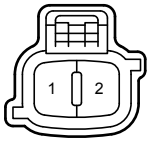

A 2
Black

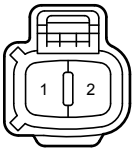

A 4
Black

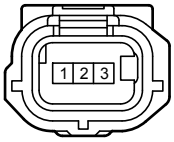

A 6
Gray

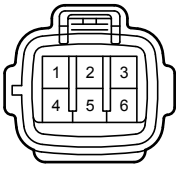

A 8
Yellow

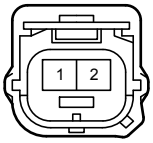

A 9
Black

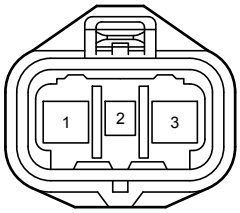

A 13
White

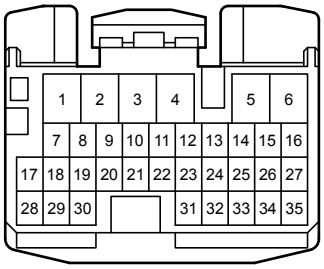

A 14
White

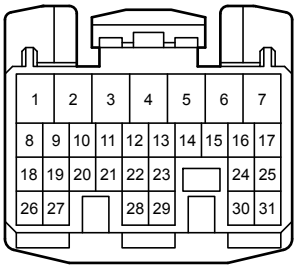

A 15
Black

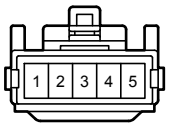

A 16
Black

A 18
Black

A 19
Black

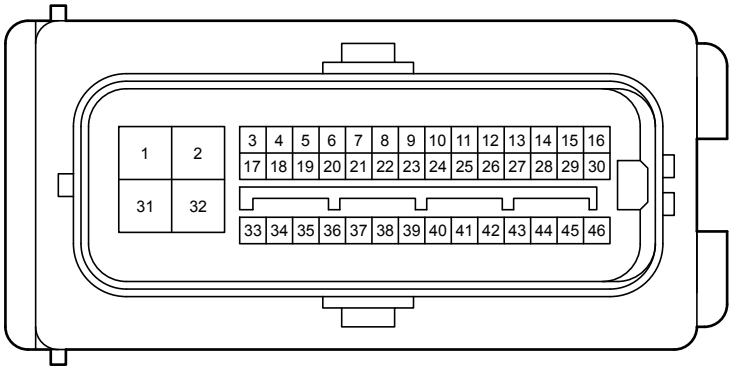

A 20
Black

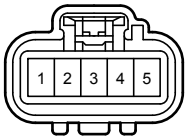

A 21
Gray

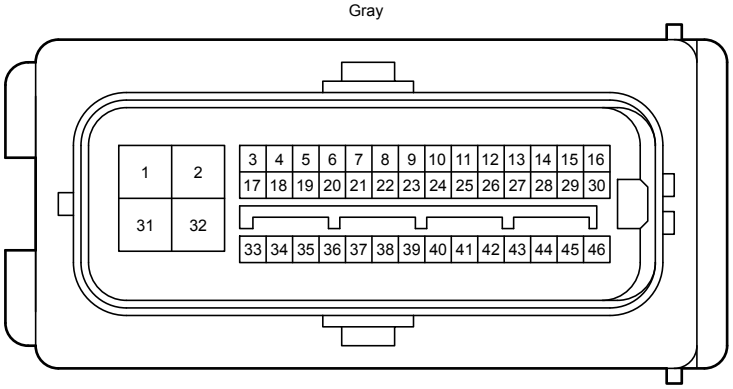

A 22
Gray

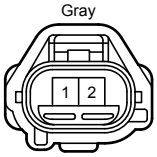

A 23
Black

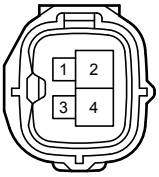

A 24
Black

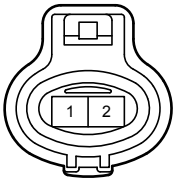

A 25
Gray

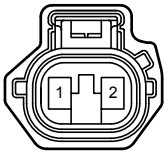

A 26
Gray

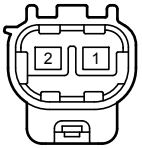

A 27
Black

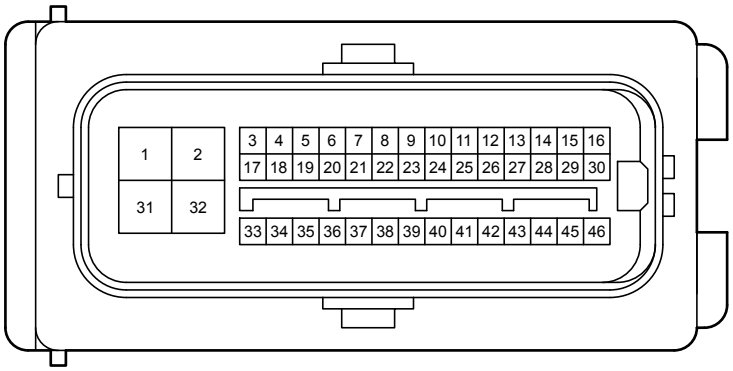

A 28
Black



A 29
Black



A 30
Gray

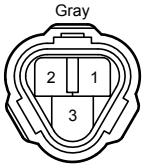
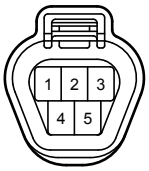
A 32
Black