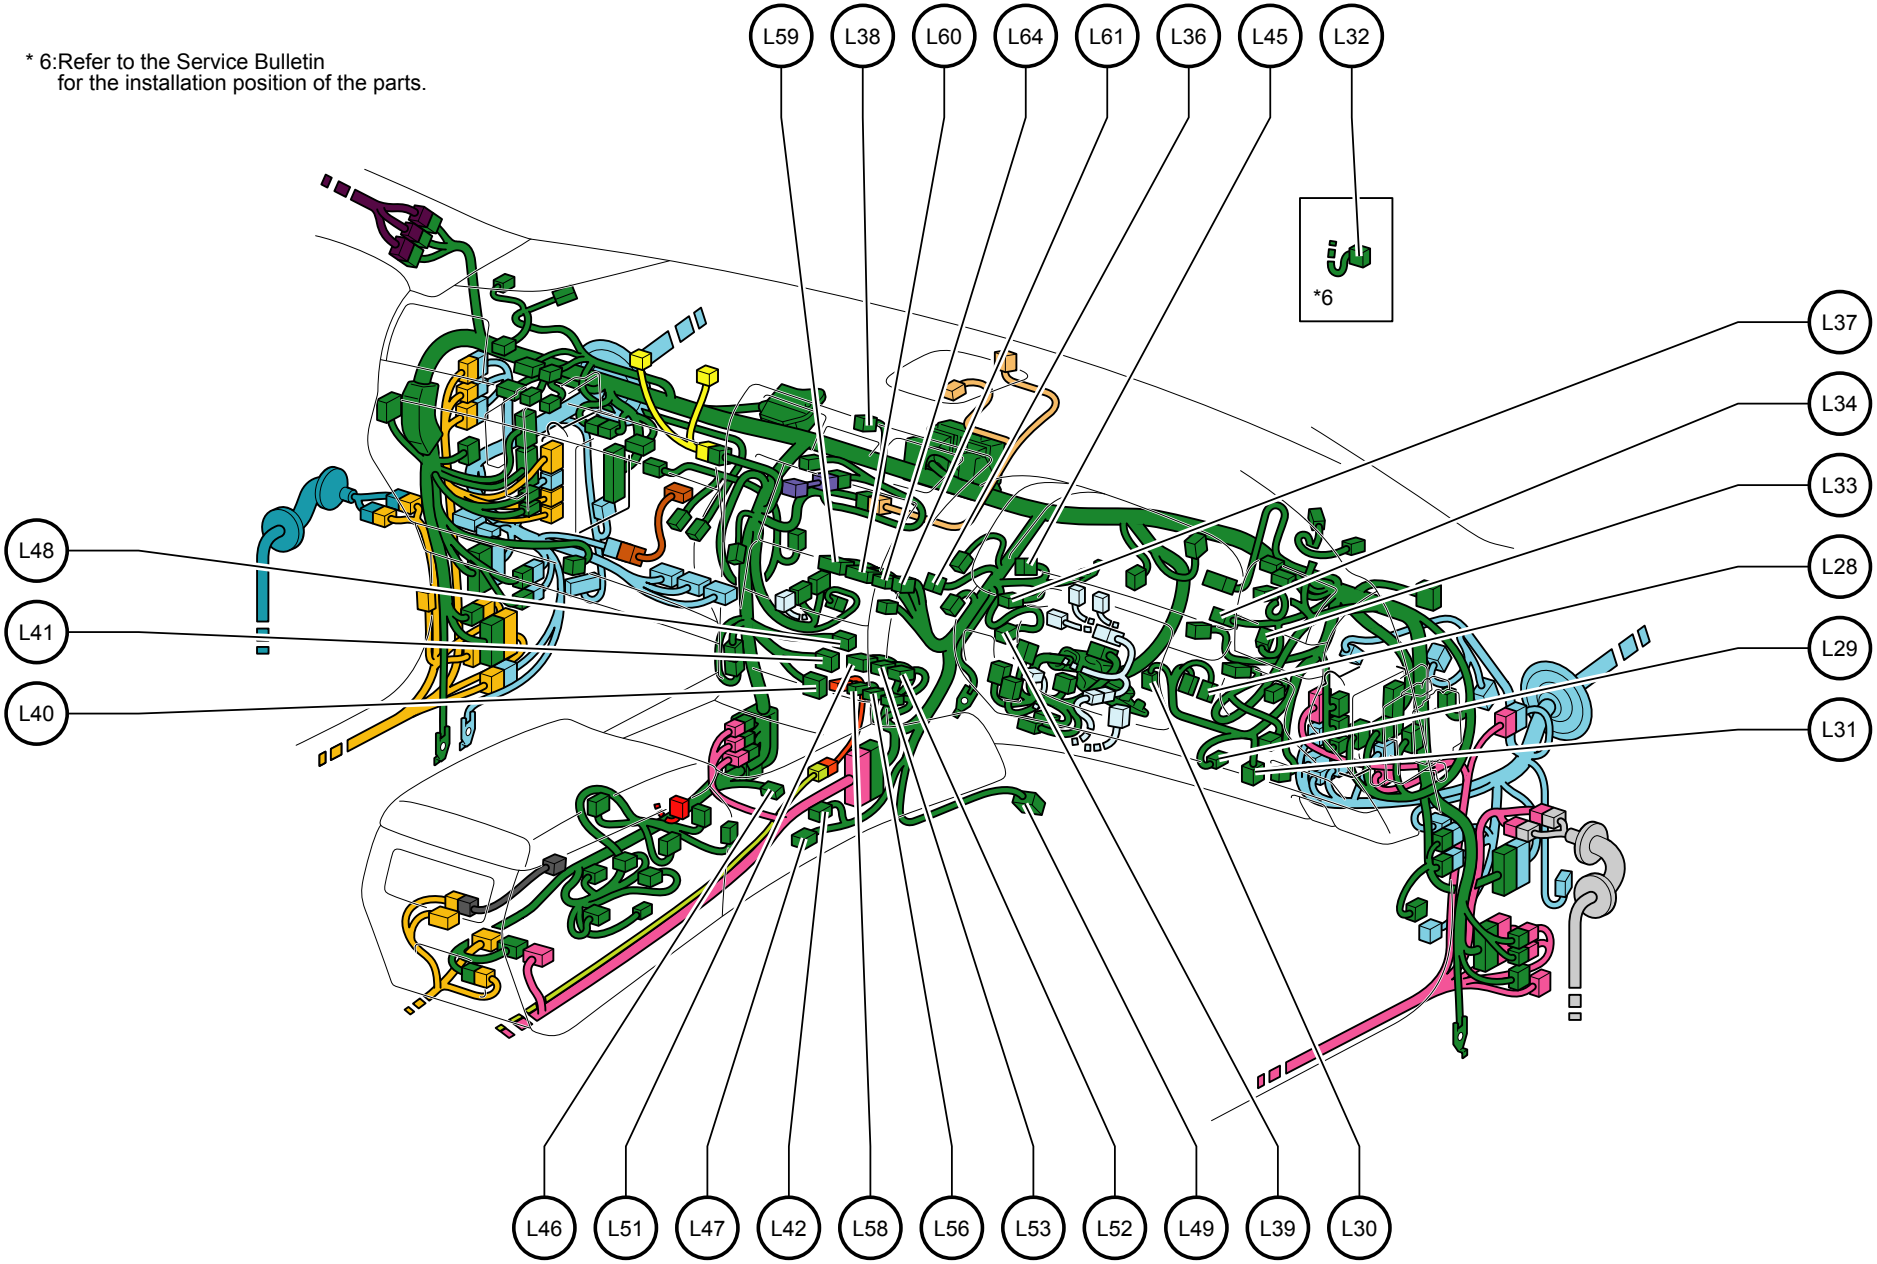
* 6:Refer to the Service Bulletin
for the installation position of the parts.
L59
L38
L60
L64
L61
L36
L45
L32
*6
L37
L34
L33
L28
L29
L31
L48
L41
L40
L46
L51
L47
L42
L58
L56
L53
L52
L49
L39
L30

L 28 Tire Pressure Warning Reset Switch
L 29 No.1 Interior Illumination Light Assembly RH
L 30 Wireless Door Lock Buzzer Controller
L 31 DLC3
L 32 ID Code Box
L 33 Steering Lock Actuator Assembly
L 34 Multiplex Tilt and Telescopic ECU
L 36 Power Switch
L 37 Front Room Temperature Sensor
L 38 Clock Assembly
L 39 Electric Parking Brake Switch Assembly
L 40 Quick Heater Assembly
L 41 Quick Heater Assembly
L 42 Transmission Shift Switch
L 45 Trip Switch
L 46 Front Cigarette Lighter
L 47 Shift Lock Control ECU
L 48 No.1 Clearance Warning Buzzer
L 49 Oxygen Sensor (Bank 2 Sensor 2)
L 51 Radio Receiver Assembly
L 52 Radio Receiver Assembly
L 53 Radio Receiver Assembly
L 56 Radio Receiver Assembly
L 58 Amplifier Antenna Assembly
L 59 Multi-Display Assembly
L 60 Multi-Display Assembly
L 61 Multi-Display Assembly
L 64 Multi-Display Assembly

L 28
Black



L 29
Gray



L 30
White



L 31
White

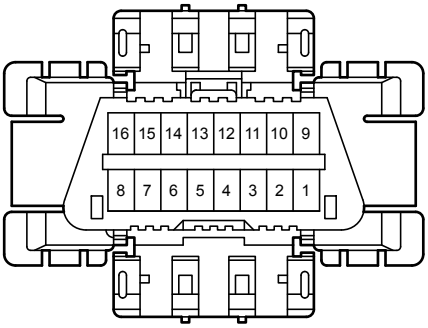

L 32
White

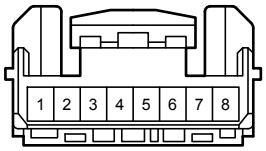

L 33
Black

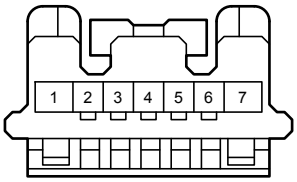

L 34
White

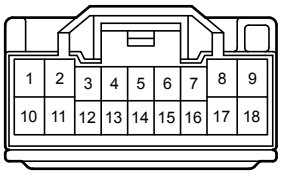

L 36
Black

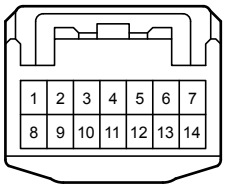

L 37
Black



L 38
White

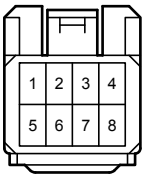

L 39
White

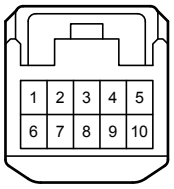

L 40
White

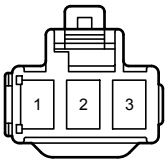

L 41
White

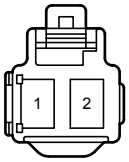

L 42
White

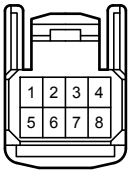

L 45
Black

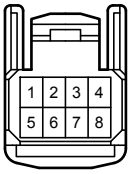

L 46
White



L 47
White

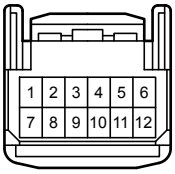

L 48
Black



L 49
Dark Gray

L 51
White

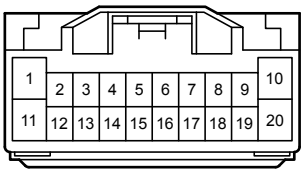

L 52
White

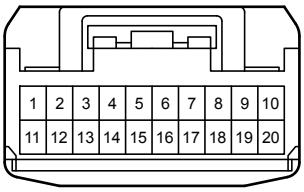

L 53
White

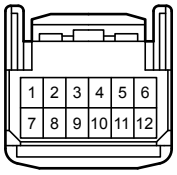

L 56
White

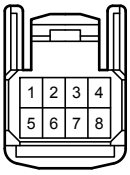

L 58
White

L 59
White

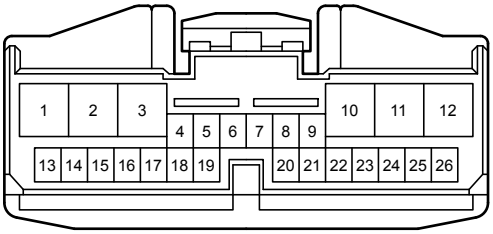

L 60
White

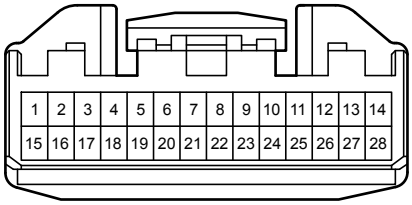

L 61
Blue


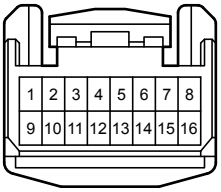
L 64
White