(Cont. next page)

Combination Meter (RHD)

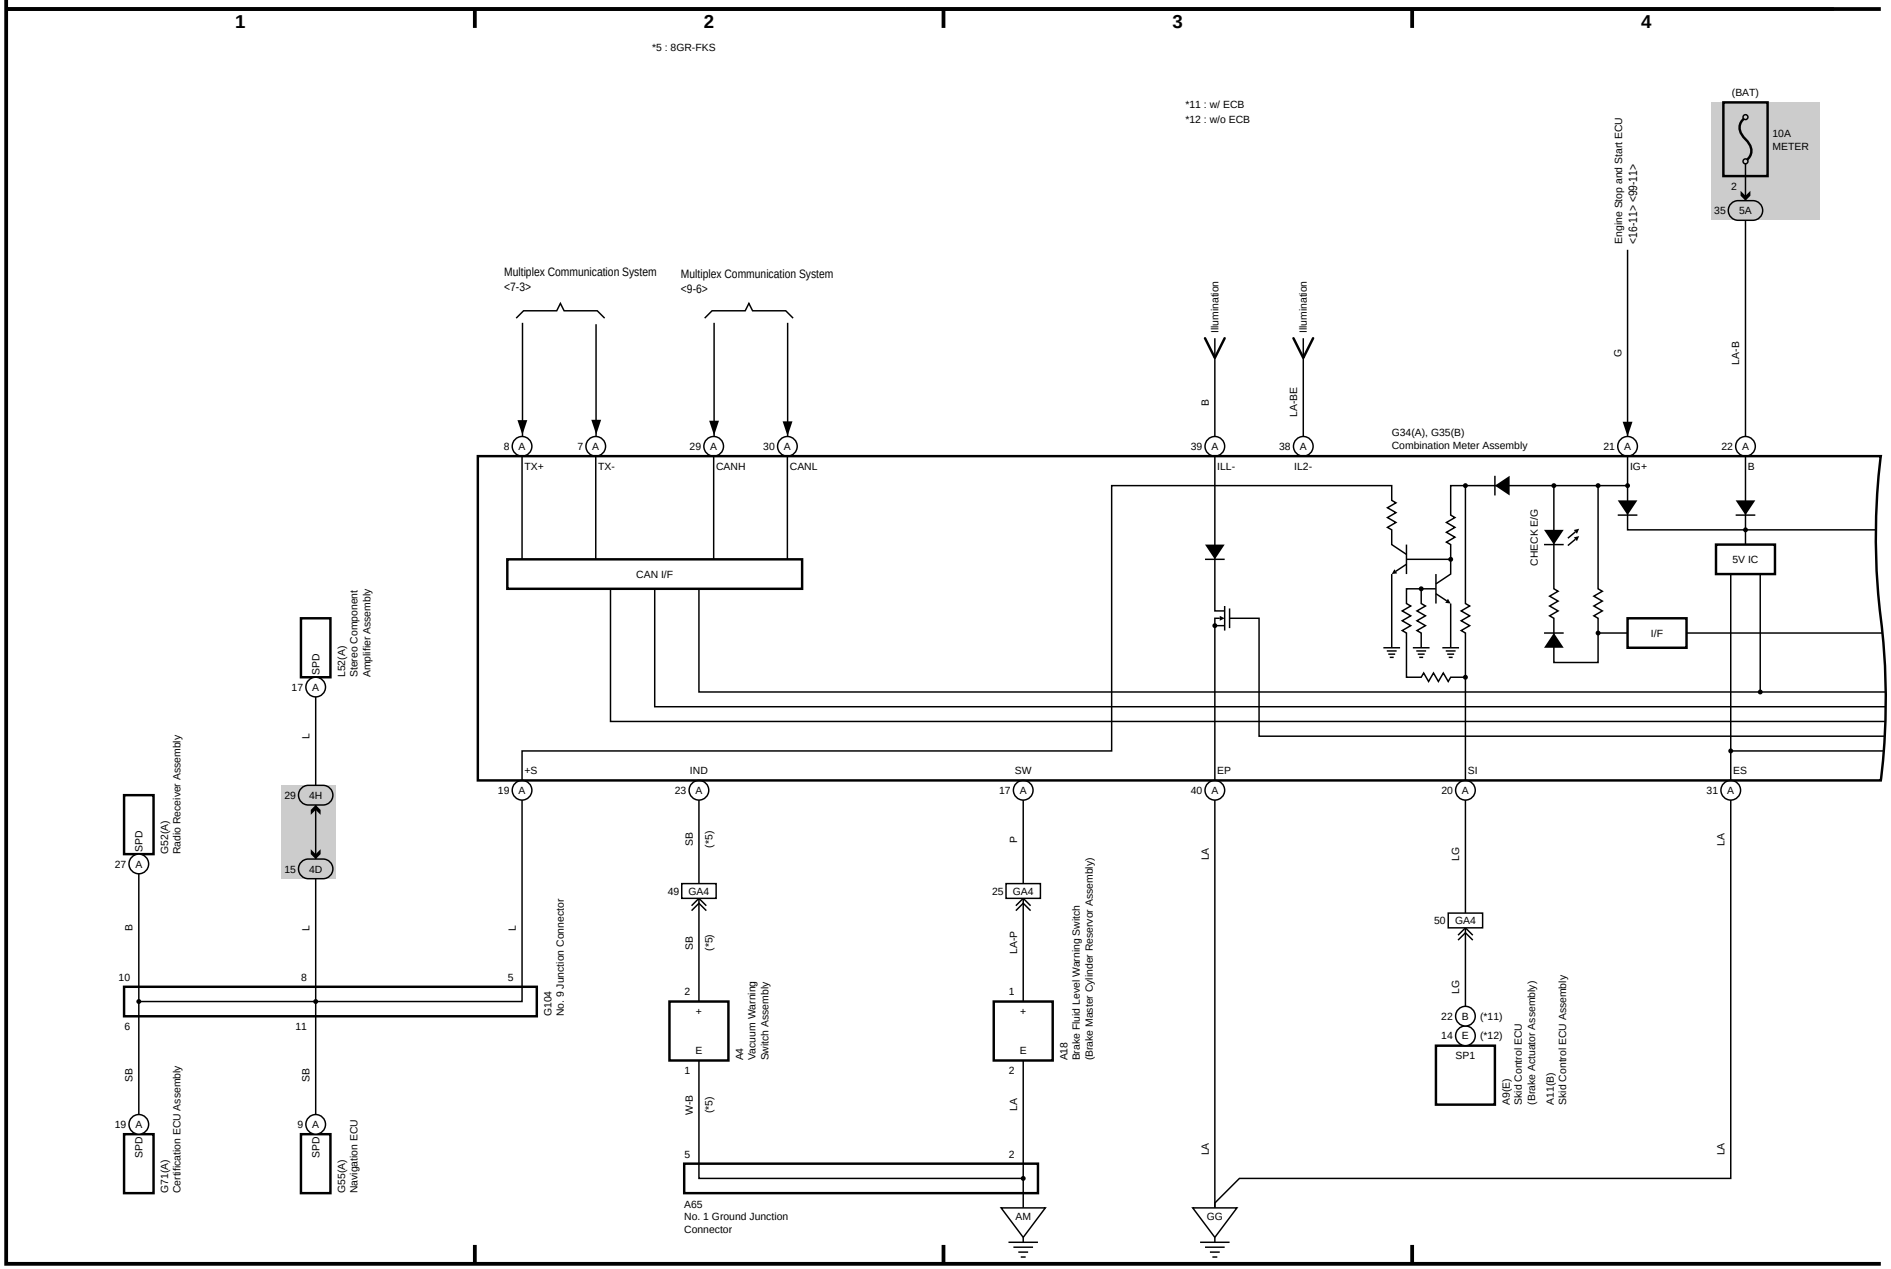

(Cont. next page)

Combination Meter (RHD)

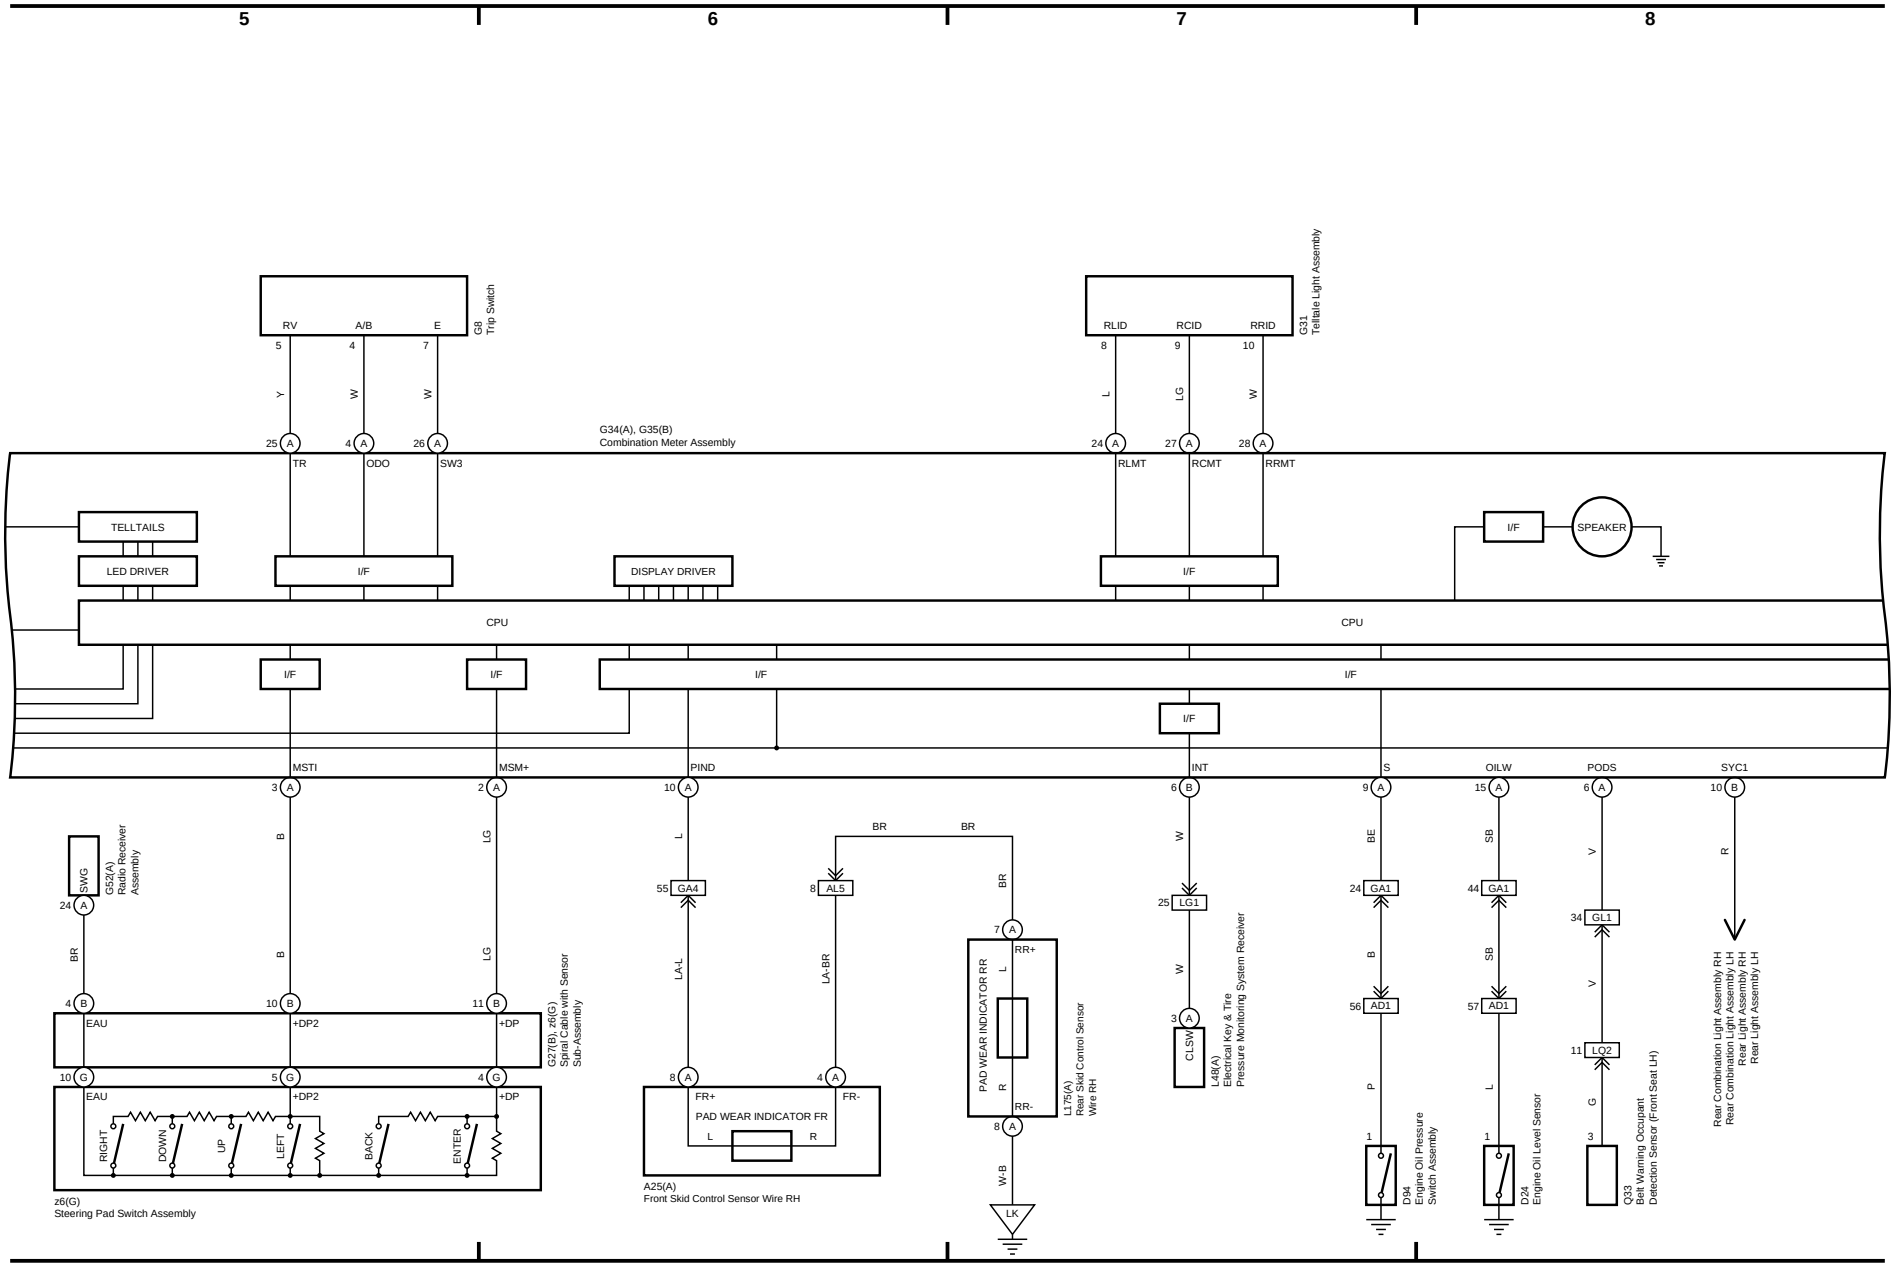

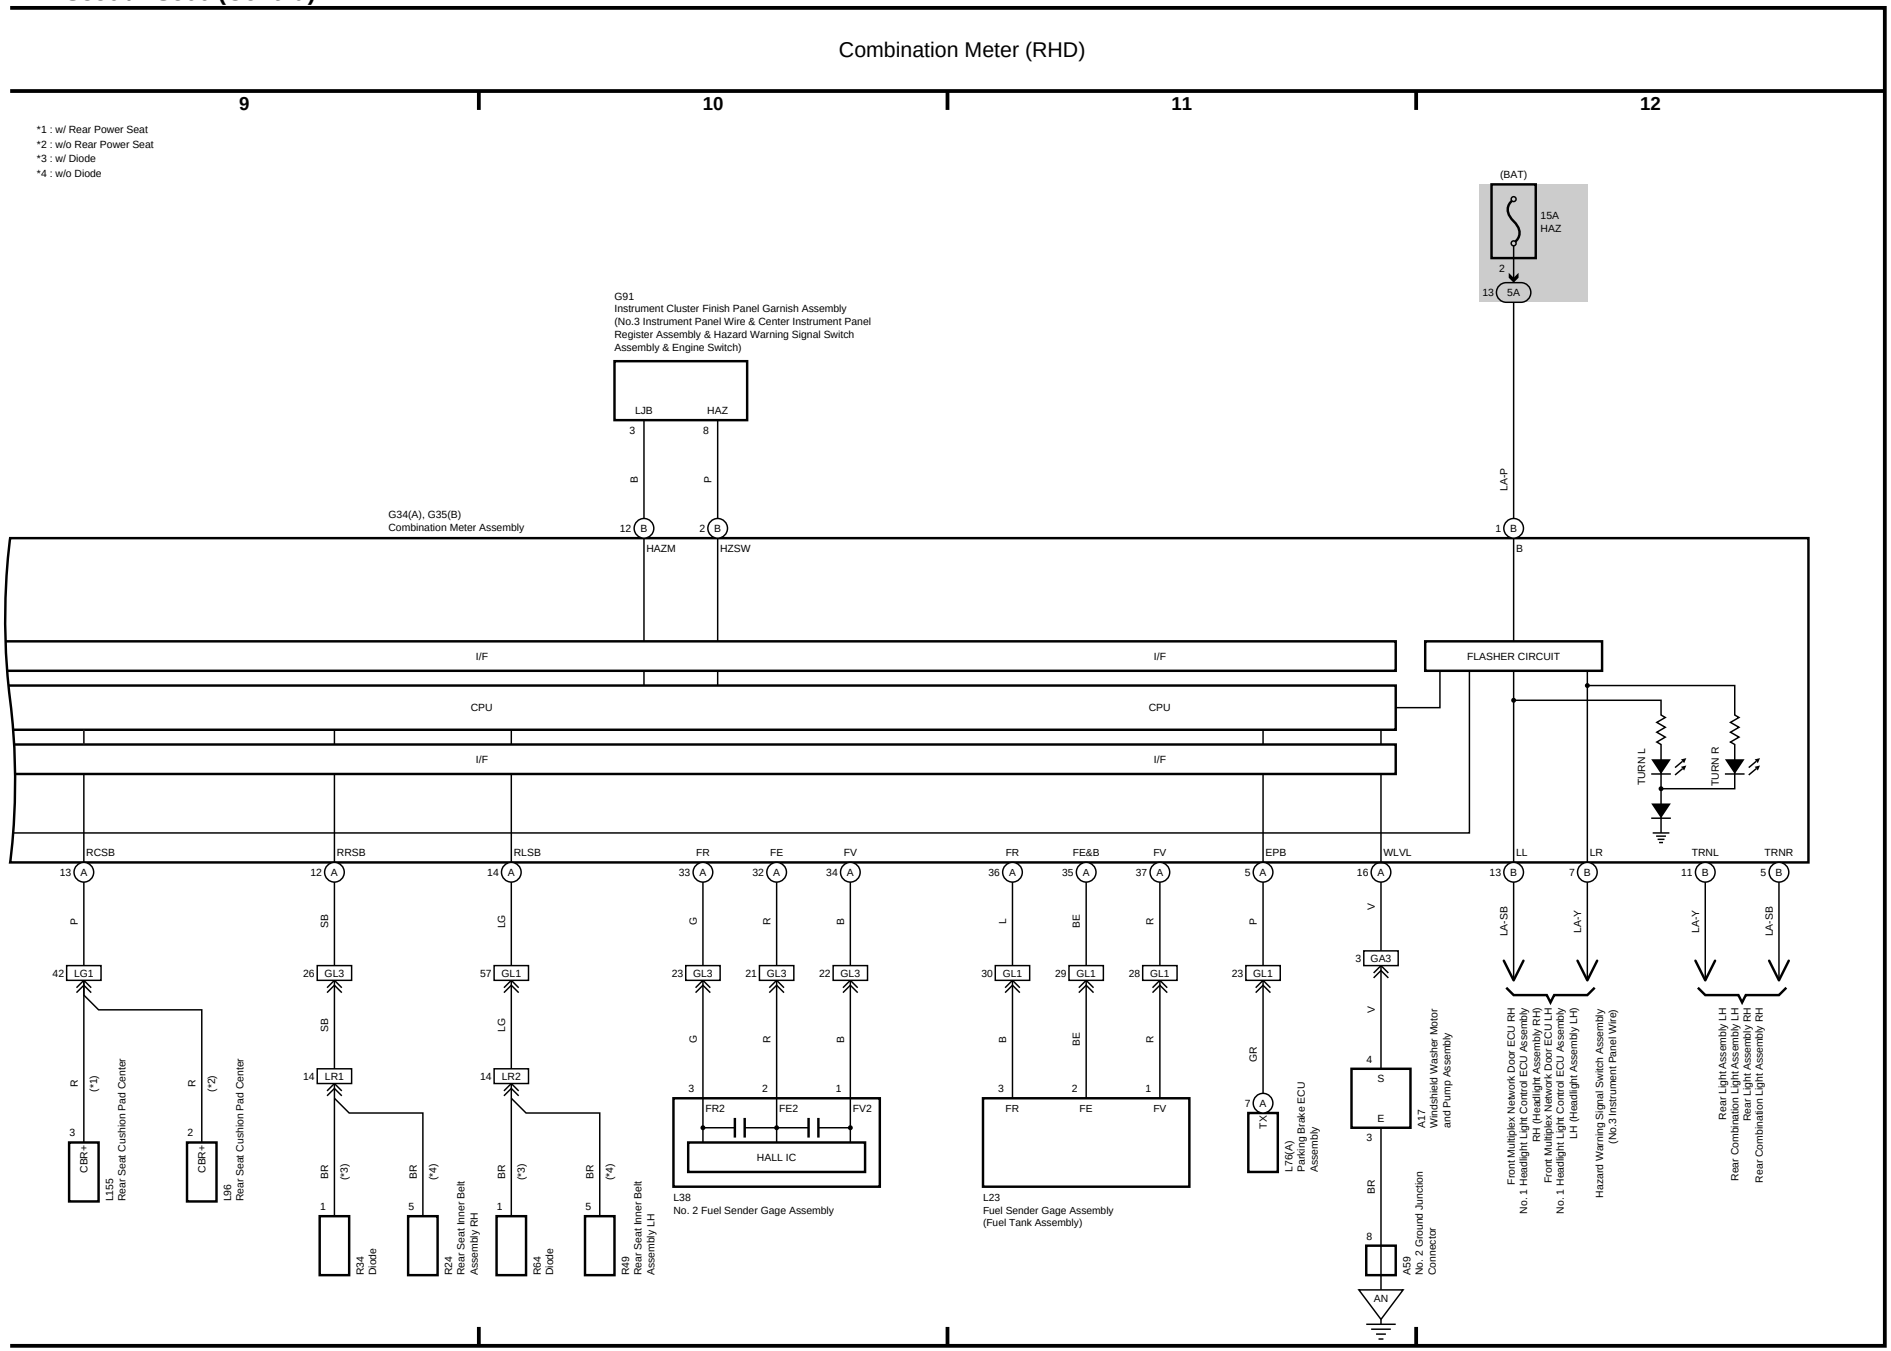
Combination Meter (RHD)
9
10
11
12
*1 : w/ Rear Power Seat
*2 : w/o Rear Power Seat
*3 : w/ Diode
*4 : w/o Diode
(BAT)
15A
HAZ
5A
G91
Instrument Cluster Finish Panel Garnish Assembly
(No.3 Instrument Panel Wire & Center Instrument Panel
Register Assembly & Hazard Warning Signal Switch
Assembly & Engine Switch)
LJB
HAZ
G34(A), G35(B)
Combination Meter Assembly
HAZM
HZSW
LA-P
I/F
CPU
FLASHER CIRCUIT
TURN L
TURN R
RCSB
RRSB
RLSB
FR
FE
FV
FE&B
EPB
WLVL
LL
LR
TRNL
TRNR
LG1
GL3
GL1
LR1
LR2
GA3
CBR+
L155
Rear Seat Cushion Pad Center
L36
Rear Seat Cushion Pad Center
R34
Diode
R24
Rear Seat Inner Belt
Assembly RH
R64
Diode
R49
Rear Seat Inner Belt
Assembly LH
FR2
FE2
FV2
HALL IC
L38
No. 2 Fuel Sender Gage Assembly
L23
Fuel Sender Gage Assembly
(Fuel Tank Assembly)
L76(A)
Parking Brake ECU
Assembly
A17
Windshield Washer Motor
and Pump Assembly
A59
No. 2 Ground Junction
Connector
AN
Front Multiplex Network Door ECU RH
No. 1 Headlight Light Control ECU Assembly
RH (Headlight Assembly RH)
Front Multiplex Network Door ECU LH
No. 1 Headlight Light Control ECU Assembly
LH (Headlight Assembly LH)
Hazard Warning Signal Switch Assembly
(No.3 Instrument Panel Wire)
Rear Light Assembly LH
Rear Combination Light Assembly LH
Rear Light Assembly RH
Rear Combination Light Assembly RH