(Cont. next page)

Engine Control (V35A-FTS) (RHD)

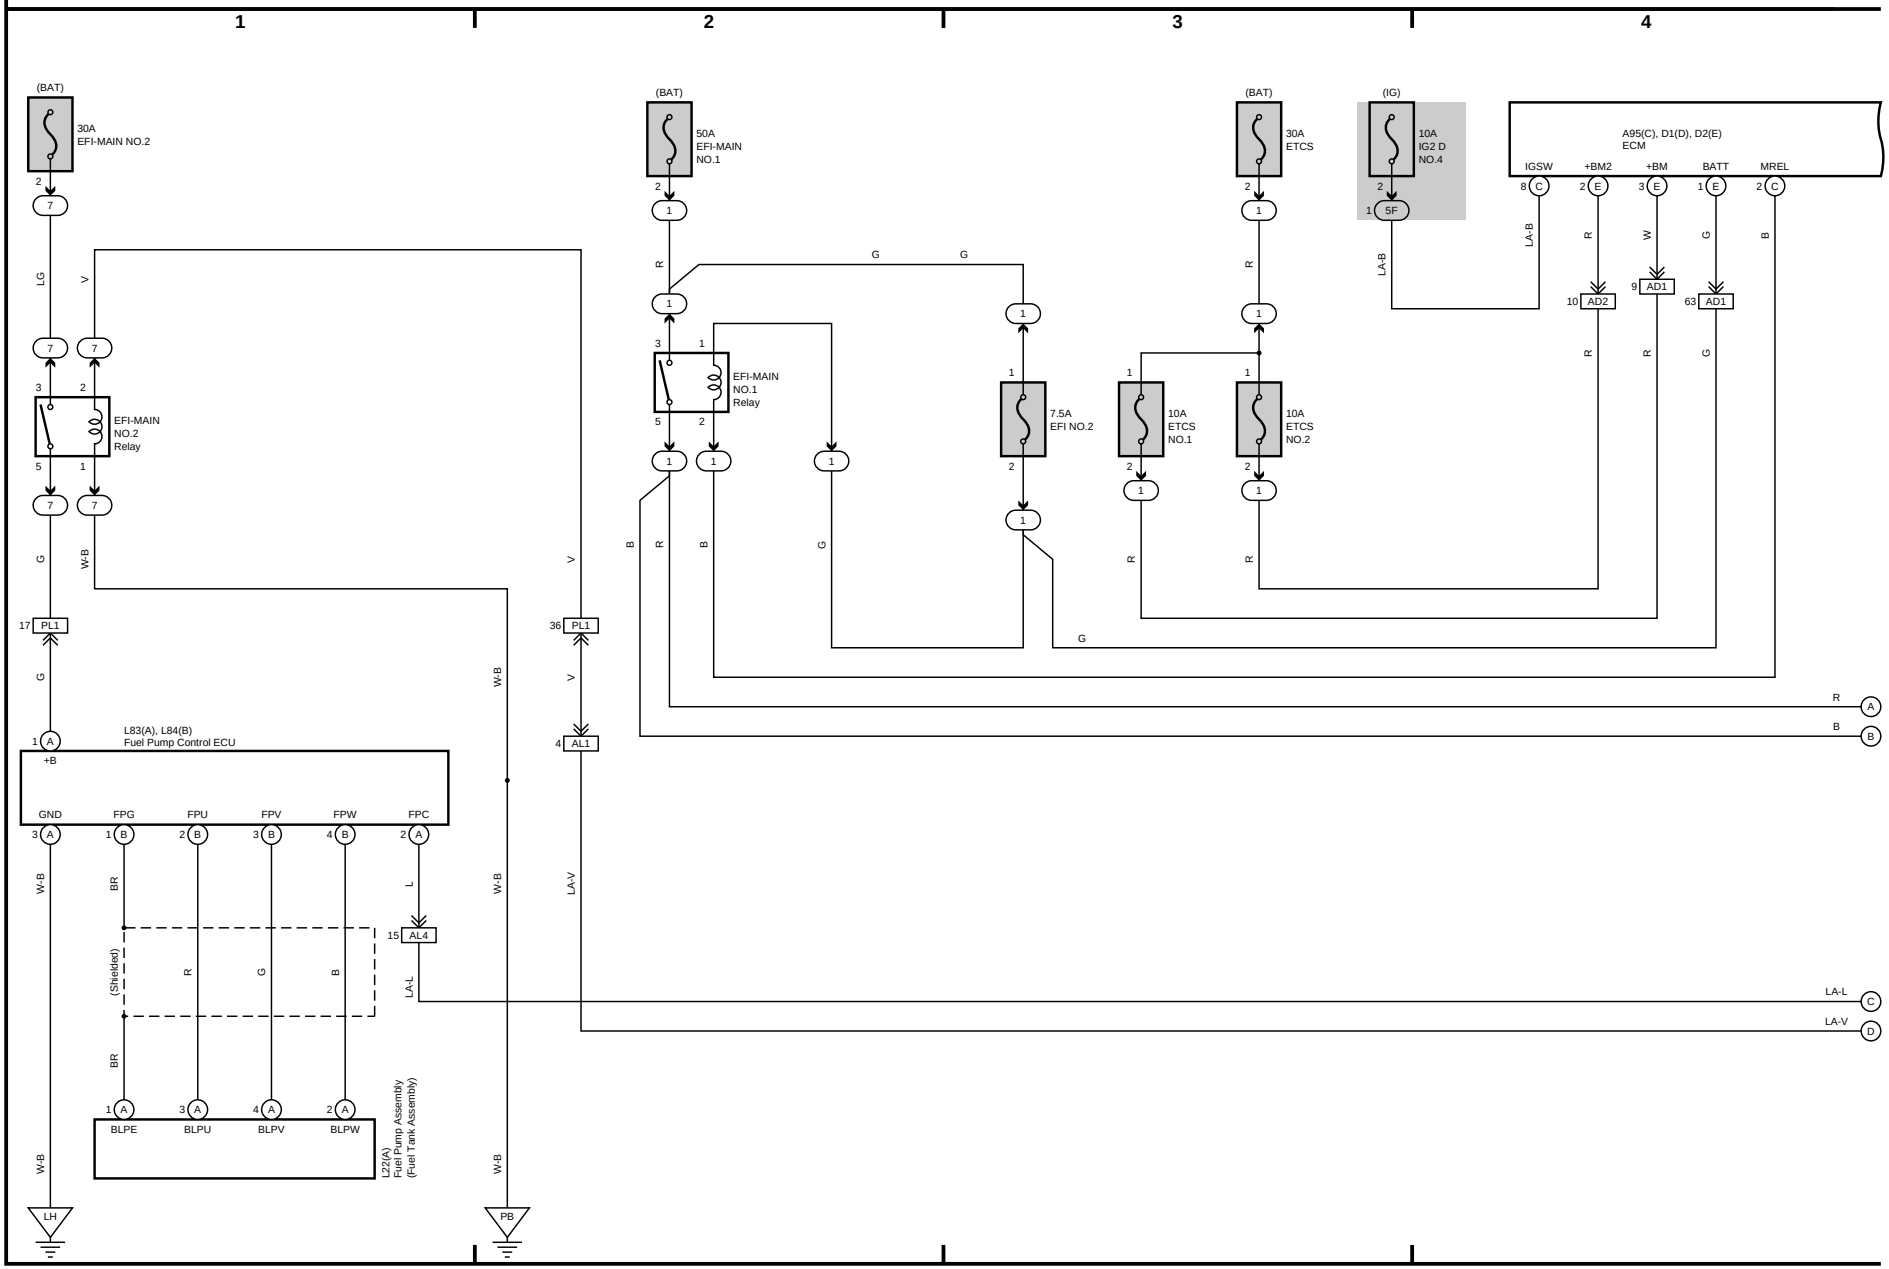

(Cont. next page)

Engine Control (V35A-FTS) (RHD)

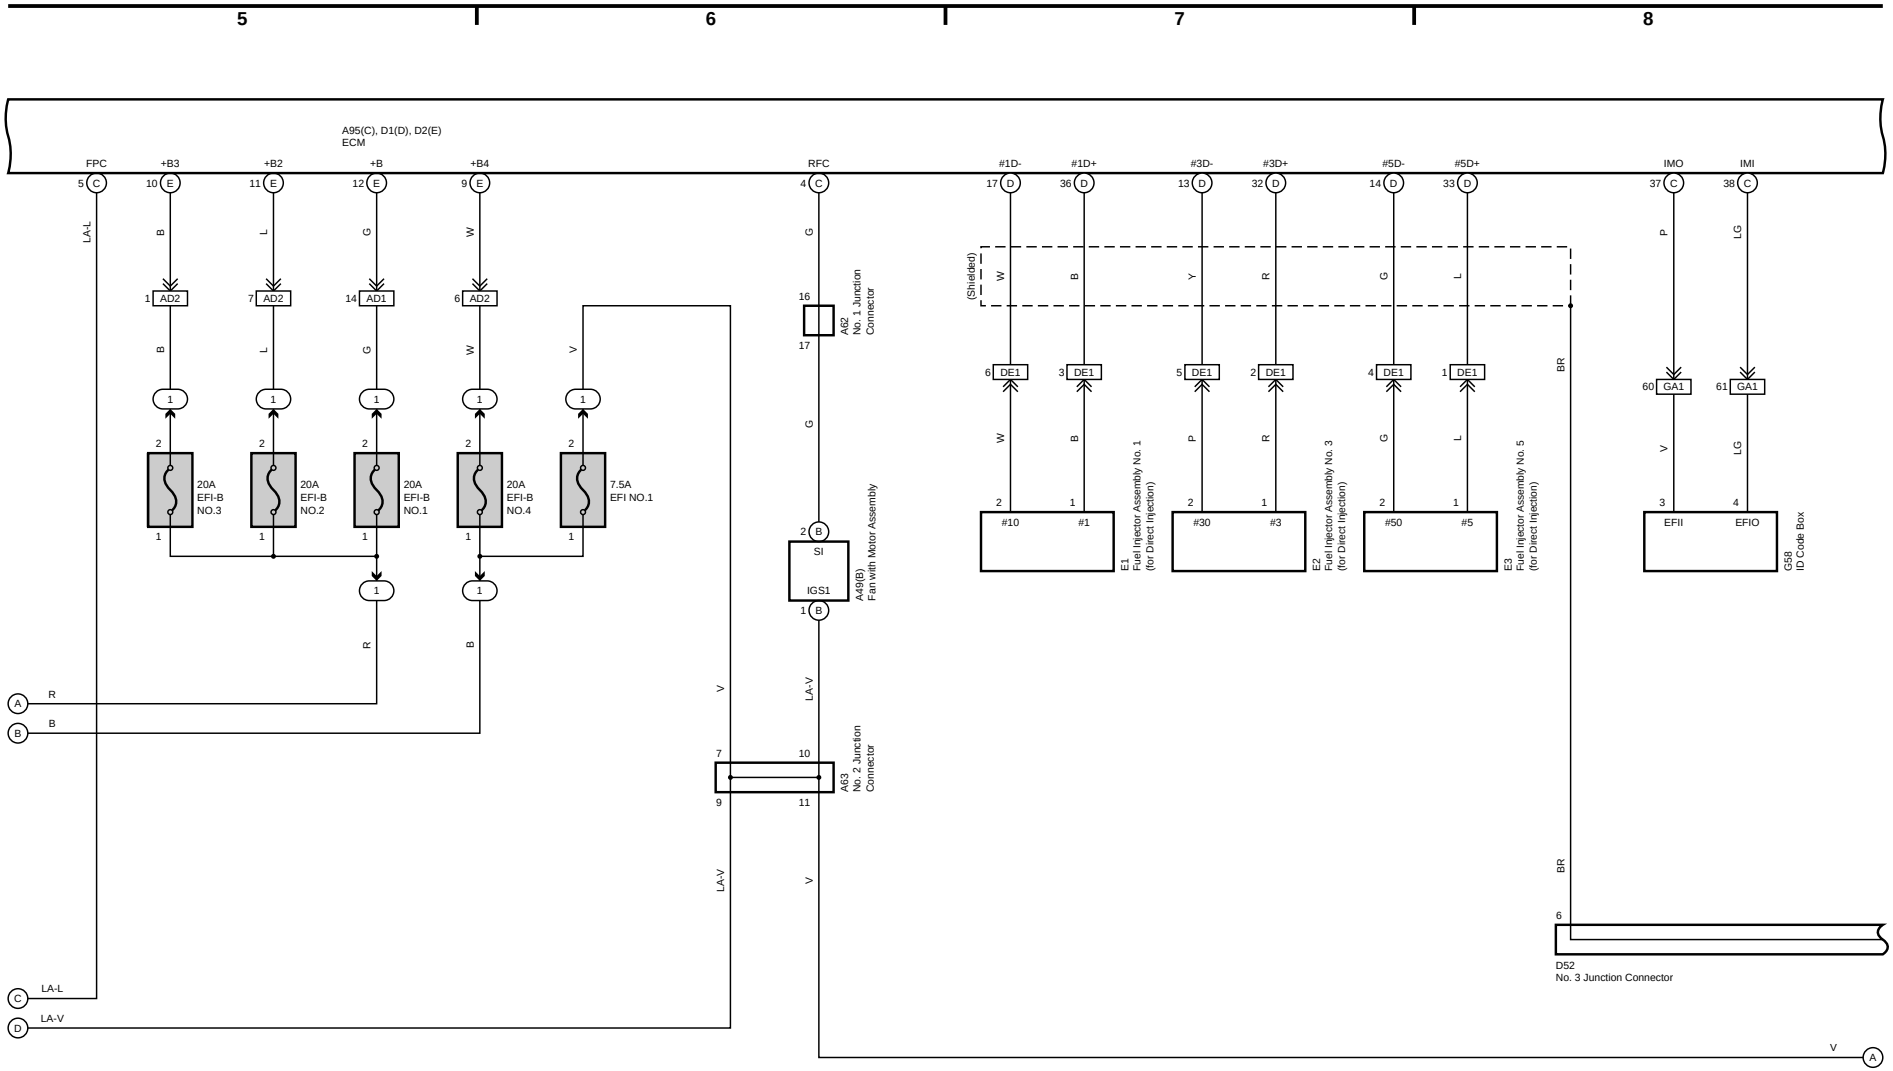

(Cont. next page)

Engine Control (V35A-FTS) (RHD)

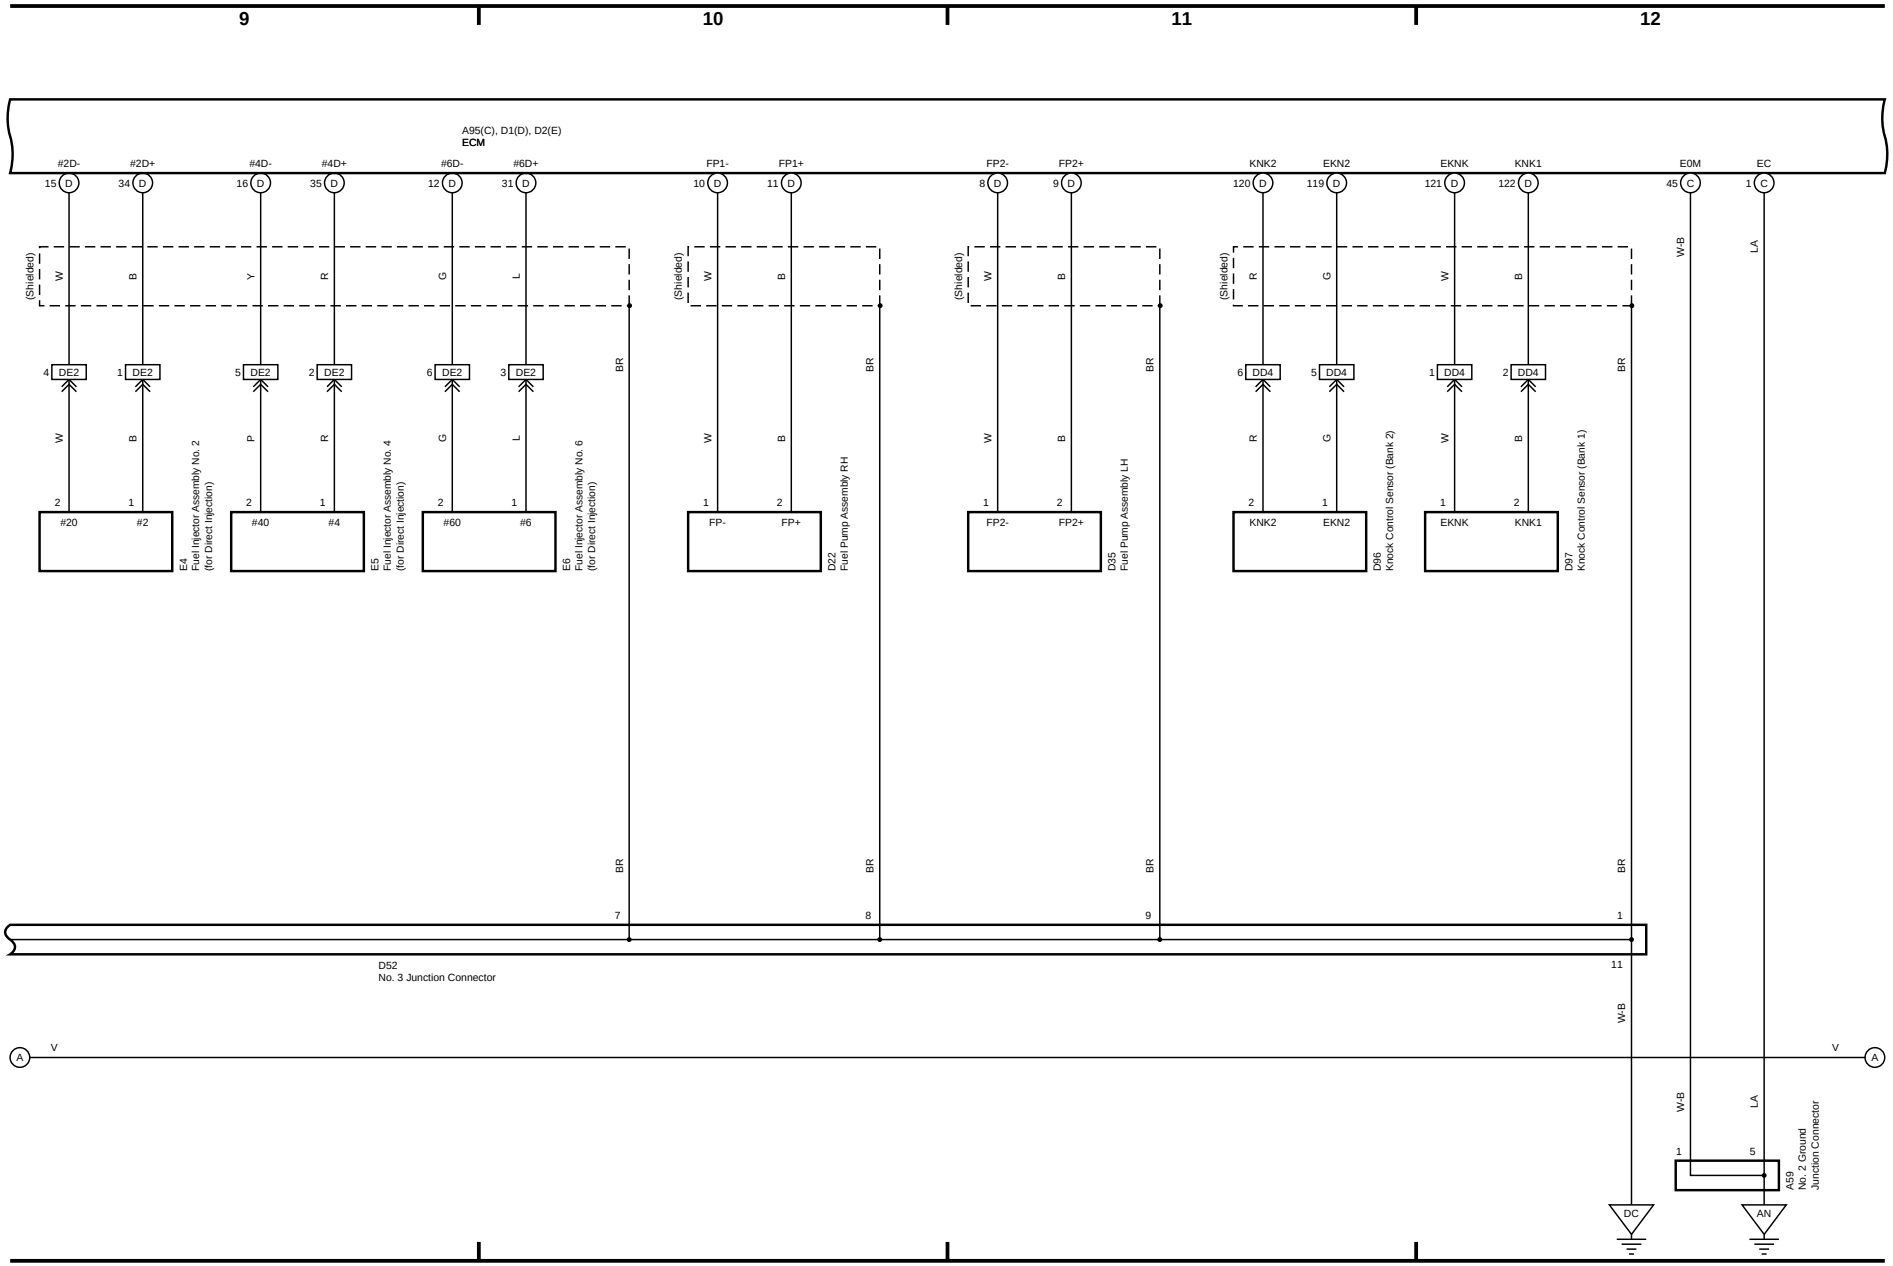

(Cont. next page)

Engine Control (V35A-FTS) (RHD)

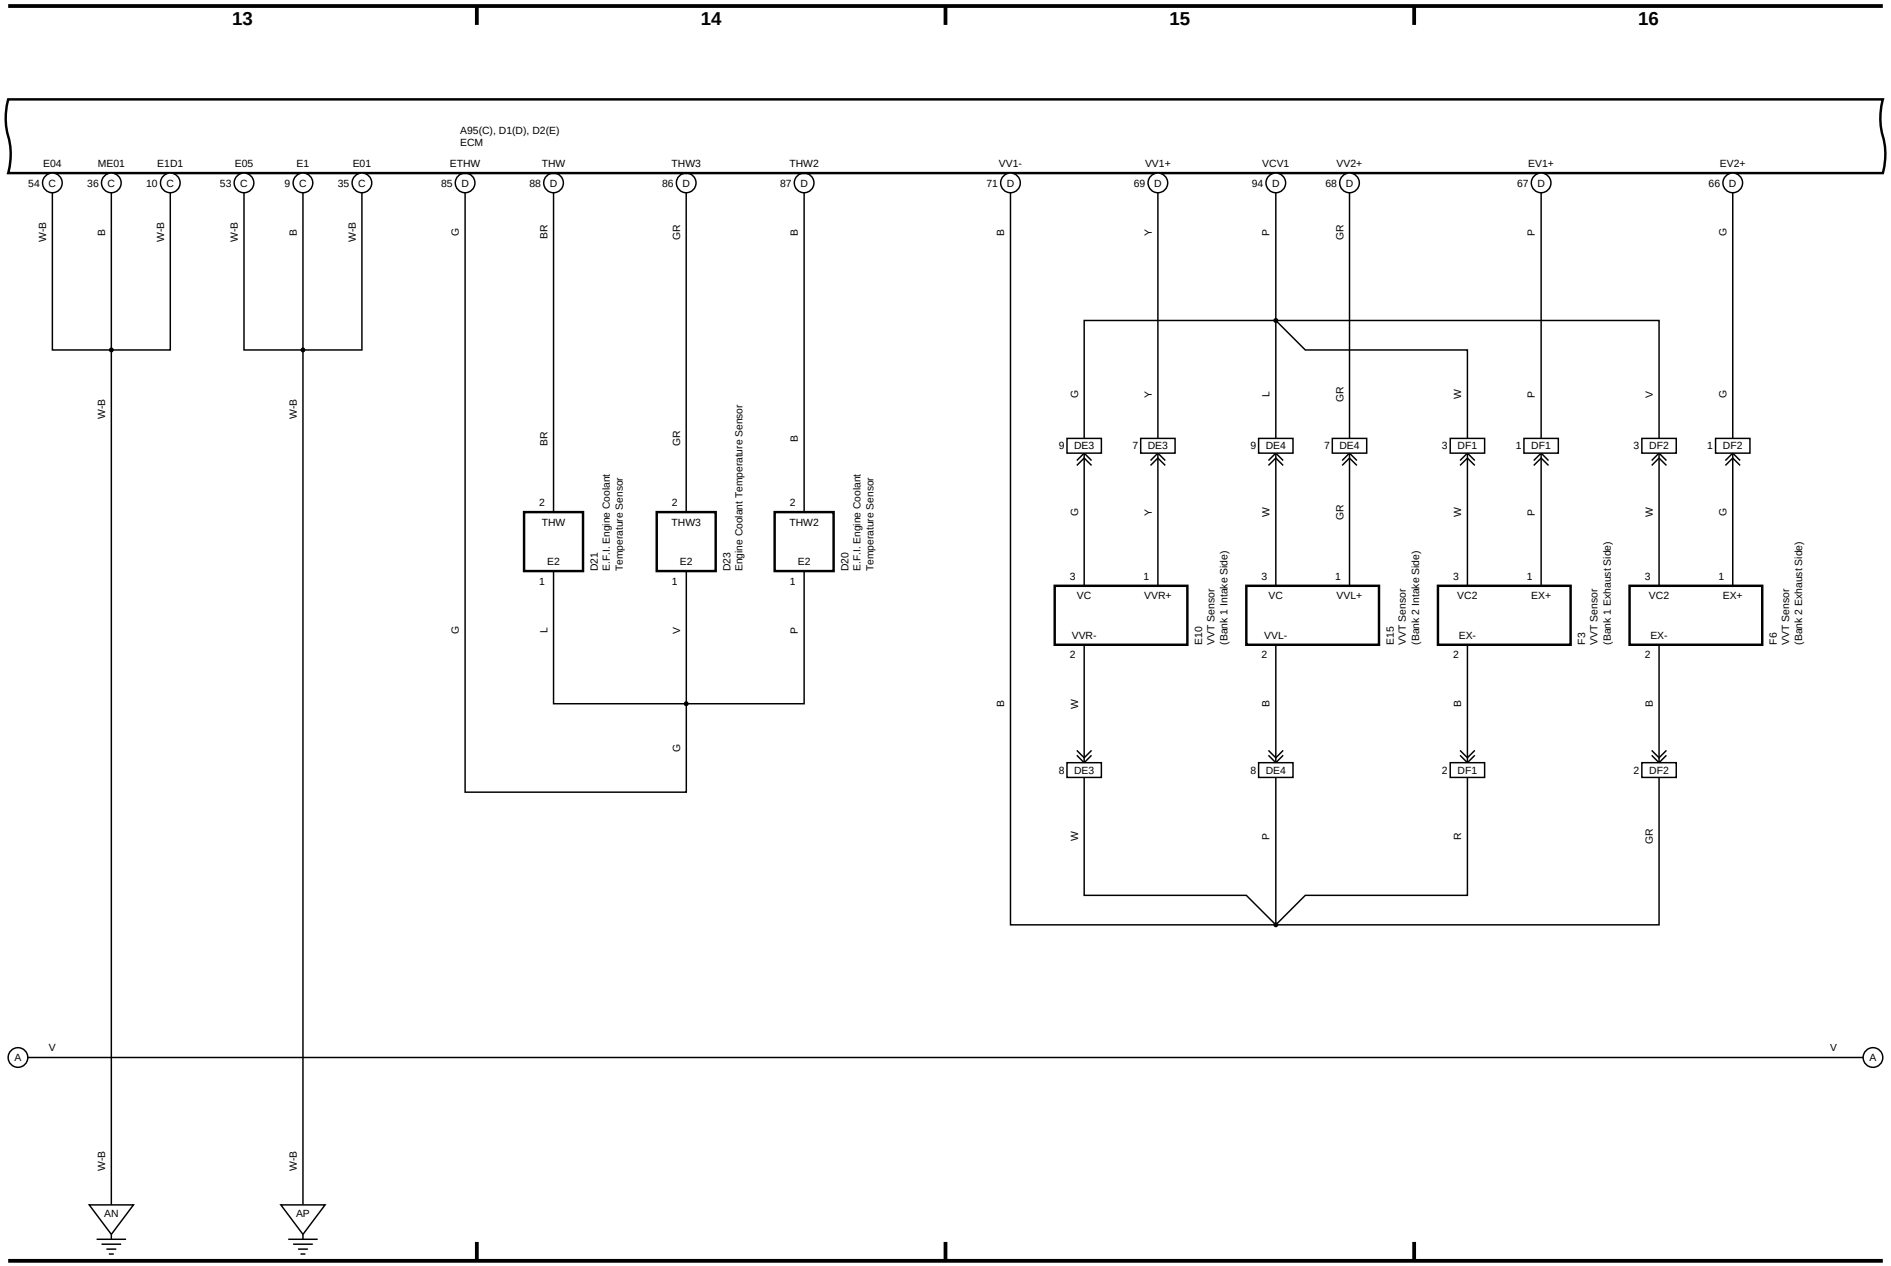

(Cont. next page)

Engine Control (V35A-FTS) (RHD)

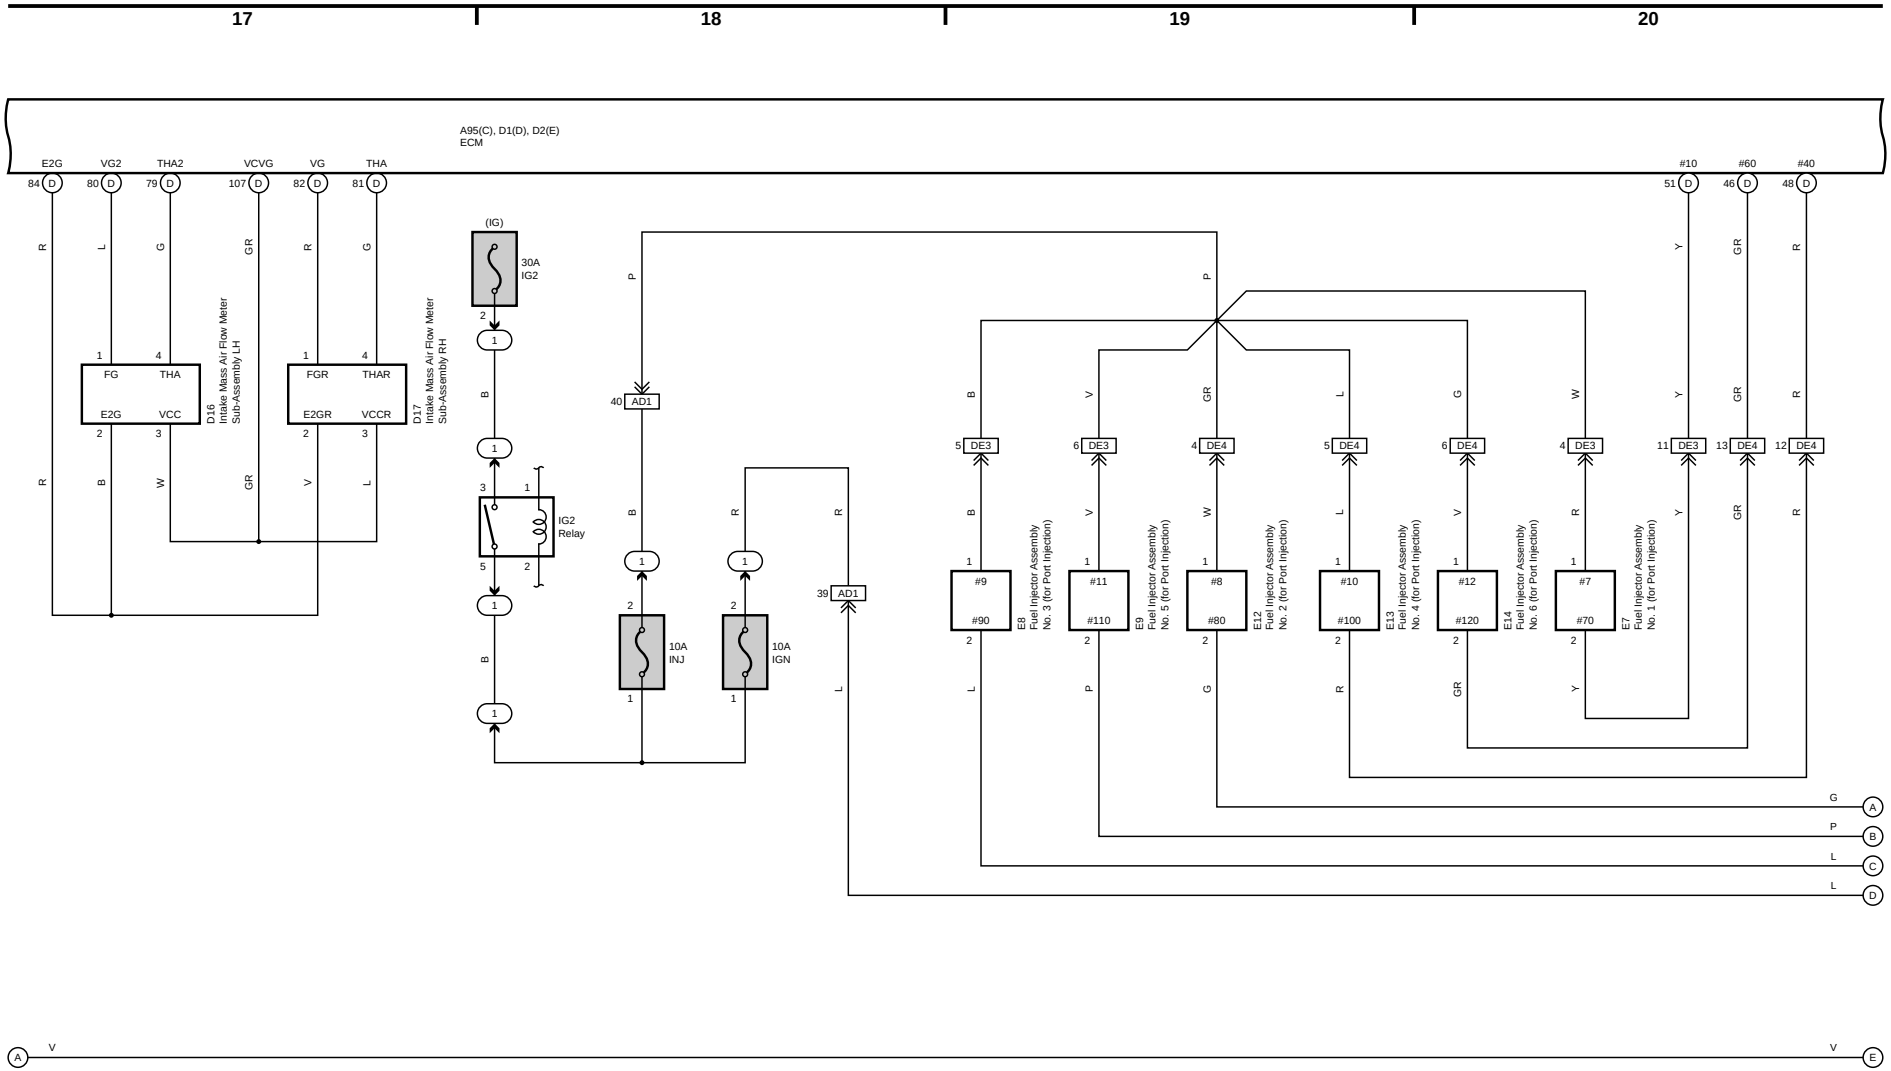

(Cont. next page)

Engine Control (V35A-FTS) (RHD)

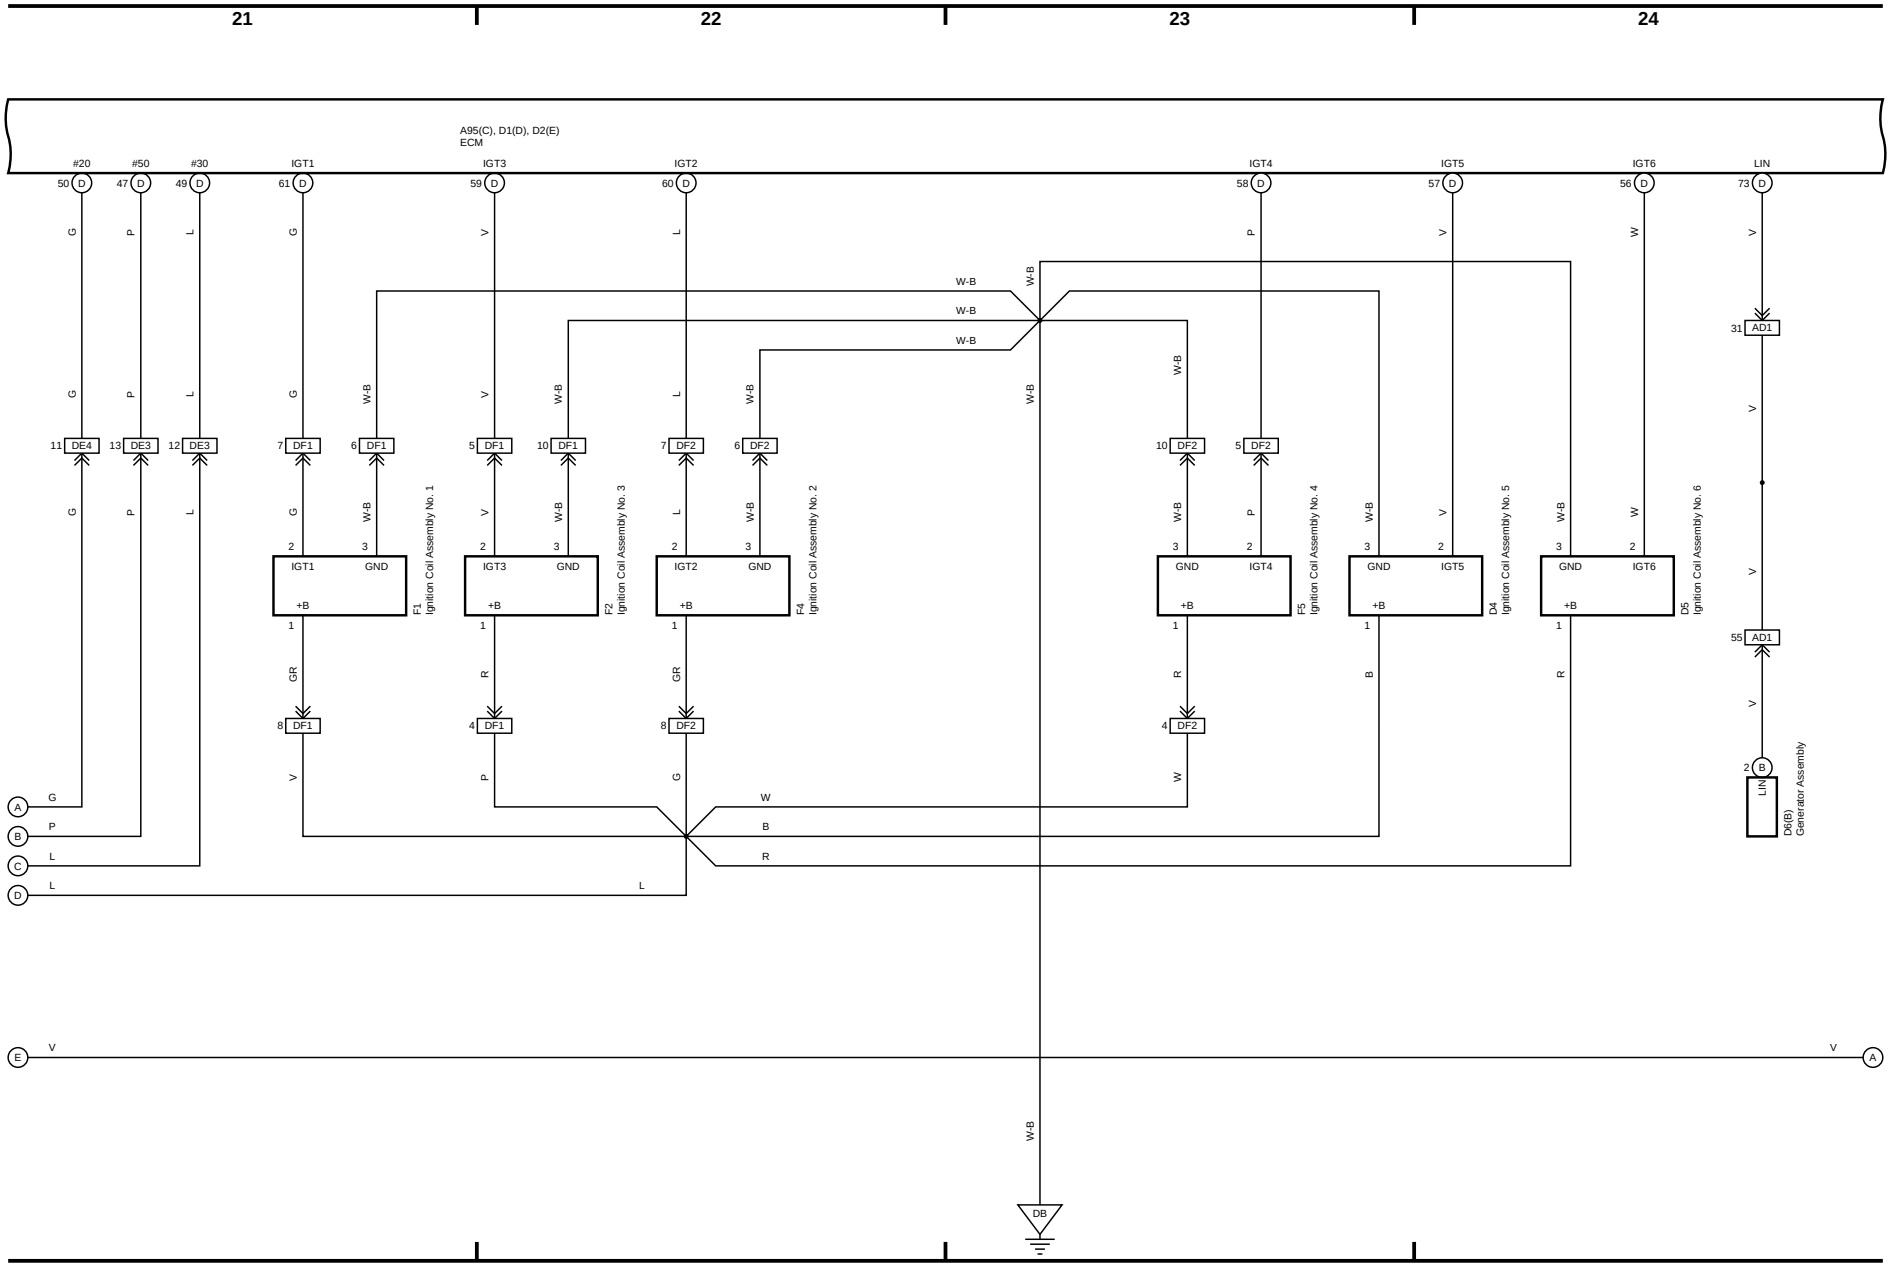

(Cont. next page)

Engine Control (V35A-FTS) (RHD)

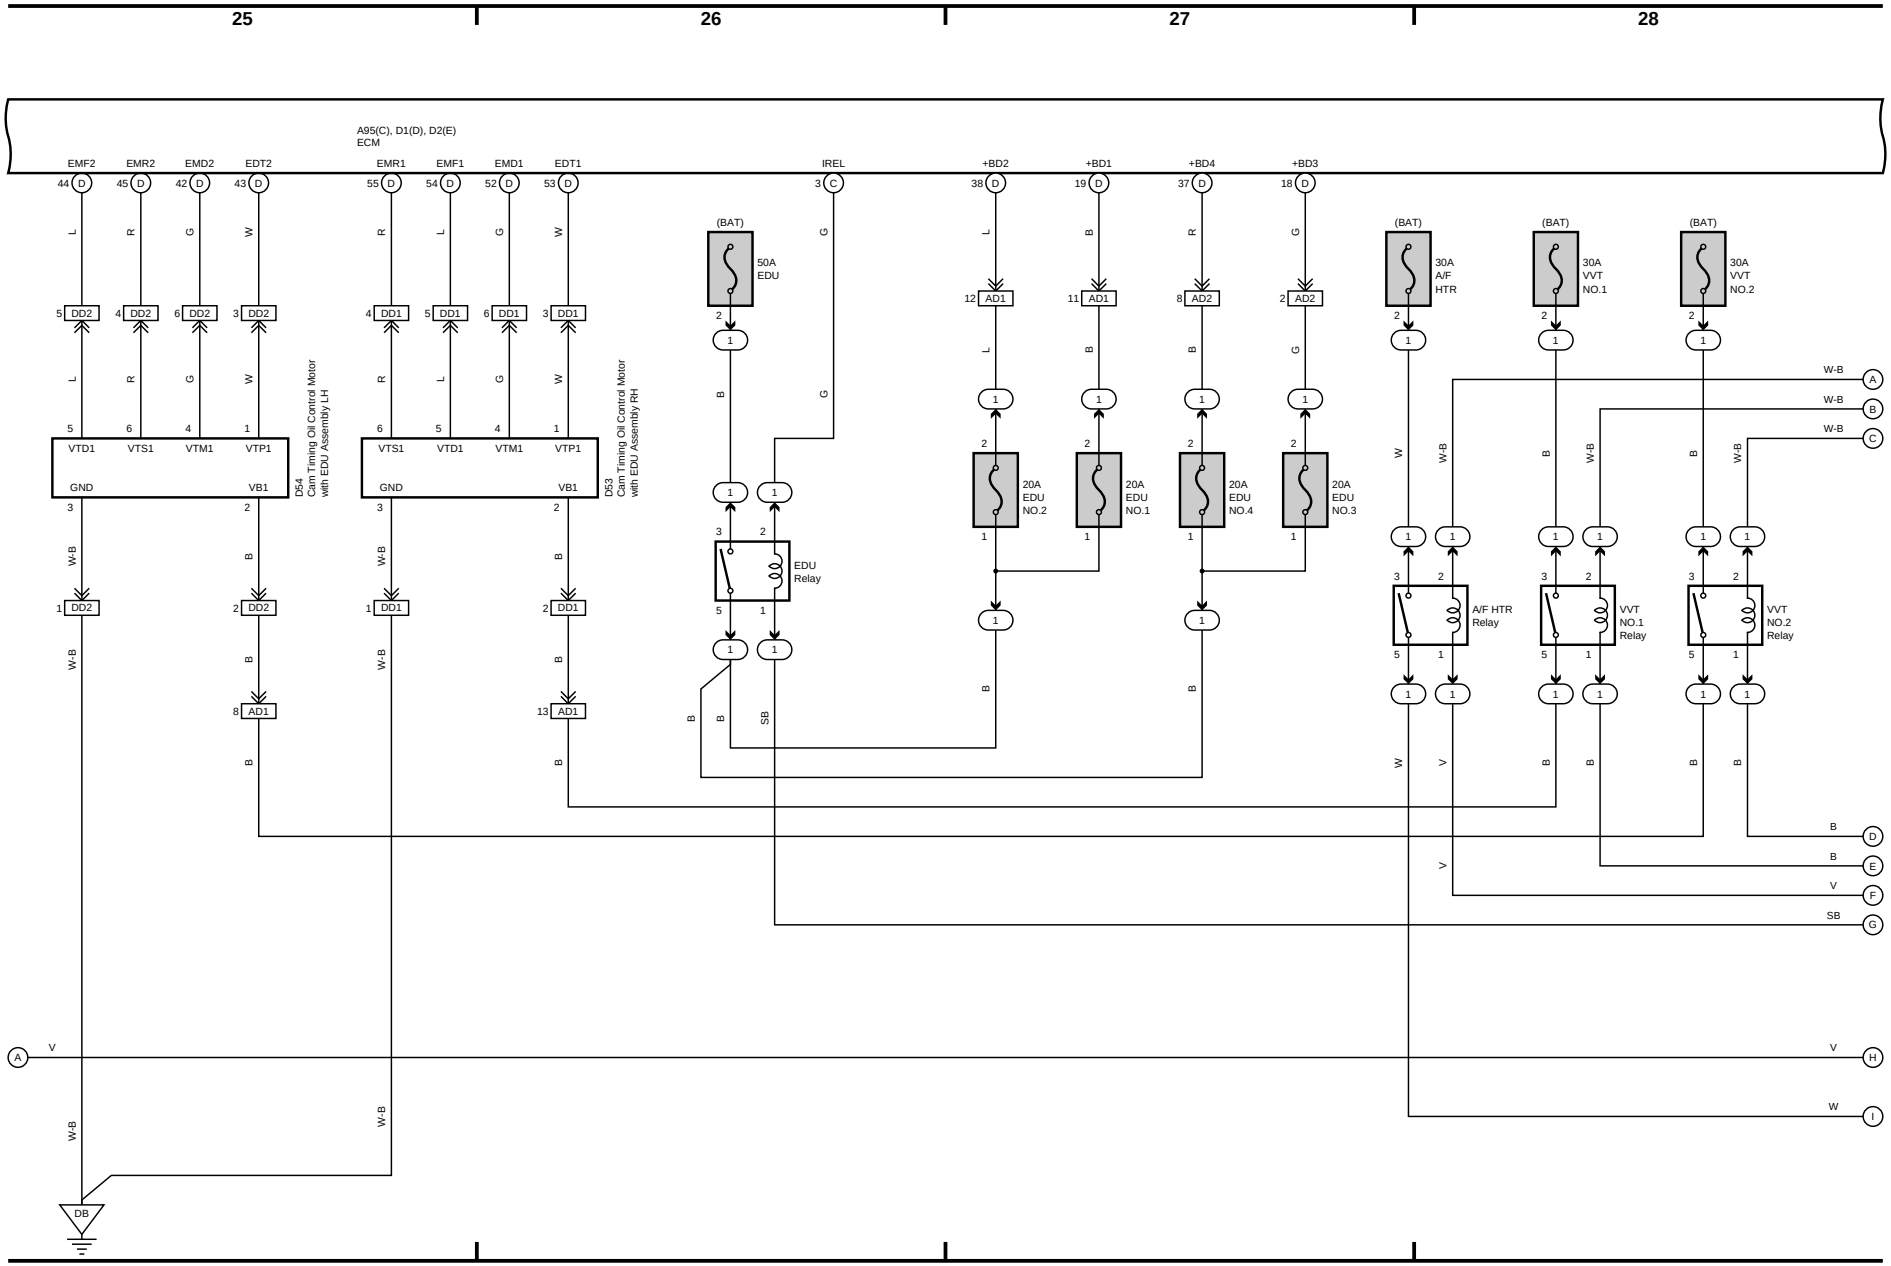

(Cont. next page)

Engine Control (V35A-FTS) (RHD)

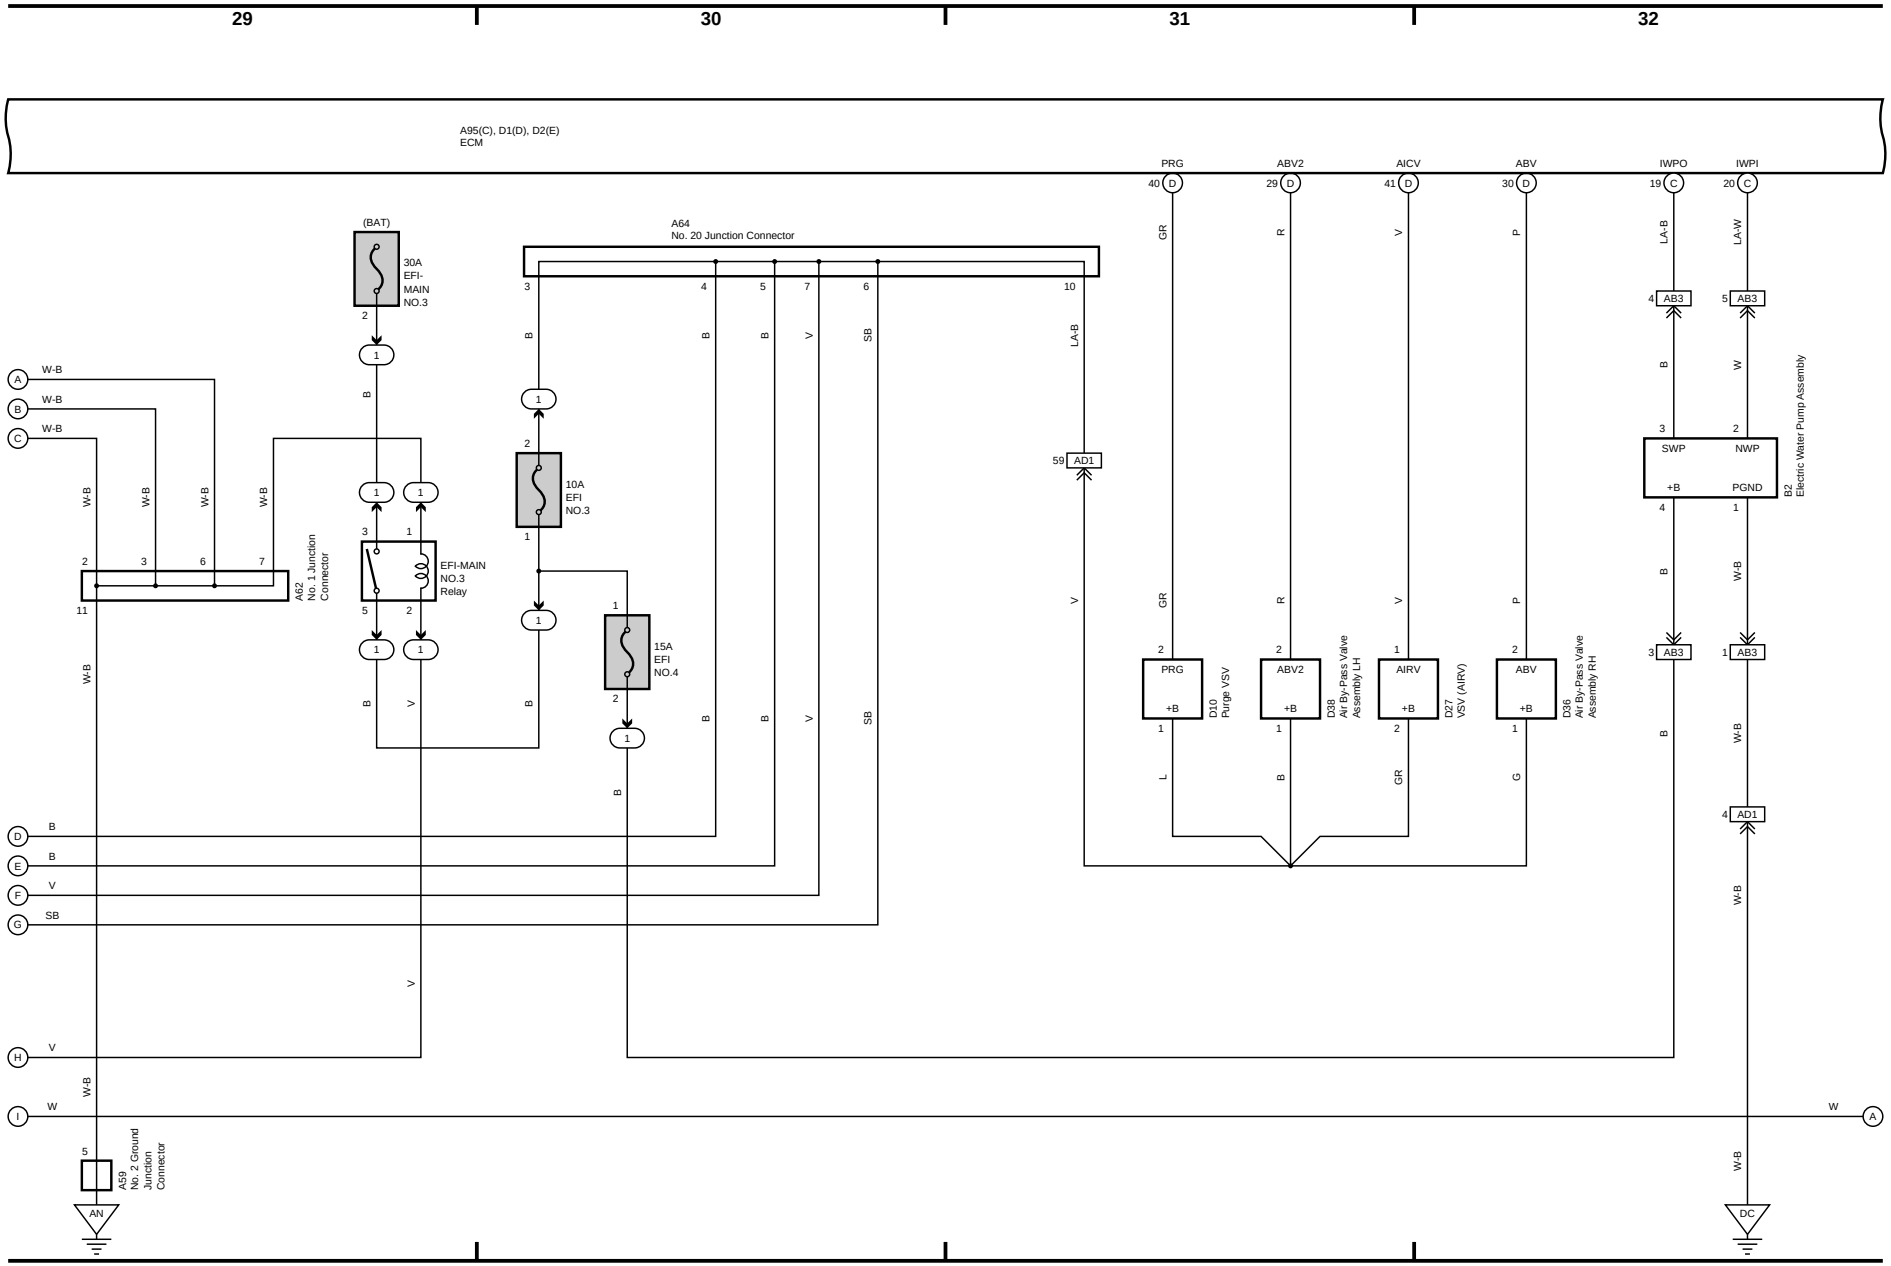

(Cont. next page)

Engine Control (V35A-FTS) (RHD)

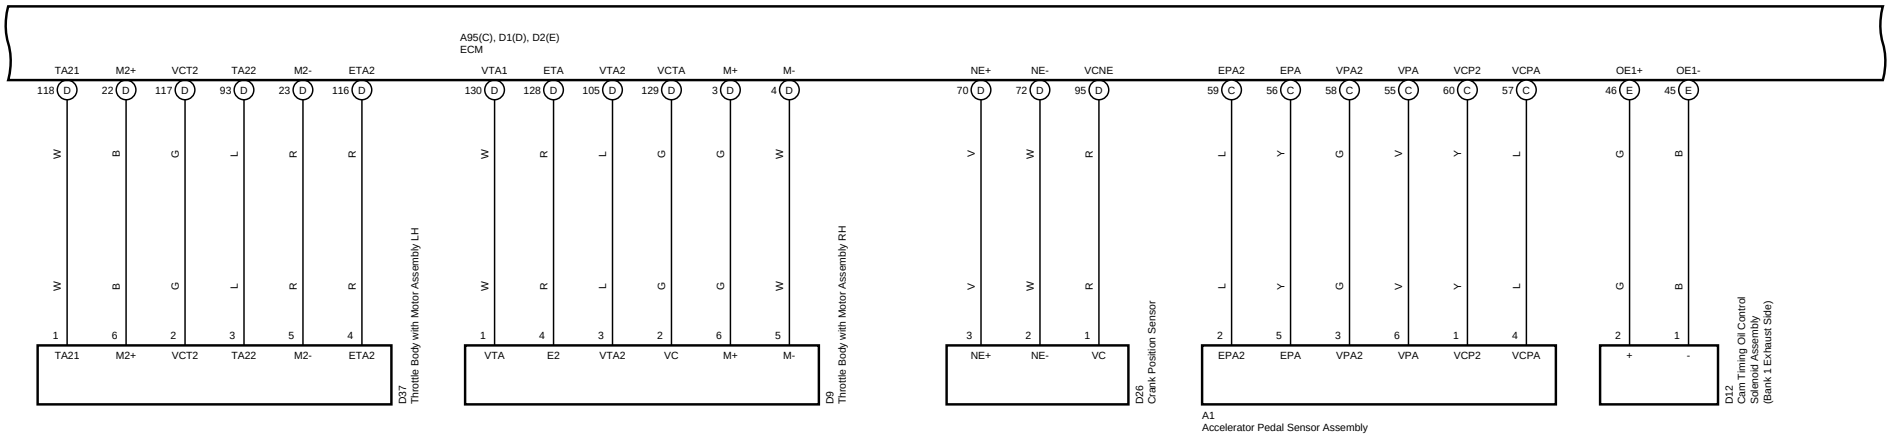

Engine Control (V35A-FTS) (RHD)

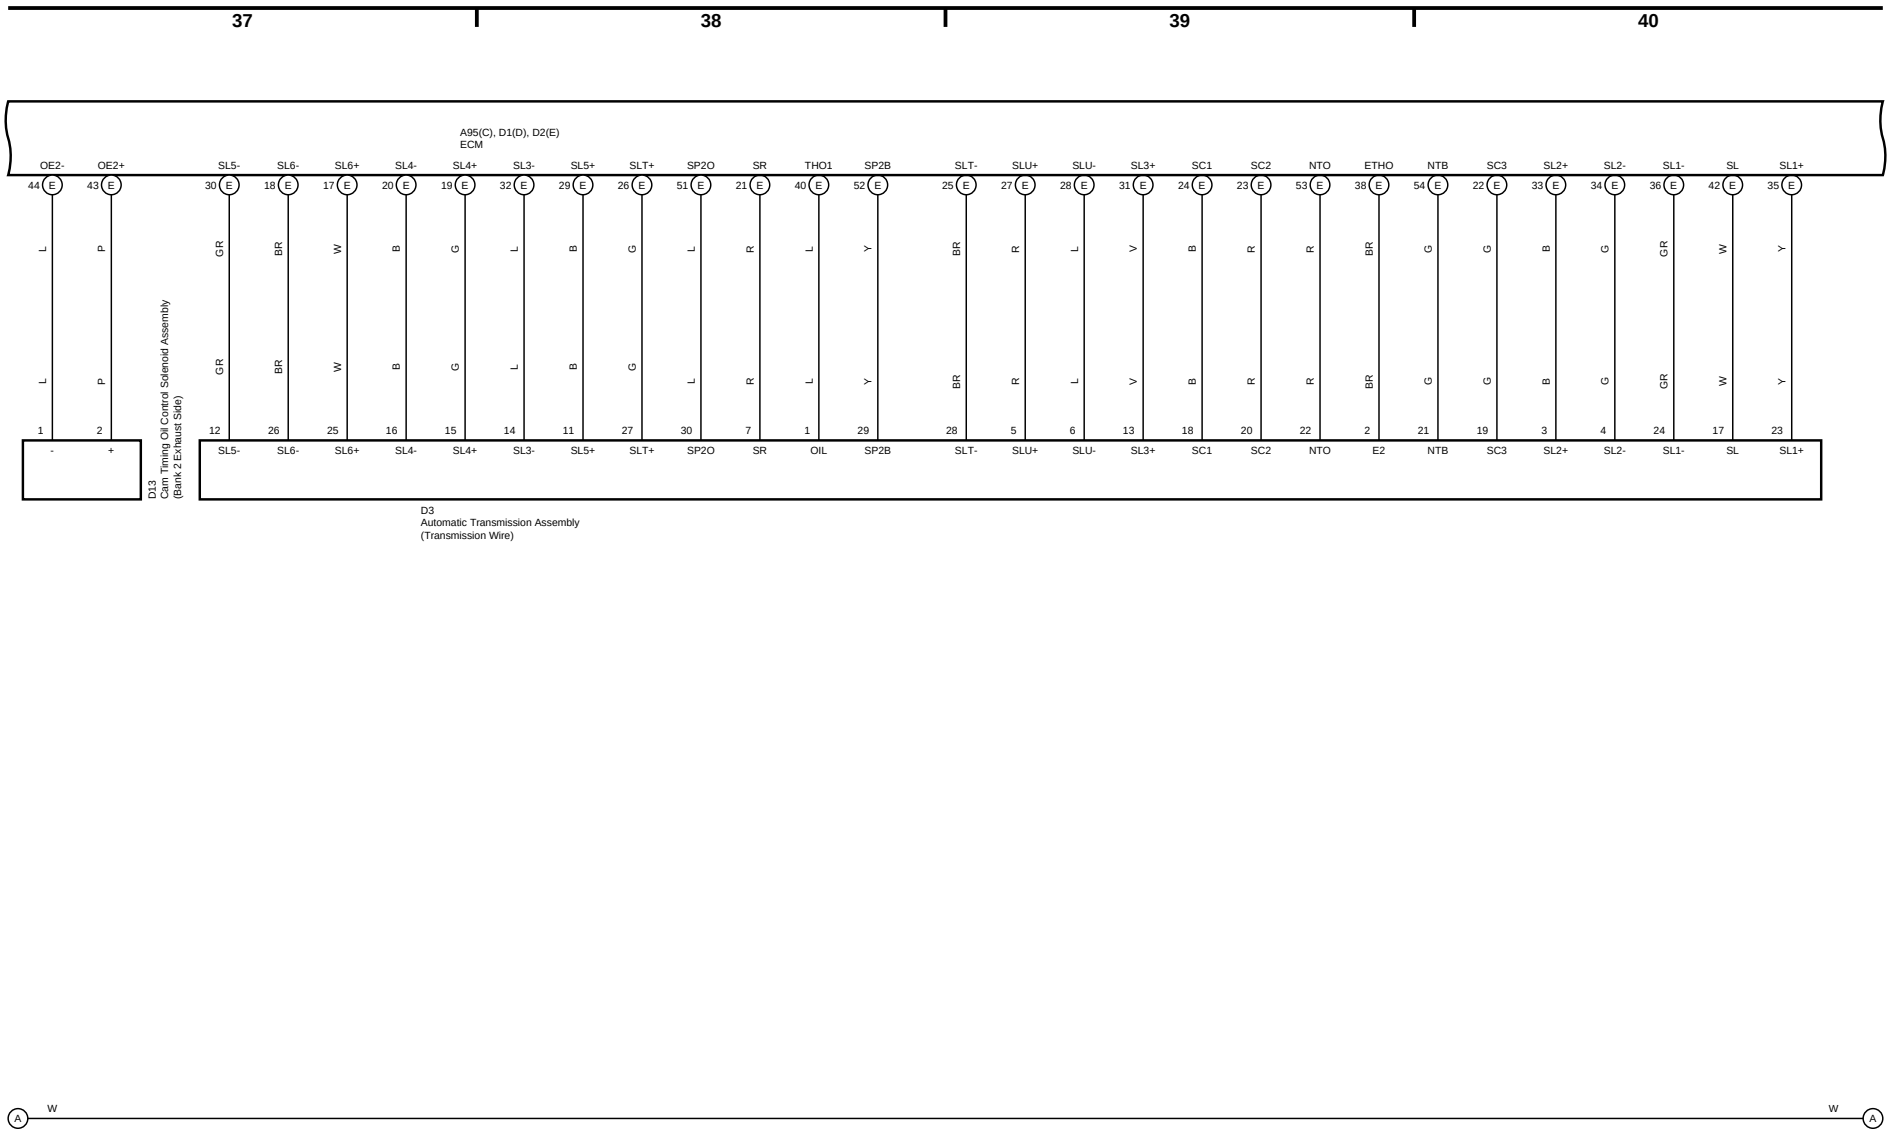

(Cont. next page)

Engine Control (V35A-FTS) (RHD)

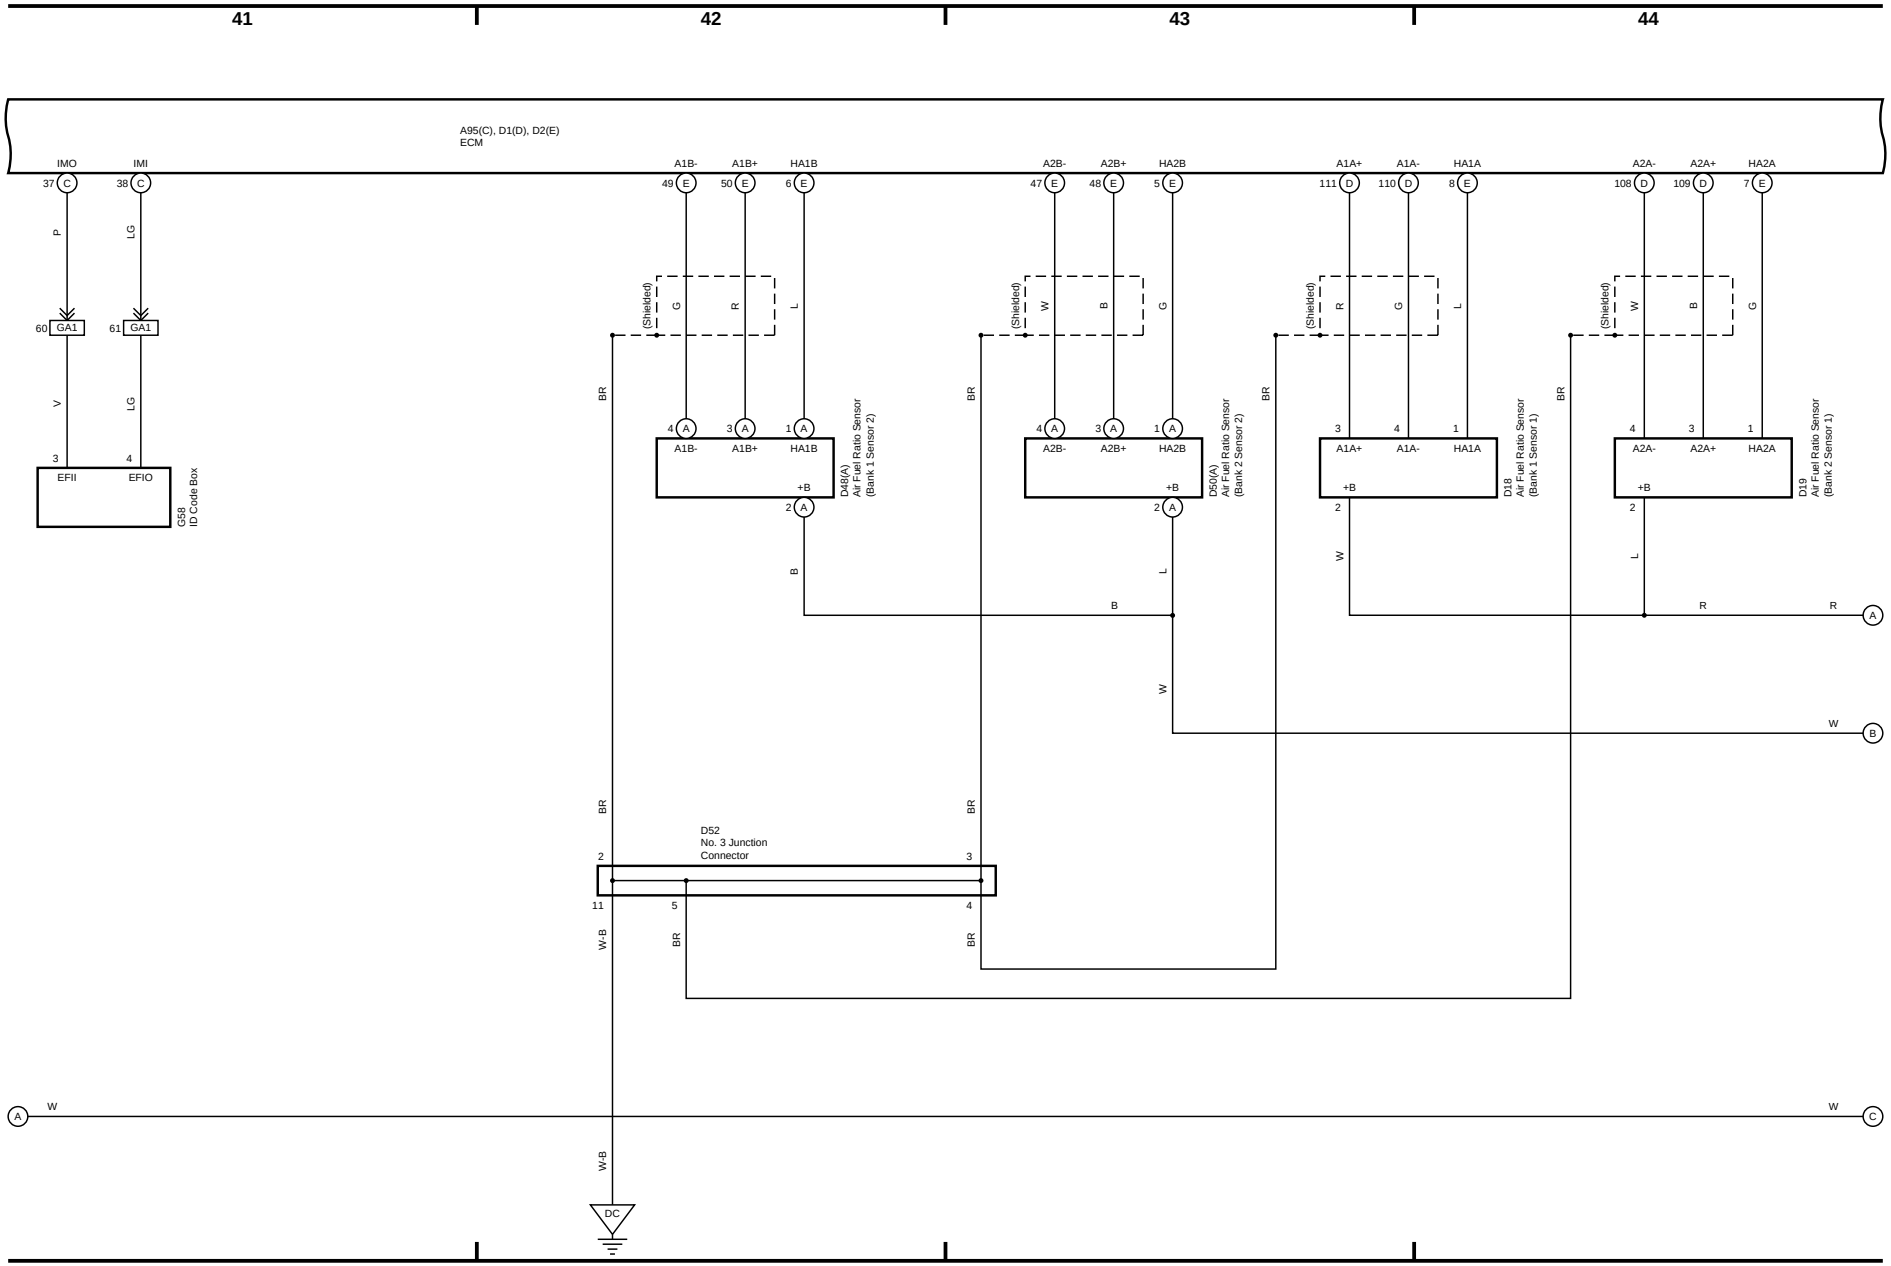

(Cont. next page)

Engine Control (V35A-FTS) (RHD)

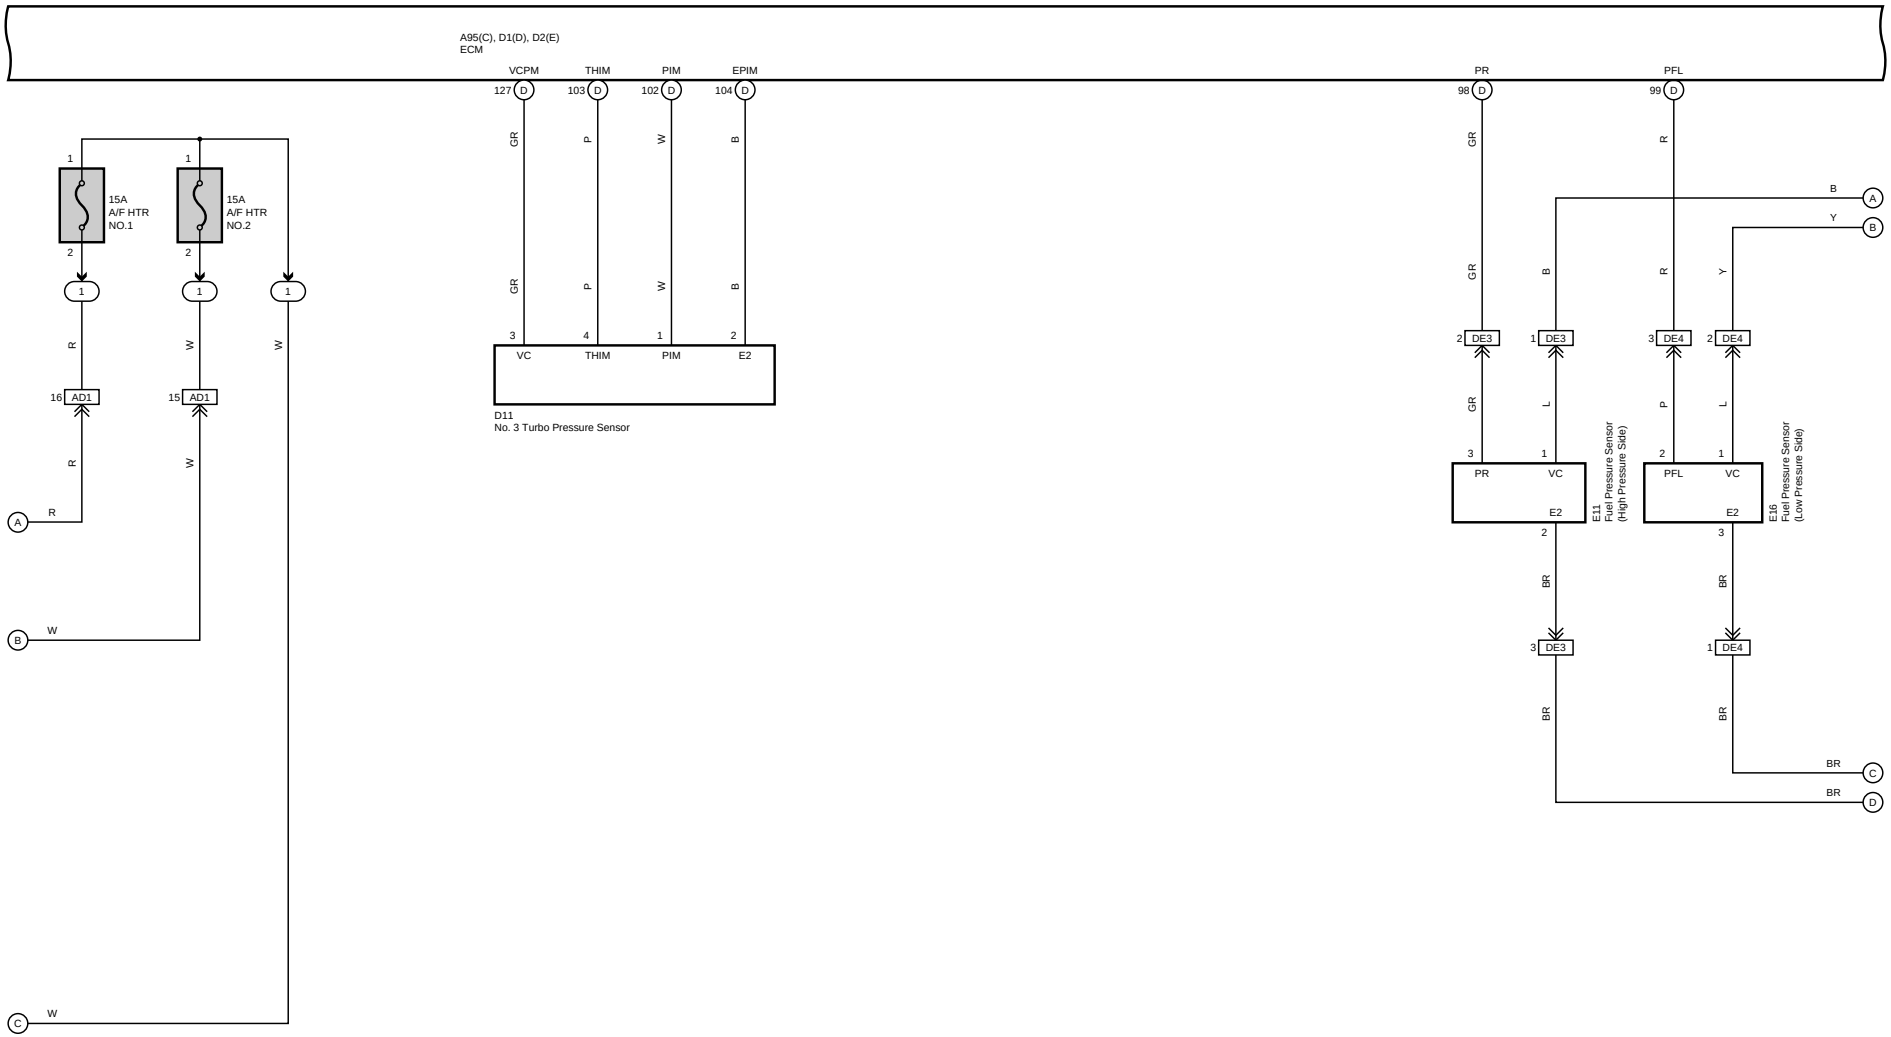

(Cont. next page)

Engine Control (V35A-FTS) (RHD)

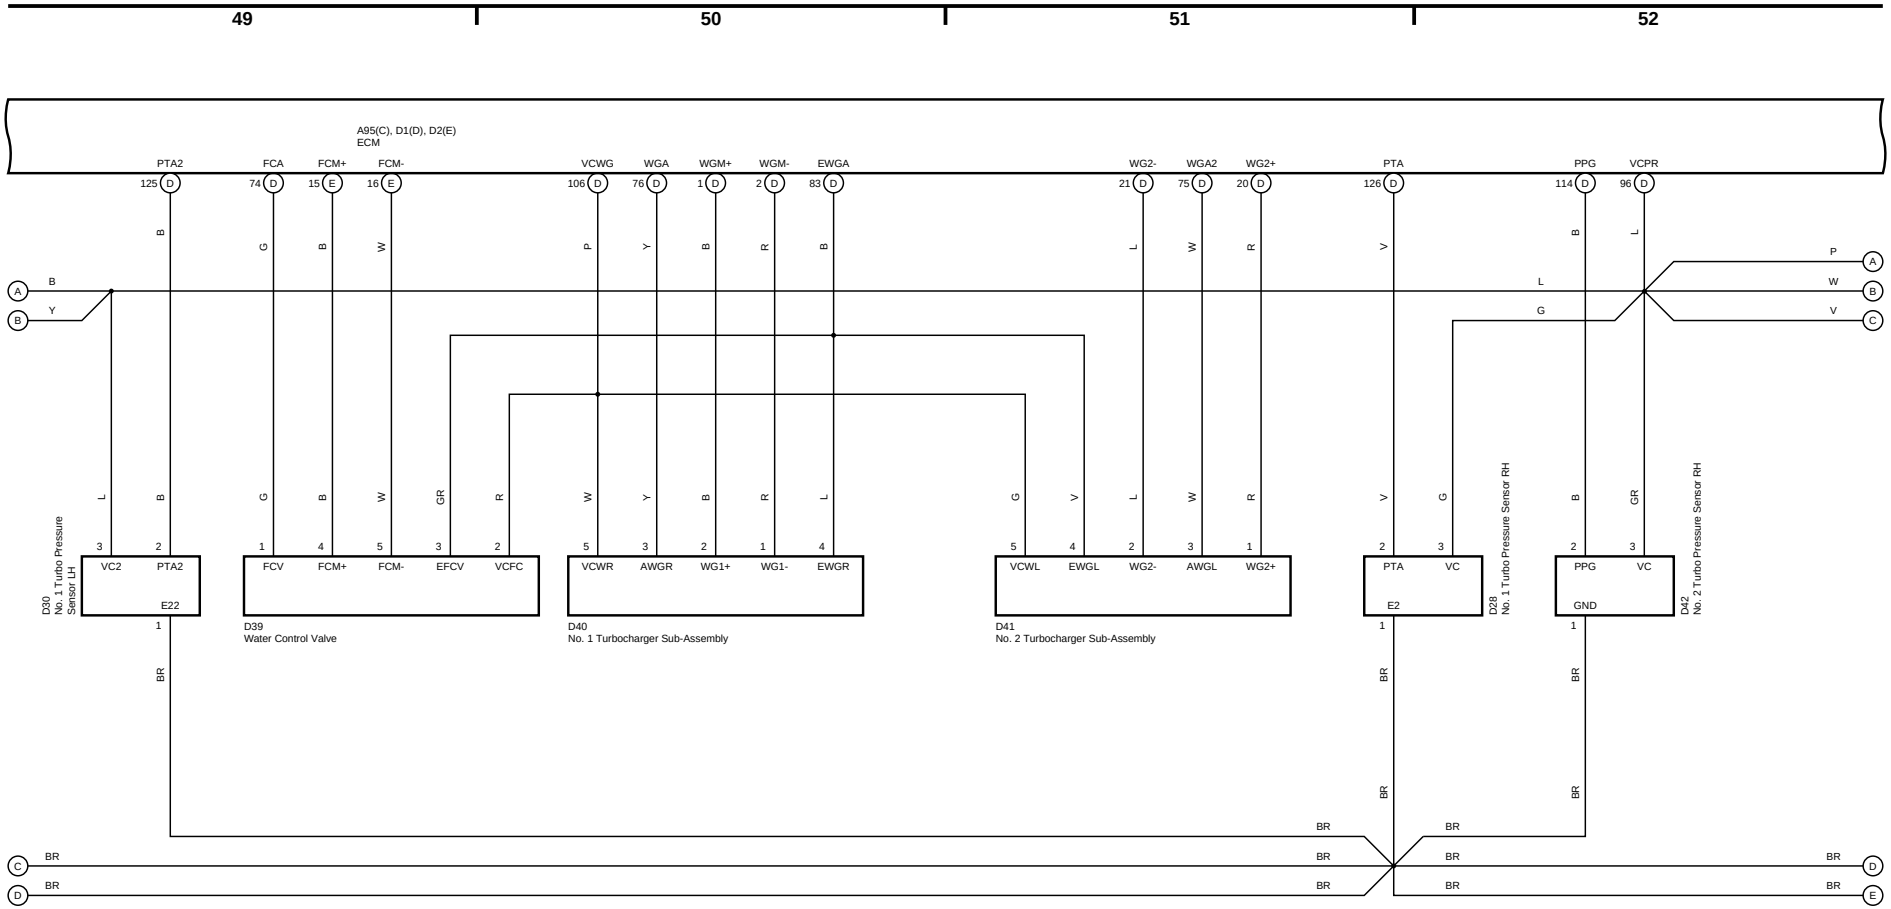

Engine Control (V35A-FTS) (RHD)

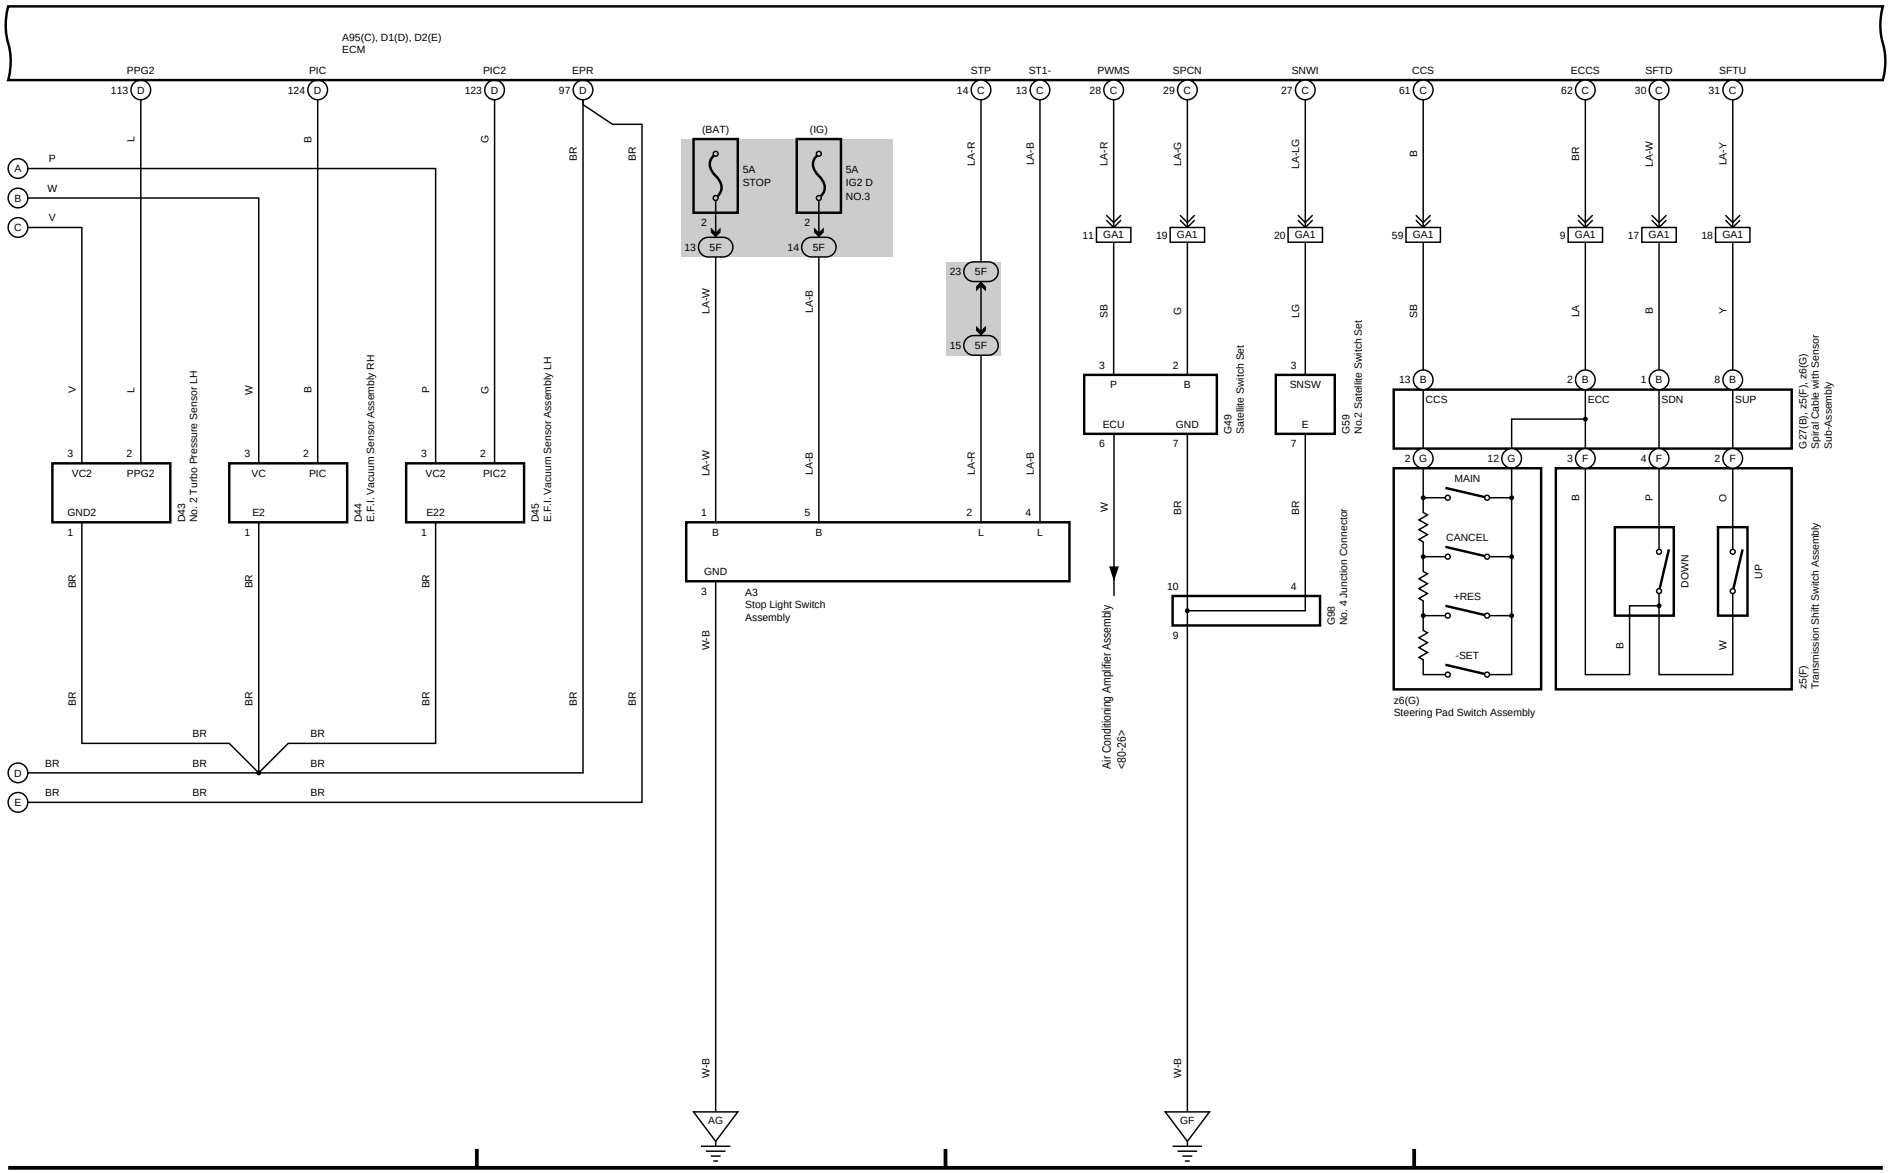
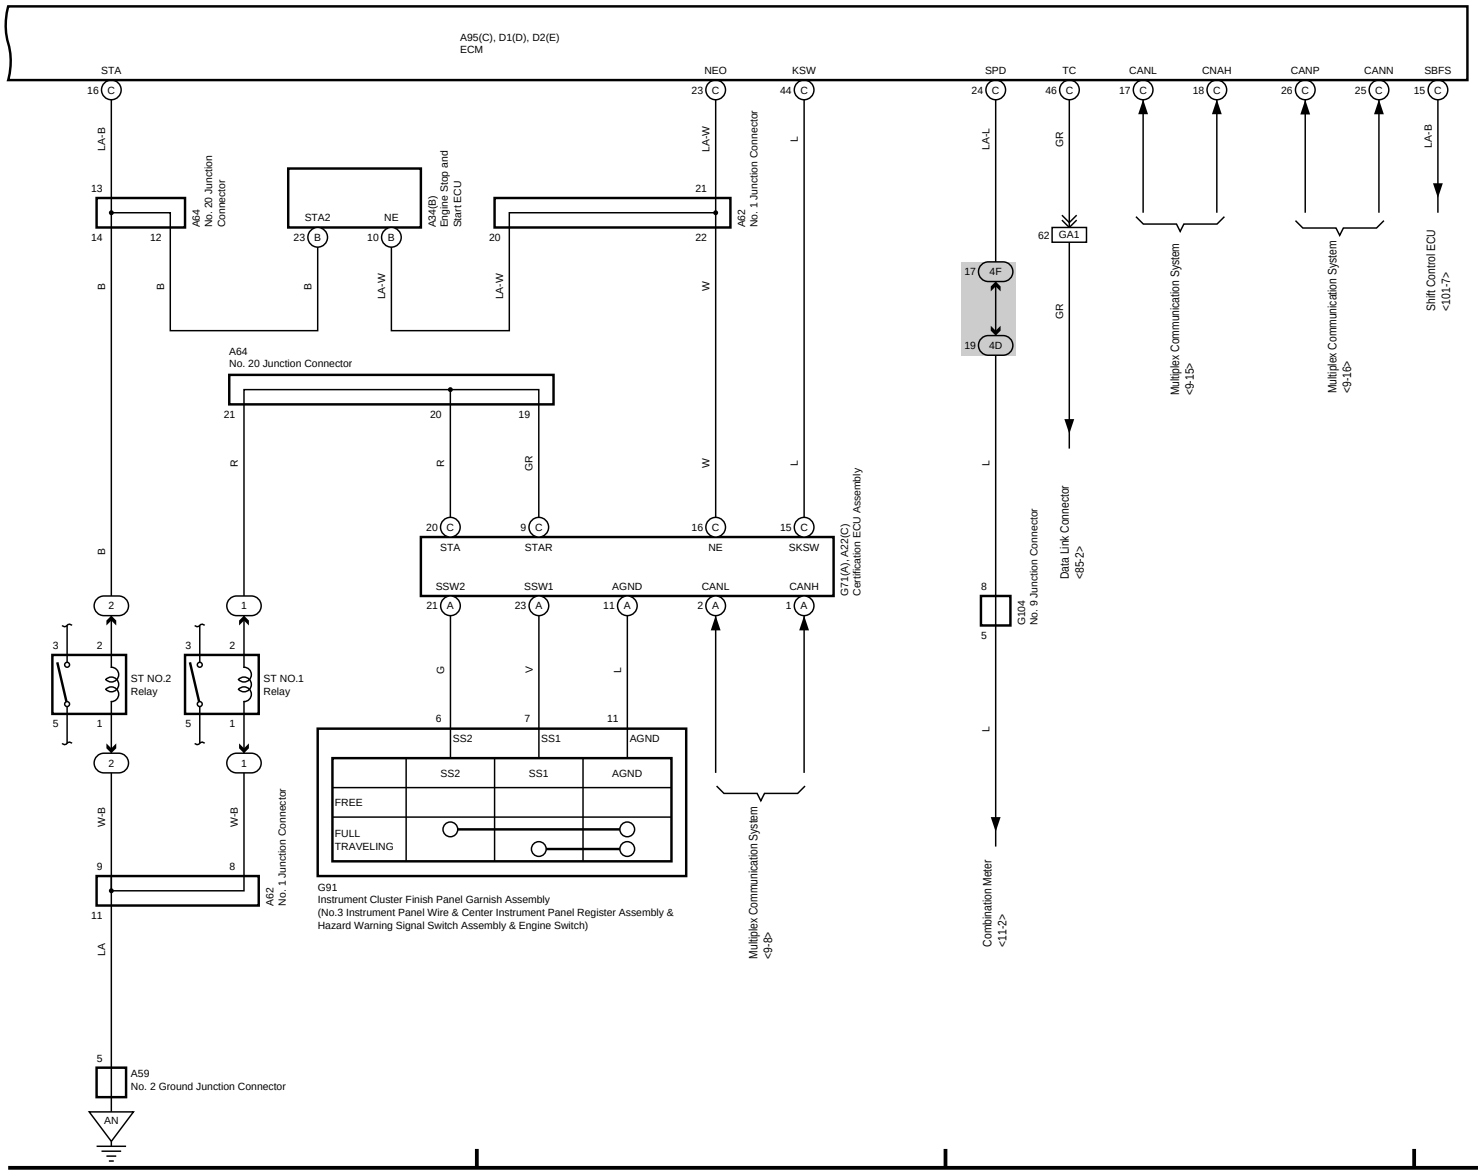
Engine Control (V35A-FTS) (RHD)