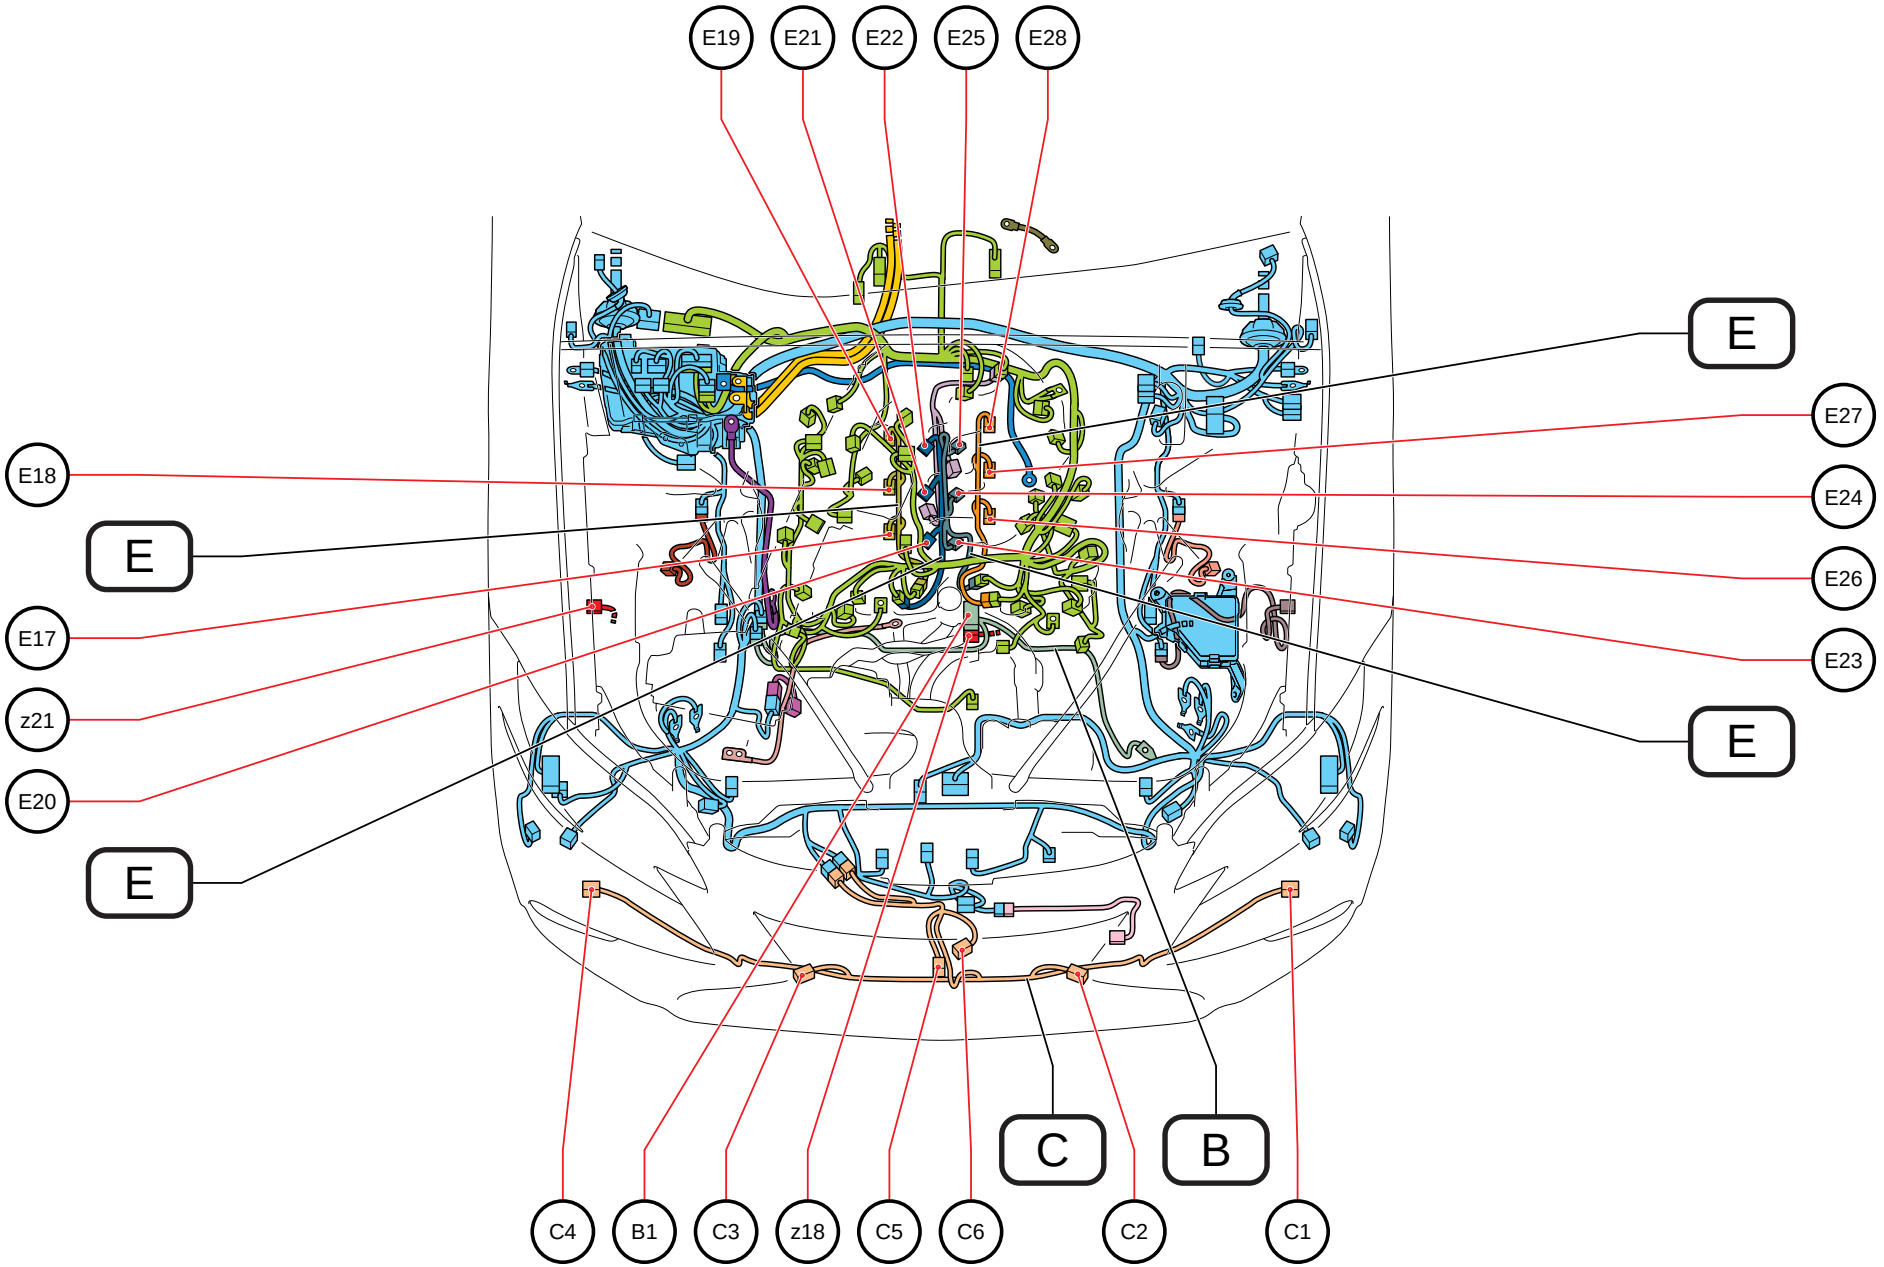
E19
E21
E22
E25
E28
E
E27
E18
E24
E
E26
E17
E23
z21
E
E20
E
C
B
C4
B1
C3
z18
C5
C6
C2
C1

B 1 EPS ECU (Rack & Pinion Power Steering Gear Assembly)

C 1 Front Ultrasonic Sensor Corner LH
C 2 Front Ultrasonic Sensor Center LH
C 3 Front Ultrasonic Sensor Center RH
C 4 Front Ultrasonic Sensor Corner RH
C 5 Front Television Camera Assembly
C 6 Millimeter Wave Radar Sensor Assembly

E 17 Fuel Injector Assembly No. 1 (for Port Injection)
E 18 Fuel Injector Assembly No. 3 (for Port Injection)
E 19 Fuel Injector Assembly No. 5 (for Port Injection)
E 20 Fuel Injector Assembly No. 1 (for Direct Injection)
E 21 Fuel Injector Assembly No. 3 (for Direct Injection)
E 22 Fuel Injector Assembly No. 5 (for Direct Injection)
E 23 Fuel Injector Assembly No. 2 (for Direct Injection)
E 24 Fuel Injector Assembly No. 4 (for Direct Injection)
E 25 Fuel Injector Assembly No. 6 (for Direct Injection)
E 26 Fuel Injector Assembly No. 2 (for Port Injection)
E 27 Fuel Injector Assembly No. 4 (for Port Injection)
E 28 Fuel Injector Assembly No. 6 (for Port Injection)

z 18 Steering Torque Sensor Board Sub-Assembly , Rack & Pinion Power Steering Gear Assembly
z 21 Front Speed Sensor RH , Front Skid Control Sensor Wire RH

B1
Black

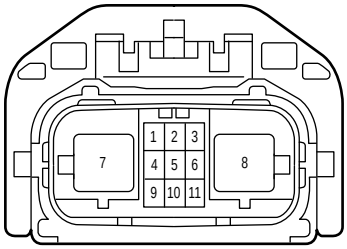

90980-12C57

C1
Black

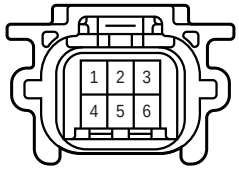

82824-78020

C2
Black

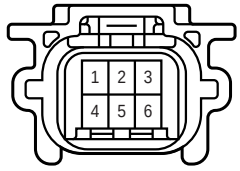

82824-78020

C3
Black

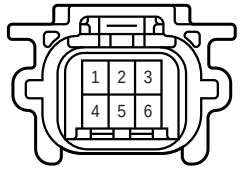

82824-78020

C4
Black

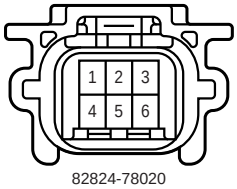

82824-78020

C5
Black

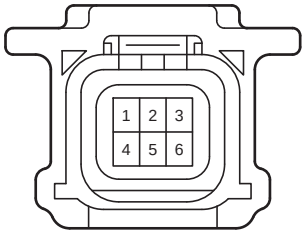

90980-12A59

C6
Black

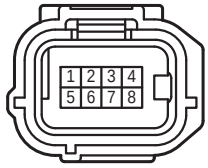

90980-12520

E17
Black

90980-12416

E18
Black

90980-12416

E19
Black

90980-12416

E20
Black

90980-12940

E21
Black

90980-12940

E22
Black

90980-12940

E23
Black

90980-12940

E24
Gray

90980-12940

E25
Black

90980-12940

E26
Black

90980-12416

E27
Black

90980-12416

E28
Black

90980-12416

z18
White

90980-12C58

z21
Black

90980-11900