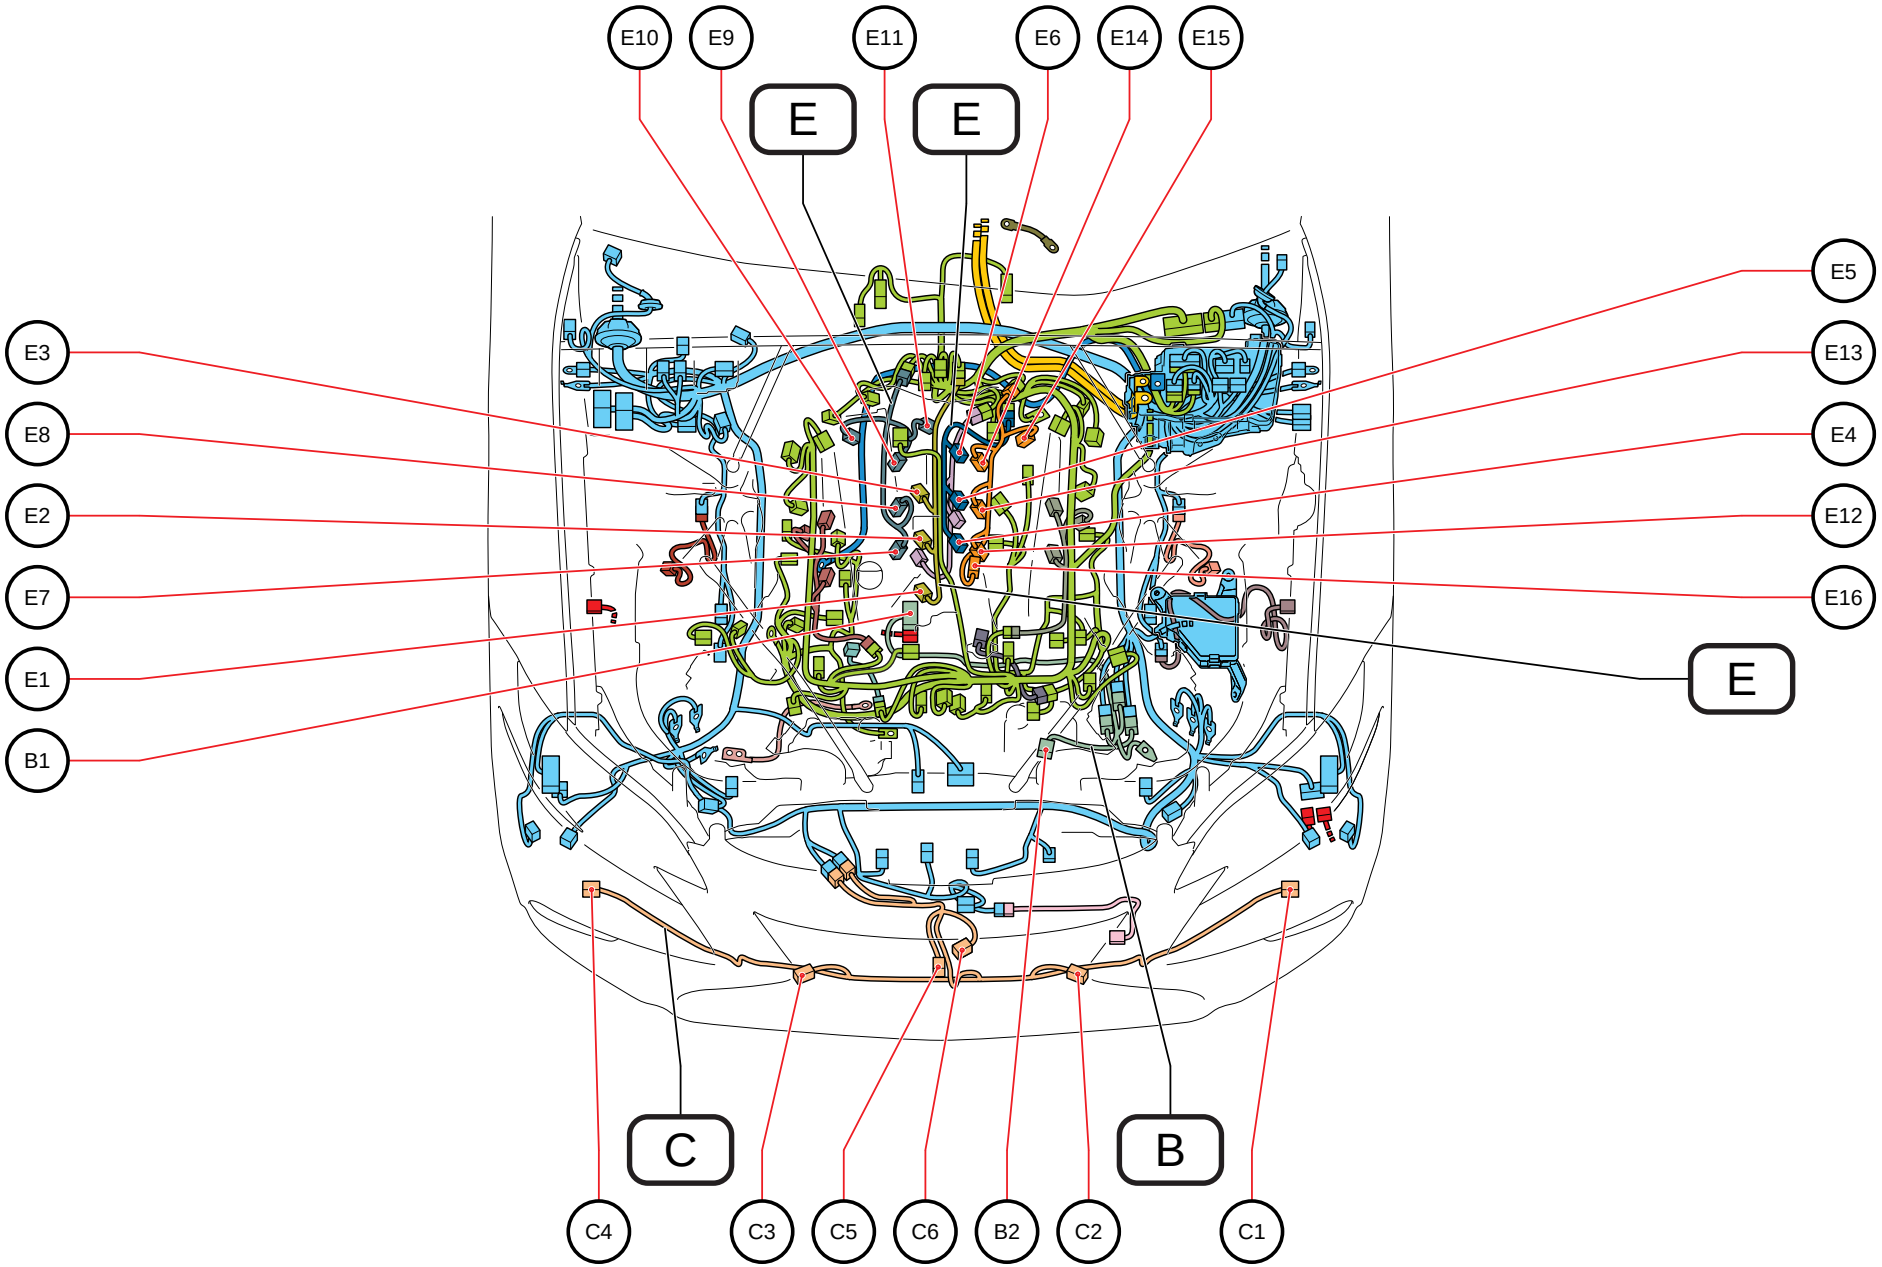
E10
E9
E11
E6
E14
E15
E
E
E5
E3
E13
E8
E4
E2
E12
E7
E16
E1
E
B1
C
B
C4
C3
C5
C6
B2
C2
C1

B	1	EPS ECU (Rack & Pinion Power Steering Gear Assembly)
B	2	Electric Water Pump Assembly
C	1	Front Ultrasonic Sensor Corner LH
C	2	Front Ultrasonic Sensor Center LH
C	3	Front Ultrasonic Sensor Center RH
C	4	Front Ultrasonic Sensor Corner RH
C	5	Front Television Camera Assembly
C	6	Millimeter Wave Radar Sensor Assembly
E	1	Fuel Injector Assembly No. 1 (for Direct Injection)
E	2	Fuel Injector Assembly No. 3 (for Direct Injection)
E	3	Fuel Injector Assembly No. 5 (for Direct Injection)
E	4	Fuel Injector Assembly No. 2 (for Direct Injection)
E	5	Fuel Injector Assembly No. 4 (for Direct Injection)
E	6	Fuel Injector Assembly No. 6 (for Direct Injection)
E	7	Fuel Injector Assembly No. 1 (for Port Injection)
E	8	Fuel Injector Assembly No. 3 (for Port Injection)
E	9	Fuel Injector Assembly No. 5 (for Port Injection)
E	10	VVT Sensor (Bank 1 Intake Side)
E	11	Fuel Pressure Sensor (High Pressure Side)
E	12	Fuel Injector Assembly No. 2 (for Port Injection)
E	13	Fuel Injector Assembly No. 4 (for Port Injection)
E	14	Fuel Injector Assembly No. 6 (for Port Injection)
E	15	VVT Sensor (Bank 2 Intake Side)
E	16	Fuel Pressure Sensor (Low Pressure Side)

B1
Black

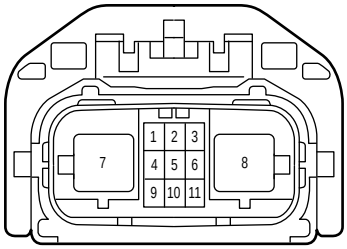

90980-12C57

B2
Black



90980-12A29

C1
Black

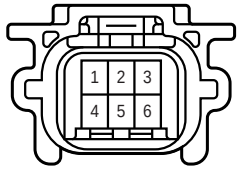

82824-78020

C2
Black

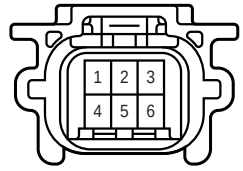

82824-78020

C3
Black

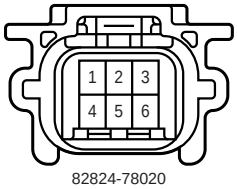

82824-78020

C4
Black

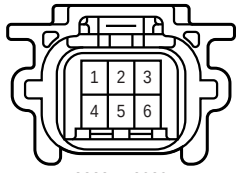

82824-78020

C5
Black

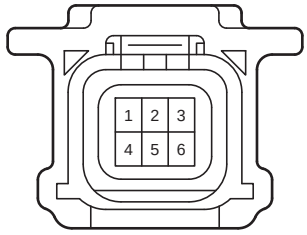

90980-12A59

C6
Black

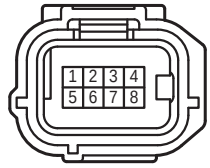

90980-12520

E1
Black

90980-12D14

E2
Black

90980-12D14

E3
Black

90980-12D14

E4
Black

90980-12D14

E5
Black

90980-12D14

E6
Black

90980-12D14

E7
Black

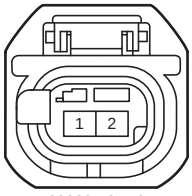

90980-12D16

E8
Gray

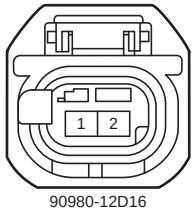

90980-12D16

E9
Black

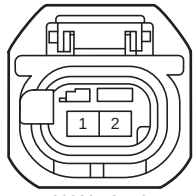

90980-12D16

E10
Black

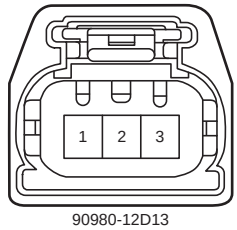

90980-12D13

E11
Black

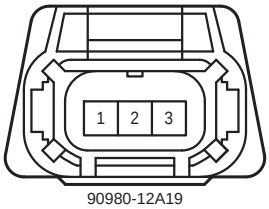

90980-12A19

E12
Black

90980-12D16

E13
Black

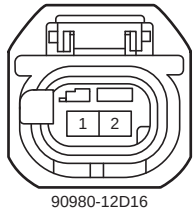

90980-12D16

E14
Black

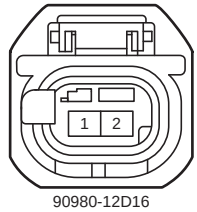

90980-12D16

E15
Black

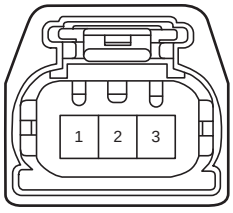

90980-12D13

E16
Black

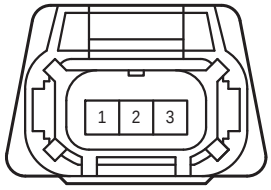

90980-12A19