Position of Parts in Instrument Panel <LHD>

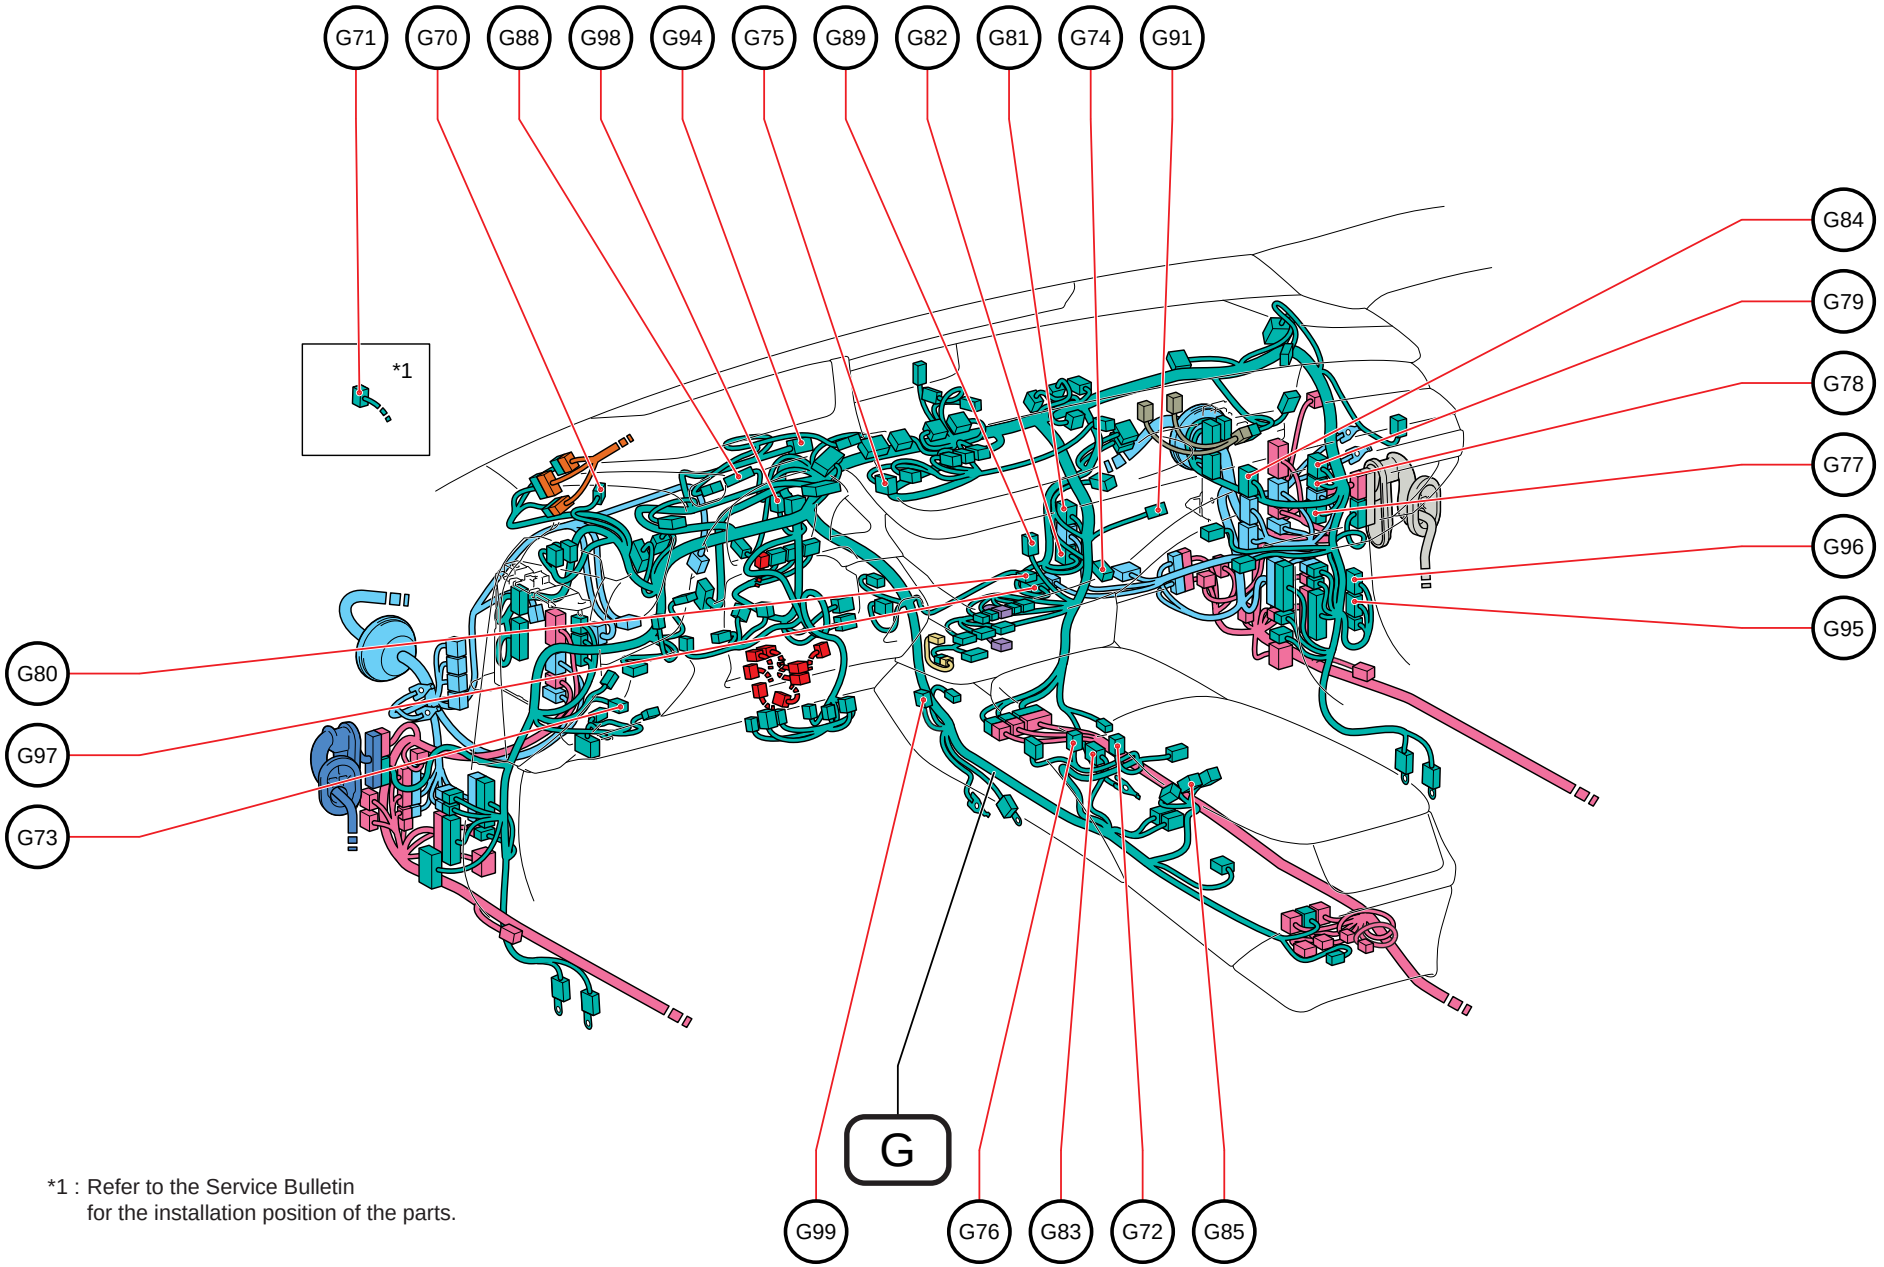

*1 : Refer to the Service Bulletin
for the installation position of the parts.

G 70 Front No. 2 Speaker Assembly LH
G 71 Certification ECU Assembly
G 72 Integration Control & Panel Assembly
G 73 Trunk & Fuel Switch Assembly
G 74 Luggage Door Opening Cancel Switch Assembly
G 75 Clock Assembly
G 76 Remote Operation Controller Assembly
G 77 Front Steering Control ECU
G 78 Front Steering Control ECU
G 79 Front Steering Control ECU
G 80 Air Conditioning Control Assembly
G 81 Shift Control ECU
G 82 Shift Control ECU
G 83 Shift Senssor (Transmission Floor Shift Assembly)
G 84 Engine Stop and Start ECU
G 85 No. 1 Stereo Jack Adapter Assembly
G 88 Meter Mirror Sub-Assembly
G 89 Ion Generator Sub-Assembly
G 91 Hazard Warning Signal Switch Assembly (No.3 Instrument Panel Wire)
G 94 Meter Hood Illumination Light Assembly
G 95 Parking Assist ECU
G 96 Parking Assist ECU
G 97 No. 2 Semiconductor Power Integration ECU
G 98 No. 4 Junction Connector
G 99 No. 5 Junction Connector

G70
Black

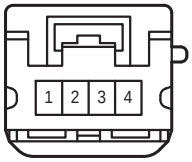

90980-12733

G71
White

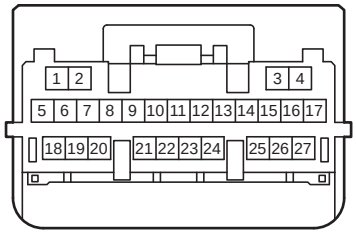

90980-12B78

G72
Black

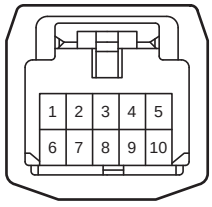

82824-78040

G73
White

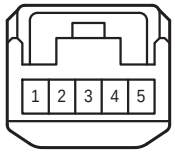

90980-12366

G74
Blue

90980-10825

G75
White

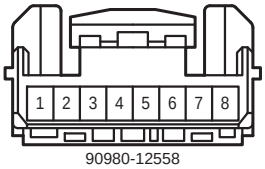

90980-12558

G76
Black

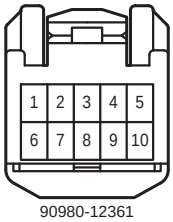

90980-12361

G77
White

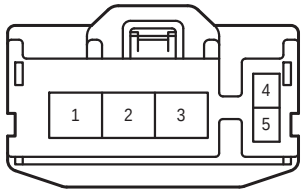

82824-30570

G78
White

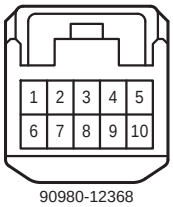

90980-12368

G79
White

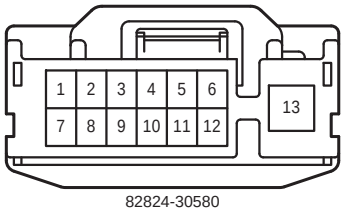

82824-30580

G80
White

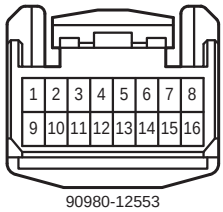

90980-12553

G81
White

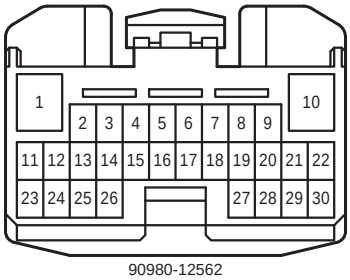

90980-12562

G82
White

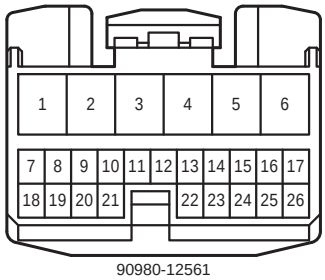

90980-12561

G83
White

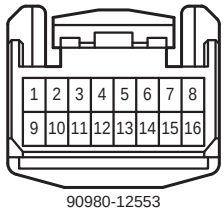

90980-12553

G84
Black

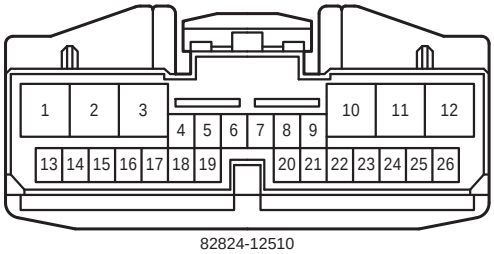

82824-12510

G85
White

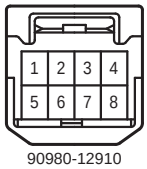

90980-12910

G88
White

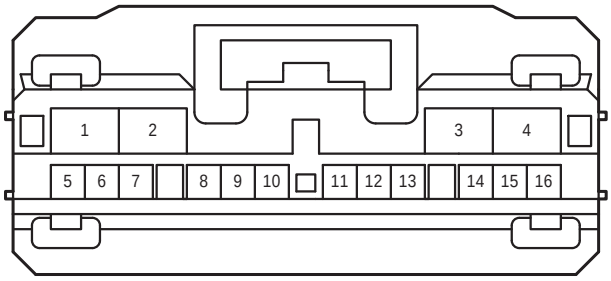

90980-12763

G89
Gray

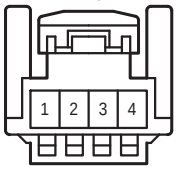

90980-12876

G91
White

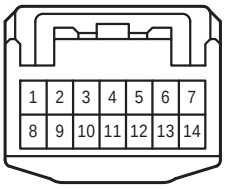

90980-12370

G94
White

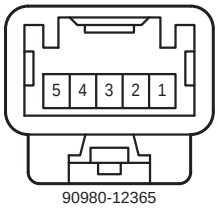

90980-12365

G95
White

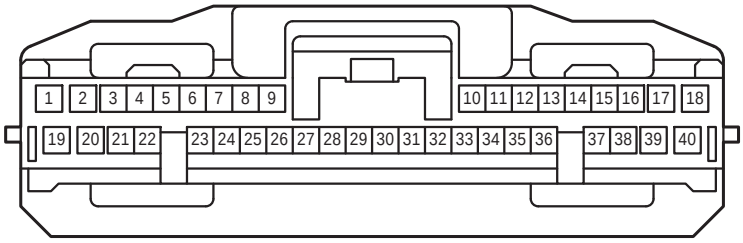

90980-12708

G96
White

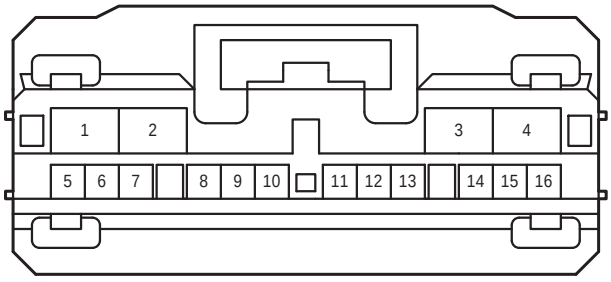

90980-12763

G97
Black

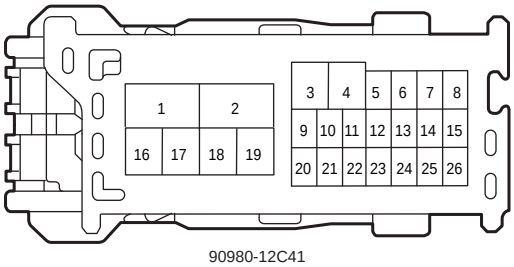

90980-12C41

G98
White

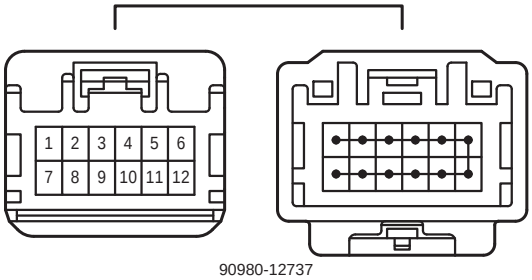

90980-12737

G99
White

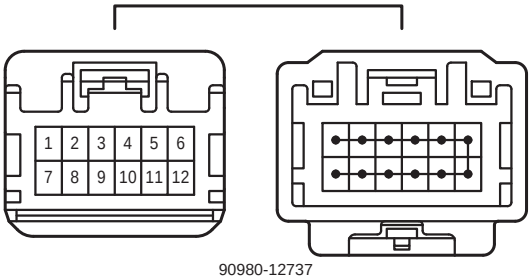

90980-12737