*1 : RHD
*2 : LHD

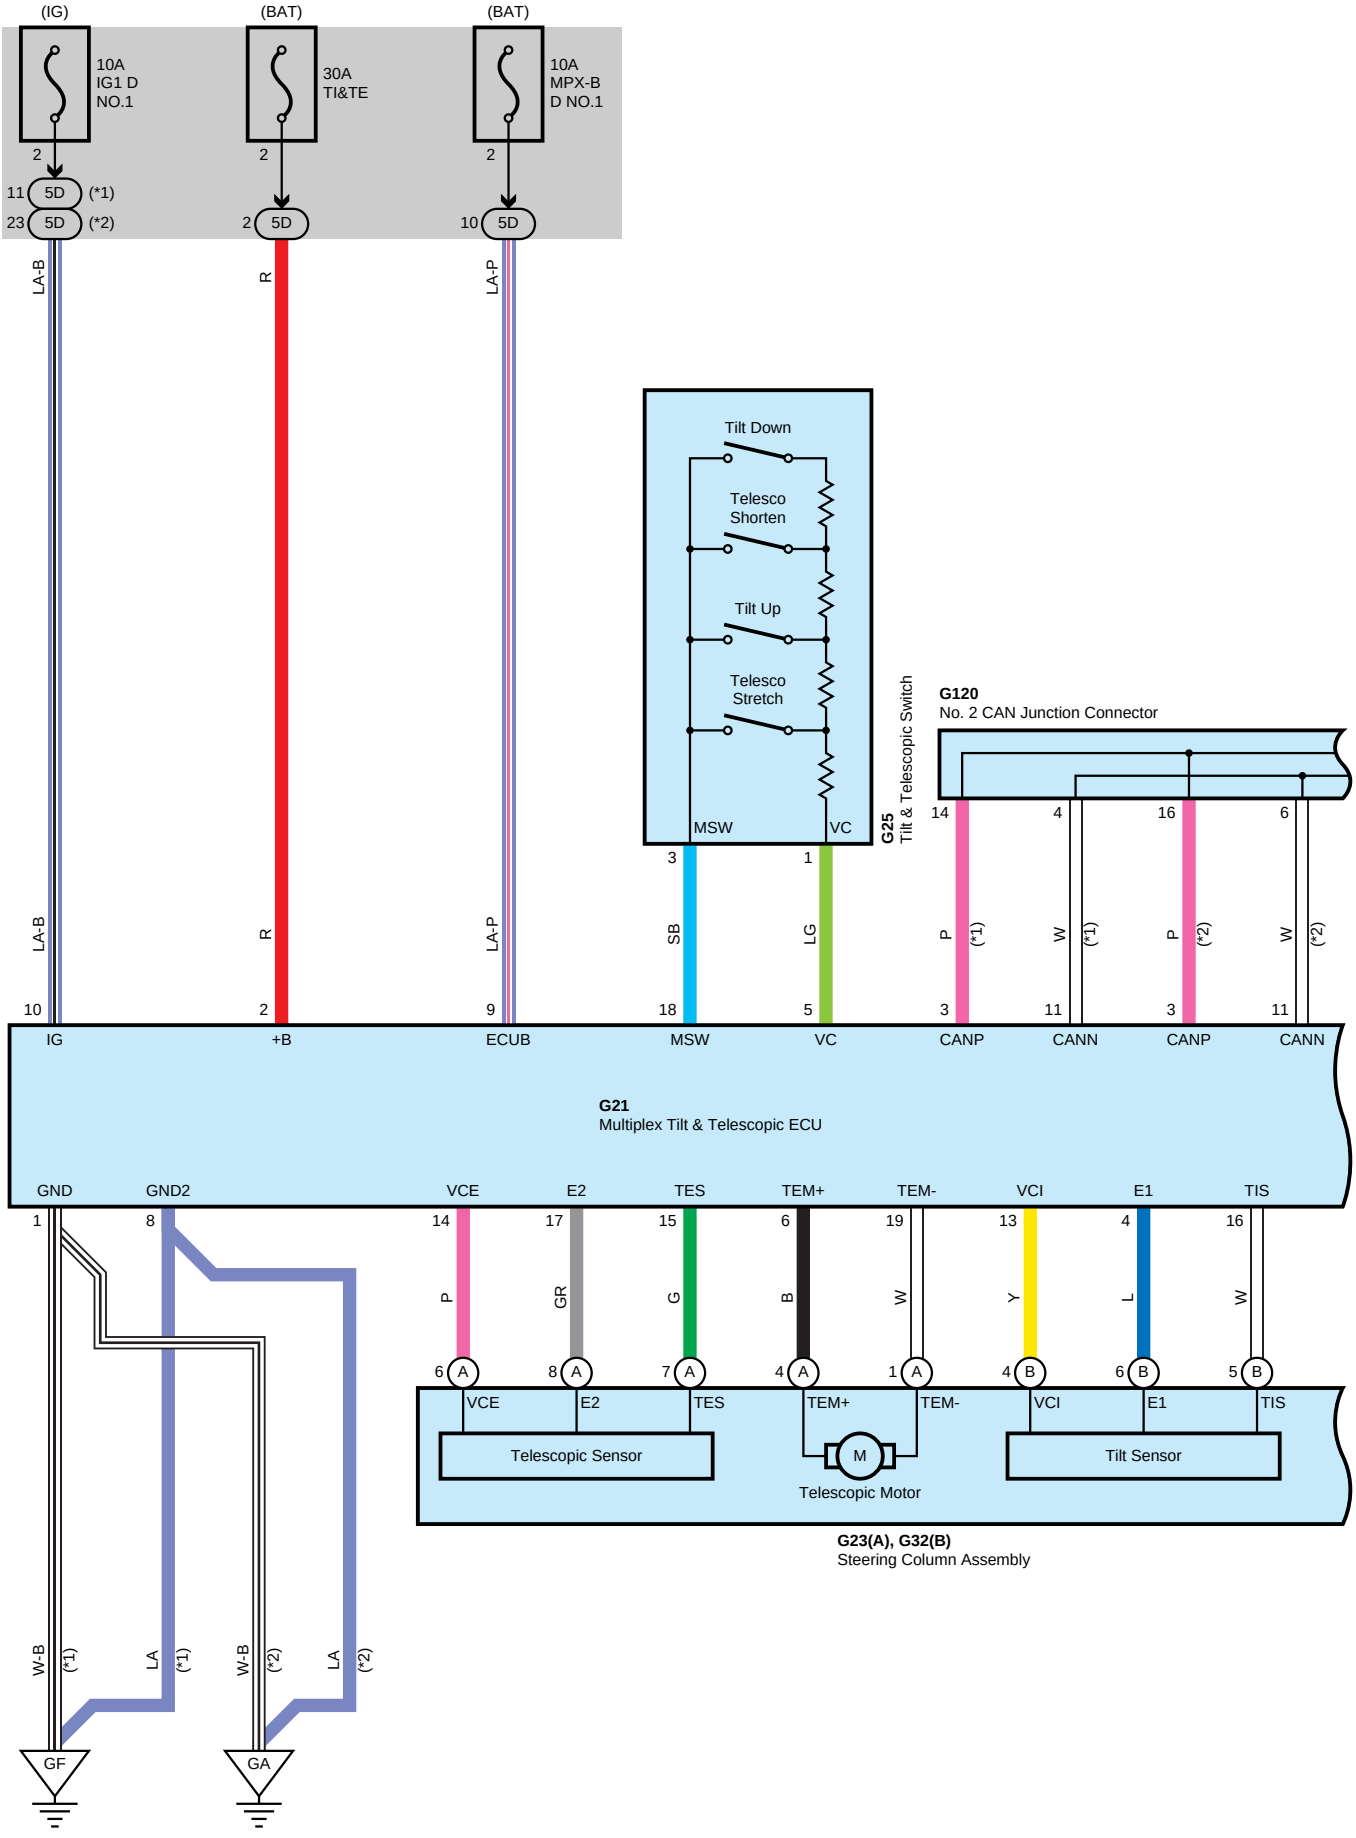
(IG)
(BAT)
(BAT)
10A
IG1 D
NO.1
30A
TI&TE
10A
MPX-B
D NO.1
2
11
5D
(*1)
23
5D
(*2)
2
5D
10
5D
LA-B
R
LA-P
Tilt Down
Telesco
Shorten
Tilt Up
Telesco
Stretch
MSW
VC
G25
Tilt & Telescopic Switch
G120
No. 2 CAN Junction Connector
14
4
16
6
3
1
SB
LG
P
W
P
W
(*1)
(*2)
10
2
9
18
5
3
11
3
11
IG
+B
ECUB
MSW
VC
CANP
CANN
CANP
CANN
G21
Multiplex Tilt & Telescopic ECU
GND
GND2
VCE
E2
TES
TEM+
TEM-
VCI
E1
TIS
1
8
14
17
15
6
19
13
4
16
P
GR
G
B
W
Y
L
W
6 A
8 A
7 A
4 A
1 A
4 B
6 B
5 B
VCE
E2
TES
TEM+
TEM-
VCI
E1
TIS
Telescopic Sensor
M
Telescopic Motor
Tilt Sensor
G23(A), G32(B)
Steering Column Assembly
W-B
LA
W-B
LA
GF
GA

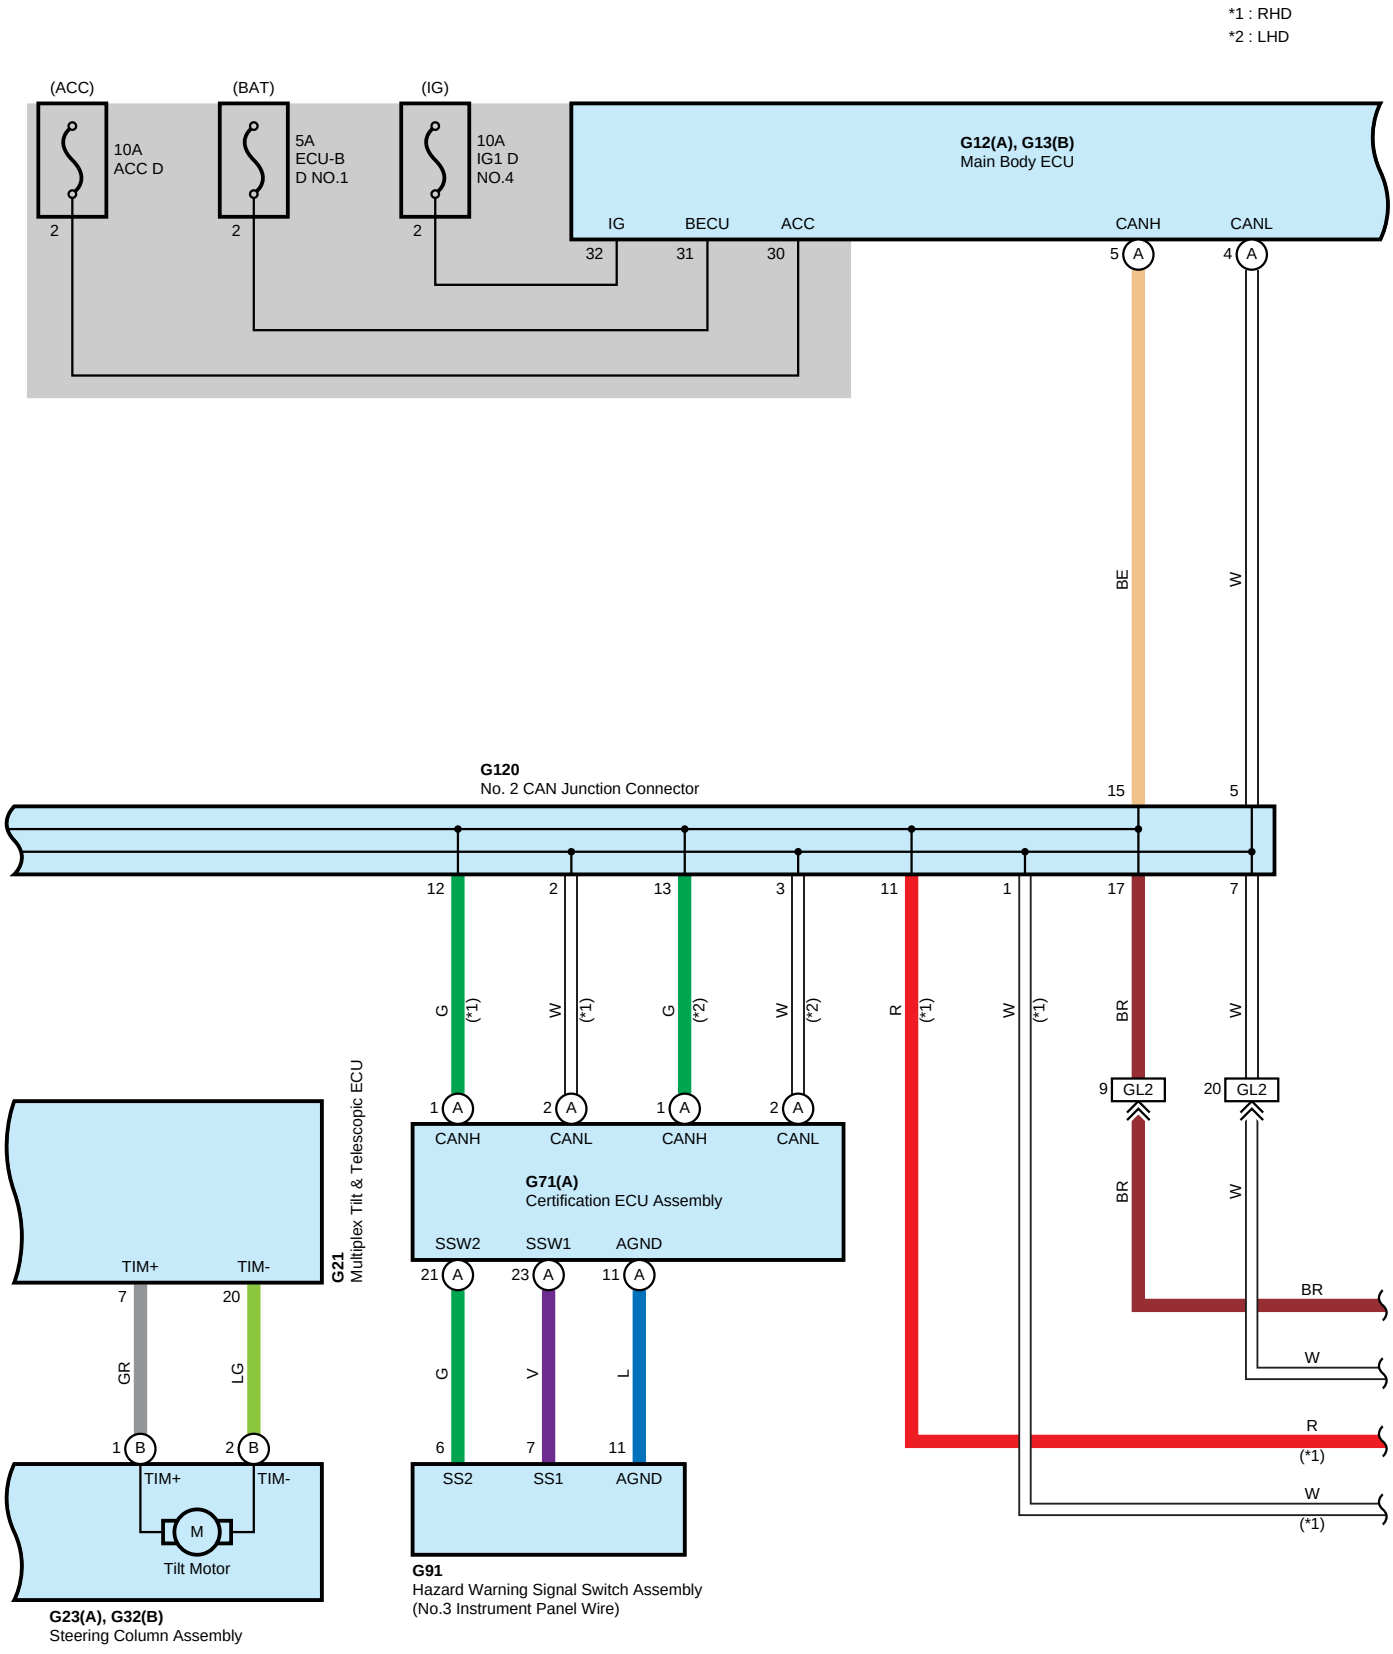
*1 : RHD
*2 : LHD
(ACC)
(BAT)
(IG)
10A
ACC D
5A
ECU-B
D NO.1
10A
IG1 D
NO.4
G12(A), G13(B)
Main Body ECU
IG
BECU
ACC
CANH
CANL
BE
W
G120
No. 2 CAN Junction Connector
G
W
R
BR
(*1)
(*2)
CANH
CANL
G71(A)
Certification ECU Assembly
SSW2
SSW1
AGND
V
L
SS2
SS1
GL2
G21
Multiplex Tilt & Telescopic ECU
TIM+
TIM-
GR
LG
Tilt Motor
G23(A), G32(B)
Steering Column Assembly
G91
Hazard Warning Signal Switch Assembly
(No.3 Instrument Panel Wire)

*1 : RHD
*2 : LHD

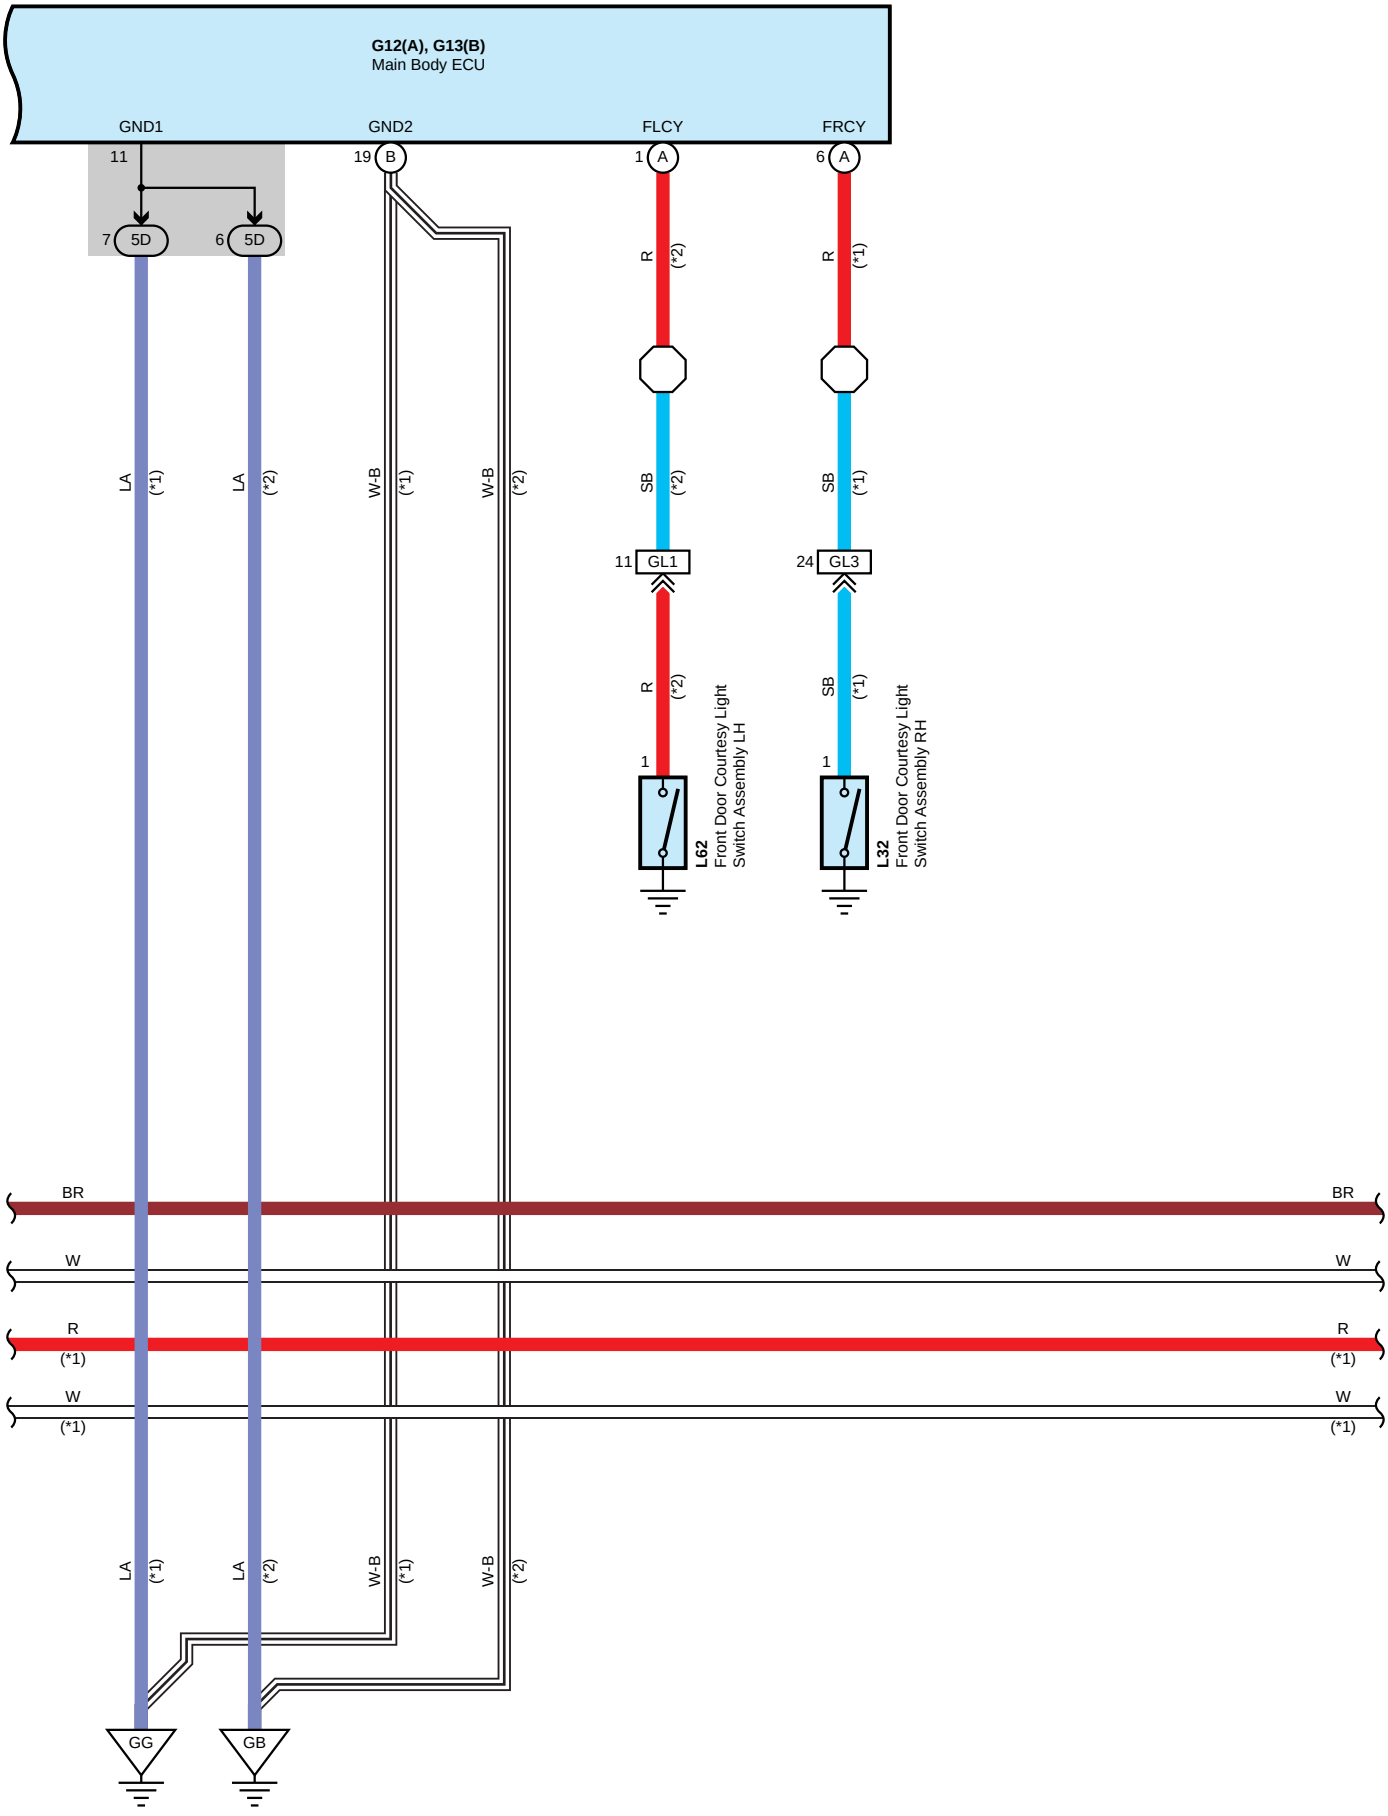
G12(A), G13(B)
Main Body ECU
GND1
GND2
FLCY
FRCY
11
19 B
1 A
6 A
7 5D
6 5D
R (*2)
R (*1)
LA (*1)
LA (*2)
W-B (*1)
W-B (*2)
SB (*2)
SB (*1)
11 GL1
24 GL3
R (*2)
SB (*1)
1
1
L62
Front Door Courtesy Light
Switch Assembly LH
L32
Front Door Courtesy Light
Switch Assembly RH
BR
W
R
(*1)
W
(*1)
GG
GB

*1 : RHD
*2 : LHD

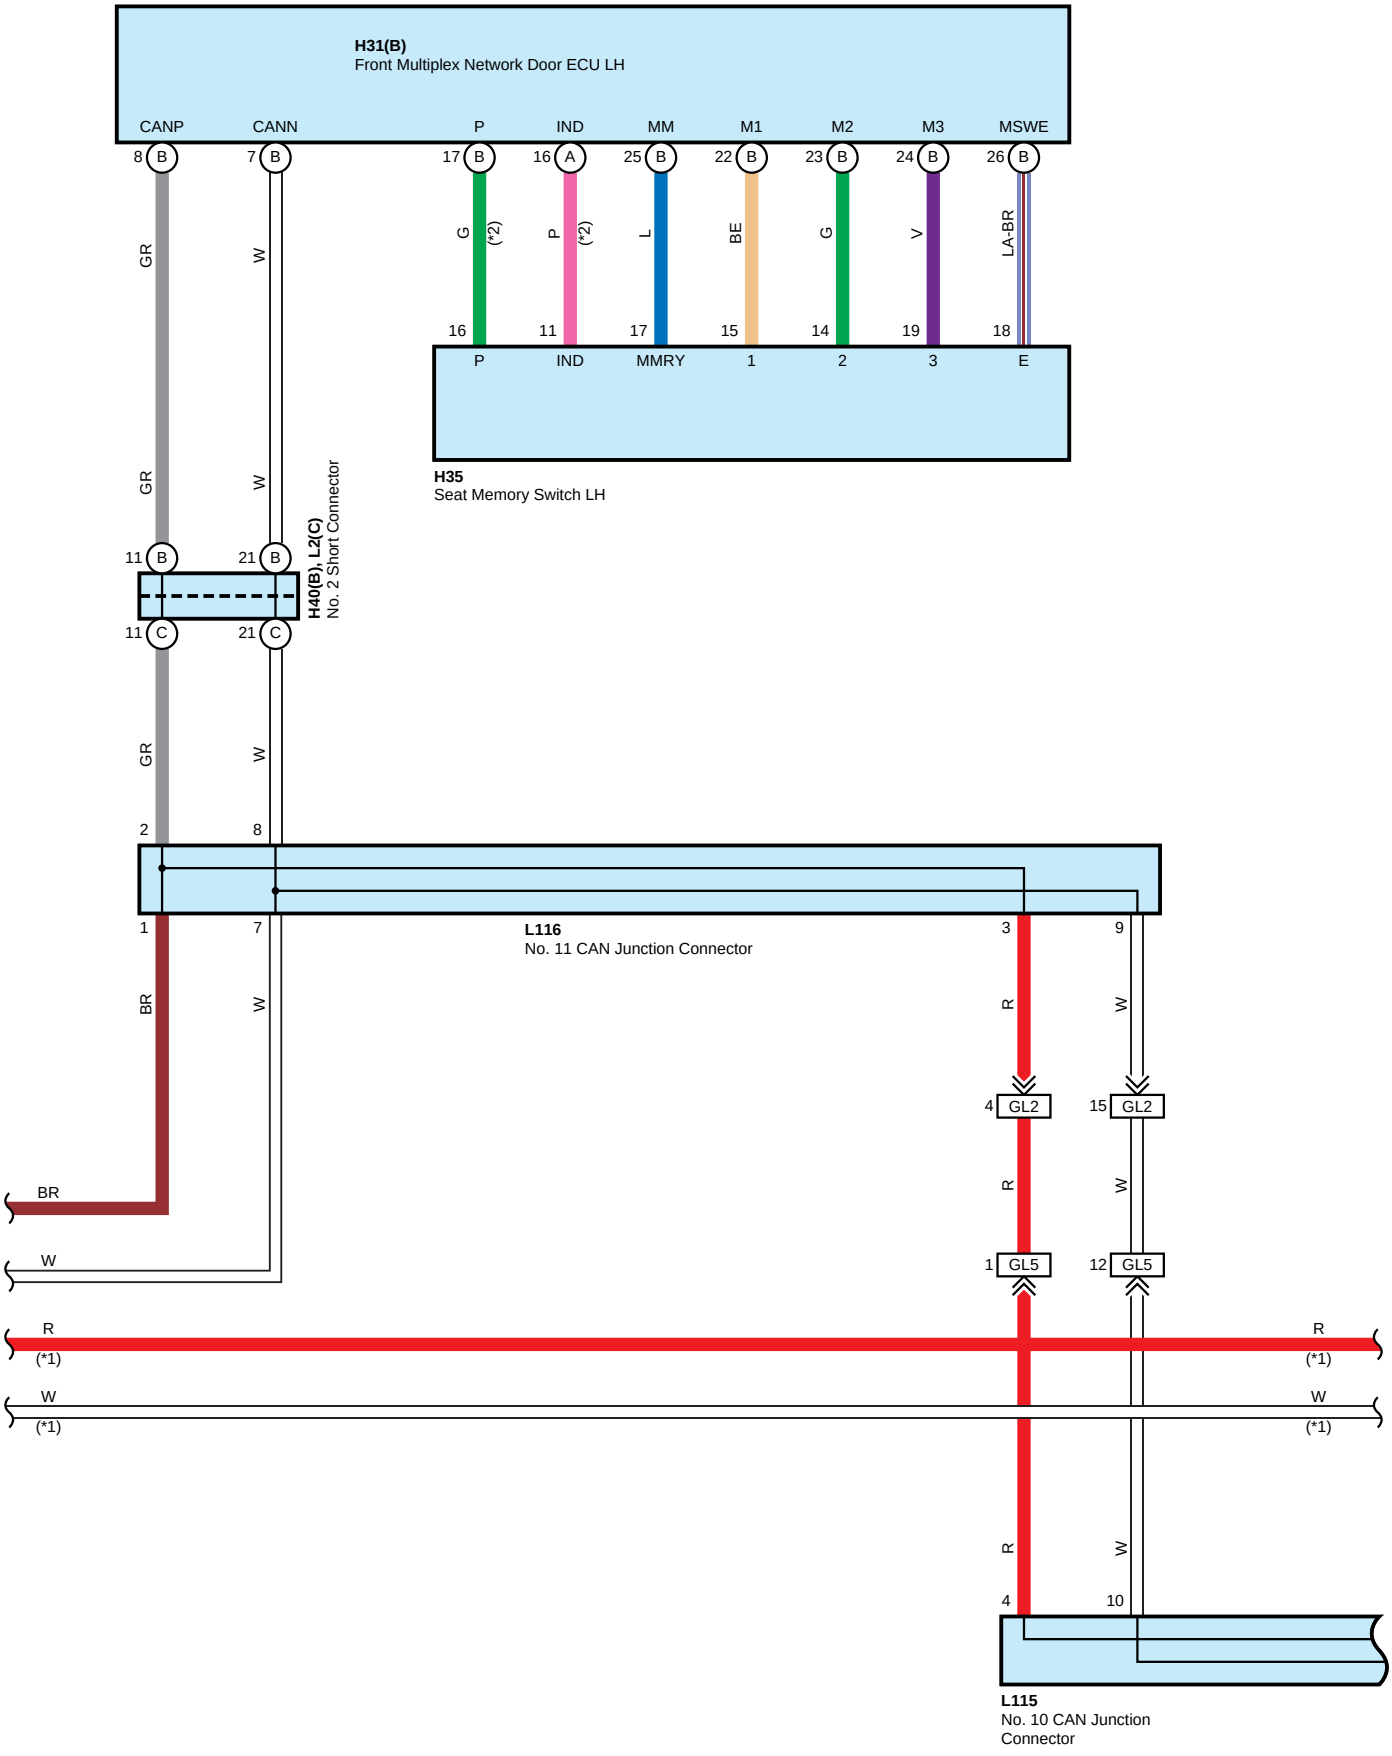
H31(B)
Front Multiplex Network Door ECU LH
CANP
CANN
P
IND
MM
M1
M2
M3
MSWE
8 B
7 B
17 B
16 A
25 B
22 B
23 B
24 B
26 B
GR
W
G (*2)
P (*2)
L
BE
G
V
LA-BR
16
11
17
15
14
19
18
P
IND
MMRY
1
2
3
E
H35
Seat Memory Switch LH
11 B
21 B
H40(B), L2(C)
No. 2 Short Connector
11 C
21 C
2
8
1
7
L116
No. 11 CAN Junction Connector
3
9
BR
R
4 GL2
15 GL2
1 GL5
12 GL5
(*1)
4
10
L115
No. 10 CAN Junction
Connector

*1 : RHD
*2 : LHD

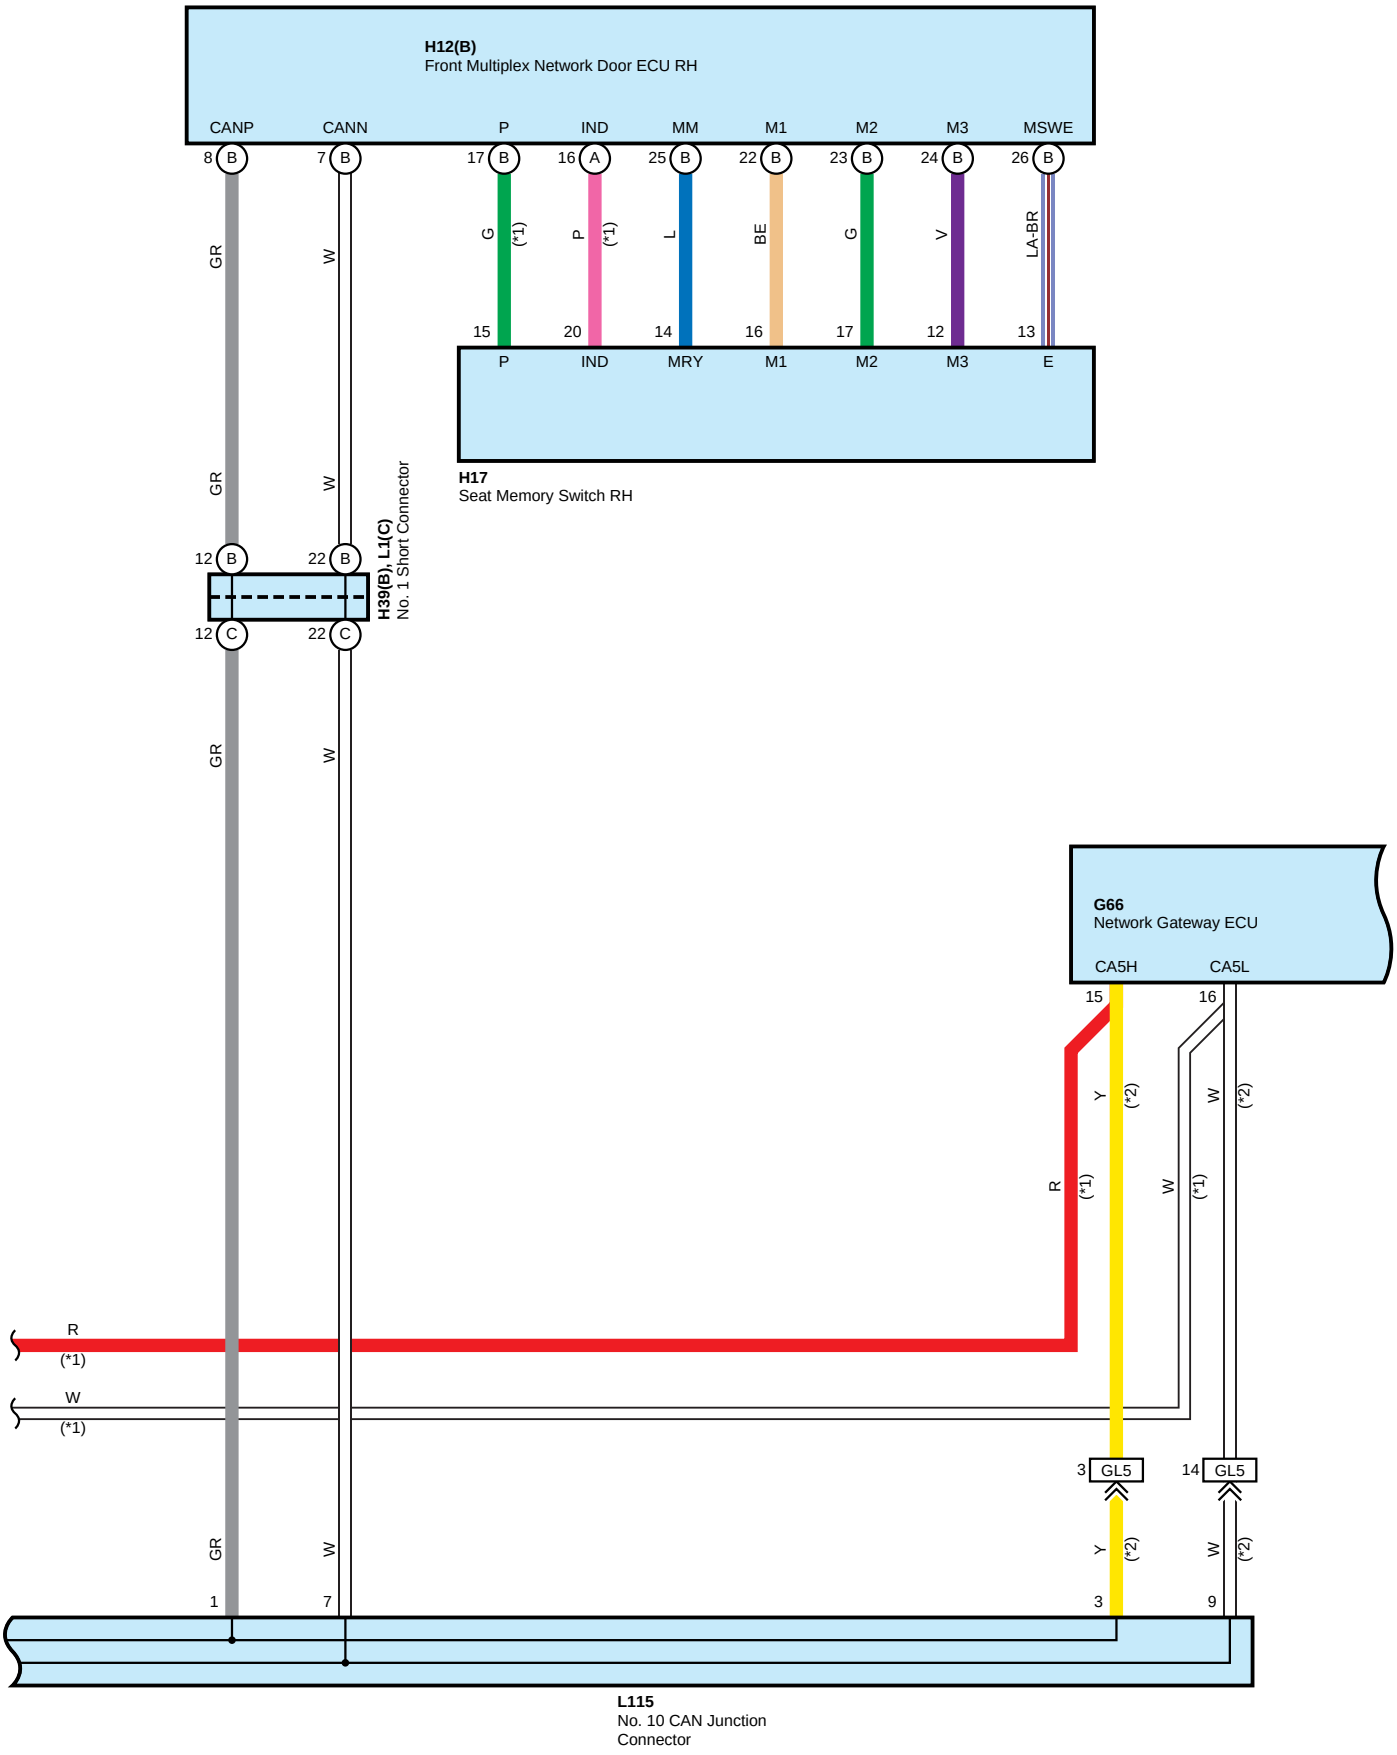
H12(B)
Front Multiplex Network Door ECU RH
CANP
CANN
P
IND
MM
M1
M2
M3
MSWE
8 B
7 B
17 B
16 A
25 B
22 B
23 B
24 B
26 B
GR
W
G (*1)
P (*1)
L
BE
G
V
LA-BR
15
20
14
16
17
12
13
P
IND
MRY
M1
M2
M3
E
H17
Seat Memory Switch RH
H39(B), L1(C)
No. 1 Short Connector
12 B
22 B
12 C
22 C
G66
Network Gateway ECU
CA5H
CA5L
15
16
Y (*2)
W (*2)
R (*1)
W (*1)
R
(*1)
W
(*1)
3 GL5
14 GL5
1
7
3
9
L115
No. 10 CAN Junction
Connector

*1 : RHD
*2 : LHD

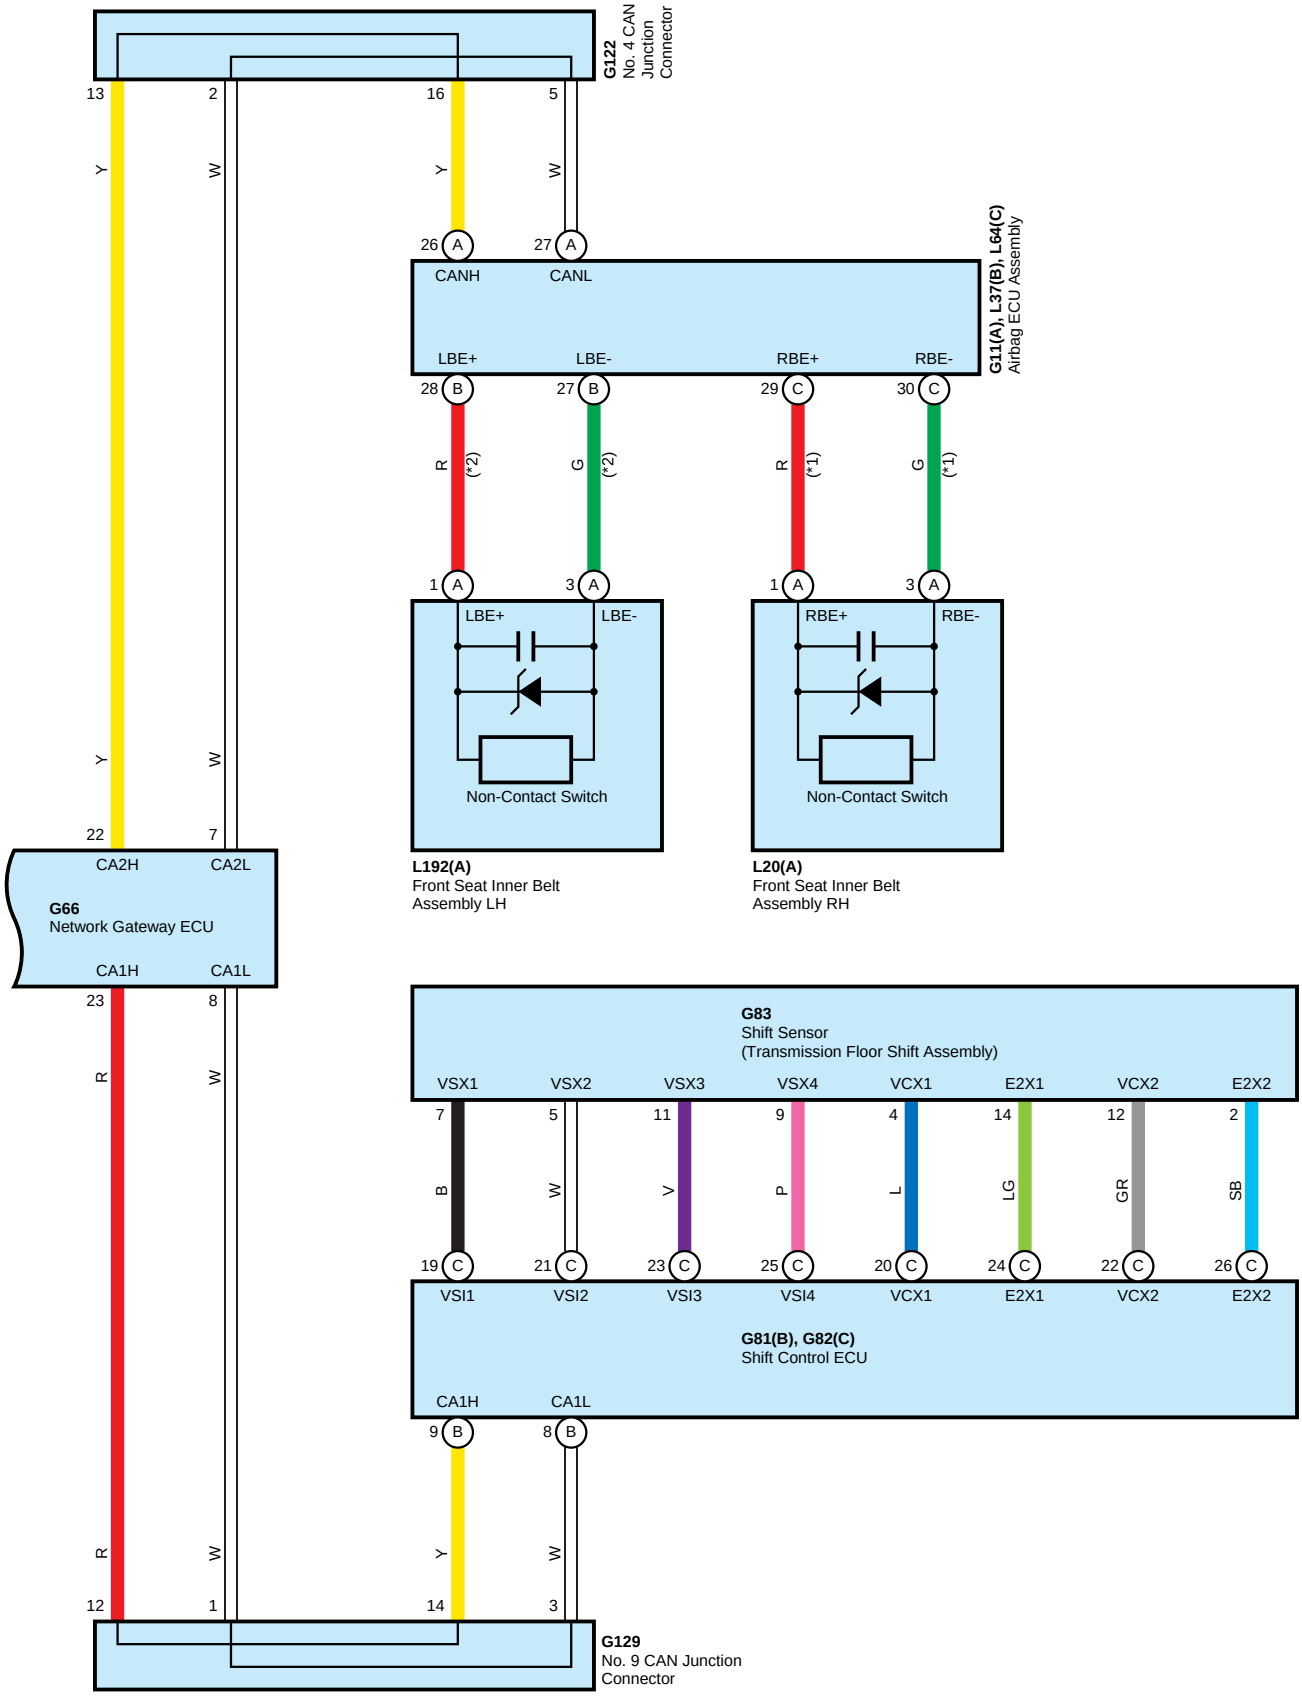
G122
No. 4 CAN Junction Connector
13
2
16
5
Y
W
Y
W
26 A
27 A
CANH
CANL
G11(A), L37(B), L64(C)
Airbag ECU Assembly
LBE+
LBE-
RBE+
RBE-
28 B
27 B
29 C
30 C
R (*2)
G (*2)
R (*1)
G (*1)
1 A
3 A
1 A
3 A
LBE+
LBE-
Non-Contact Switch
RBE+
RBE-
Non-Contact Switch
Y
W
22
7
CA2H
CA2L
G66
Network Gateway ECU
CA1H
CA1L
L192(A)
Front Seat Inner Belt Assembly LH
L20(A)
Front Seat Inner Belt Assembly RH
23
8
R
W
G83
Shift Sensor
(Transmission Floor Shift Assembly)
VSX1
VSX2
VSX3
VSX4
VCX1
E2X1
VCX2
E2X2
7
5
11
9
4
14
12
2
B
W
V
P
L
LG
GR
SB
19 C
21 C
23 C
25 C
20 C
24 C
22 C
26 C
VSI1
VSI2
VSI3
VSI4
VCX1
E2X1
VCX2
E2X2
G81(B), G82(C)
Shift Control ECU
CA1H
CA1L
9 B
8 B
R
W
Y
W
12
1
14
3
G129
No. 9 CAN Junction Connector

G11
Yellow

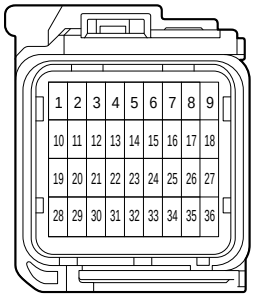

90980-12C56

G12
Black

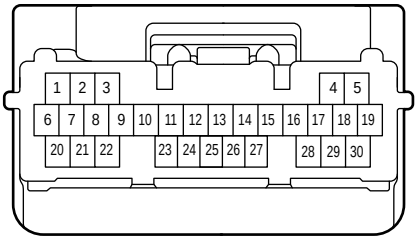

90980-12C62

G13
Black

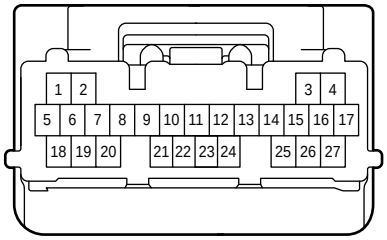

90980-12C63

G21
Black

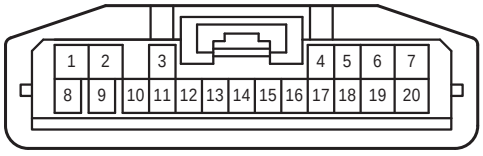

90980-12976

G23
White

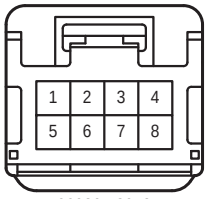

90980-12978

G25
Black

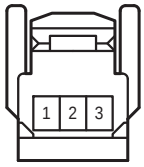

90980-12695

G32
White

90980-10797

G66
Black

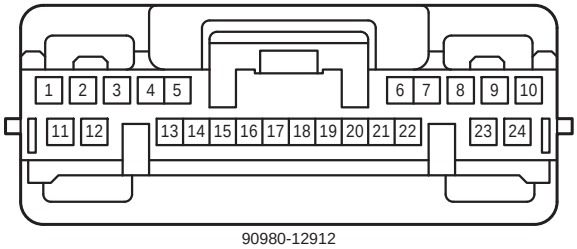

90980-12912

G71
White

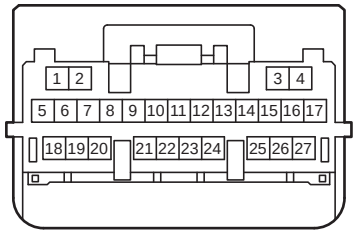

90980-12B78

G81
White

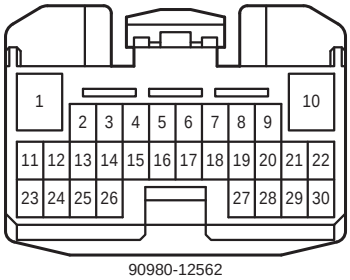

90980-12562

G82
White

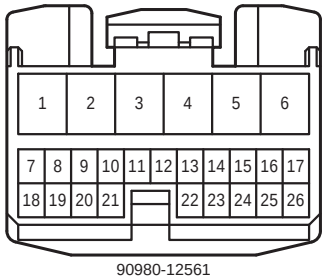

90980-12561

G83
White

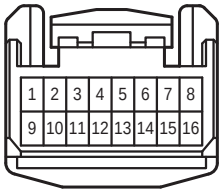

90980-12553

G91
White

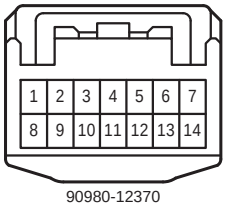

90980-12370

G120
White

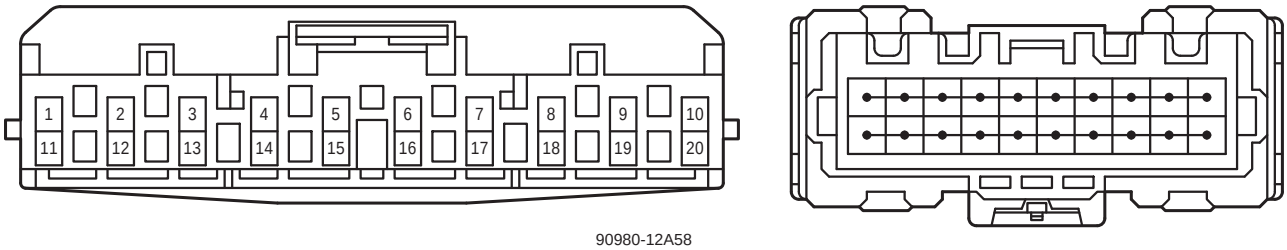

90980-12A58

G122
White

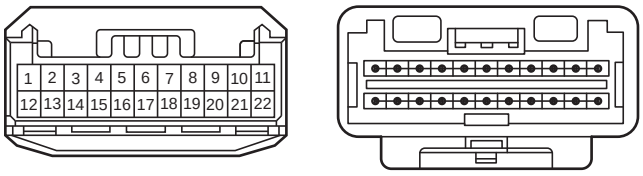

90980-12B54

G129
White

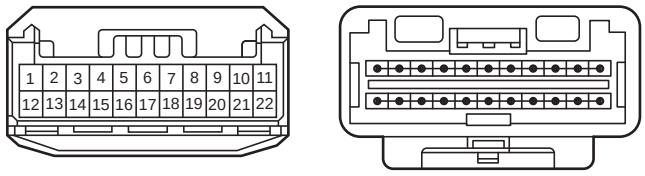

90980-12B54

H10
White

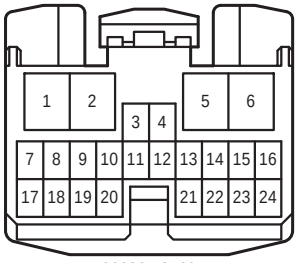

90980-12560

H12
White

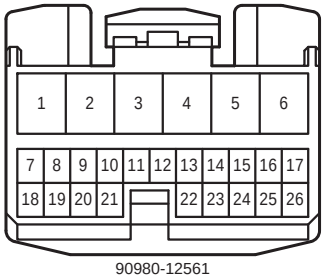

90980-12561

H17
Black

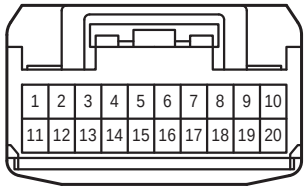

90980-12460

H29
White

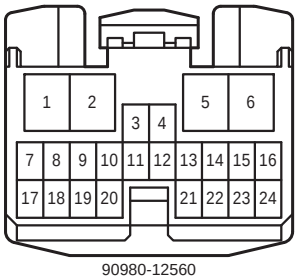

90980-12560

H31
White

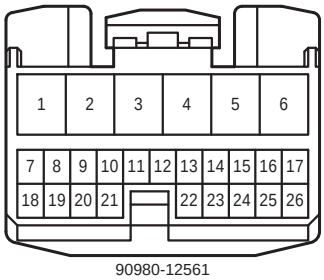

90980-12561

H35
Black

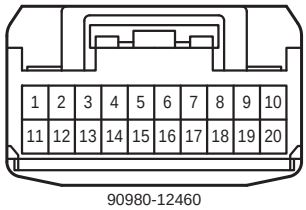

90980-12460

H39
White

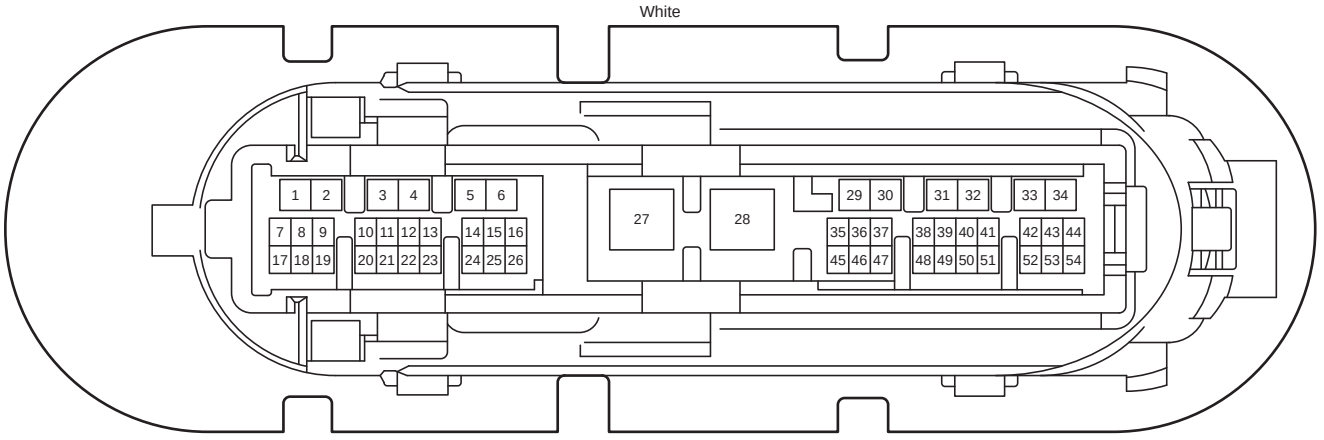

90980-12D88

H40
White

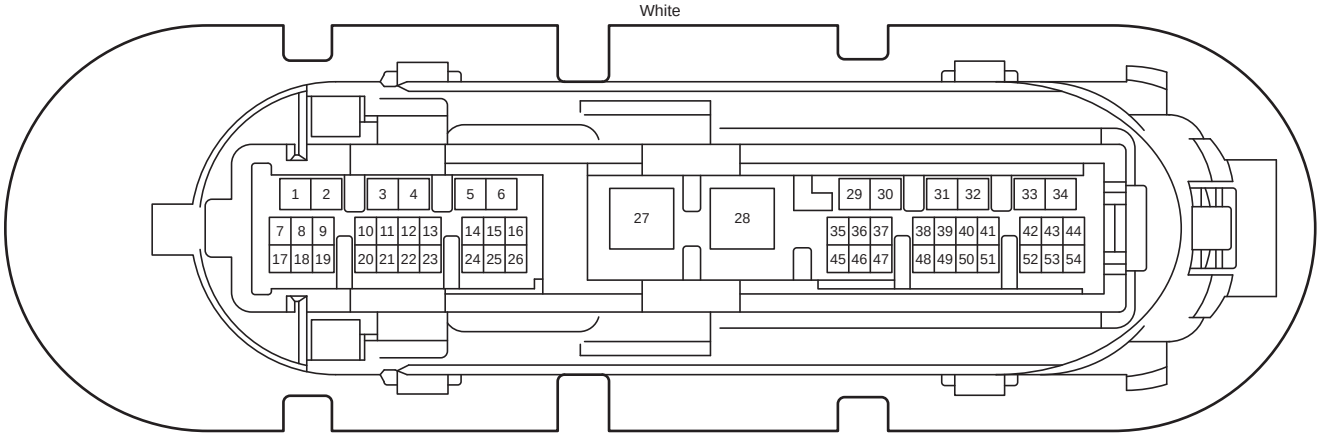

90980-12D88

L1
Yellow

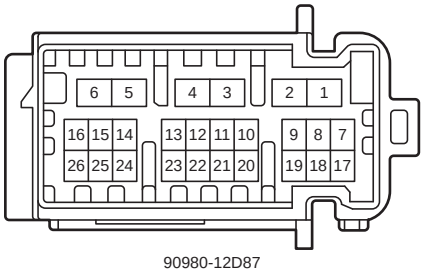

90980-12D87

L2
Yellow

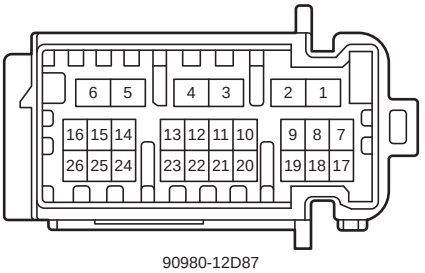

90980-12D87

L20
Gray

90980-10942

L32
White

90980-10871

L37
Yellow

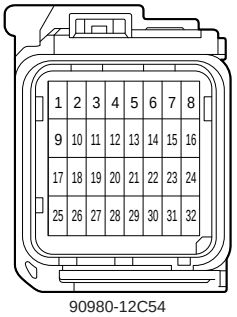

90980-12C54

L62
White

90980-10871

L64
Yellow

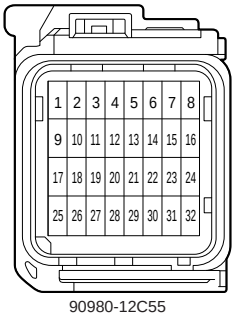

90980-12C55

L115
White

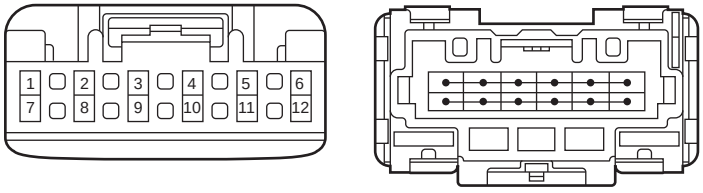

90980-12C68

L116
White

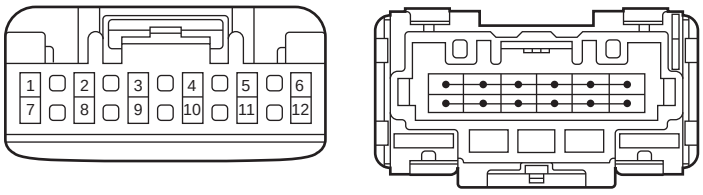

90980-12C68

L192
Gray

90980-10942

5D
White

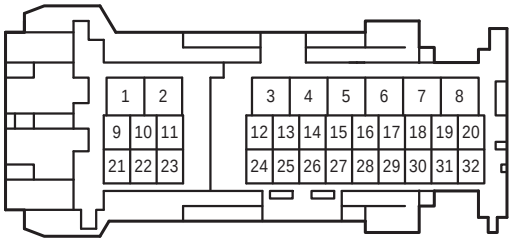

90980-12A48

GL1
Gray

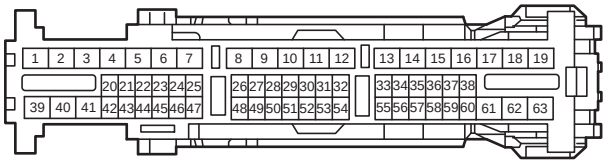

90980-12B20

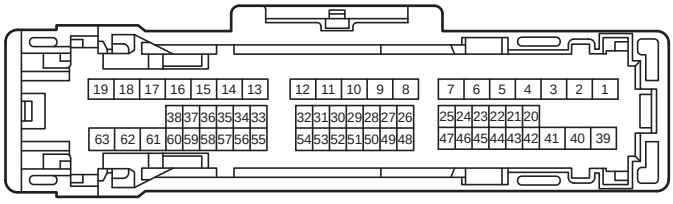

90980-12B19

GL2
White

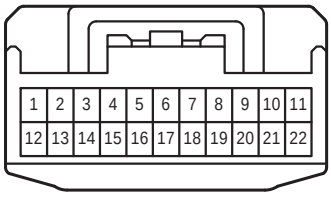

90980-12372

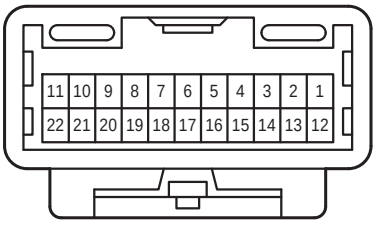

90980-12371

GL3
Gray

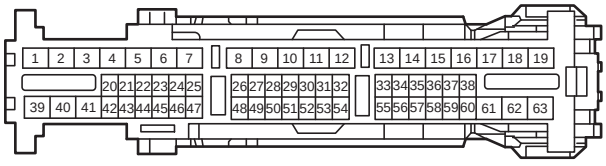

90980-12B20

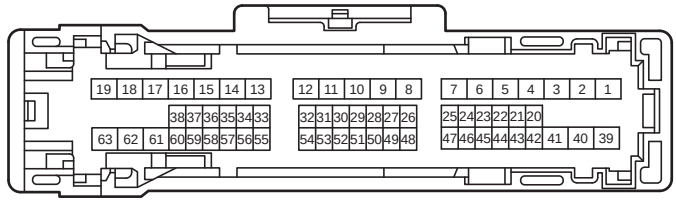

90980-12B19

GL5
White

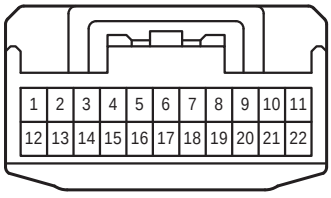

90980-12372

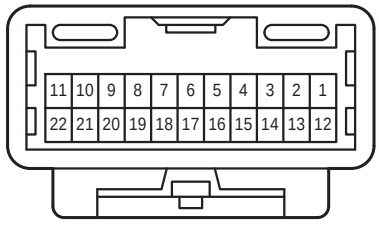

90980-12371