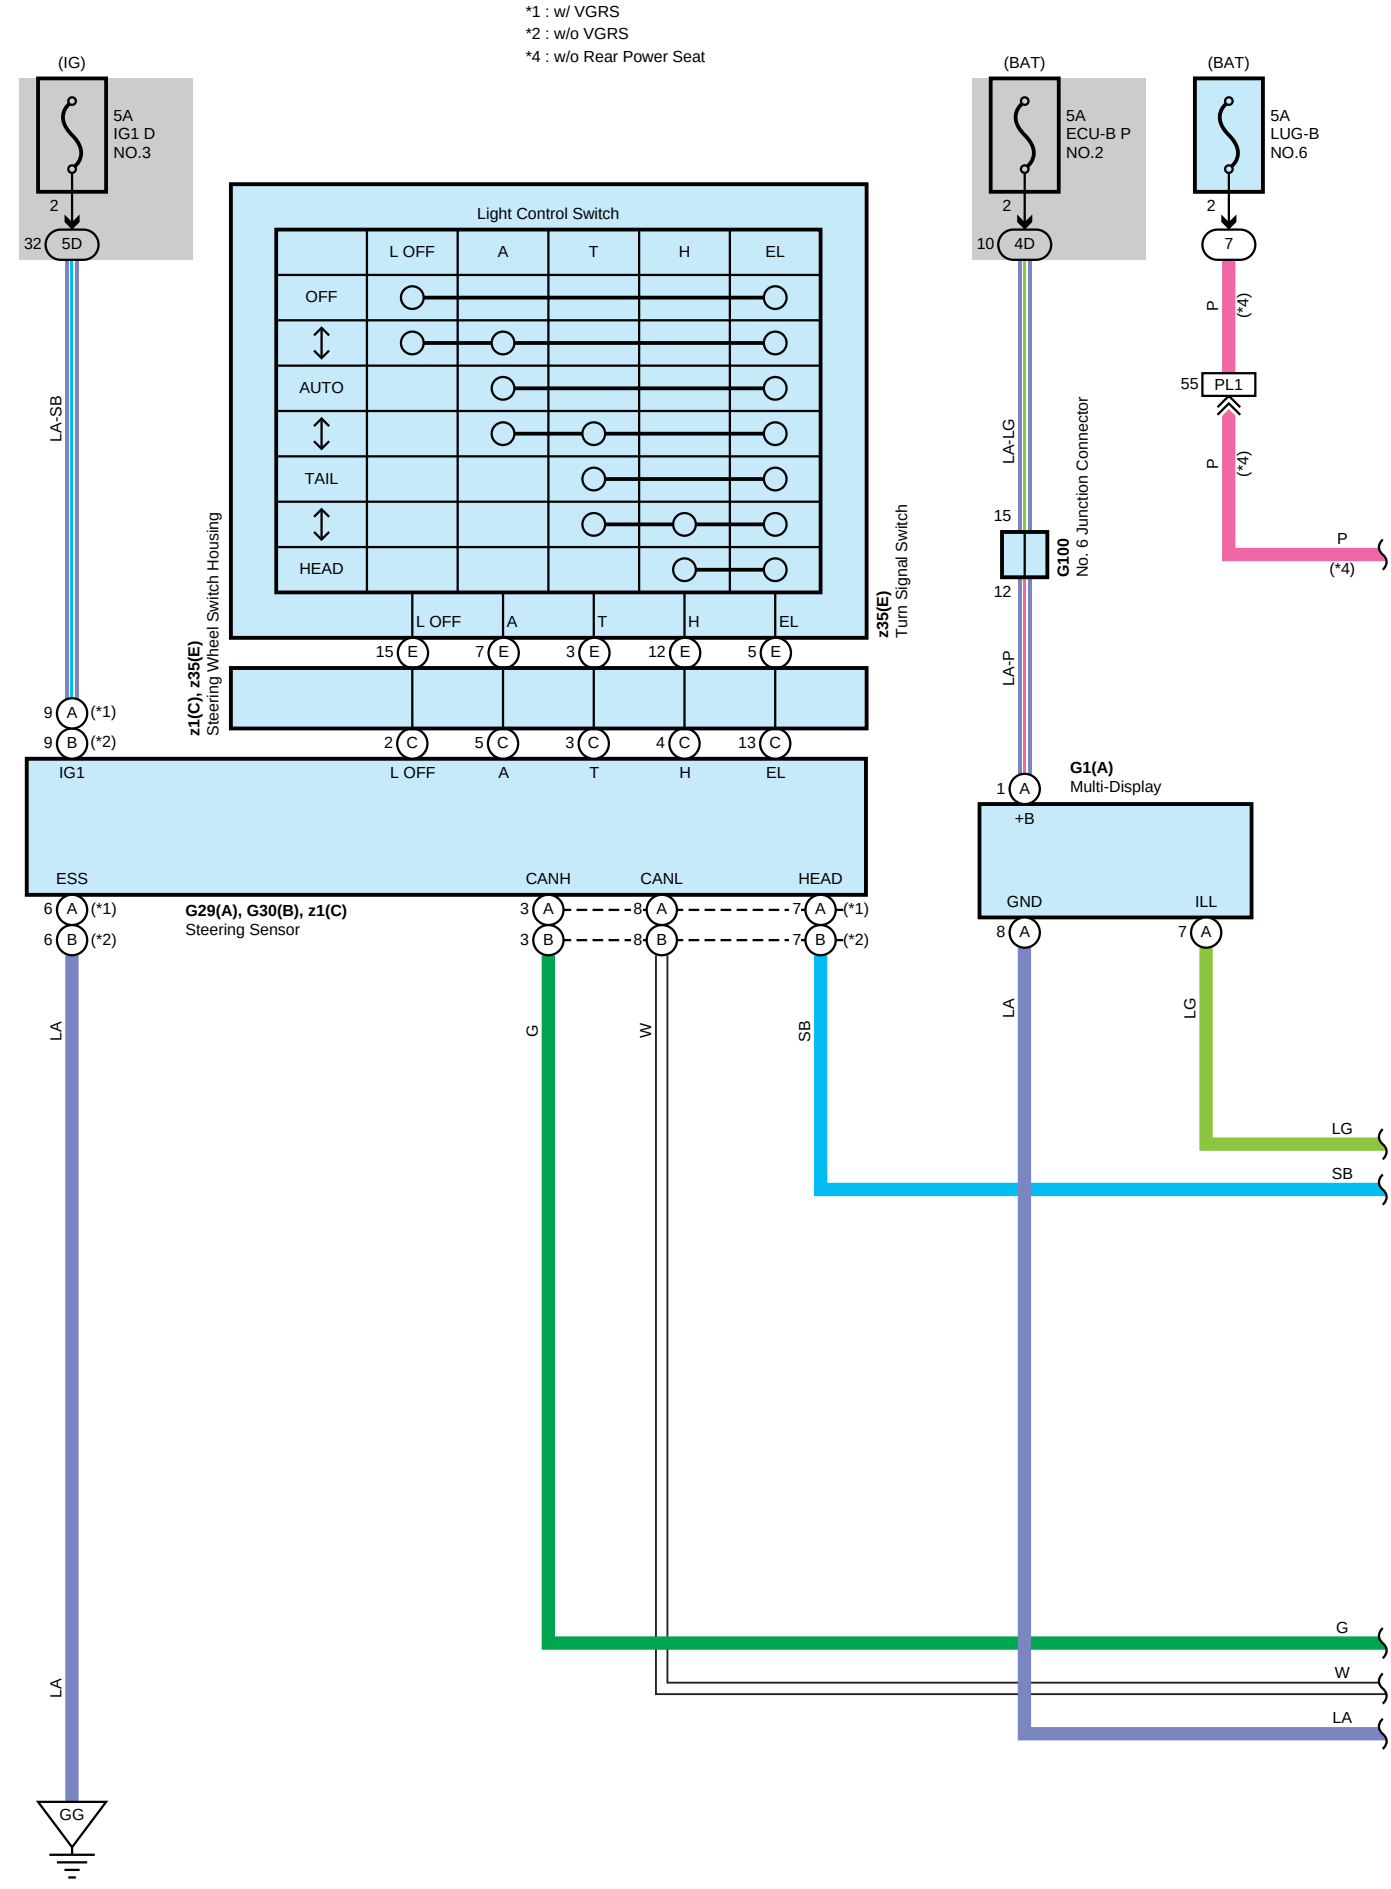
*1 : w/ VGRS
*2 : w/o VGRS
*4 : w/o Rear Power Seat
(IG)
5A
IG1 D
NO.3
2
32 5D
LA-SB
(BAT)
5A
ECU-B P
NO.2
2
10 4D
LA-LG
15
G100
No. 6 Junction Connector
12
LA-P
(BAT)
5A
LUG-B
NO.6
2
7
P
(*4)
55 PL1
P
(*4)
P
(*4)
Light Control Switch
L OFF
A
T
H
EL
OFF
AUTO
TAIL
HEAD
z35(E)
Turn Signal Switch
z1(C), z35(E)
Steering Wheel Switch Housing
15 E
7 E
3 E
12 E
5 E
2 C
5 C
3 C
4 C
13 C
9 A (*1)
9 B (*2)
IG1
G1(A)
Multi-Display
1 A
+B
ESS
CANH
CANL
HEAD
GND
ILL
6 A (*1)
6 B (*2)
G29(A), G30(B), z1(C)
Steering Sensor
3 A
3 B
8 A
8 B
7 A (*1)
7 B (*2)
8 A
7 A
LA
G
W
SB
LA
LG
LG
SB
G
W
LA
LA
GG

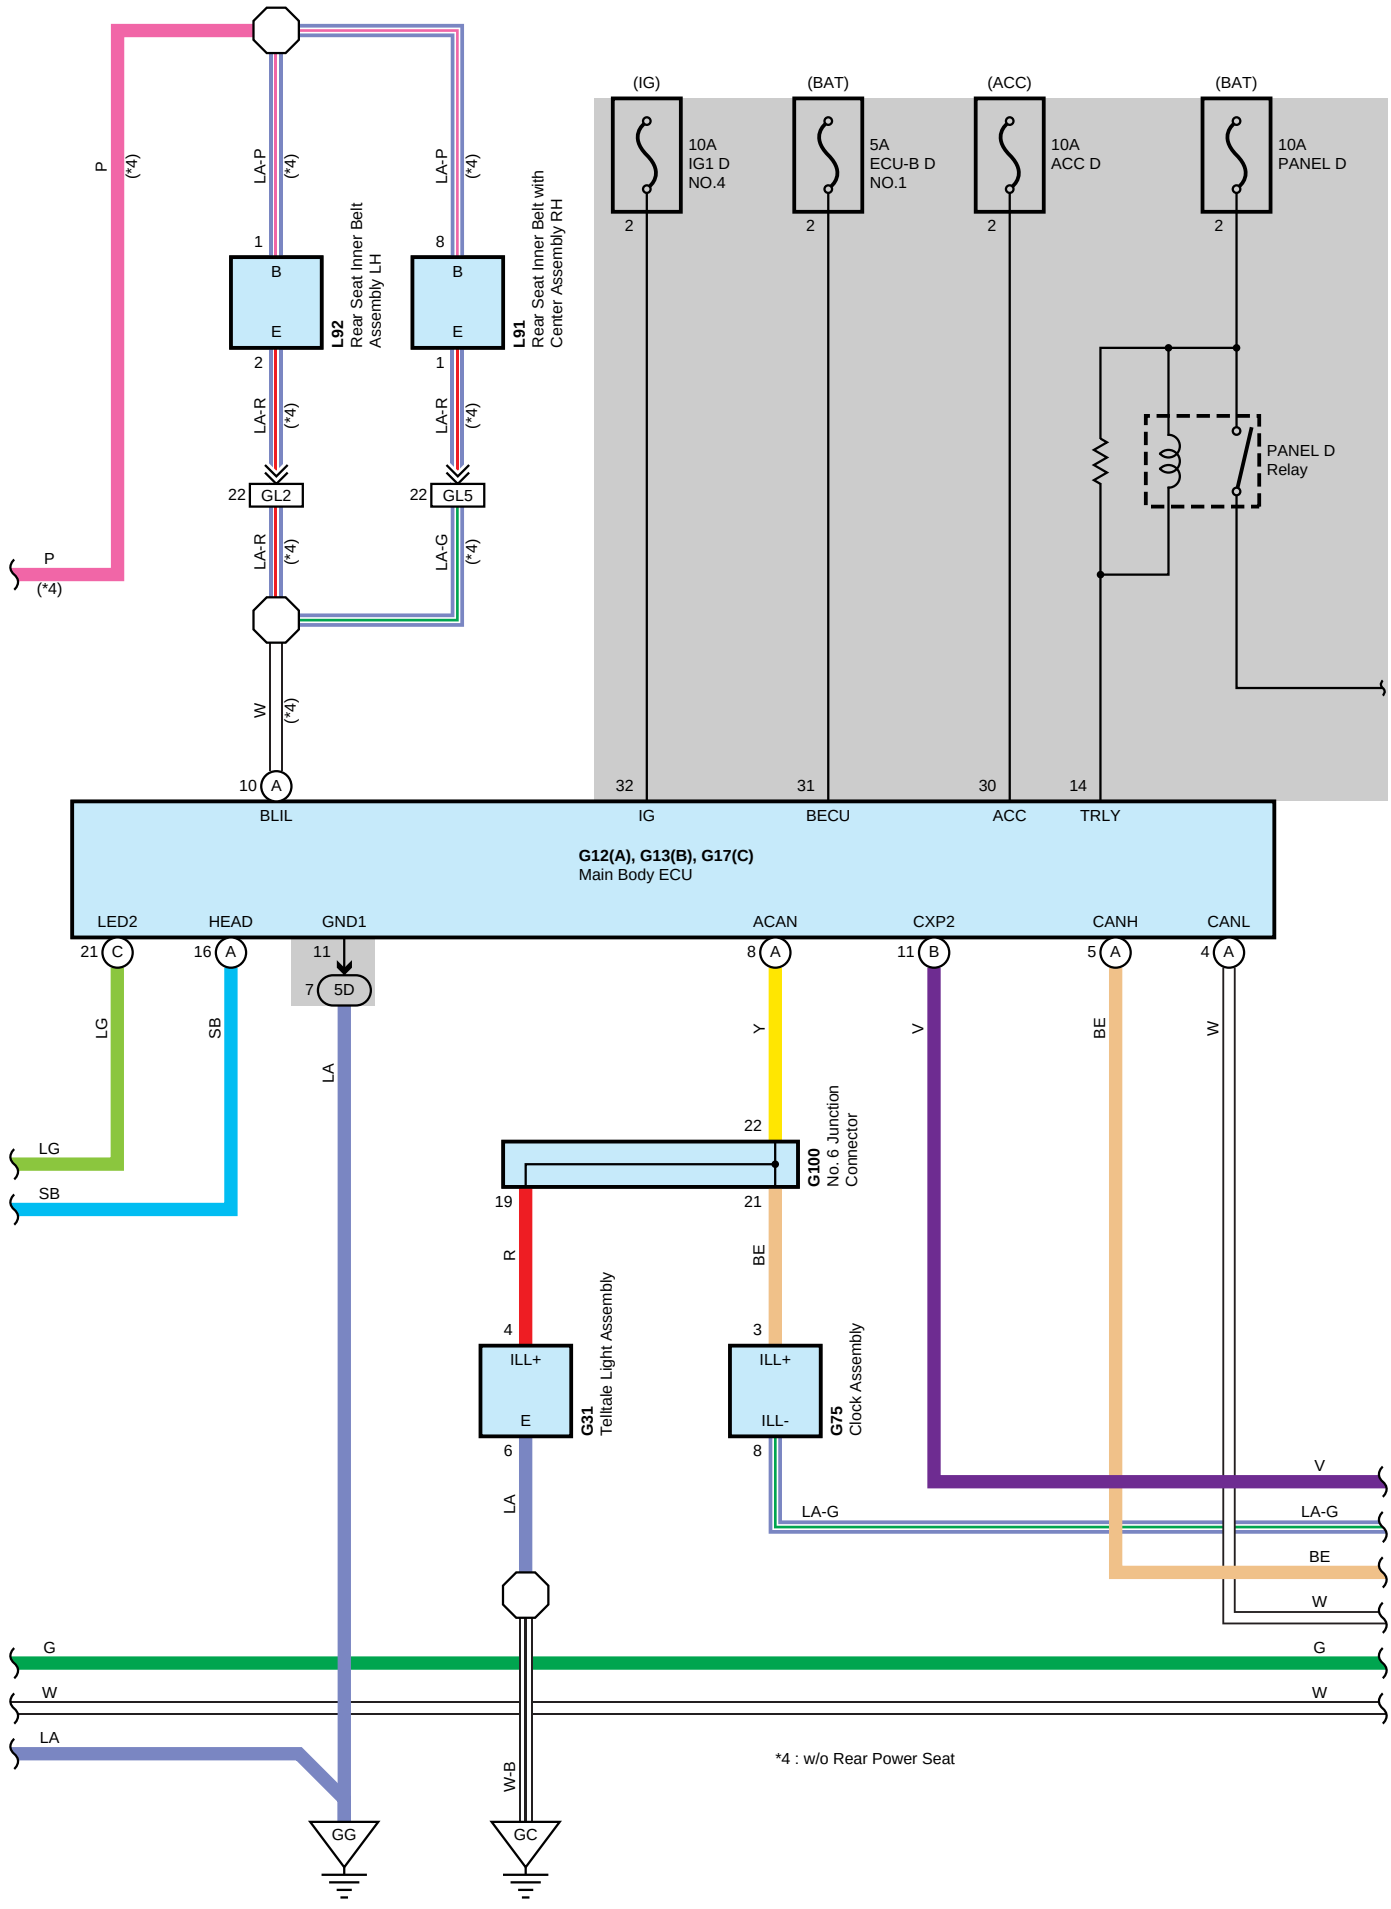
(IG)
(BAT)
(ACC)
(BAT)
10A
IG1 D
NO.4
5A
ECU-B D
NO.1
10A
ACC D
10A
PANEL D
PANEL D
Relay
L92
Rear Seat Inner Belt
Assembly LH
L91
Rear Seat Inner Belt with
Center Assembly RH
GL2
GL5
BLIL
IG
BECU
ACC
TRLY
G12(A), G13(B), G17(C)
Main Body ECU
LED2
HEAD
GND1
ACAN
CXP2
CANH
CANL
5D
G100
No. 6 Junction
Connector
G31
Telltale Light Assembly
G75
Clock Assembly
ILL+
ILL-
GG
GC
*4 : w/o Rear Power Seat

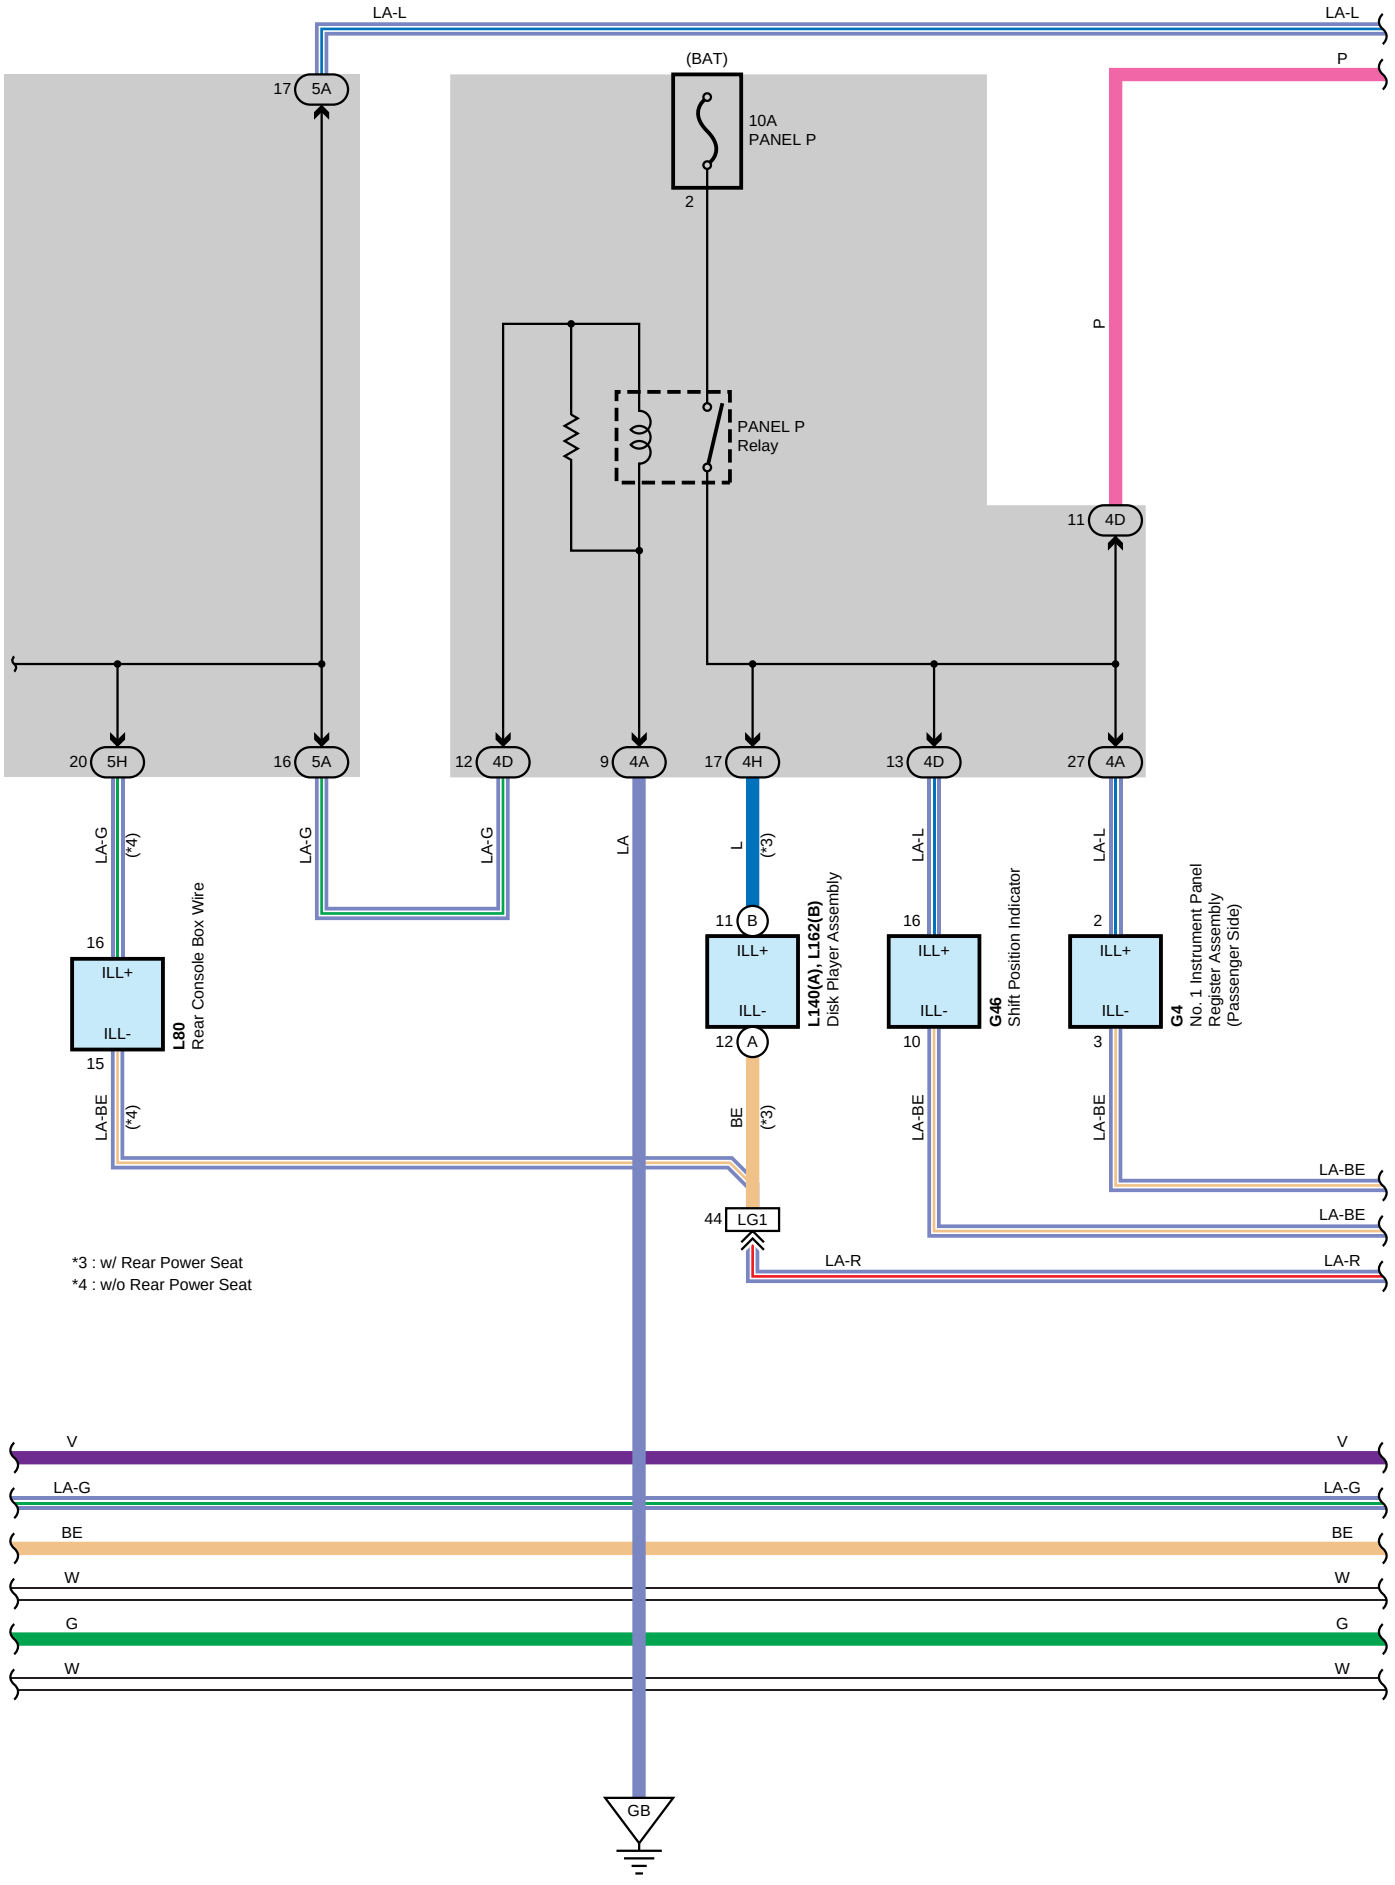
LA-L
LA-L
P
(BAT)
17 5A
10A
PANEL P
2
PANEL P
Relay
P
11 4D
20 5H
16 5A
12 4D
9 4A
17 4H
13 4D
27 4A
LA-G
(*4)
LA-G
LA-G
LA
L
(*3)
LA-L
LA-L
16
ILL+
ILL-
15
L80
Rear Console Box Wire
11 B
ILL+
ILL-
12 A
L140(A), L162(B)
Disk Player Assembly
16
ILL+
ILL-
10
G46
Shift Position Indicator
2
ILL+
ILL-
3
G4
No. 1 Instrument Panel
Register Assembly
(Passenger Side)
LA-BE
(*4)
BE
(*3)
LA-BE
LA-BE
LA-BE
LA-BE
44 LG1
LA-R
LA-R
*3 : w/ Rear Power Seat
*4 : w/o Rear Power Seat
V
V
LA-G
LA-G
BE
BE
W
W
G
G
W
W
GB

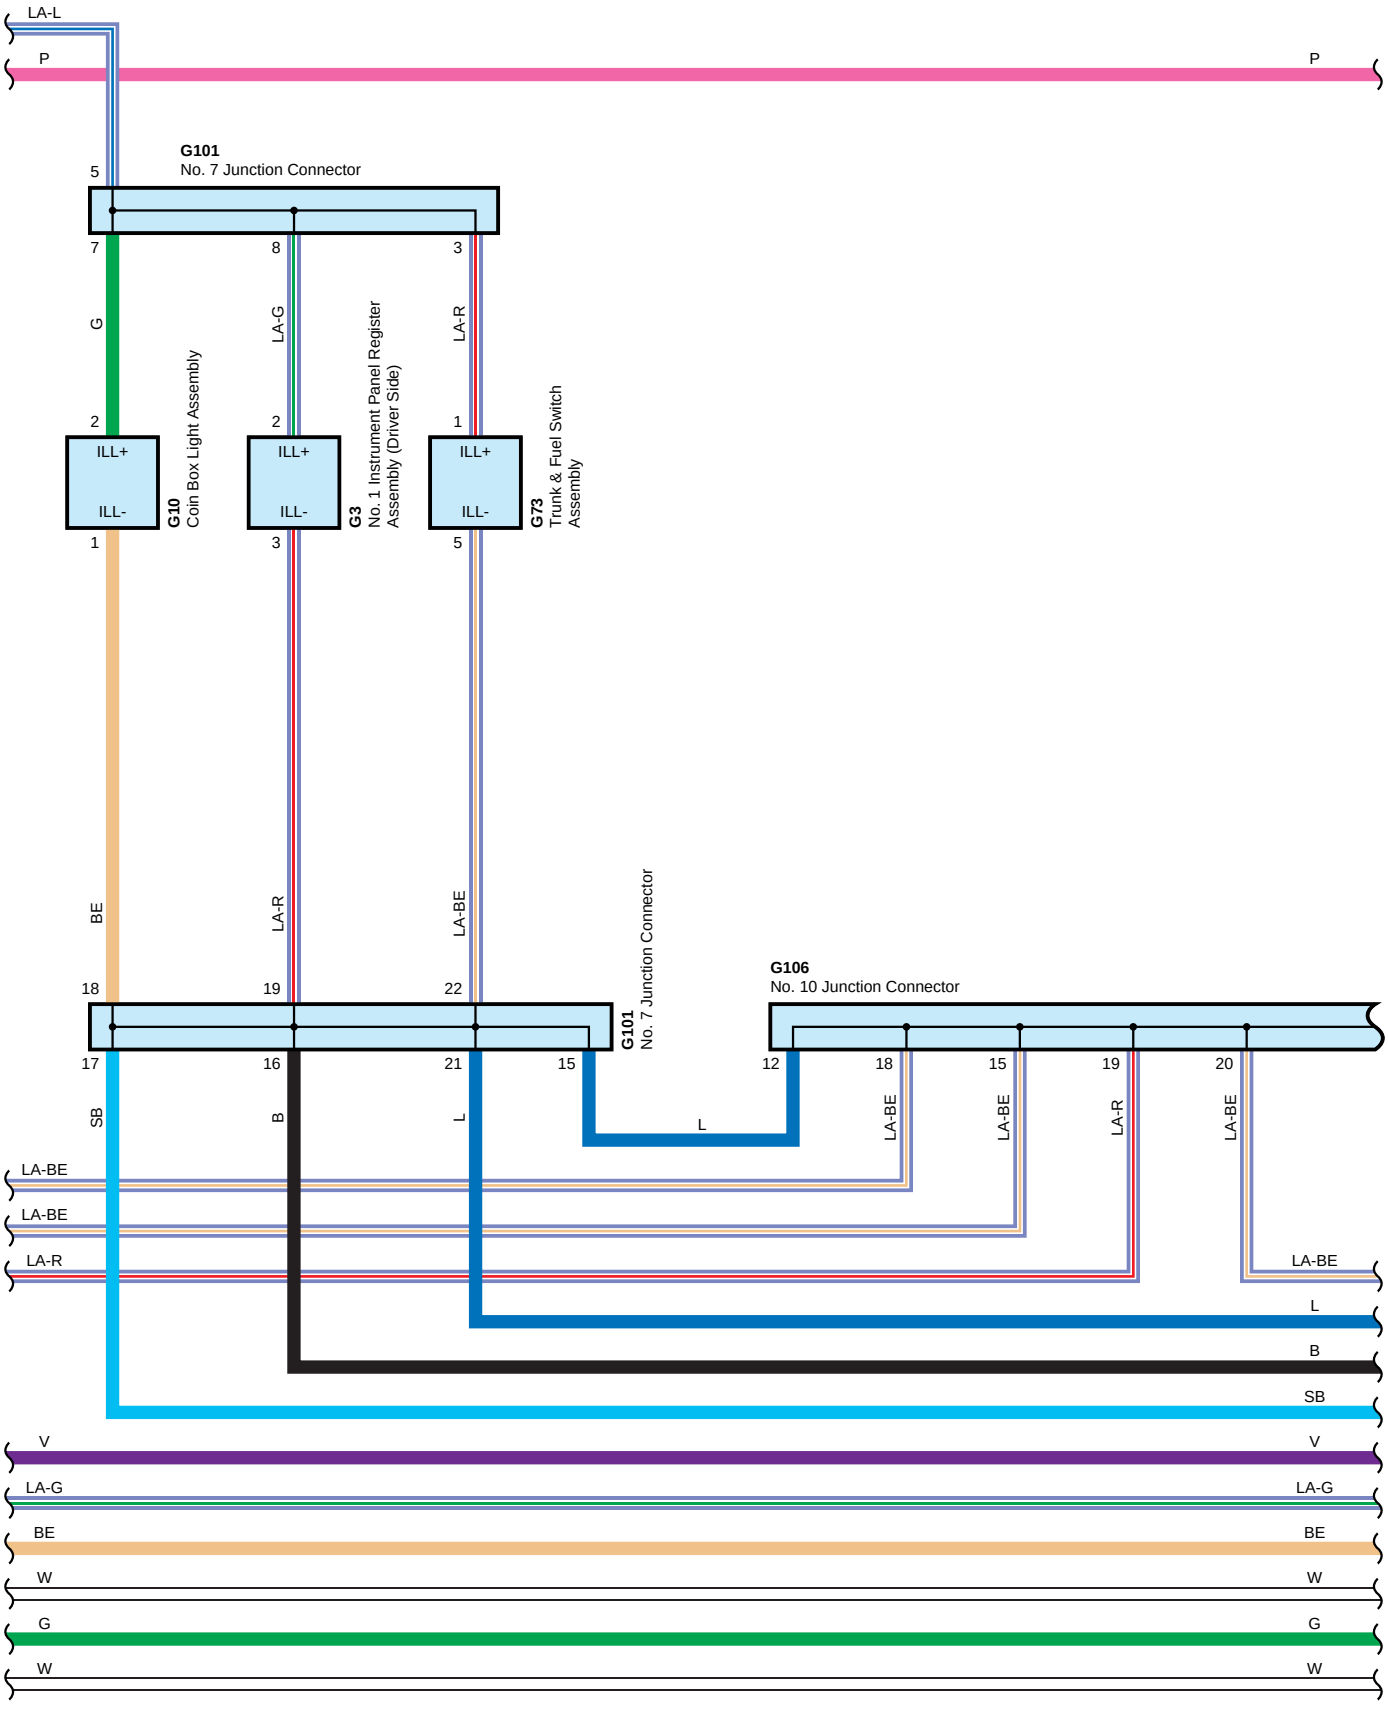
LA-L
P
P
G101
No. 7 Junction Connector
5
7
8
3
G
LA-G
LA-R
2
2
1
ILL+
ILL-
G10
Coin Box Light Assembly
ILL+
ILL-
G3
No. 1 Instrument Panel Register Assembly (Driver Side)
ILL+
ILL-
G73
Trunk & Fuel Switch Assembly
1
3
5
BE
LA-R
LA-BE
18
19
22
G101
No. 7 Junction Connector
G106
No. 10 Junction Connector
17
16
21
15
12
18
15
19
20
SB
B
L
L
LA-BE
LA-BE
LA-BE
LA-R
LA-BE
LA-BE
LA-BE
LA-R
LA-BE
L
B
SB
V
V
LA-G
LA-G
BE
BE
W
W
G
G
W
W

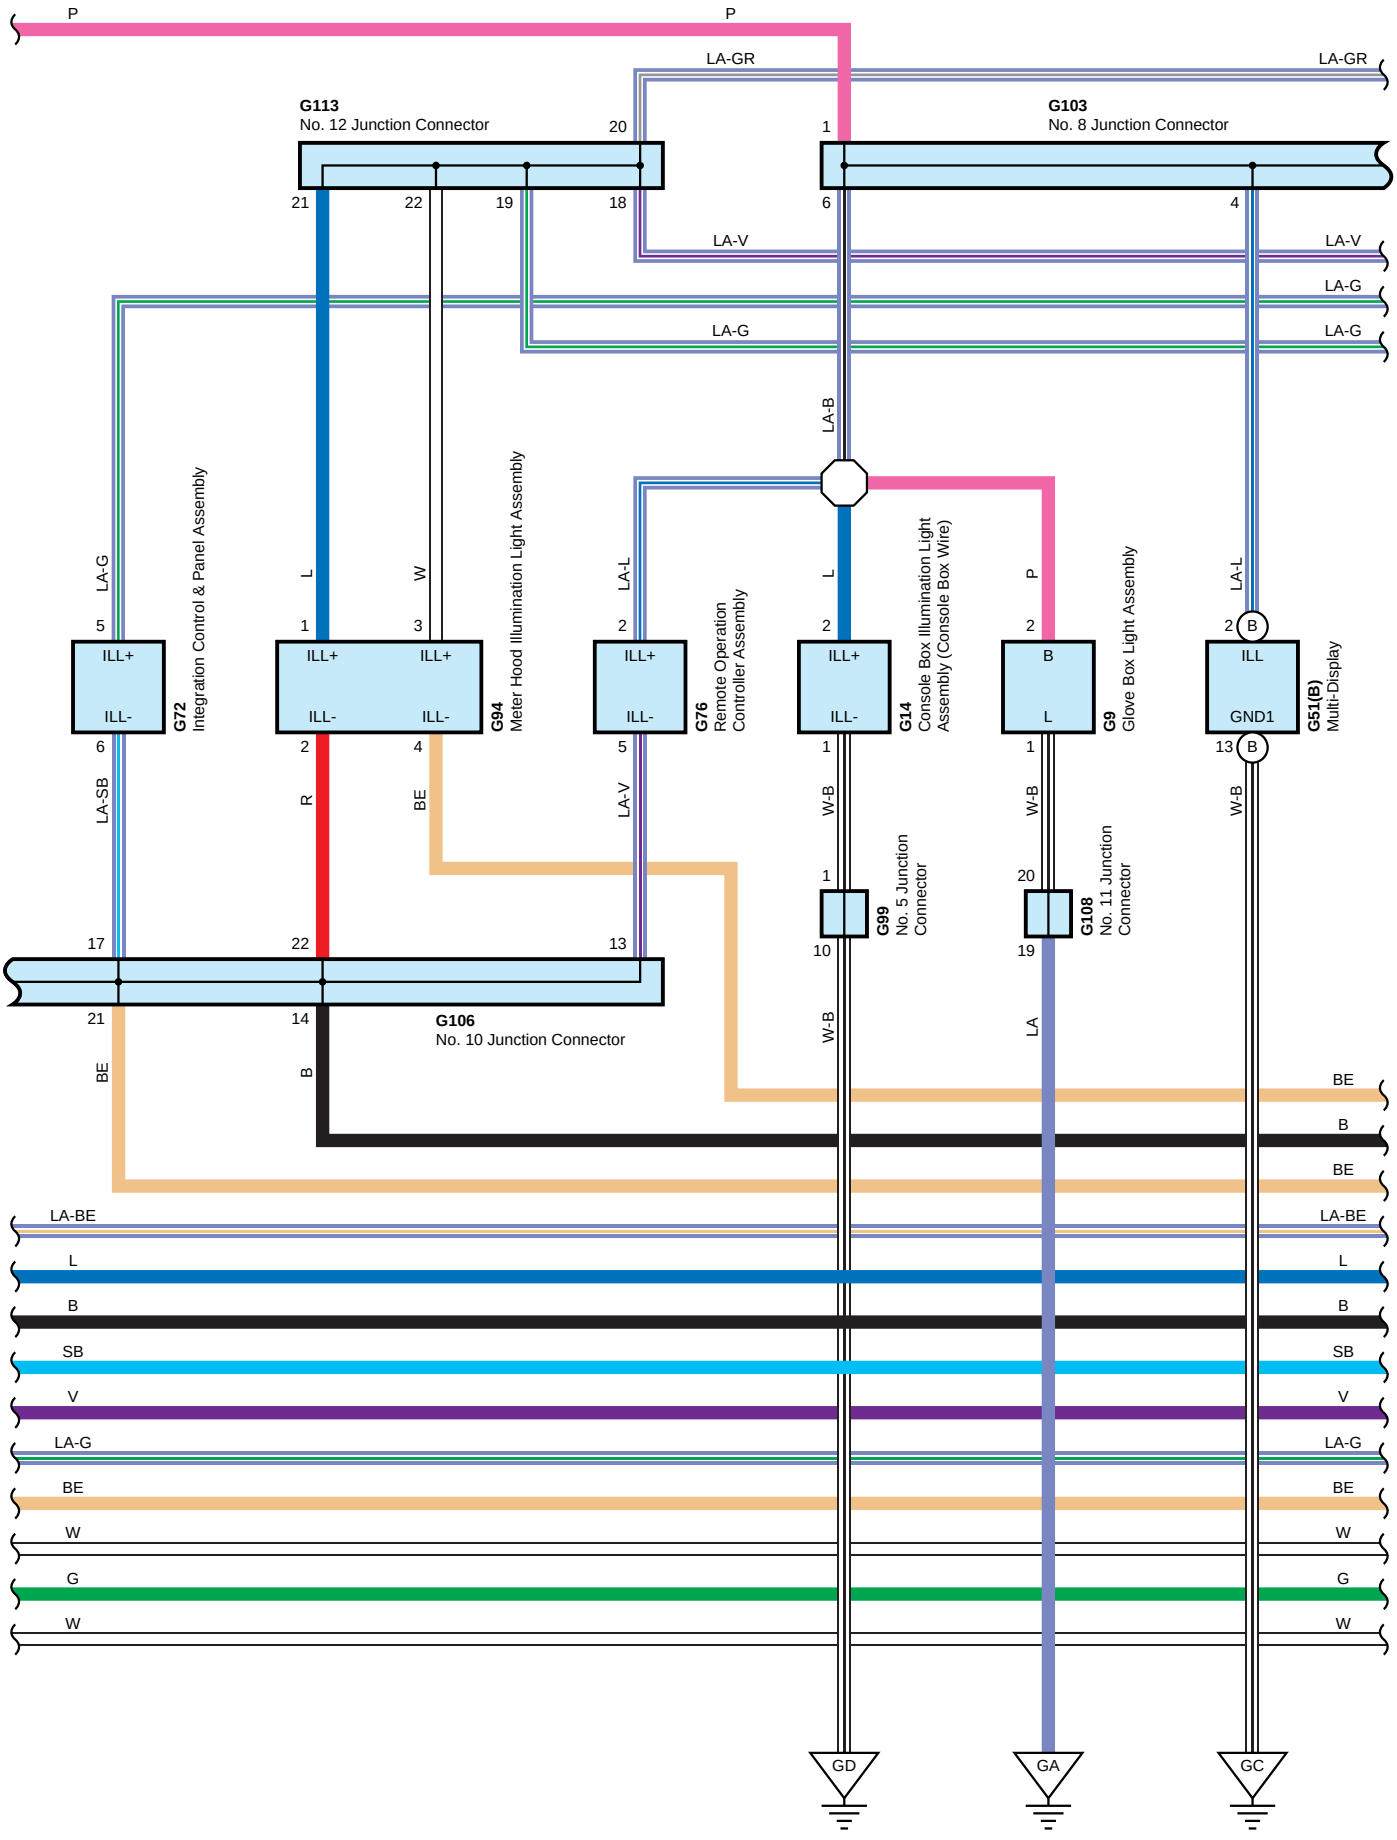
P
P
LA-GR
LA-GR
G113
No. 12 Junction Connector
G103
No. 8 Junction Connector
LA-V
LA-V
LA-G
LA-G
LA-G
LA-B
G72
Integration Control & Panel Assembly
G94
Meter Hood Illumination Light Assembly
G76
Remote Operation Controller Assembly
G14
Console Box Illumination Light Assembly (Console Box Wire)
G9
Glove Box Light Assembly
G51(B)
Multi-Display
ILL+
ILL-
ILL
GND1
LA-SB
R
BE
LA-V
W-B
LA
G99
No. 5 Junction Connector
G108
No. 11 Junction Connector
G106
No. 10 Junction Connector
BE
B
LA-BE
L
B
SB
V
LA-G
BE
W
G
W
GD
GA
GC

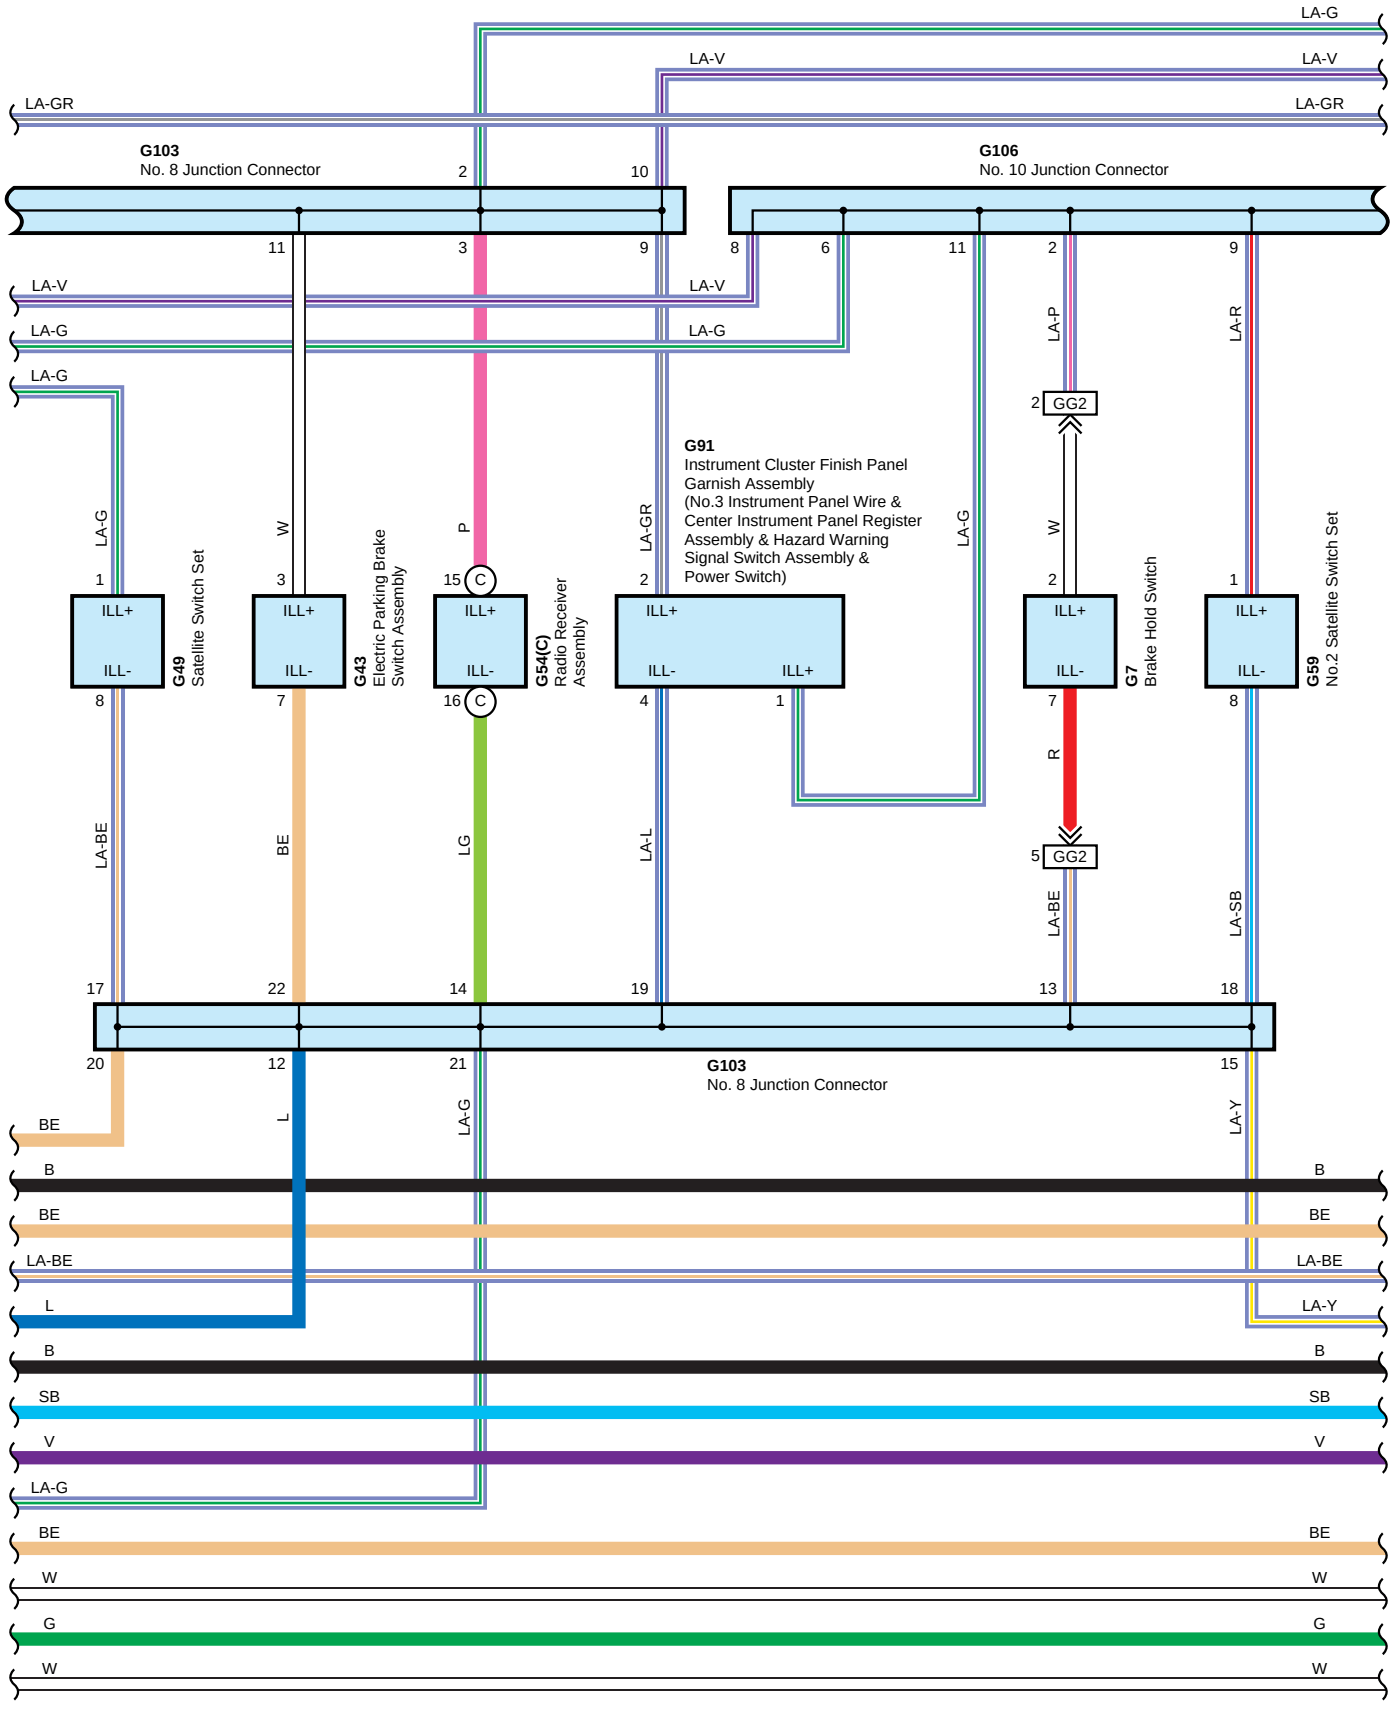
LA-G
LA-V
LA-V
LA-GR
LA-GR
G103
No. 8 Junction Connector
G106
No. 10 Junction Connector
LA-V
LA-V
LA-G
LA-G
LA-G
LA-P
LA-R
GG2
G91
Instrument Cluster Finish Panel Garnish Assembly (No.3 Instrument Panel Wire & Center Instrument Panel Register Assembly & Hazard Warning Signal Switch Assembly & Power Switch)
LA-G
W
P
LA-GR
LA-G
W
G49 Satellite Switch Set
G43 Electric Parking Brake Switch Assembly
G54(C) Radio Receiver Assembly
G7 Brake Hold Switch
G59 No.2 Satellite Switch Set
ILL+
ILL-
R
GG2
LA-BE
BE
LG
LA-L
LA-BE
LA-SB
G103
No. 8 Junction Connector
BE
L
LA-G
LA-Y
B
BE
LA-BE
L
B
SB
V
LA-G
BE
W
G
W

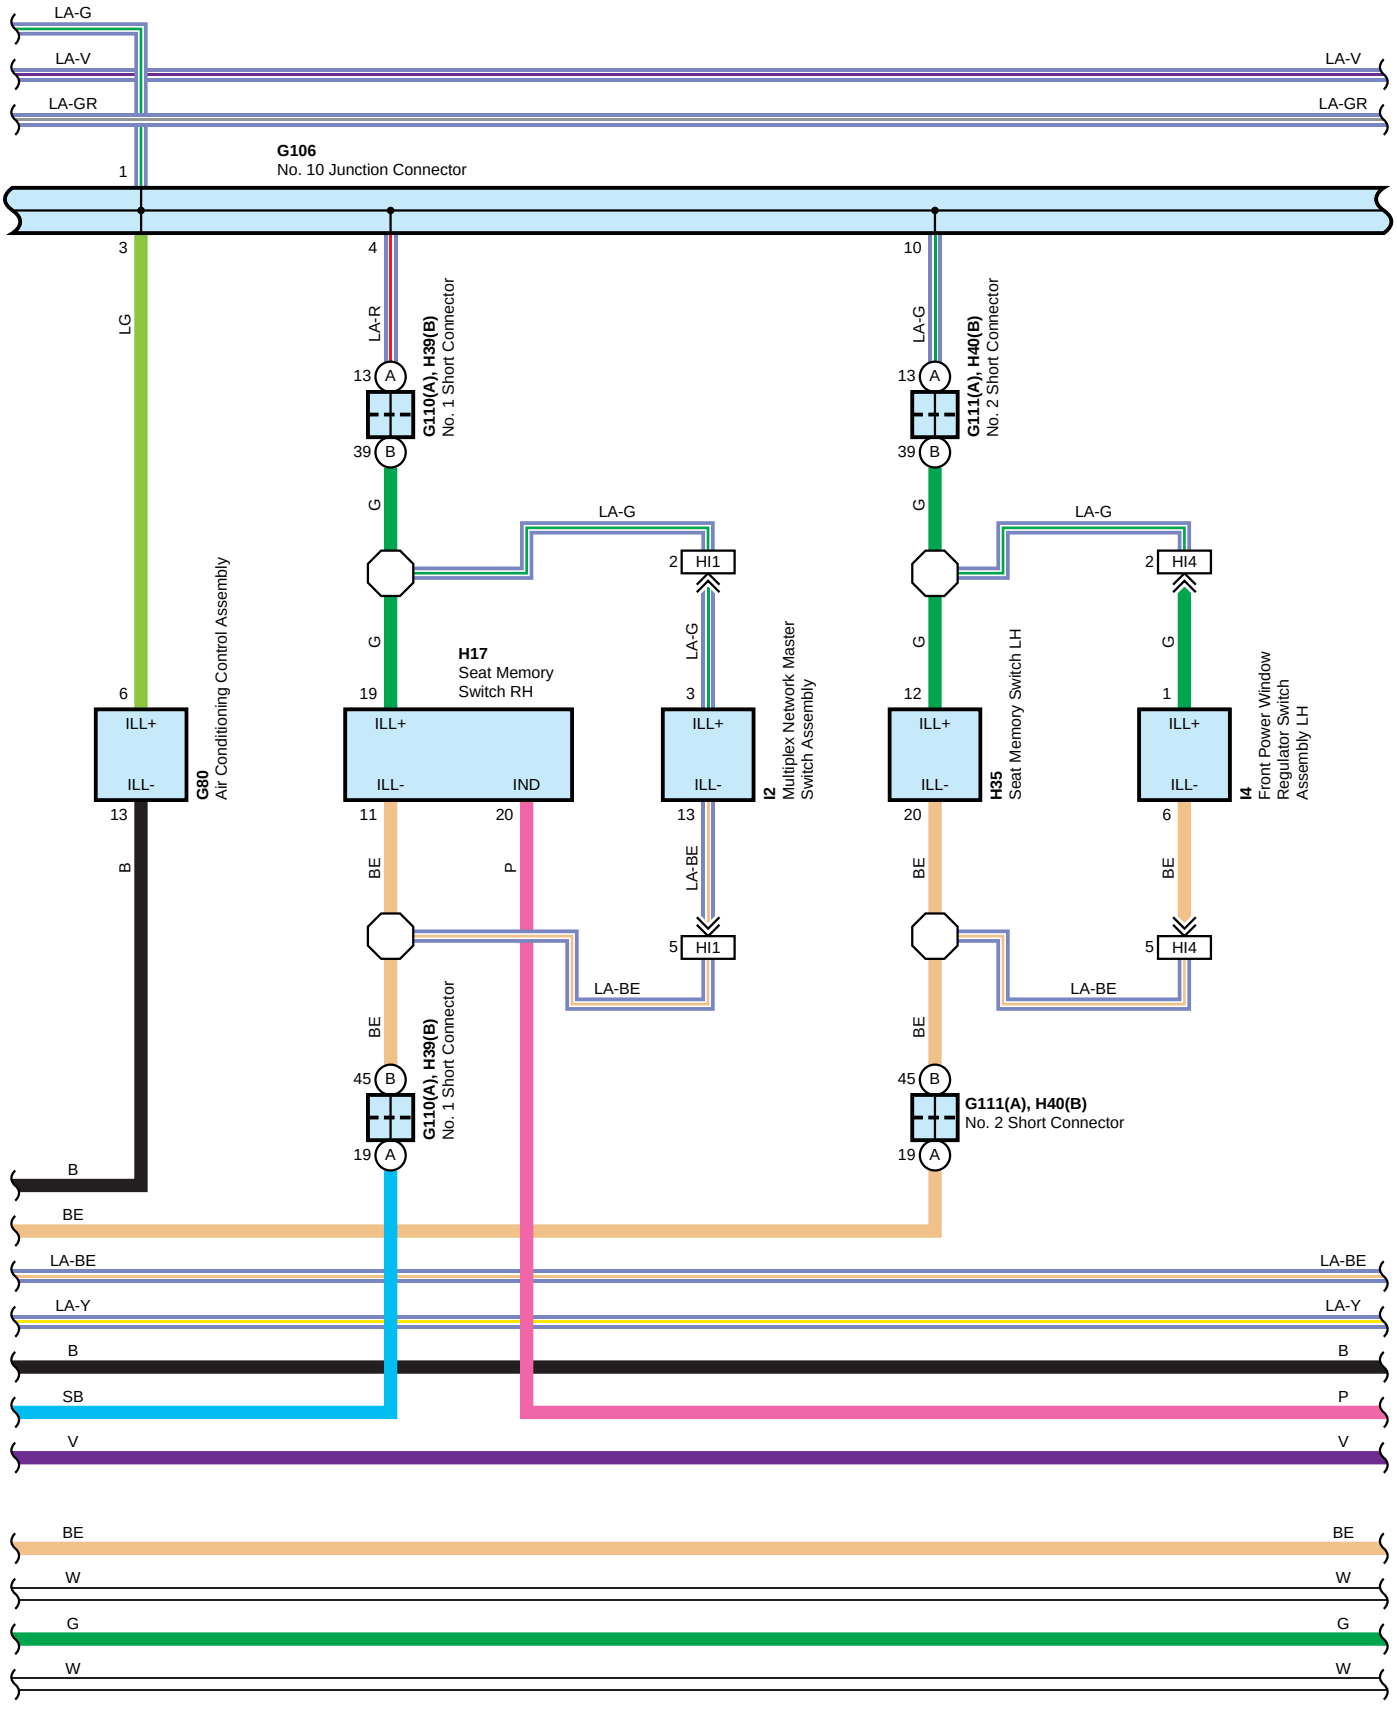
LA-G
LA-V
LA-GR
G106
No. 10 Junction Connector
1
3
4
10
LG
LA-R
LA-G
G110(A), H39(B)
No. 1 Short Connector
G111(A), H40(B)
No. 2 Short Connector
13
39
G
LA-G
2
HI1
HI4
H17
Seat Memory
Switch RH
6
19
12
1
ILL+
ILL-
IND
G80
Air Conditioning Control Assembly
I2
Multiplex Network Master
Switch Assembly
H35
Seat Memory Switch LH
I4
Front Power Window
Regulator Switch
Assembly LH
11
20
3
5
B
BE
P
LA-BE
45
19
A
LA-Y
SB
V
W

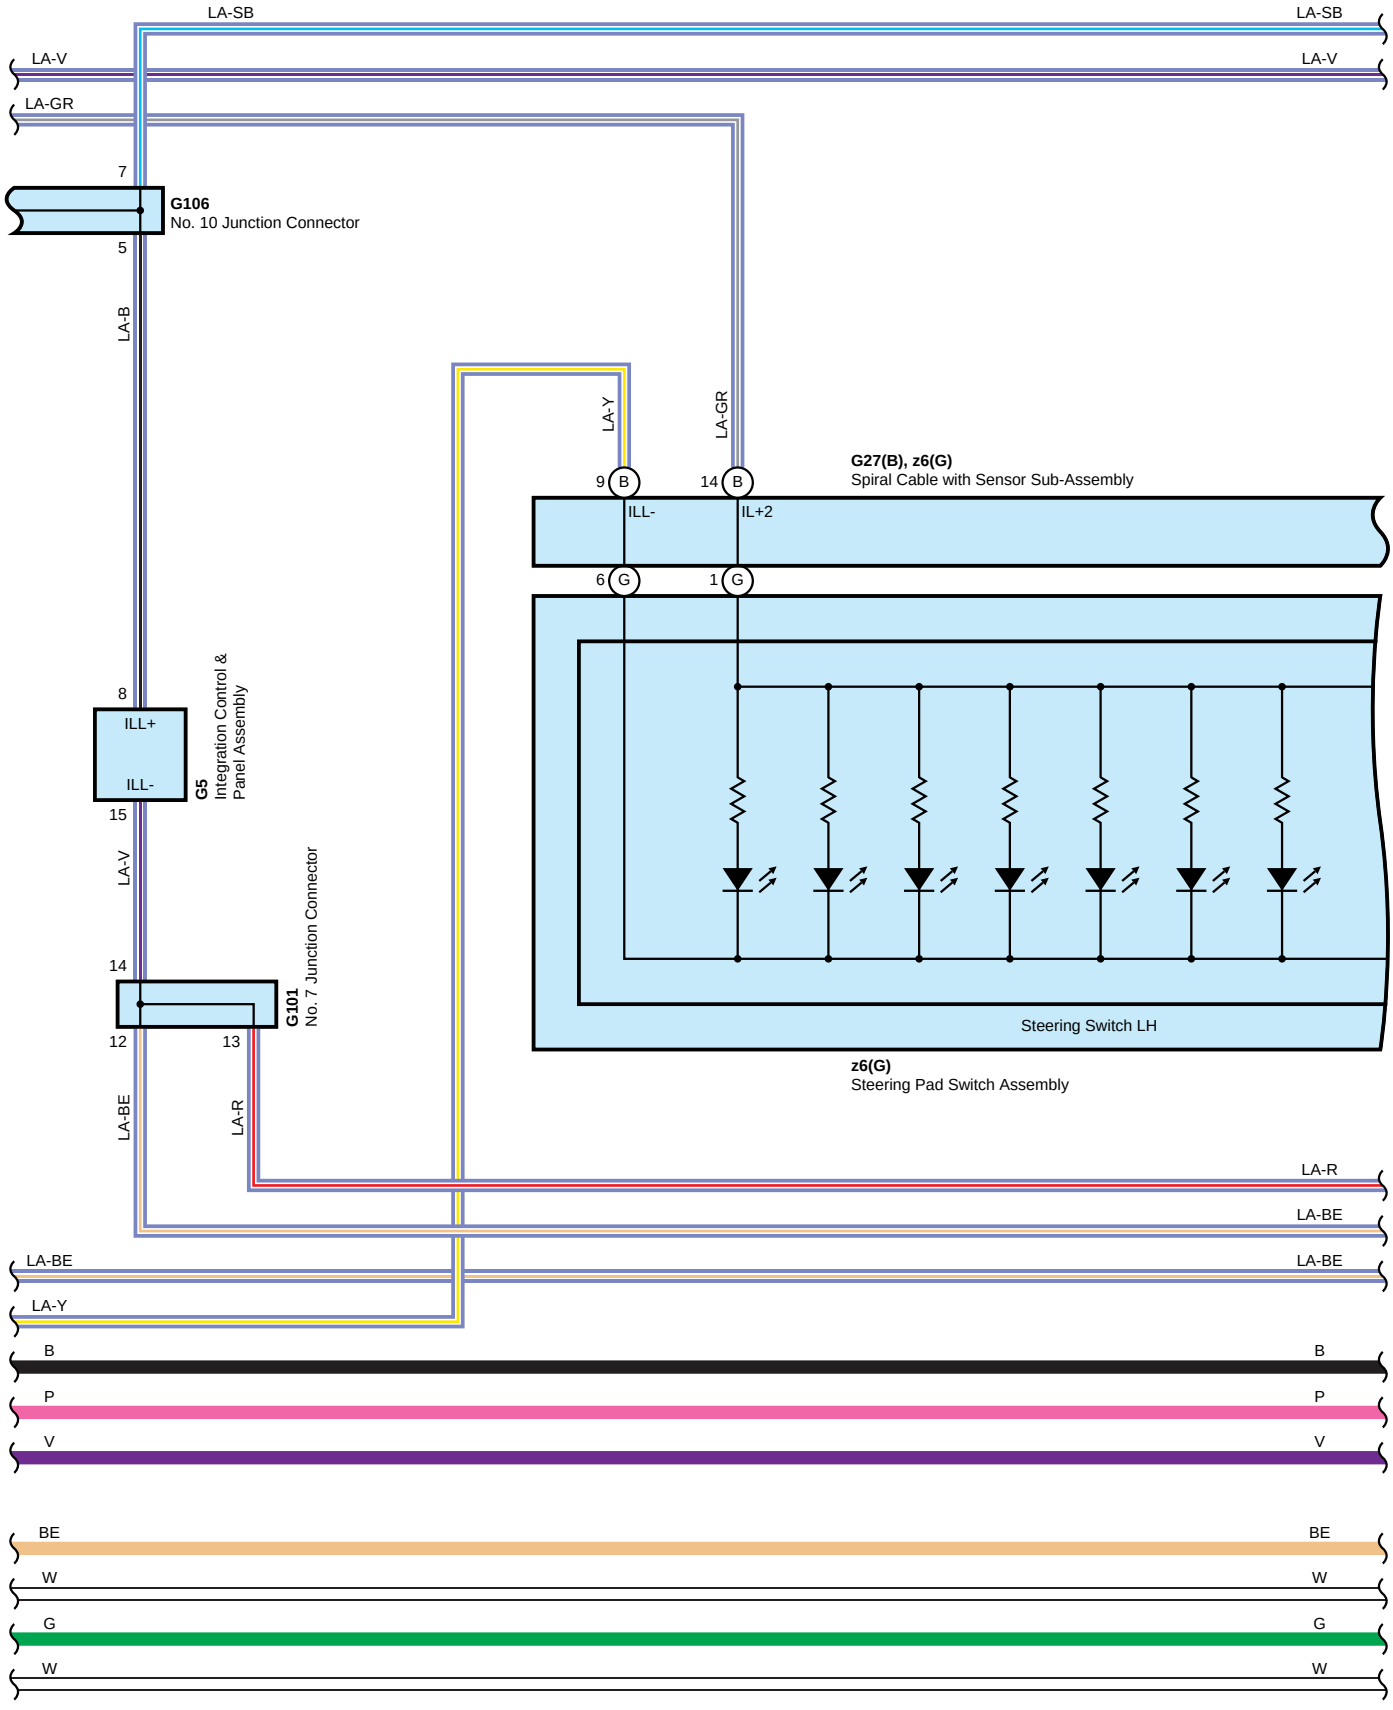
LA-SB
LA-SB
LA-V
LA-V
LA-GR
7
G106
No. 10 Junction Connector
5
LA-B
LA-Y
LA-GR
9 B
14 B
G27(B), z6(G)
Spiral Cable with Sensor Sub-Assembly
ILL-
IL+2
6 G
1 G
8
ILL+
ILL-
G5
Integration Control &
Panel Assembly
15
LA-V
14
G101
No. 7 Junction Connector
12
13
Steering Switch LH
z6(G)
Steering Pad Switch Assembly
LA-BE
LA-R
LA-R
LA-BE
LA-BE
LA-BE
LA-Y
B
B
P
P
V
V
BE
BE
W
W
G
G
W
W



G27(B), z6(G)
Spiral Cable with Sensor Sub-Assembly

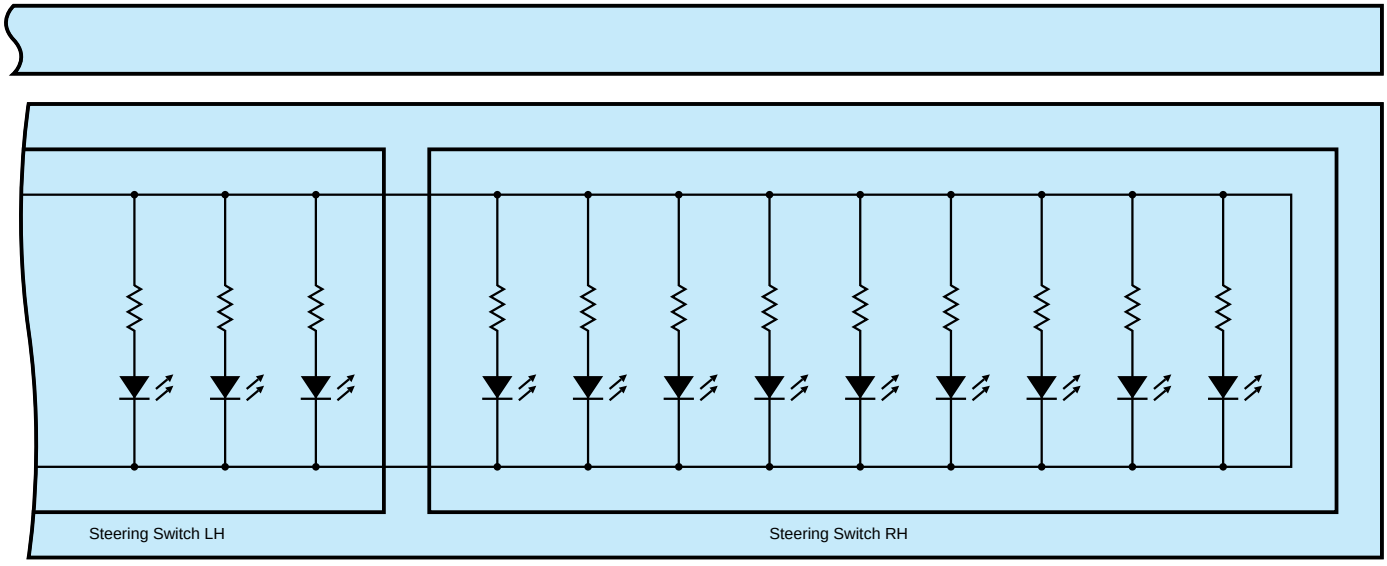

z6(G)
Steering Pad Switch Assembly

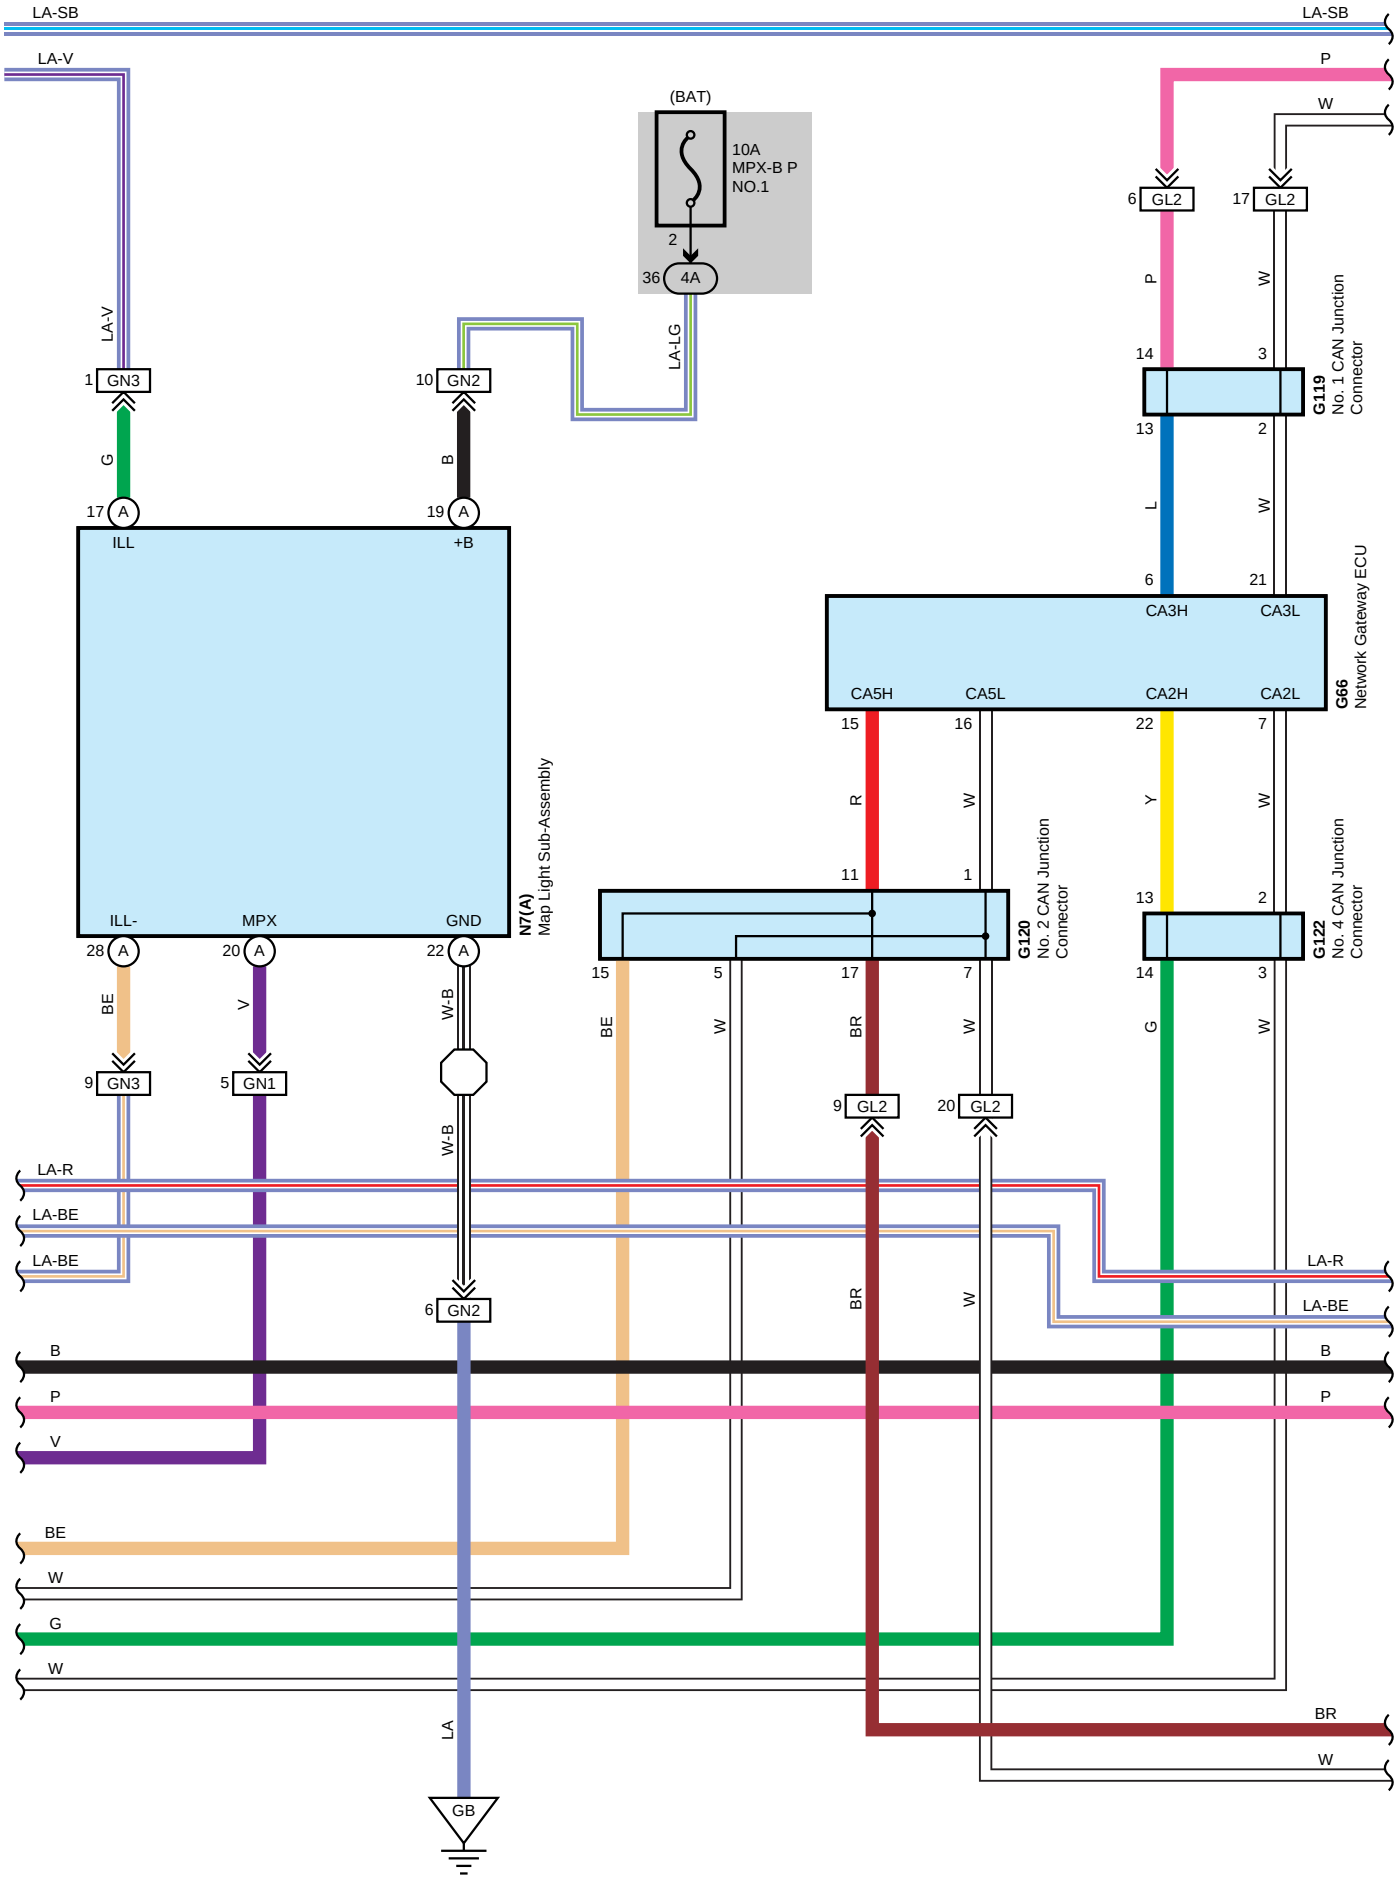
LA-SB
LA-SB
LA-V
P
W
(BAT)
10A
MPX-B P
NO.1
2
36
4A
LA-LG
6 GL2
17 GL2
P
W
14
3
G119
No. 1 CAN Junction
Connector
13
2
L
W
6
21
CA3H
CA3L
G66
Network Gateway ECU
CA5H
CA5L
CA2H
CA2L
15
16
22
7
R
W
Y
W
11
1
13
2
G120
No. 2 CAN Junction
Connector
G122
No. 4 CAN Junction
Connector
LA-V
1 GN3
10 GN2
G
B
17 A
19 A
ILL
+B
N7(A)
Map Light Sub-Assembly
ILL-
MPX
GND
28 A
20 A
22 A
BE
V
W-B
9 GN3
5 GN1
W-B
15
5
17
7
14
3
BE
W
BR
W
G
W
9 GL2
20 GL2
LA-R
LA-BE
LA-BE
LA-R
LA-BE
6 GN2
BR
W
B
B
P
P
V
BE
W
G
W
BR
W
LA
GB

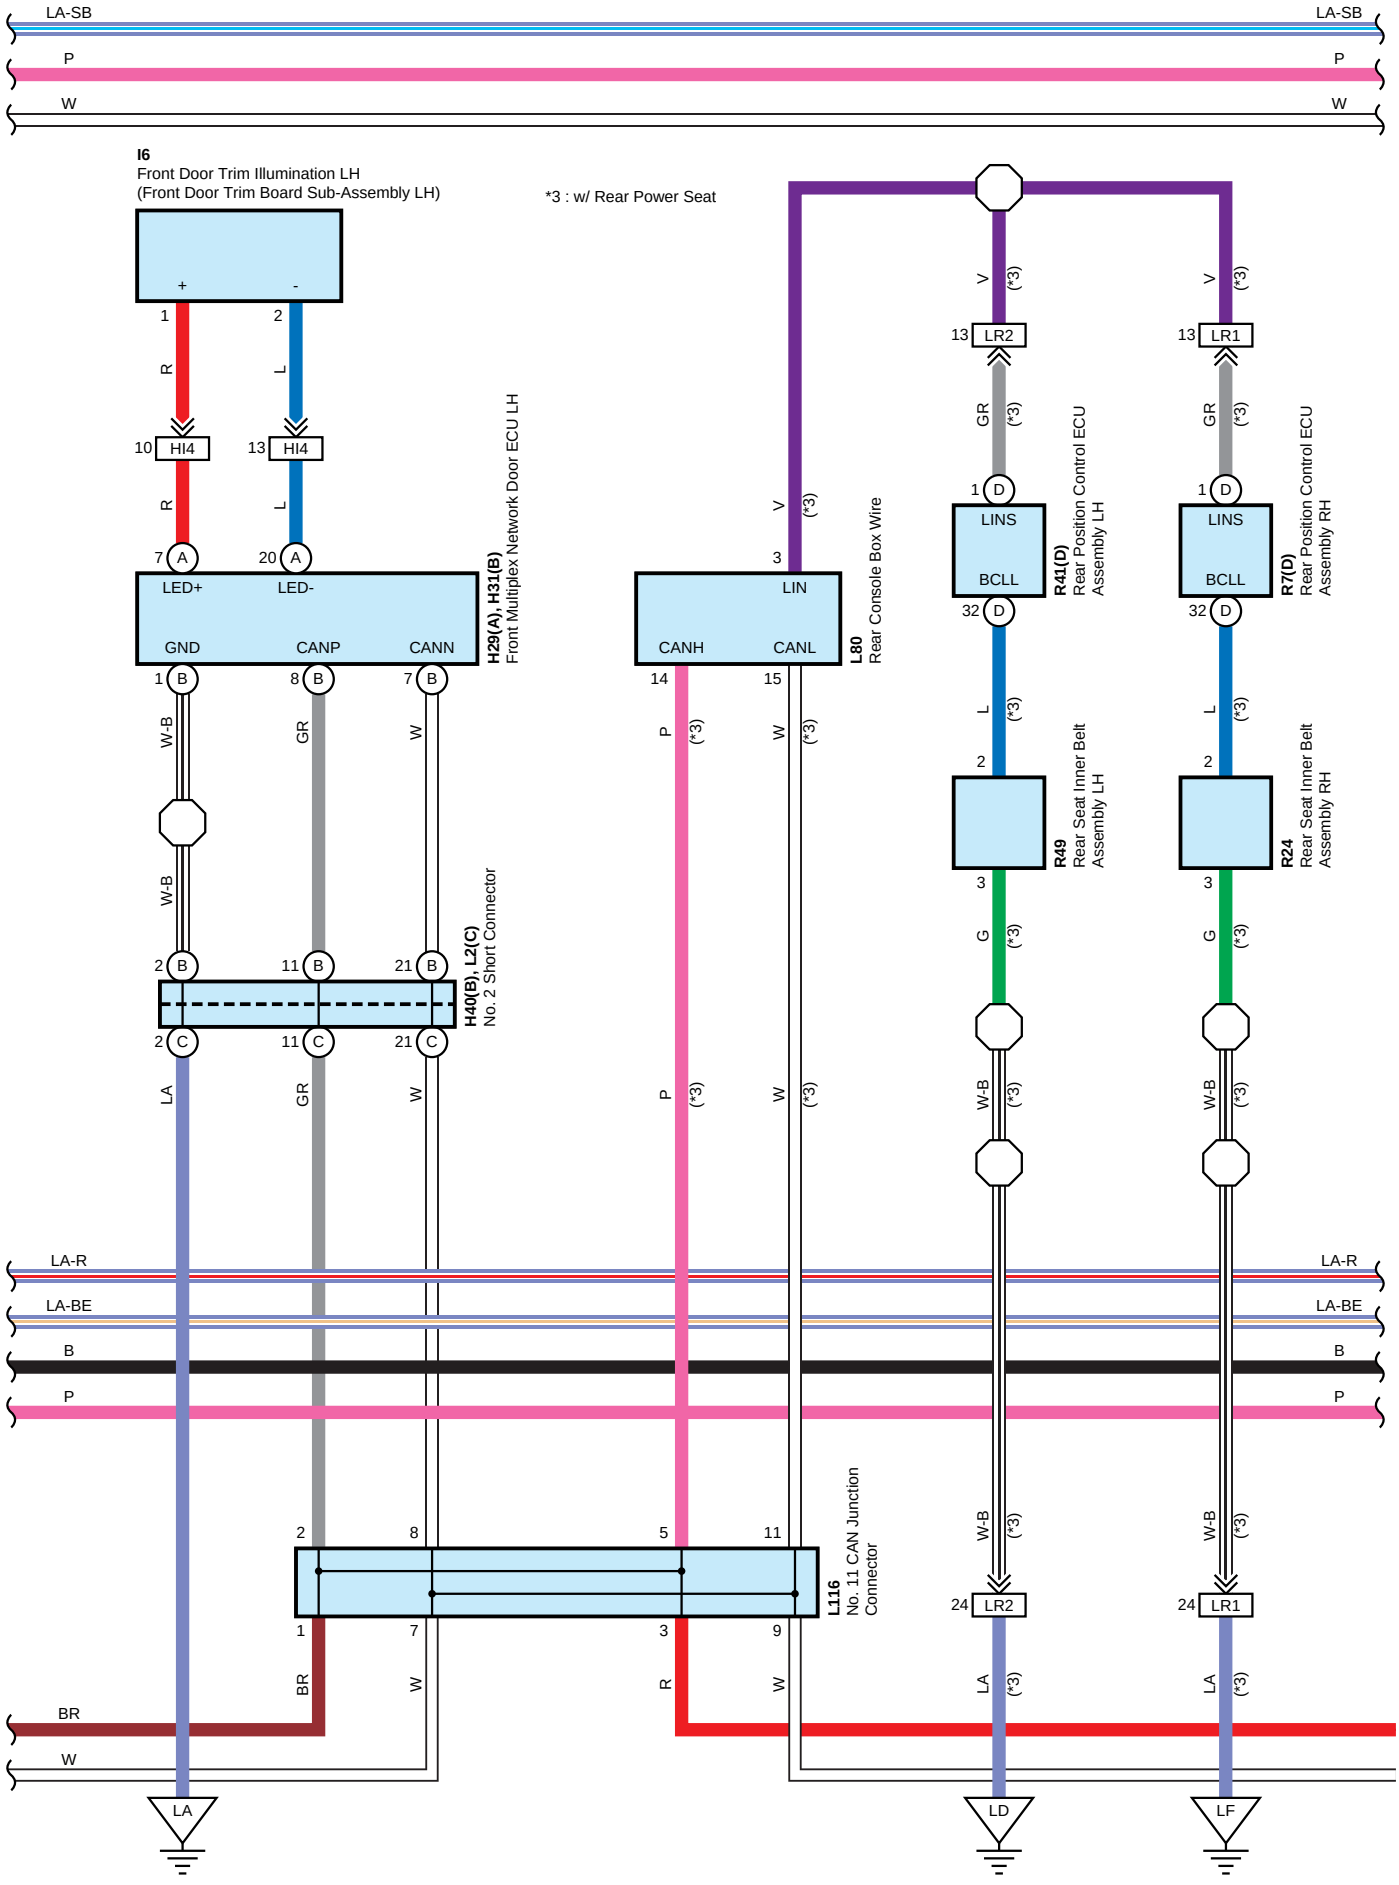
LA-SB
P
W
I6
Front Door Trim Illumination LH
(Front Door Trim Board Sub-Assembly LH)
*3 : w/ Rear Power Seat
HI4
LED+
LED-
GND
CANP
CANN
H29(A), H31(B)
Front Multiplex Network Door ECU LH
LIN
CANH
CANL
L80
Rear Console Box Wire
LR2
LR1
LINS
BCLL
R41(D)
Rear Position Control ECU
Assembly LH
R7(D)
Rear Position Control ECU
Assembly RH
R49
Rear Seat Inner Belt
Assembly LH
R24
Rear Seat Inner Belt
Assembly RH
H40(B), L2(C)
No. 2 Short Connector
LA-R
LA-BE
B
L116
No. 11 CAN Junction
Connector
BR
LA
LD
LF

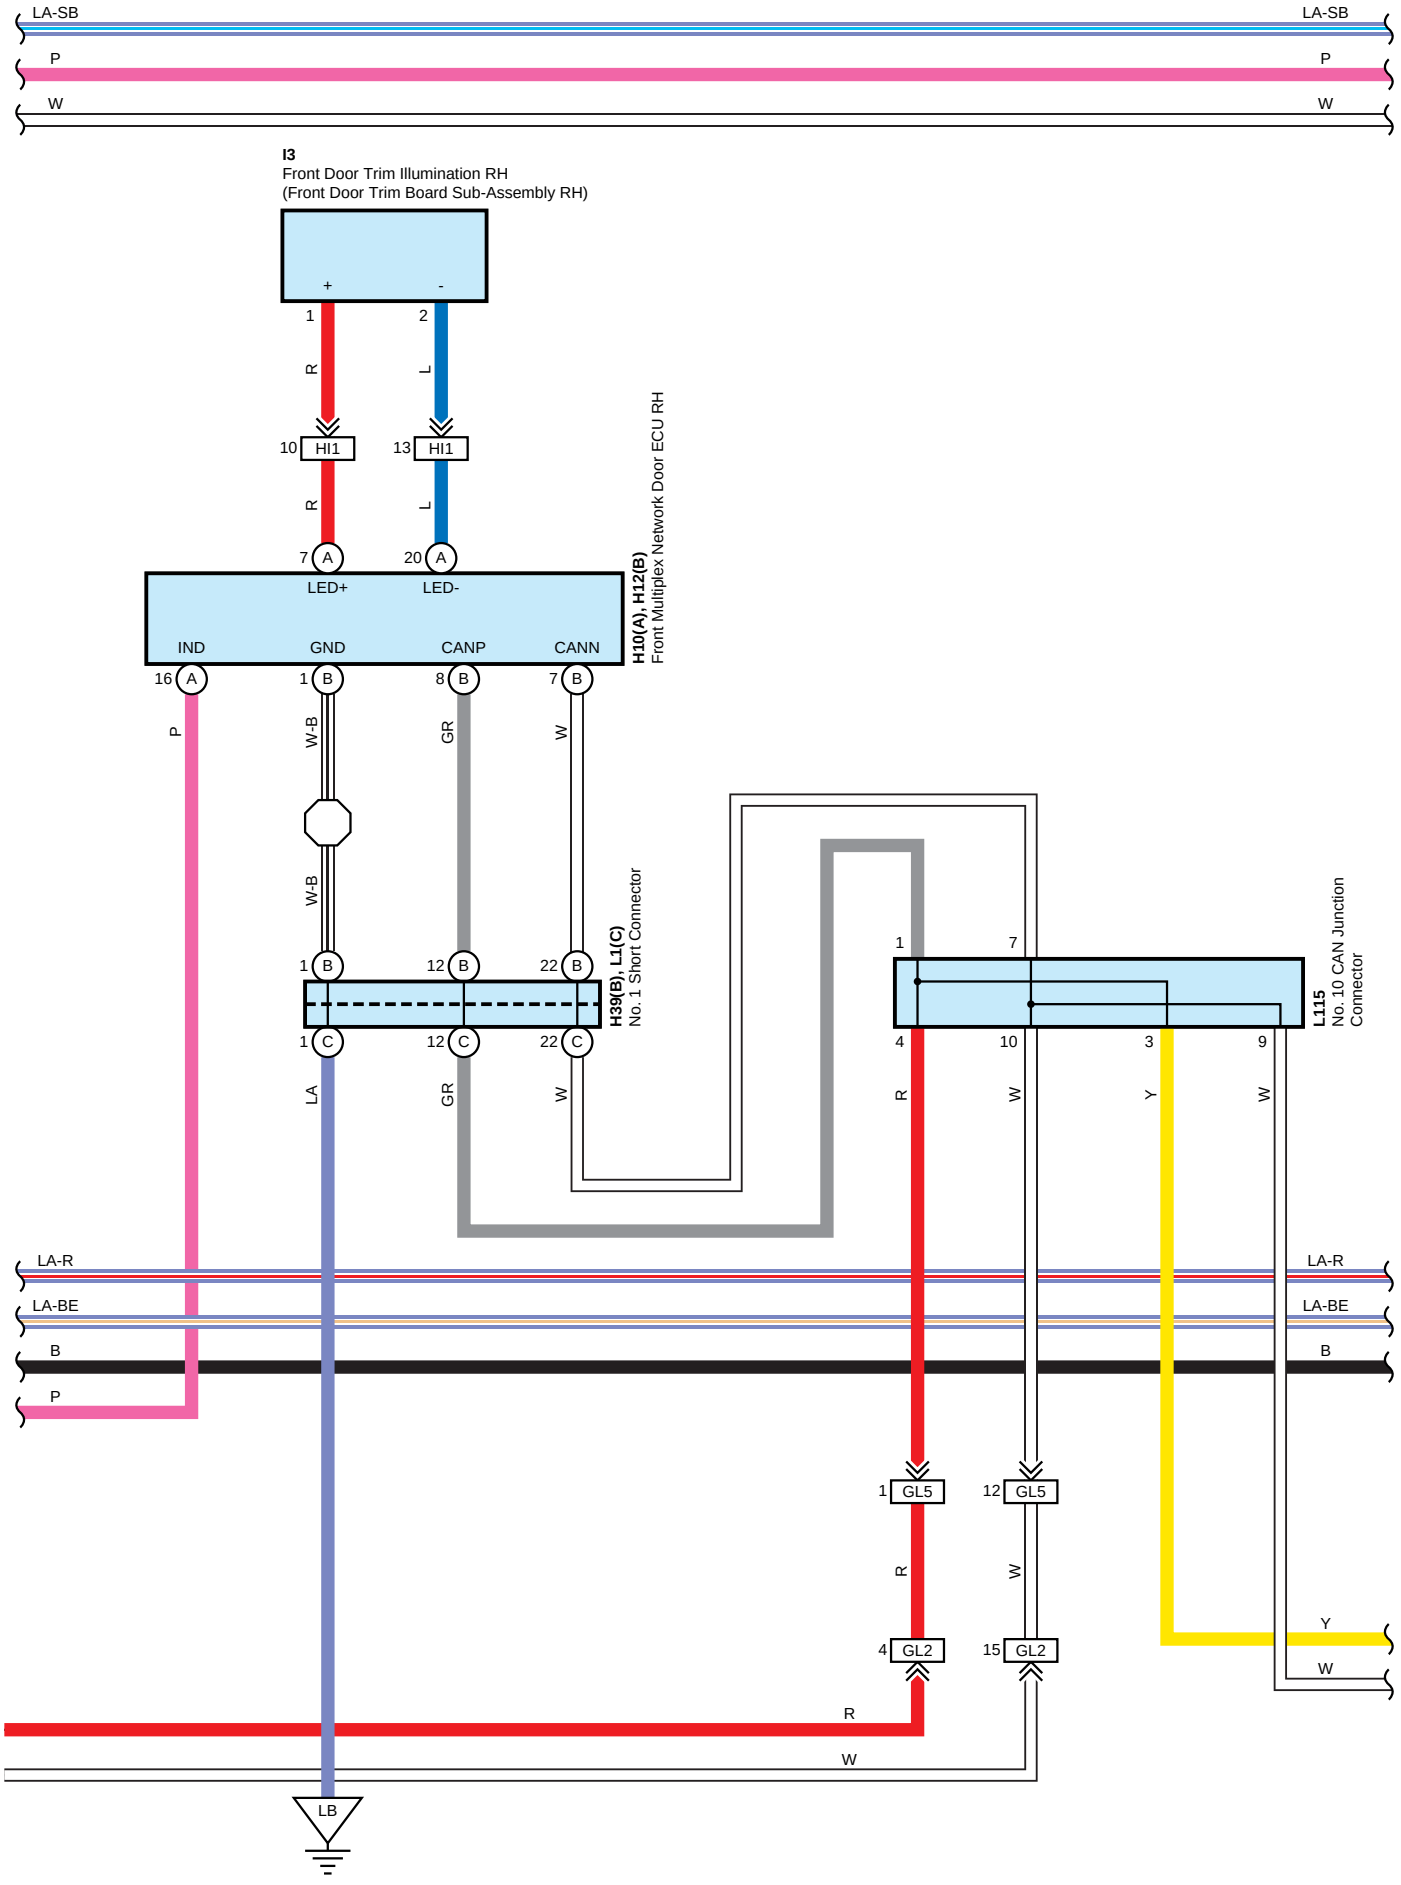
LA-SB
P
W
I3
Front Door Trim Illumination RH
(Front Door Trim Board Sub-Assembly RH)
+
-
1
2
R
L
10 HI1
13 HI1
7 A
20 A
LED+
LED-
H10(A), H12(B)
Front Multiplex Network Door ECU RH
IND
GND
CANP
CANN
16 A
1 B
8 B
7 B
W-B
GR
H39(B), L1(C)
No. 1 Short Connector
12 B
22 B
1 C
12 C
22 C
LA
L115
No. 10 CAN Junction Connector
4
10
3
9
LA-R
LA-BE
B
1 GL5
12 GL5
4 GL2
15 GL2
Y
LB

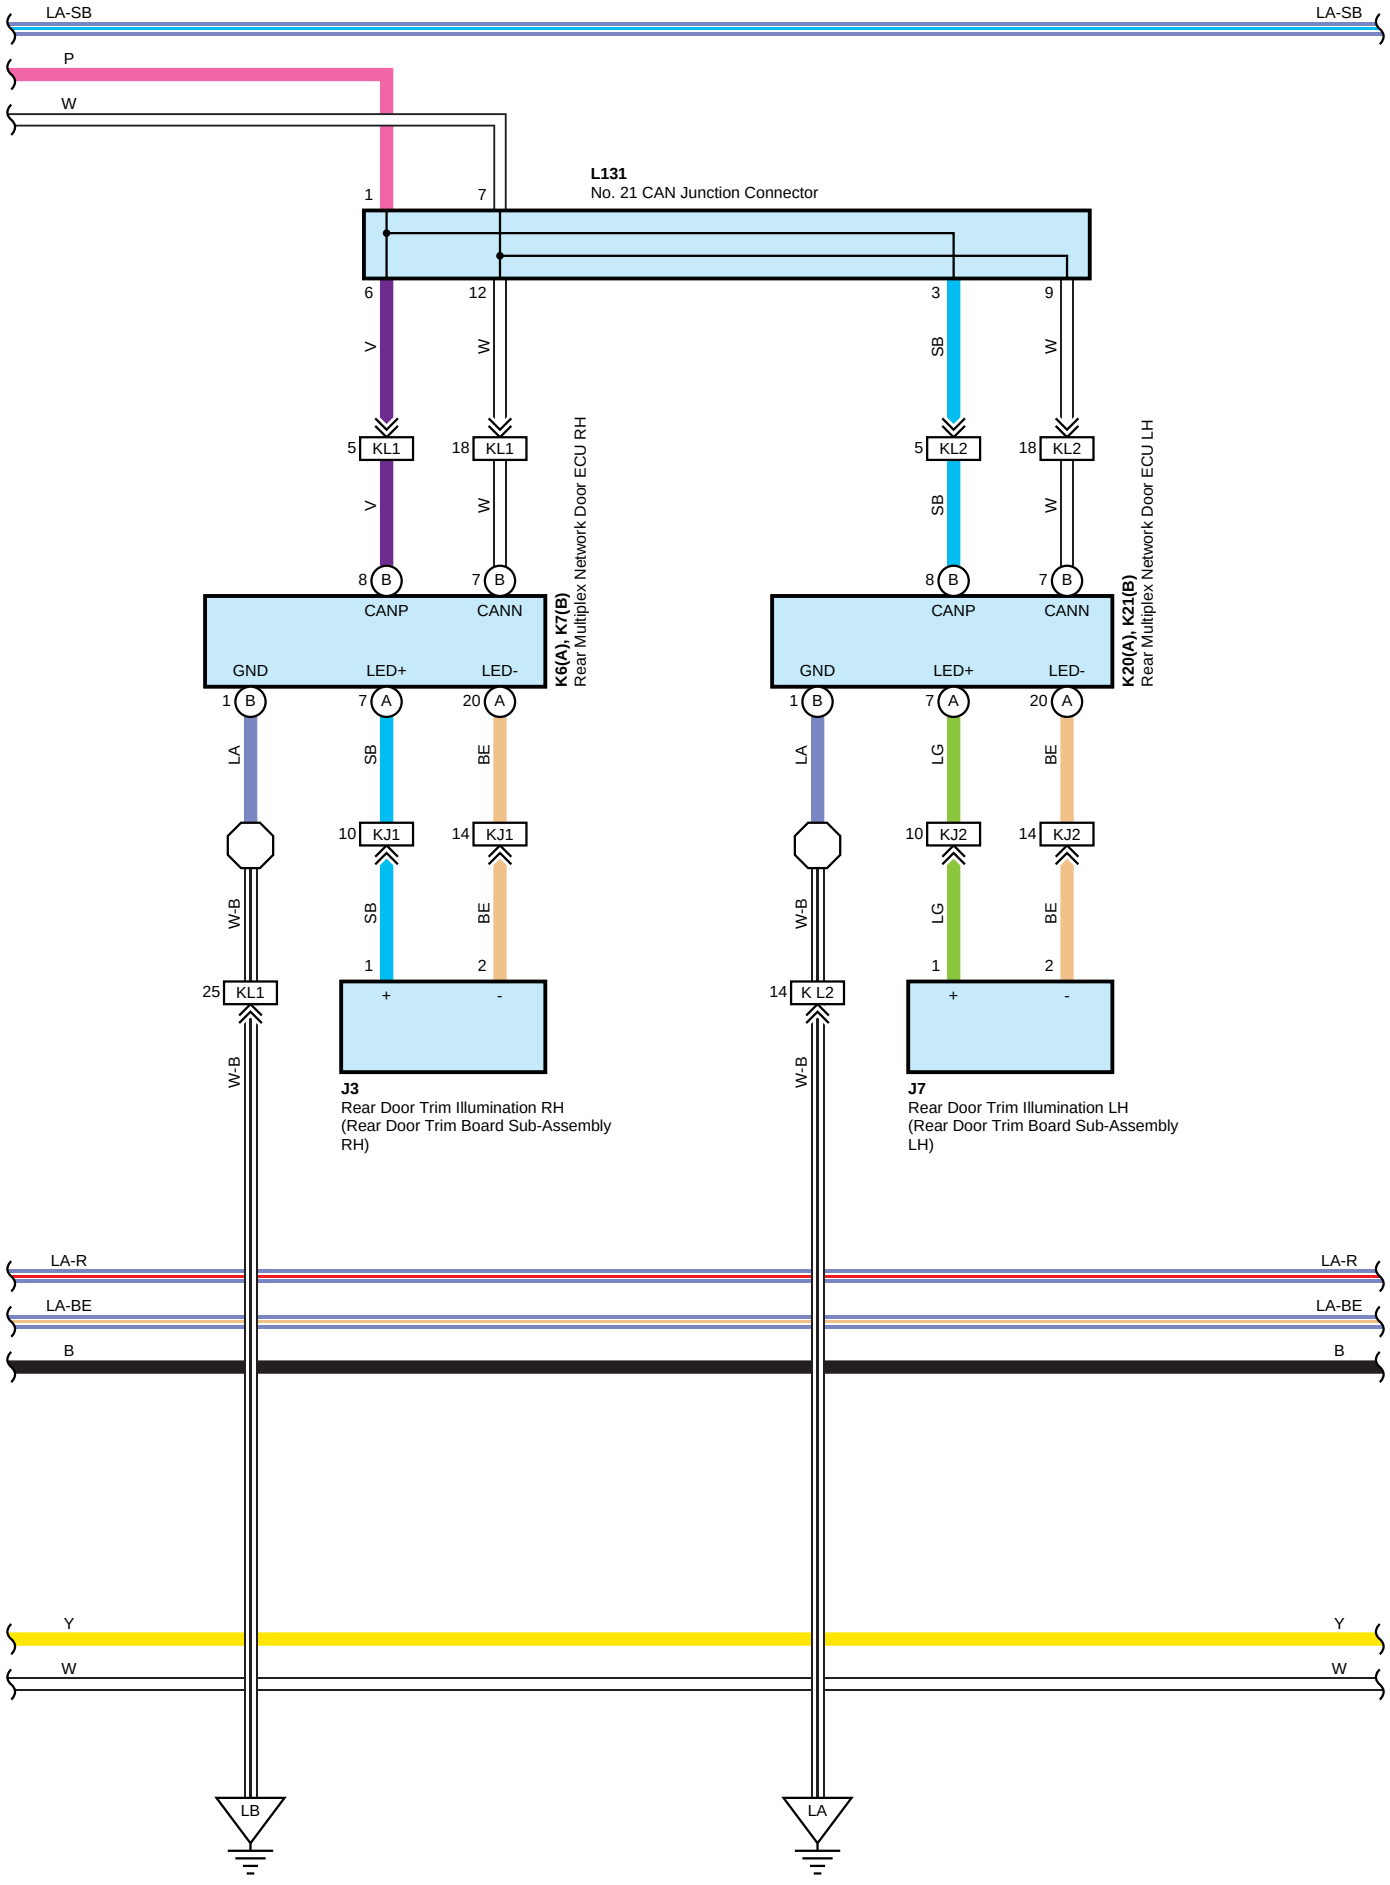
LA-SB
LA-SB
P
W
L131
No. 21 CAN Junction Connector
1
7
6
12
3
9
V
W
SB
W
5 KL1
18 KL1
5 KL2
18 KL2
V
W
SB
W
8 B
7 B
8 B
7 B
CANP
CANN
CANP
CANN
GND
LED+
LED-
GND
LED+
LED-
K6(A), K7(B)
Rear Multiplex Network Door ECU RH
K20(A), K21(B)
Rear Multiplex Network Door ECU LH
1 B
7 A
20 A
1 B
7 A
20 A
LA
SB
BE
LA
LG
BE
10 KJ1
14 KJ1
10 KJ2
14 KJ2
W-B
SB
BE
W-B
LG
BE
1
2
1
2
25 KL1
14 K L2
+
-
+
-
W-B
W-B
J3
Rear Door Trim Illumination RH
(Rear Door Trim Board Sub-Assembly
RH)
J7
Rear Door Trim Illumination LH
(Rear Door Trim Board Sub-Assembly
LH)
LA-R
LA-R
LA-BE
LA-BE
B
B
Y
Y
W
W
LB
LA

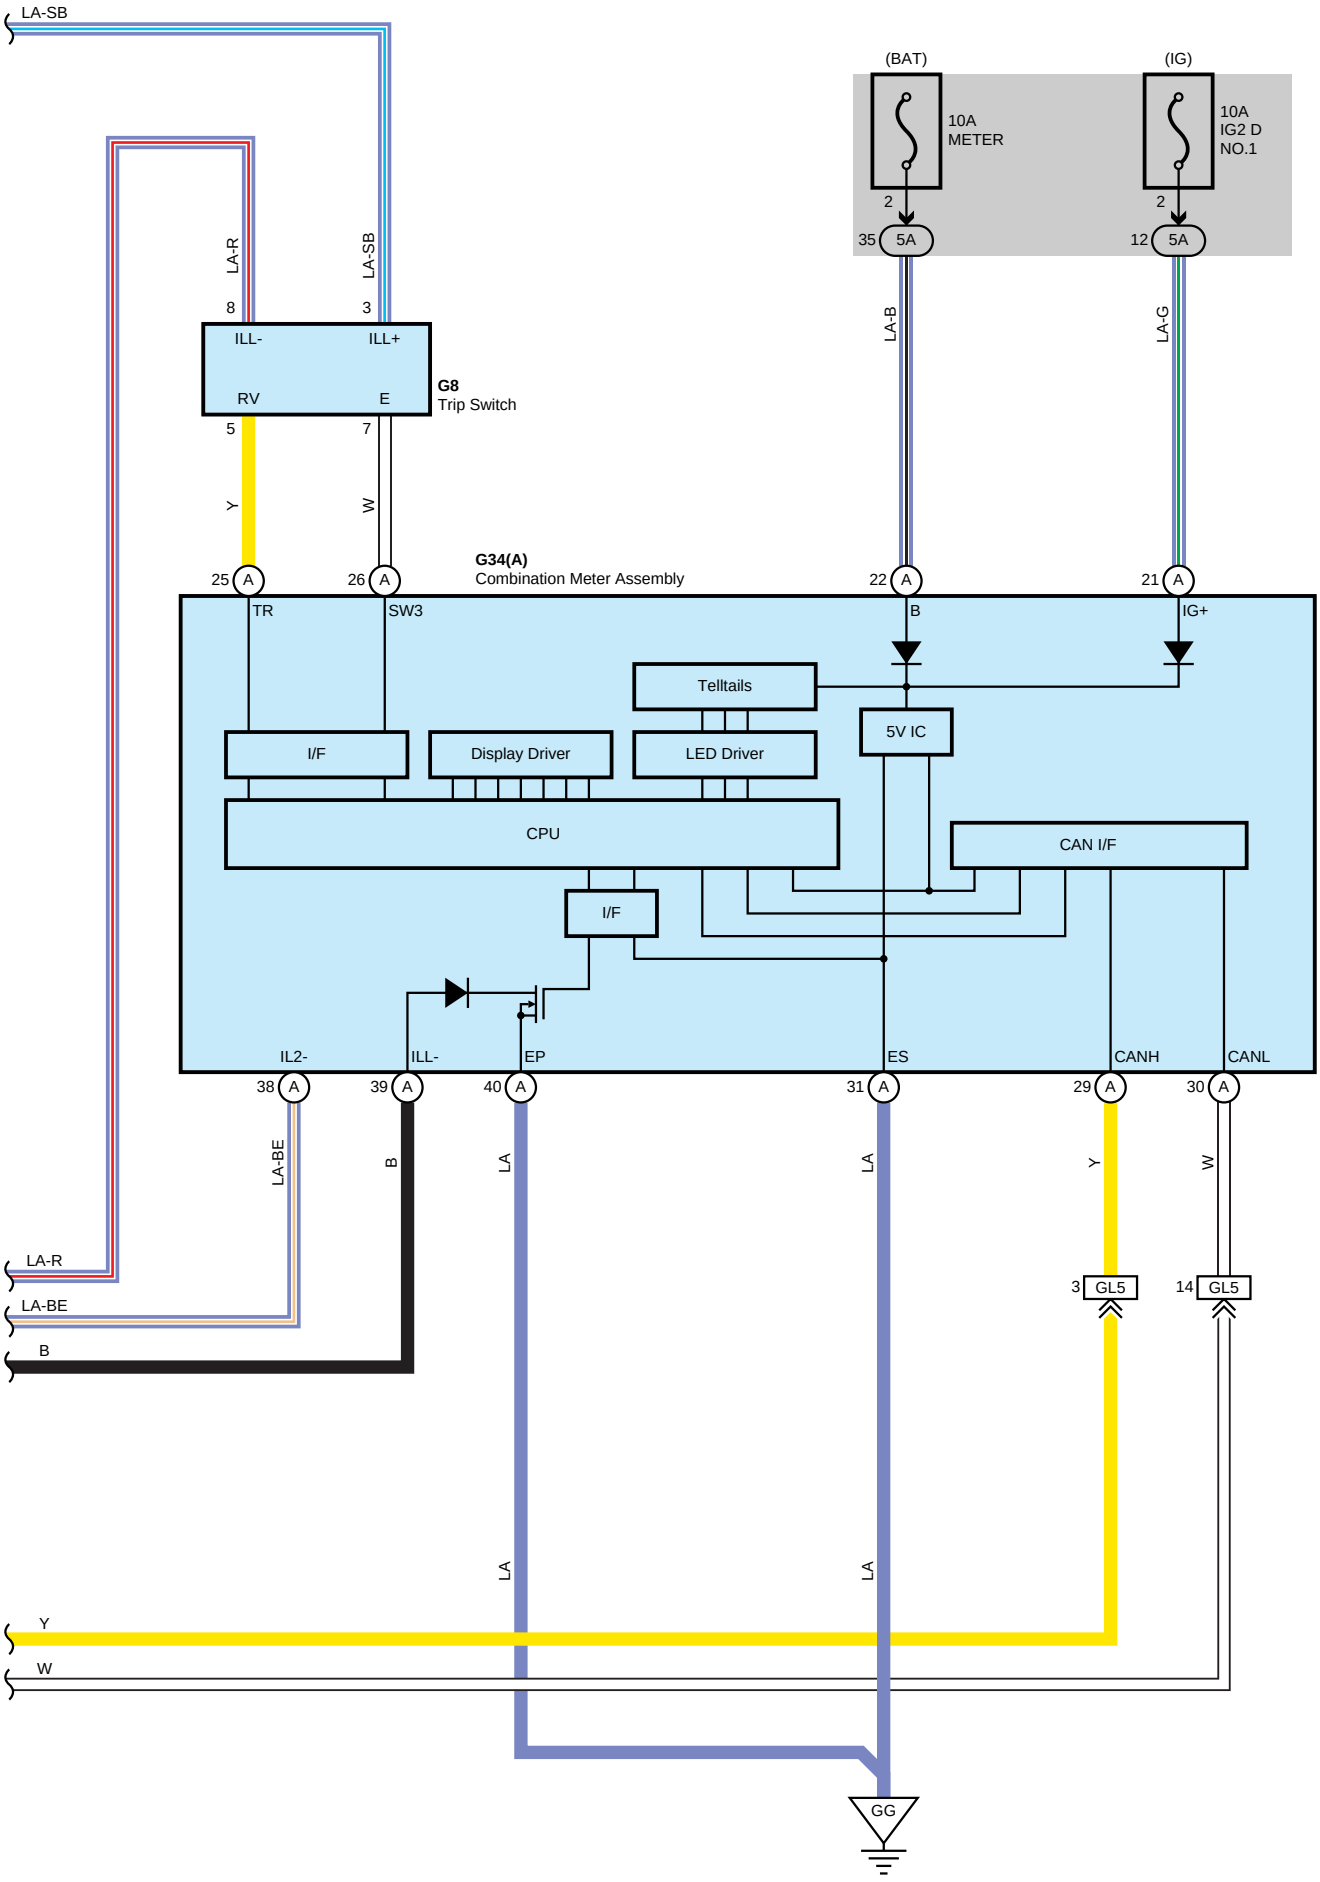
LA-SB
(BAT)
(IG)
10A
METER
10A
IG2 D
NO.1
2
2
35
5A
12
5A
LA-R
LA-SB
LA-B
LA-G
8
3
ILL-
ILL+
RV
E
G8
Trip Switch
5
7
Y
W
G34(A)
Combination Meter Assembly
25
26
22
21
TR
SW3
B
IG+
Telltails
5V IC
I/F
Display Driver
LED Driver
CPU
CAN I/F
I/F
IL2-
ILL-
EP
ES
CANH
CANL
38
39
40
31
29
30
LA-BE
B
LA
LA
Y
W
LA-R
LA-BE
B
3
GL5
14
GL5
LA
LA
Y
W
GG

G1
Black

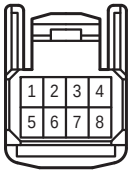

90980-12551

G3
White

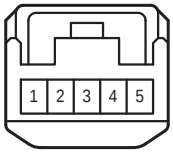

90980-12366

G4
White

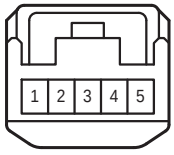

90980-12366

G5
Blue

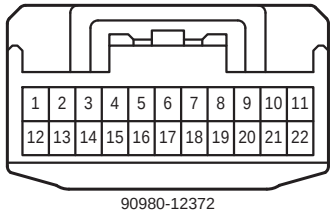

90980-12372

G7
Black

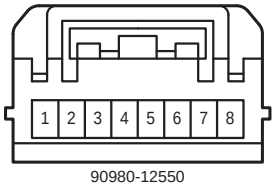

90980-12550

G8
White

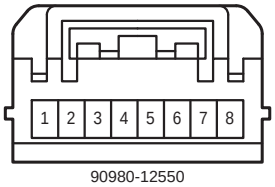

90980-12550

G9
Gray

90980-11918

G10
Black

90980-11918

G12
Black

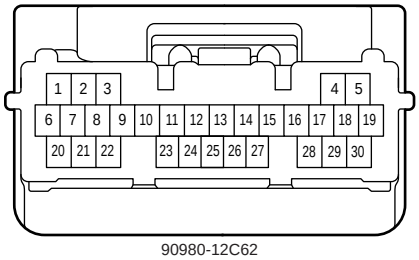

90980-12C62

G13
Black

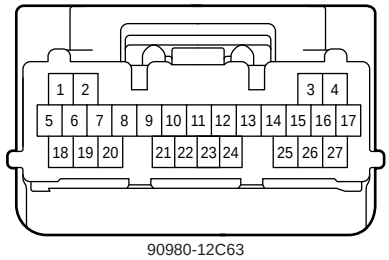

90980-12C63

G14
White

90980-11918

G17
Black

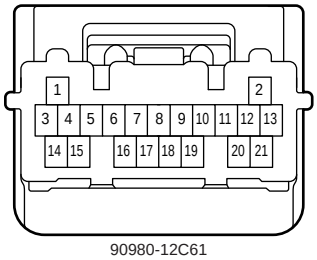

90980-12C61

G27
Black

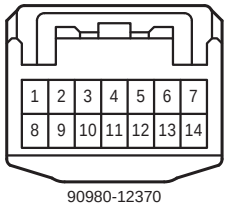

90980-12370

G29
Black

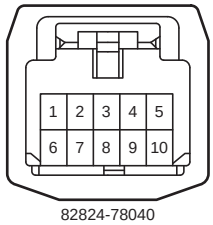

82824-78040

G30
White

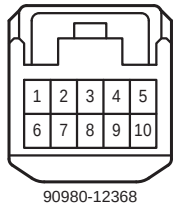

90980-12368

G31
Black

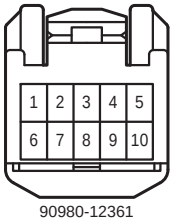

90980-12361

G34
Black

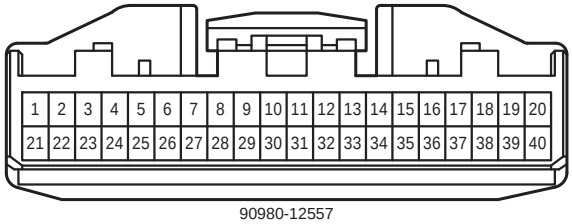

90980-12557

G43
Black

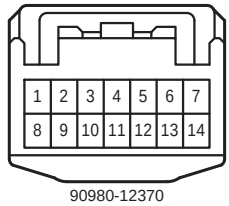

90980-12370

G46
White

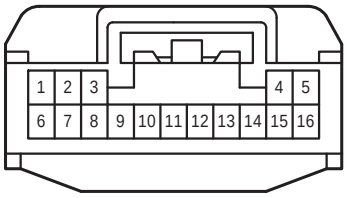

90980-12423

G49
White

90980-12910

G51
Black

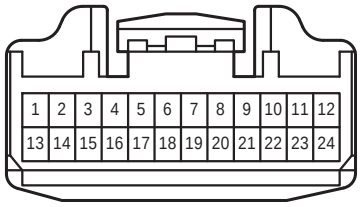

90980-12554

G54
White

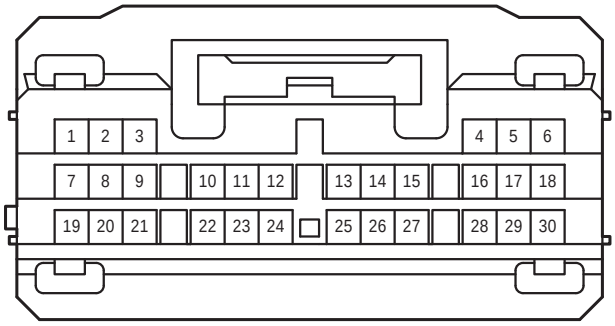

90980-12761

G59
Black

90980-12910

G66
Black

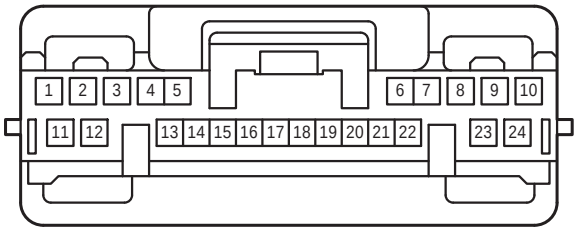

90980-12912

G72
Black

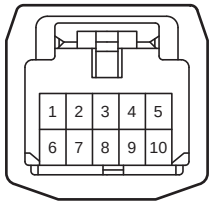

82824-78040

G73
White

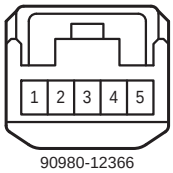

90980-12366

G75
White

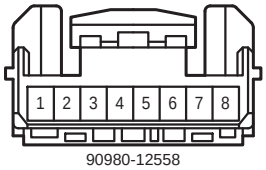

90980-12558

G76
Black

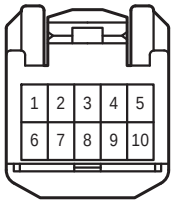

90980-12361

G80
White

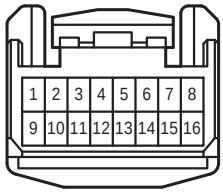

90980-12553

G91
White

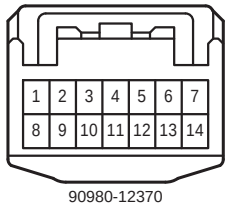

90980-12370

G94
White

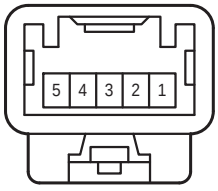

90980-12365

G99
White

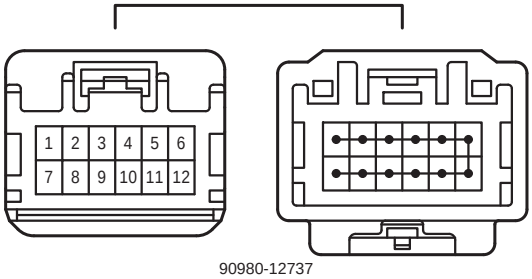

90980-12737

G100
Black

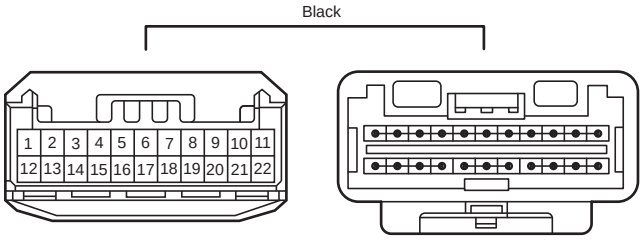

90980-12B54

G101
Black

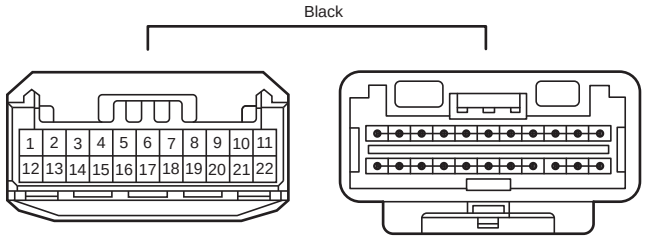

90980-12B54

G103
Black

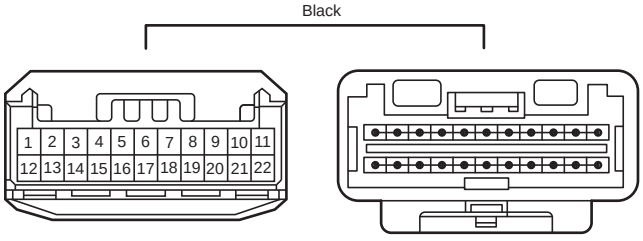

90980-12B54

G106
Blue

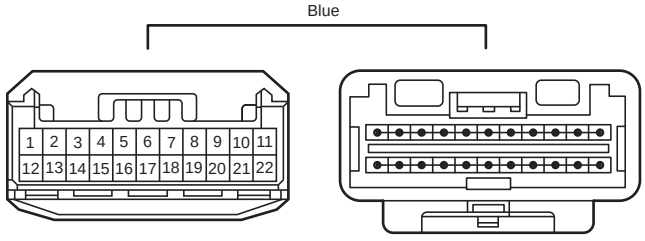

90980-12B54

G108
Black

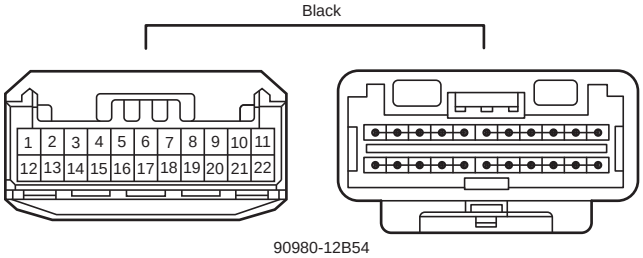

90980-12B54

G110
White

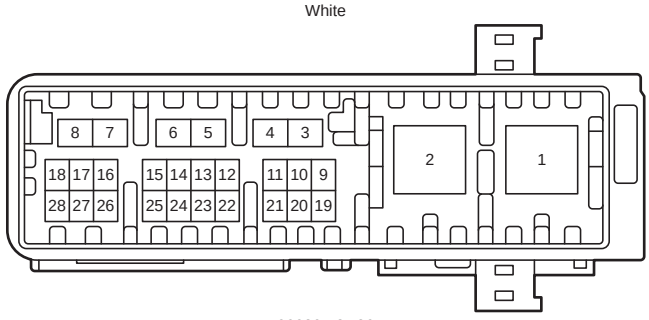

90980-12D86

G111
White

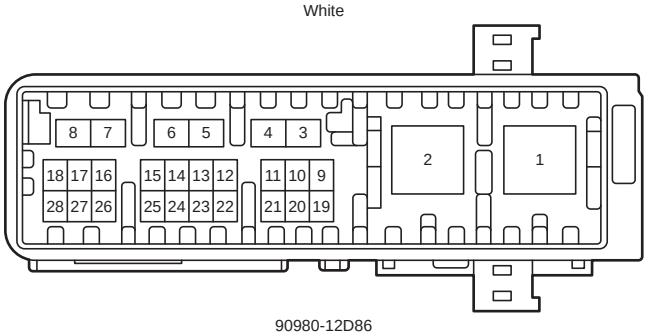

90980-12D86

G113
Black

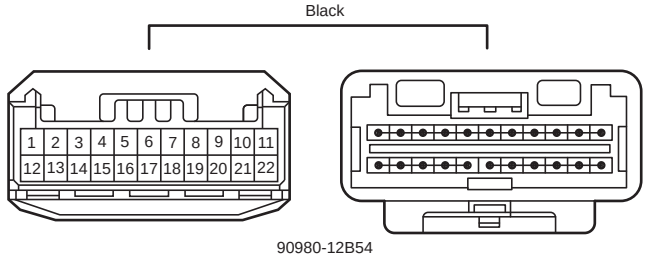

90980-12B54

G119
Blue

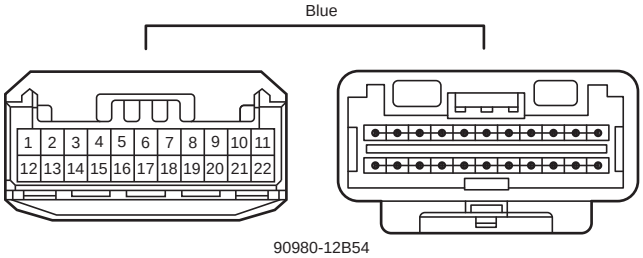

90980-12B54

G120
White

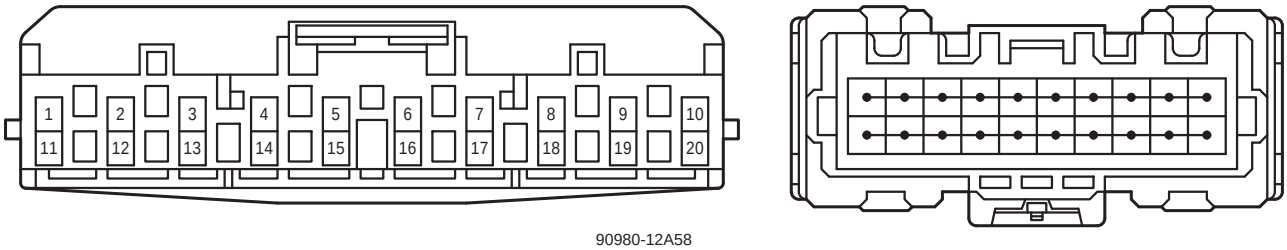

90980-12A58

G122
White

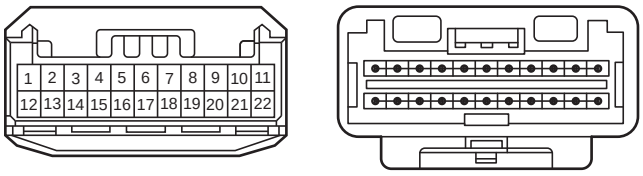

90980-12B54

H10
White

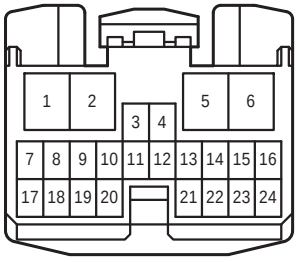

90980-12560

H12
White

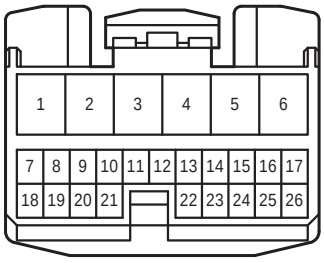

90980-12561

H17
Black

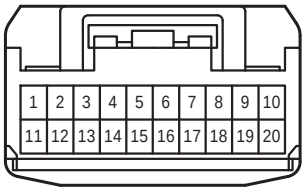

90980-12460

H29
White

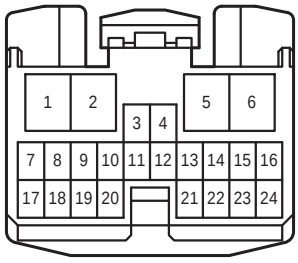

90980-12560

H31
White

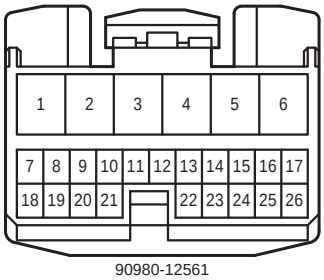

90980-12561

H35
Black

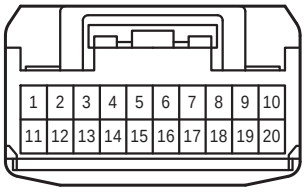

90980-12460

H39
White

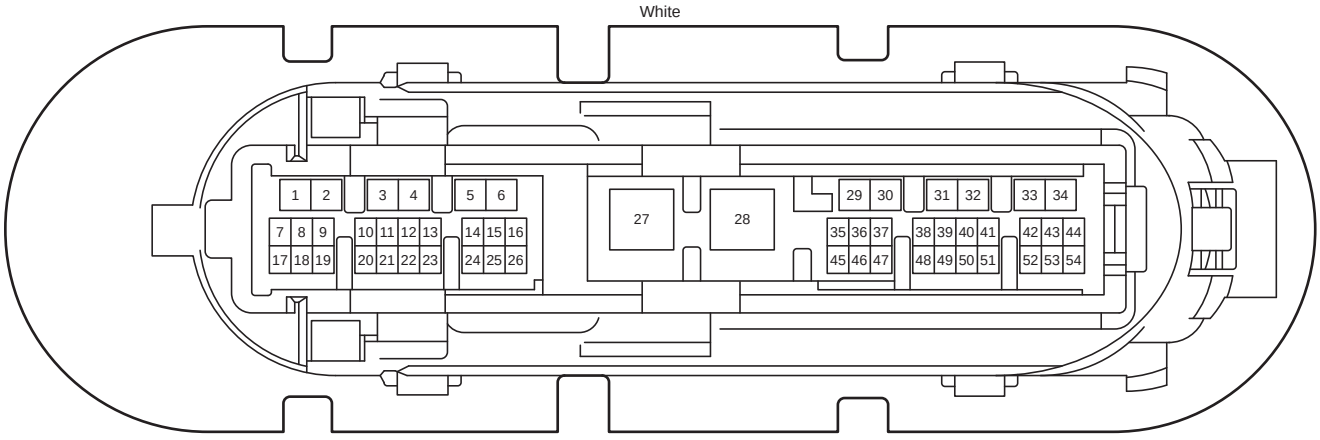

90980-12D88

H40
White

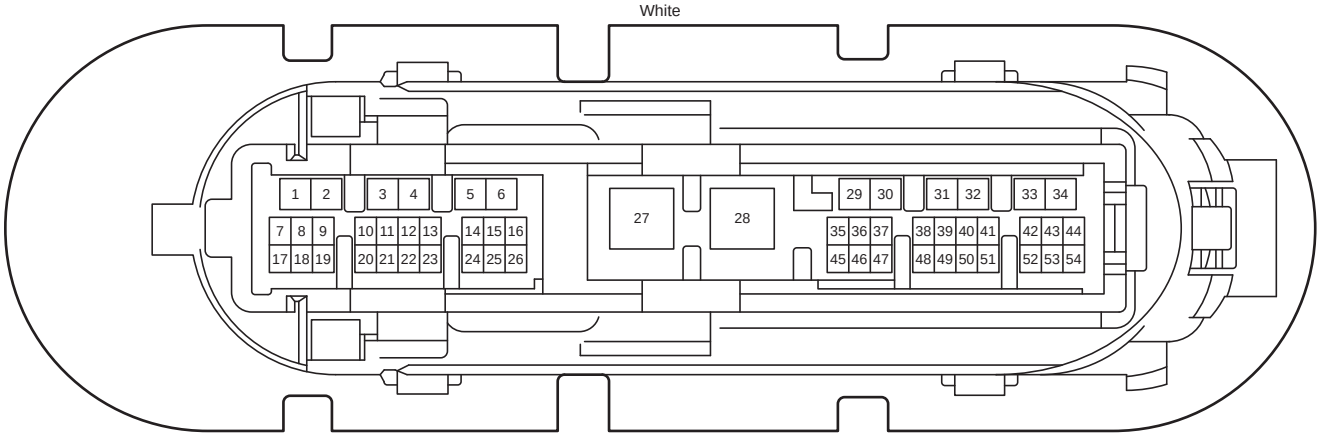

90980-12D88

I2
White

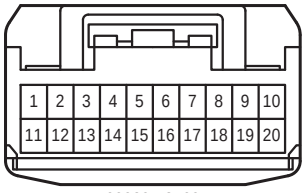

90980-12460

I3
White

90980-12063

I4
Black

90980-12552

I6
White

90980-12063

J3
White

90980-12063

J7
White

90980-12063

K6
White

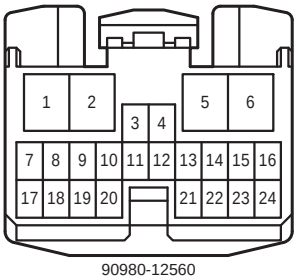

90980-12560

K7
White

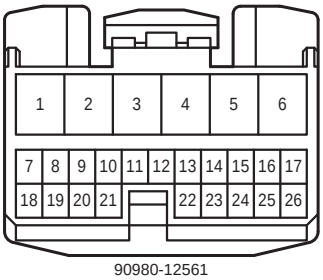

90980-12561

K20
White

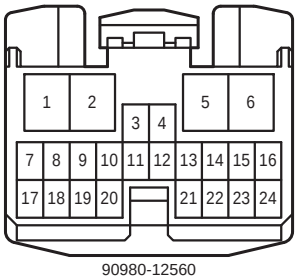

90980-12560

K21
White

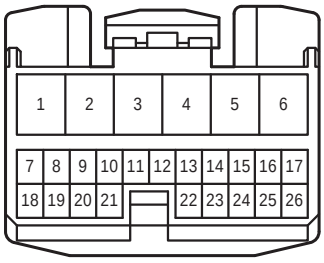

90980-12561

L1
Yellow

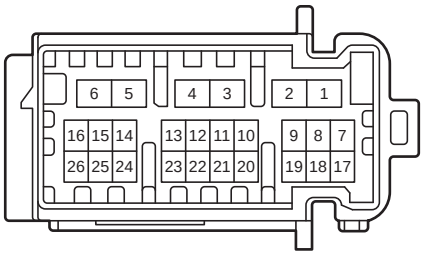

90980-12D87

L2
Yellow

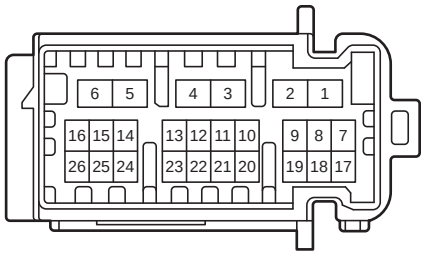

90980-12D87

L80
White

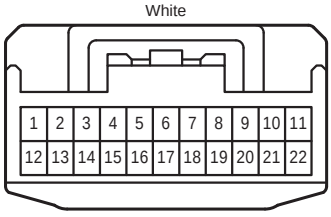

90980-12372

L91
White

90980-12910

L92
White

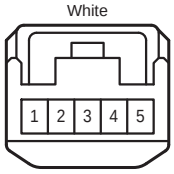

90980-12366

L115
White

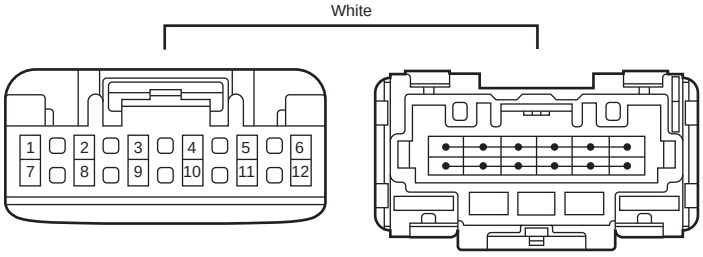

90980-12C68

L116
White

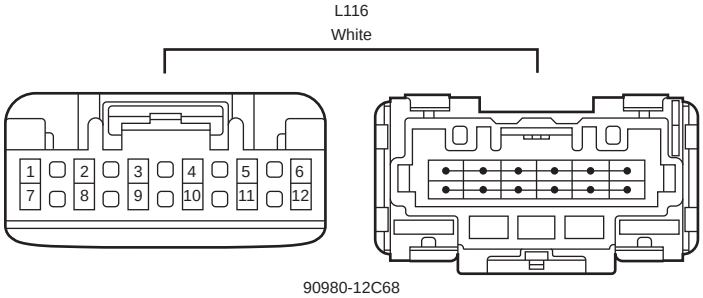

90980-12C68

L131
White

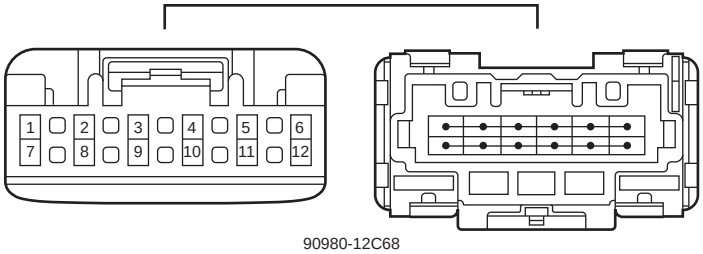

90980-12C68

L140
White

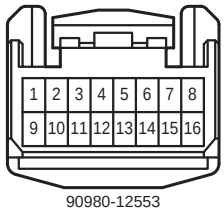

90980-12553

L162
Black

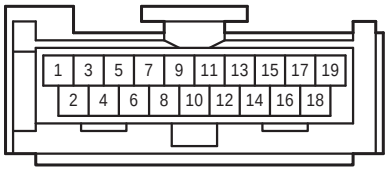

82824-50470

N7
White

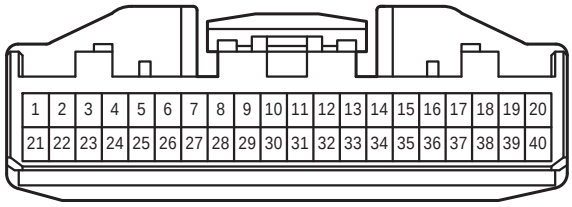

90980-12557

R7
White

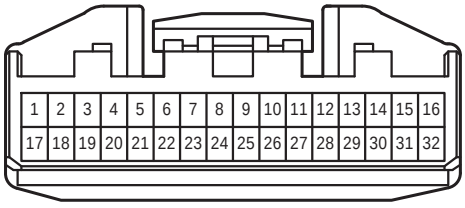

90980-12556

R24
White

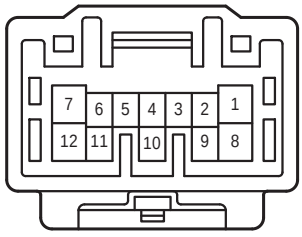

90980-12811

R41
White

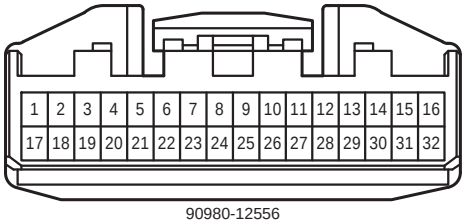

90980-12556

R49
White

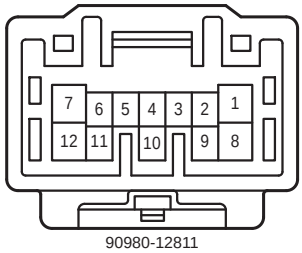

90980-12811

z1
White

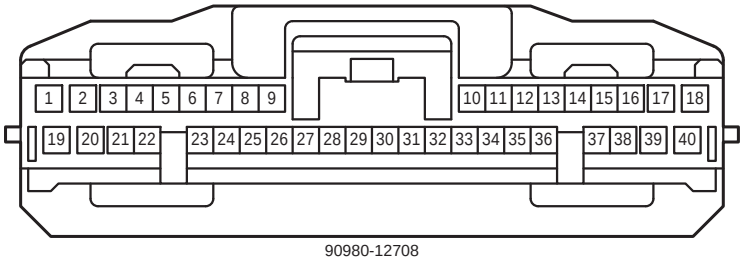

90980-12708

z6
Black

90980-12559

z35
White

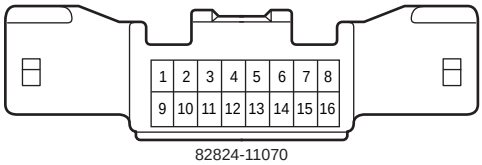

82824-11070

4A
White

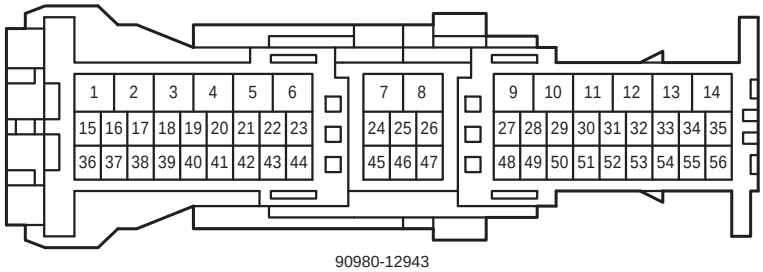

90980-12943

4D
White

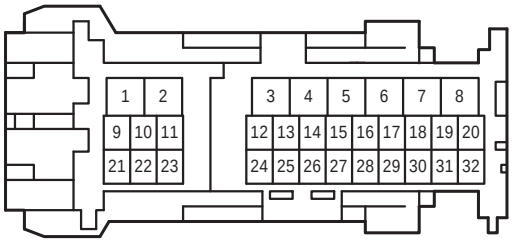

90980-12A48

4H
White

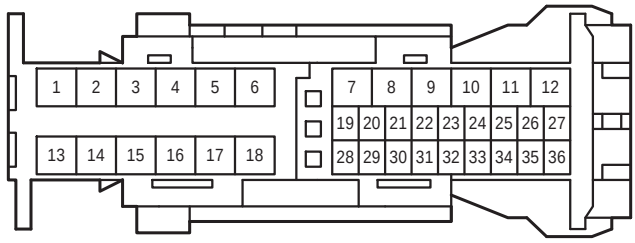

90980-12944

5A
White

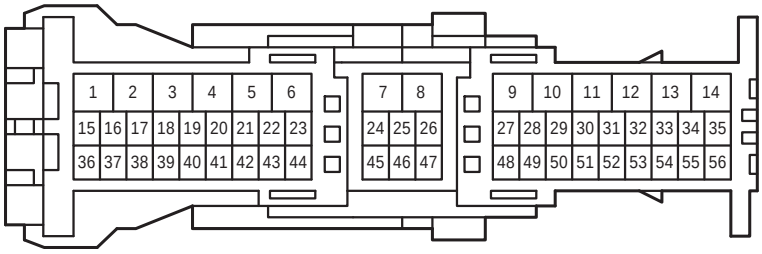

90980-12943

5D
White

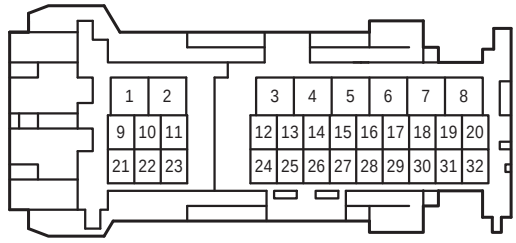

90980-12A48

5H
White

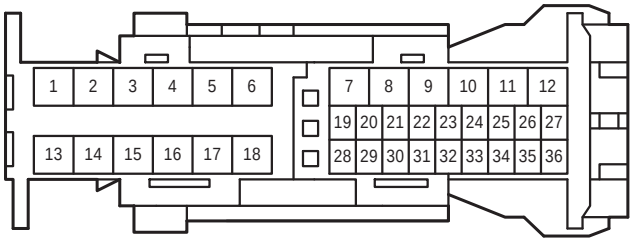

90980-12944

GG2
Black

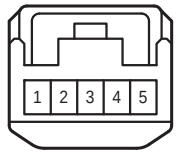

90980-12366

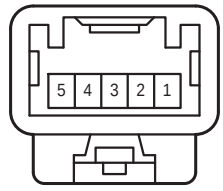

90980-12365

GL2
White

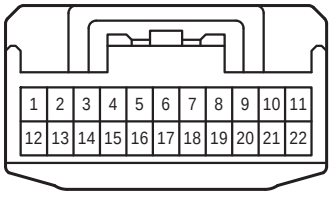

90980-12372

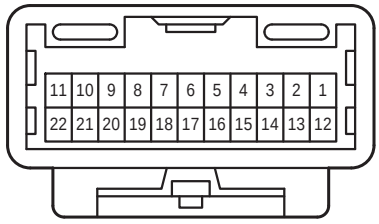

90980-12371

GL5
White

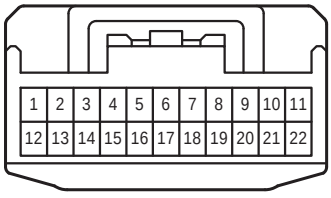

90980-12372

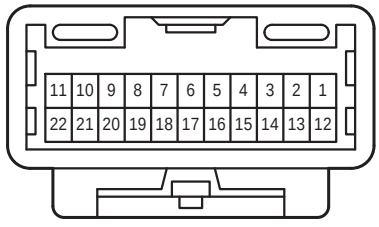

90980-12371

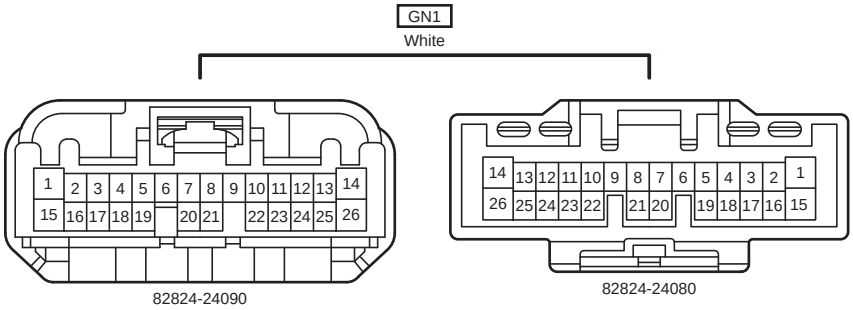
GN1
White
1 2 3 4 5 6 7 8 9 10 11 12 13 14
15 16 17 18 19 20 21 22 23 24 25 26
82824-24090
14 13 12 11 10 9 8 7 6 5 4 3 2 1
26 25 24 23 22 21 20 19 18 17 16 15
82824-24080

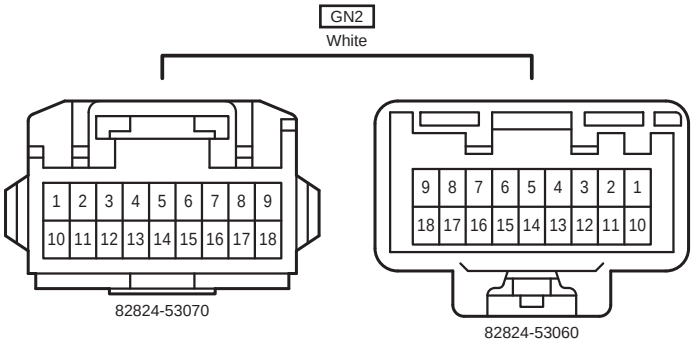
GN2
White
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18
82824-53070
9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12 11 10
82824-53060

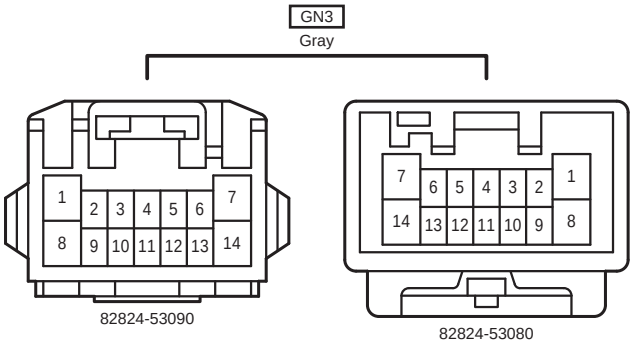
GN3
Gray
1 2 3 4 5 6 7
8 9 10 11 12 13 14
82824-53090
7 6 5 4 3 2 1
14 13 12 11 10 9 8
82824-53080

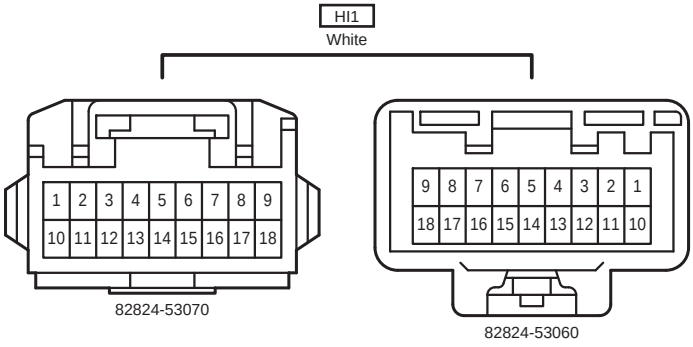
HI1
White
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18
82824-53070
9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12 11 10
82824-53060

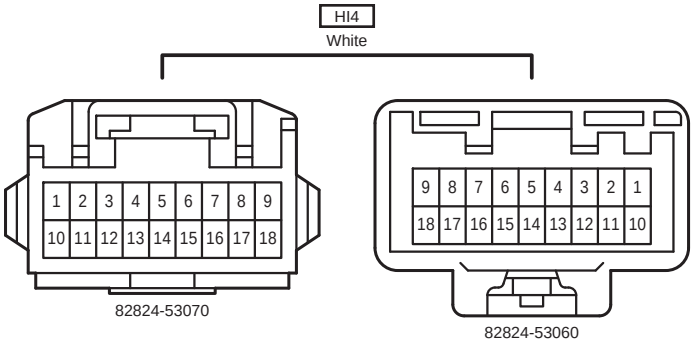
HI4
White
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18
82824-53070
9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12 11 10
82824-53060

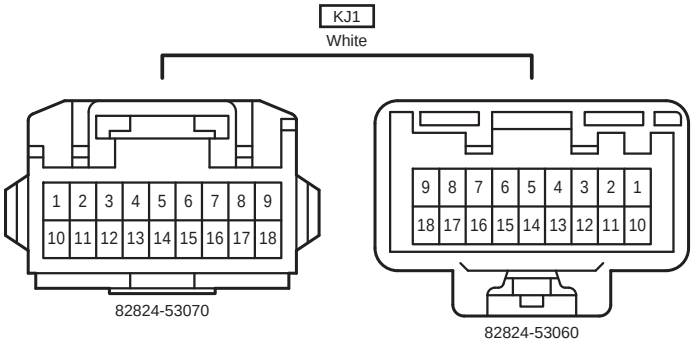
KJ1
White
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18
82824-53070
9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12 11 10
82824-53060

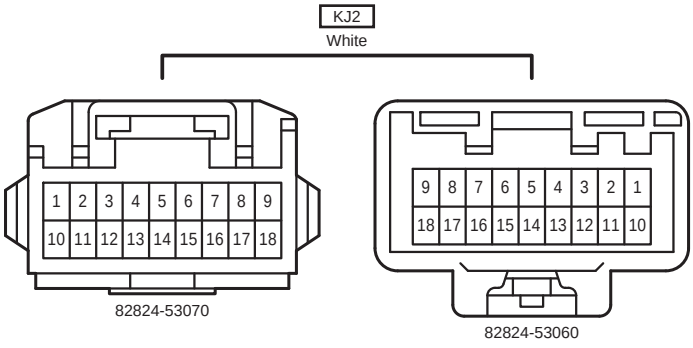
KJ2
White
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18
82824-53070
9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12 11 10
82824-53060

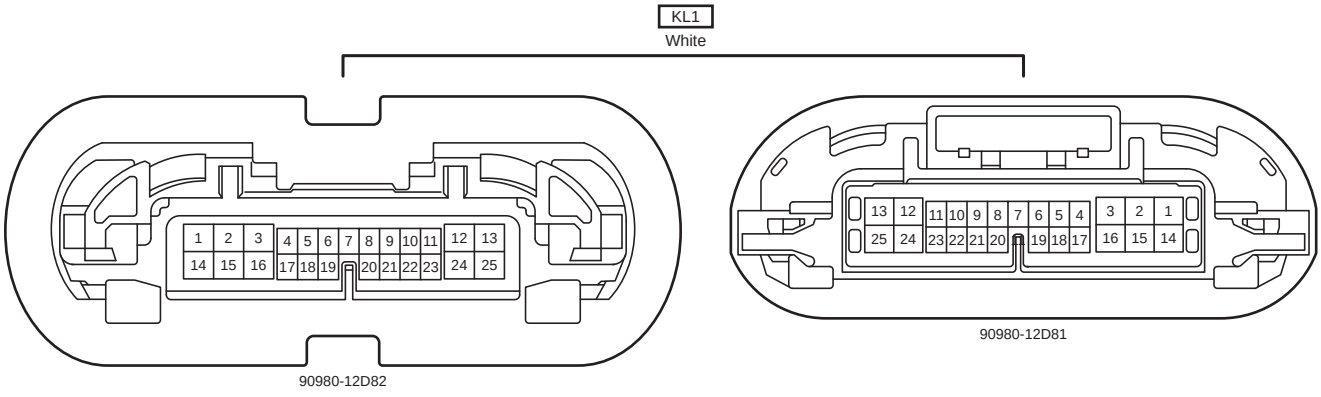
KL1
White
1 2 3 4 5 6 7 8 9 10 11 12 13
14 15 16 17 18 19 20 21 22 23 24 25
90980-12D82
13 12 11 10 9 8 7 6 5 4 3 2 1
25 24 23 22 21 20 19 18 17 16 15 14
90980-12D81

KL2
White

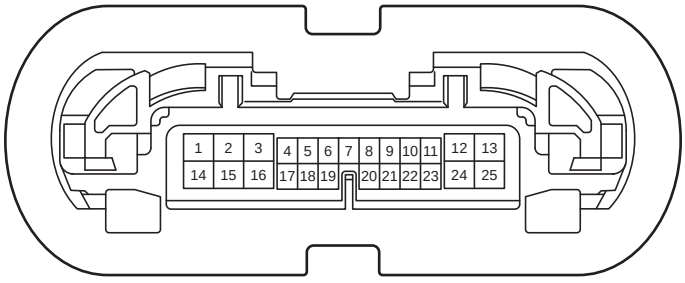

90980-12D82

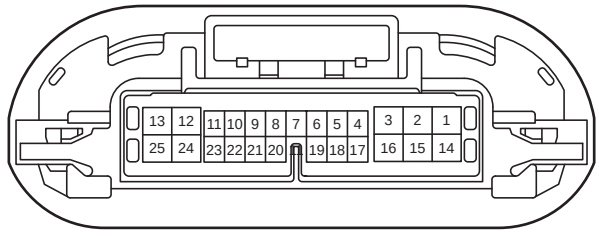

90980-12D81

LG1
White

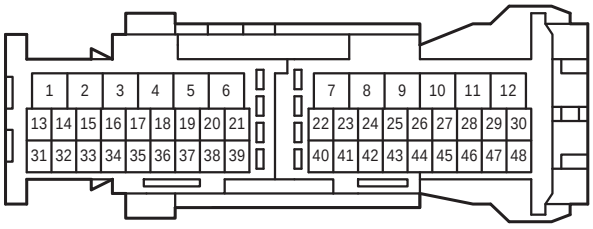

90980-12779

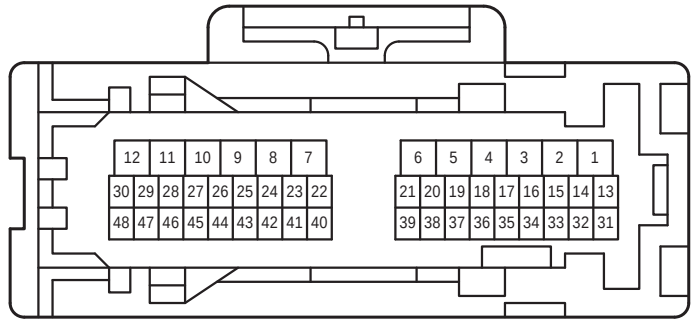

90980-12799

LR1
White

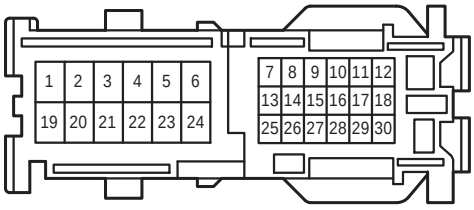

90980-12503

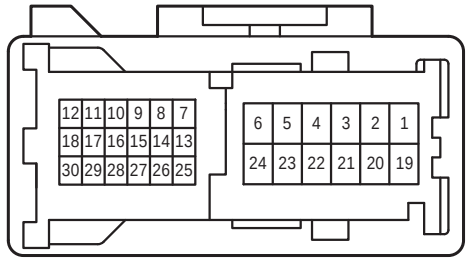

90980-12516

LR2
White

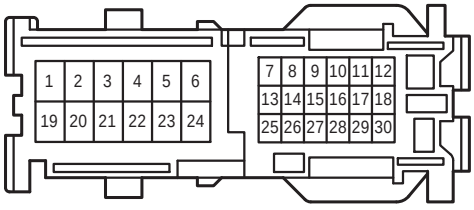

90980-12503

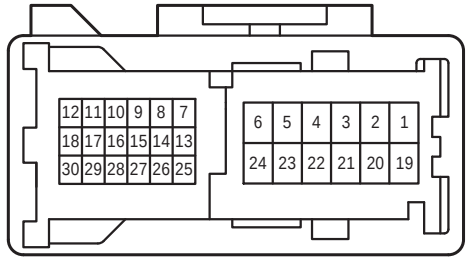

90980-12516

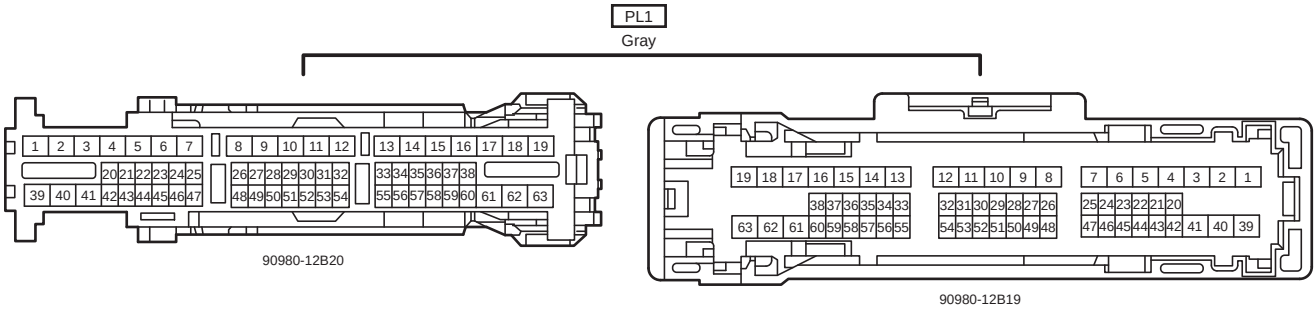
PL1
Gray
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19
20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38
39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63
90980-12B20
19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1
38 37 36 35 34 33 32 31 30 29 28 27 26 25 24 23 22 21 20
63 62 61 60 59 58 57 56 55 54 53 52 51 50 49 48 47 46 45 44 43 42 41 40 39
90980-12B19