POWER SEAT (DRIVER'S SEAT) [RHD]

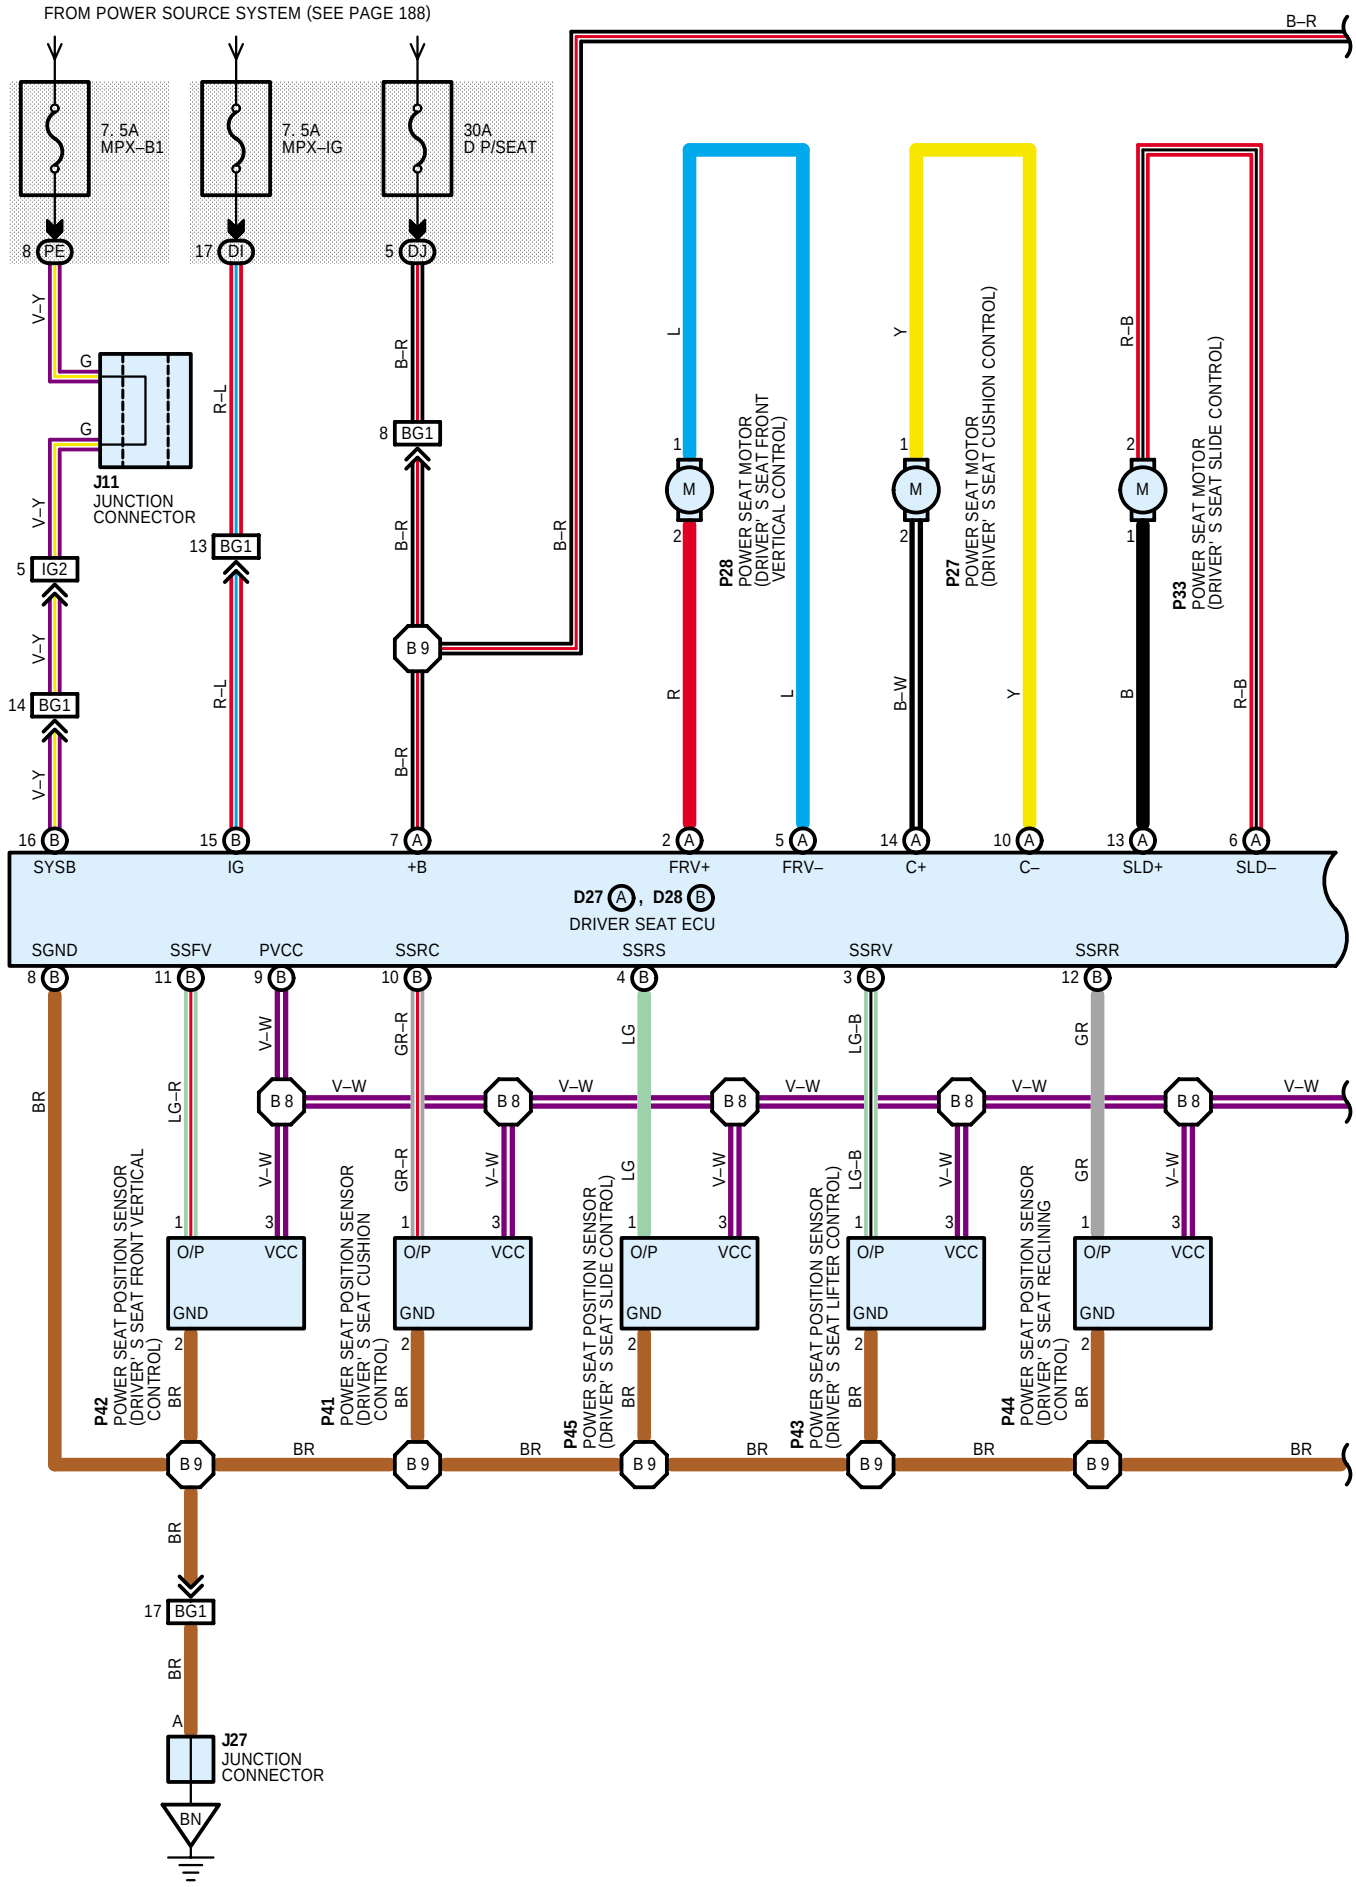

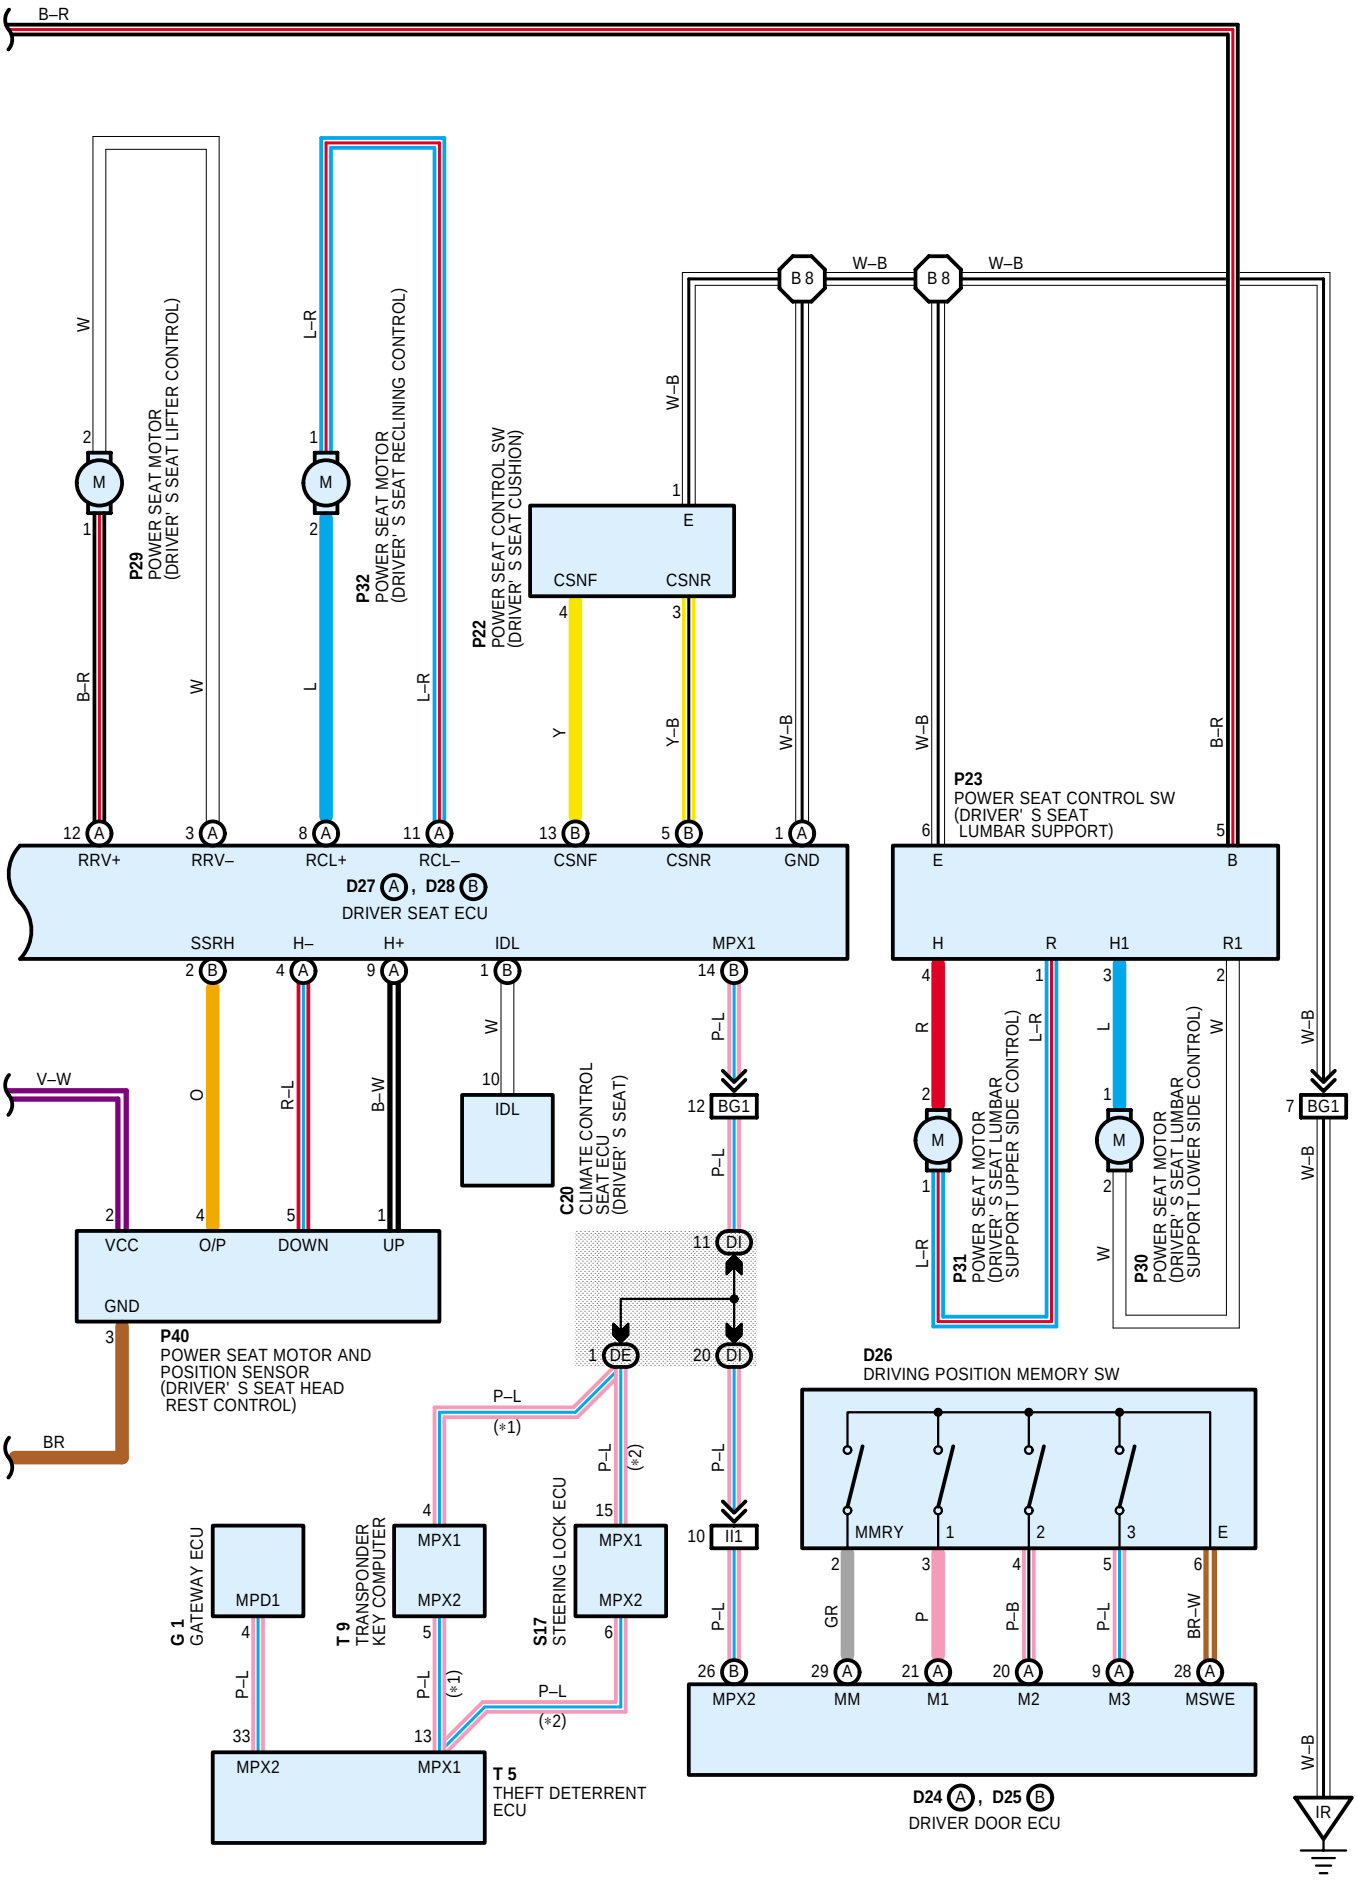
B–R
P29
POWER SEAT MOTOR
(DRIVER' S SEAT LIFTER CONTROL)
P32
POWER SEAT MOTOR
(DRIVER' S SEAT RECLINING CONTROL)
P22
POWER SEAT CONTROL SW
(DRIVER' S SEAT CUSHION)
CSNF
CSNR
B 8
W–B
P23
POWER SEAT CONTROL SW
(DRIVER' S SEAT
LUMBAR SUPPORT)
RRV+
RRV–
RCL+
RCL–
CSNF
CSNR
GND
D27 A , D28 B
DRIVER SEAT ECU
SSRH
H–
H+
IDL
MPX1
H
R
H1
R1
V–W
VCC
O/P
DOWN
UP
GND
P40
POWER SEAT MOTOR AND
POSITION SENSOR
(DRIVER' S SEAT HEAD
REST CONTROL)
BR
C20
CLIMATE CONTROL
SEAT ECU
(DRIVER' S SEAT)
BG1
P31
POWER SEAT MOTOR
(DRIVER' S SEAT LUMBAR
SUPPORT UPPER SIDE CONTROL)
P30
POWER SEAT MOTOR
(DRIVER' S SEAT LUMBAR
SUPPORT LOWER SIDE CONTROL)
D26
DRIVING POSITION MEMORY SW
MMRY
E
G 1
GATEWAY ECU
MPD1
T 9
TRANSPONDER
KEY COMPUTER
MPX1
MPX2
S17
STEERING LOCK ECU
T 5
THEFT DETERRENT
ECU
II1
MM
M1
M2
M3
MSWE
D24 A , D25 B
DRIVER DOOR ECU
IR