22 LS 430 (RHD)

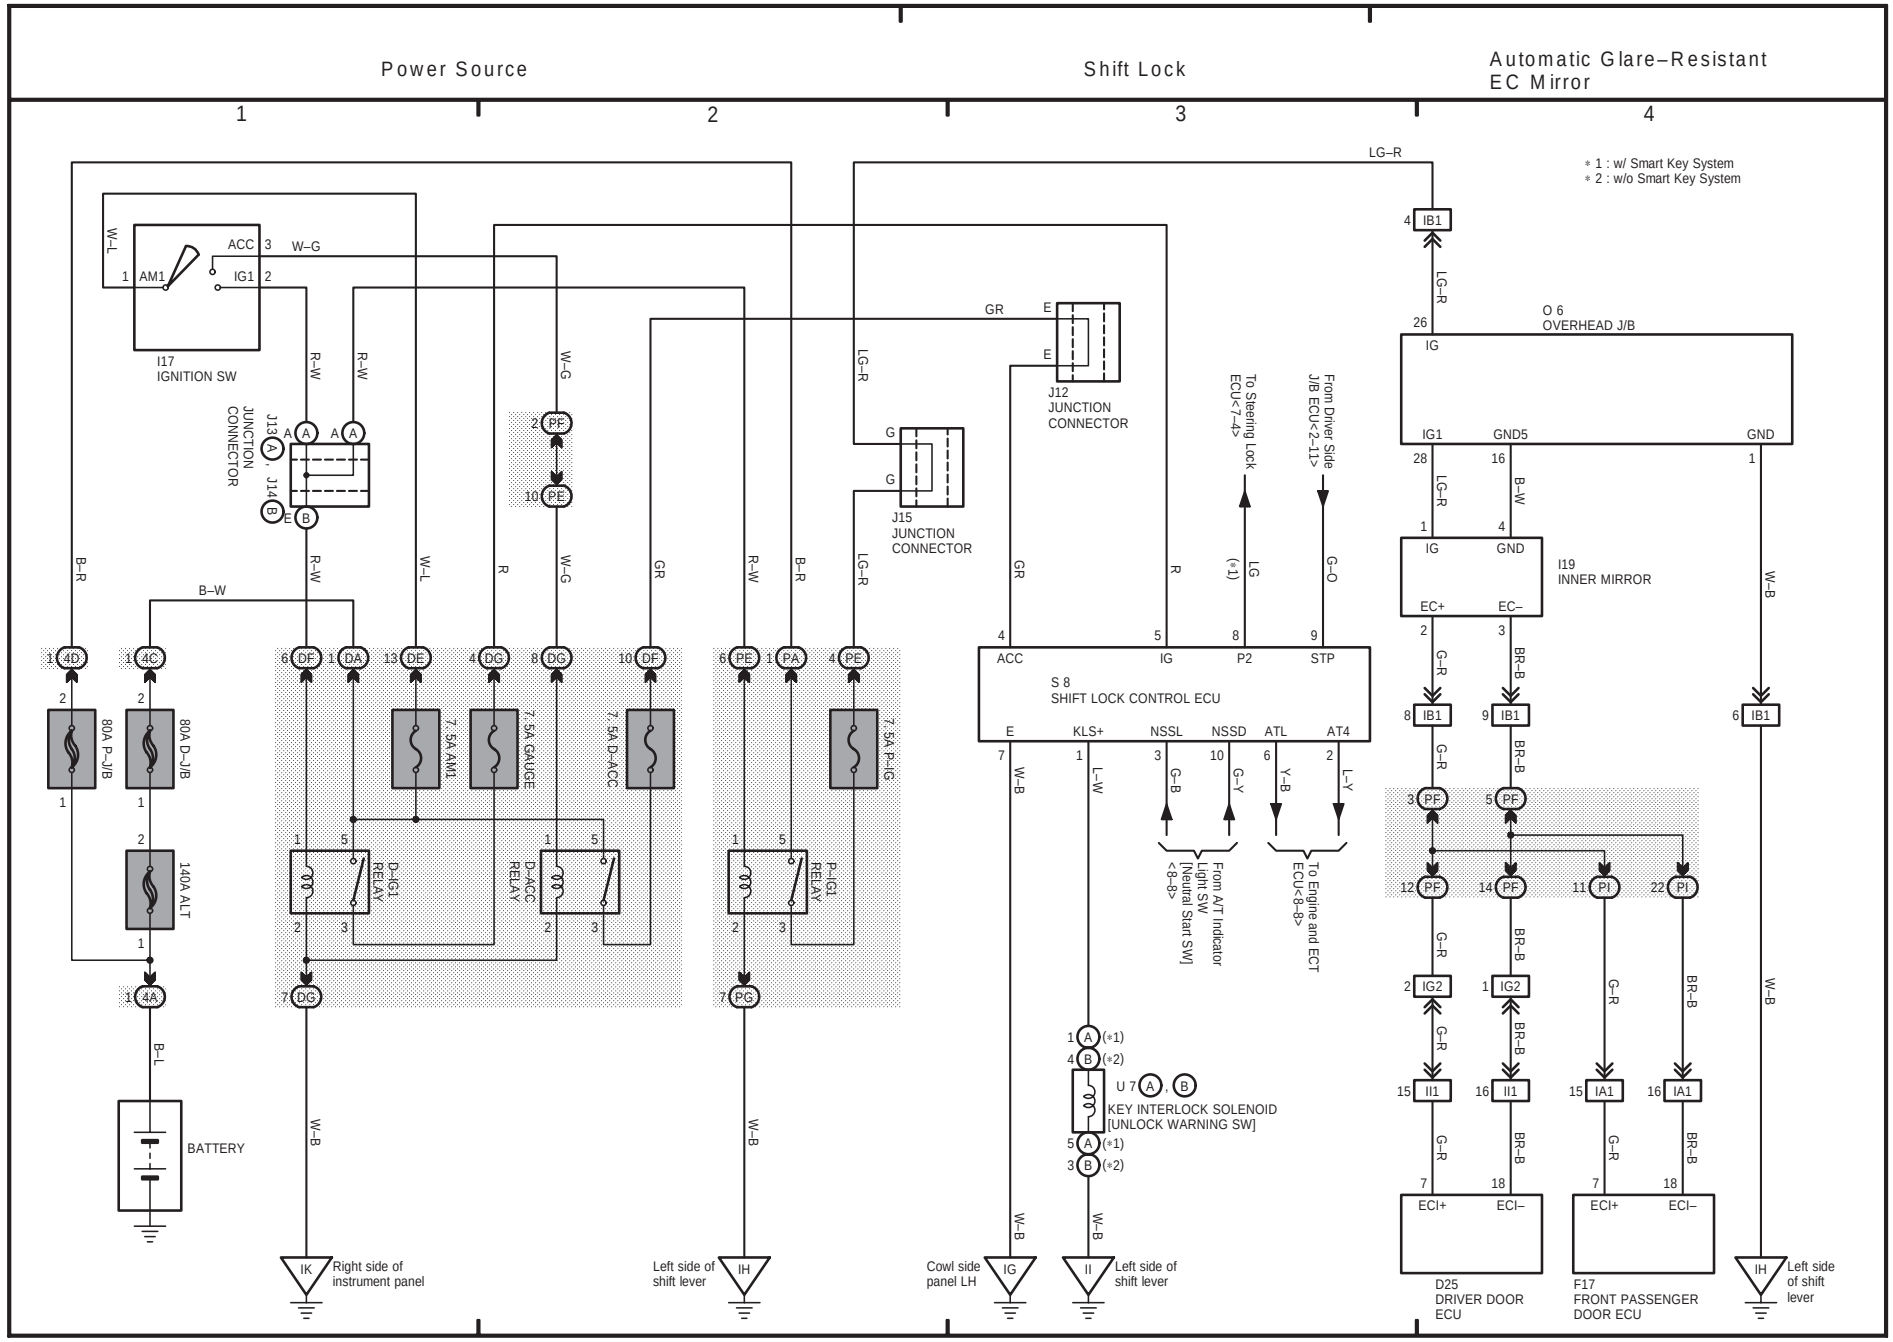
Power Source
Shift Lock
Automatic Glare–Resistant EC Mirror
1
2
3
4
* 1 : w/ Smart Key System
* 2 : w/o Smart Key System
I17 IGNITION SW
AM1
ACC
IG1
W–L
W–G
R–W
B–R
B–W
B–L
LG–R
GR
R
W–G
W–L
W–B
L–W
G–B
G–Y
Y–B
L–Y
G–O
LG
G–R
BR–B
J13
J14
JUNCTION CONNECTOR
J12 JUNCTION CONNECTOR
J15 JUNCTION CONNECTOR
To Steering Lock ECU<7–4>
From Driver Side J/B ECU<2–11>
S 8 SHIFT LOCK CONTROL ECU
ACC
IG
P2
STP
E
KLS+
NSSL
NSSD
ATL
AT4
From A/T Indicator Light SW [Neutral Start SW]
To Engine and ECT ECU<8–8>
KEY INTERLOCK SOLENOID [UNLOCK WARNING SW]
O 6 OVERHEAD J/B
IG
IG1
GND5
GND
I19 INNER MIRROR
EC+
EC–
80A P–J/B
80A D–J/B
140A ALT
BATTERY
7.5A AM1
7.5A GAUGE
7.5A D–ACC
7.5A P–IG
D–IG1 RELAY
D–ACC RELAY
P–IG1 RELAY
ECI+
ECI–
D25 DRIVER DOOR ECU
F17 FRONT PASSENGER DOOR ECU
Right side of instrument panel
Left side of shift lever
Cowl side panel LH
Left side of shift lever
Left side of shift lever