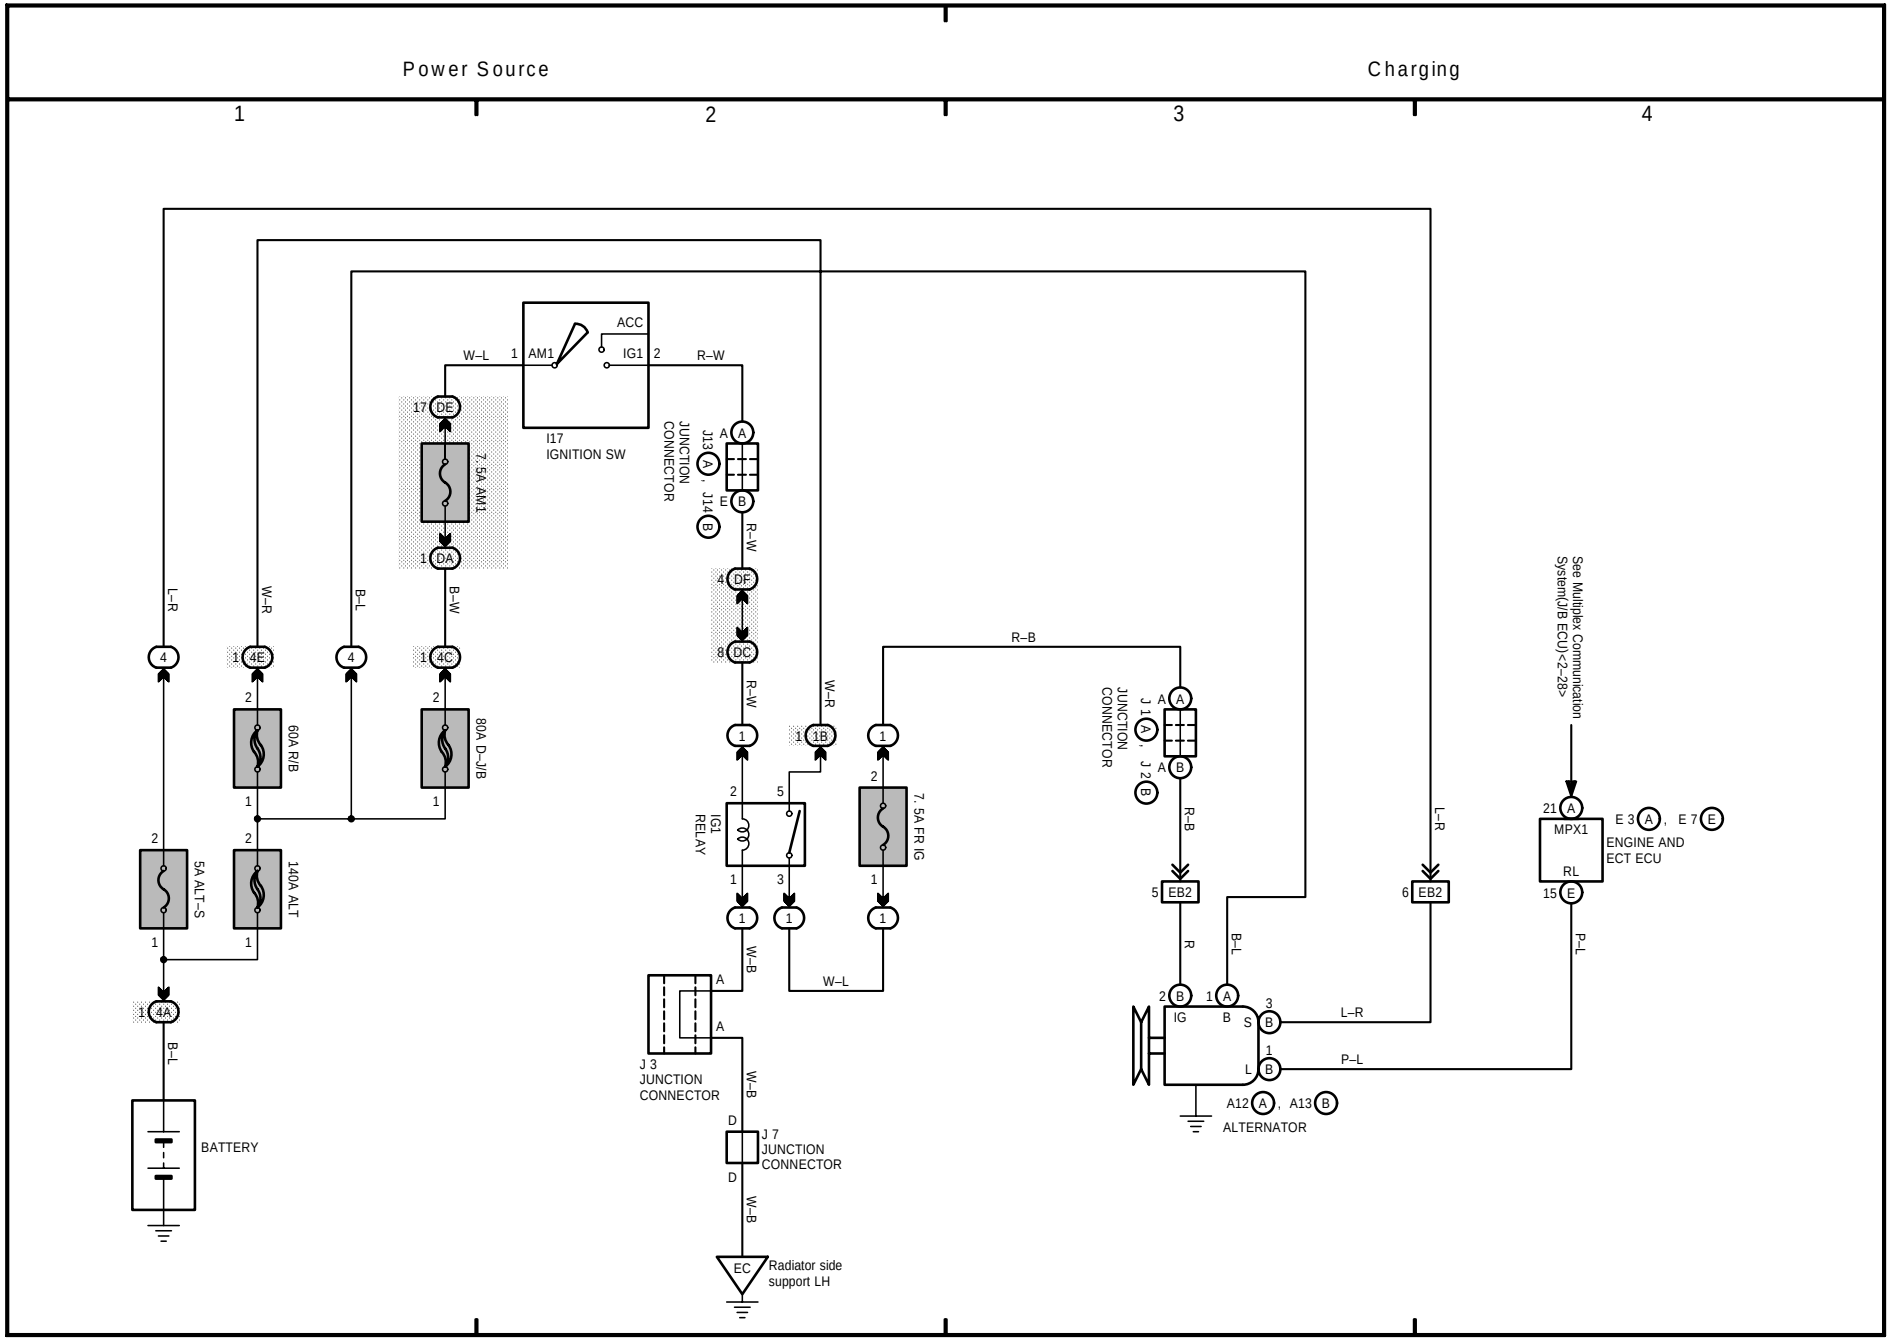
Power Source
Charging
1
2
3
4
ACC
AM1
IG1
I17
IGNITION SW
W–L
R–W
17 DE
7.5A AM1
1 DA
B–W
B–L
L–R
W–R
4
1 4E
1 4C
60A R/B
80A D–J/B
5A ALT–S
140A ALT
1 4A
BATTERY
JUNCTION CONNECTOR
J13 A, J14 B
4 DF
8 DC
1 1B
IGI RELAY
7.5A FR IG
W–B
J 3 JUNCTION CONNECTOR
J 7 JUNCTION CONNECTOR
EC
Radiator side support LH
R–B
J 1 A, J 2 B
5 EB2
6 EB2
R
IG
B
S
L
A12 A, A13 B
ALTERNATOR
P–L
See Multiplex Communication System(J/B ECU)<2-28>
21 A
MPX1
RL
15 E
E 3 A, E 7 E
ENGINE AND ECT ECU