7 LS 430 (LHD)

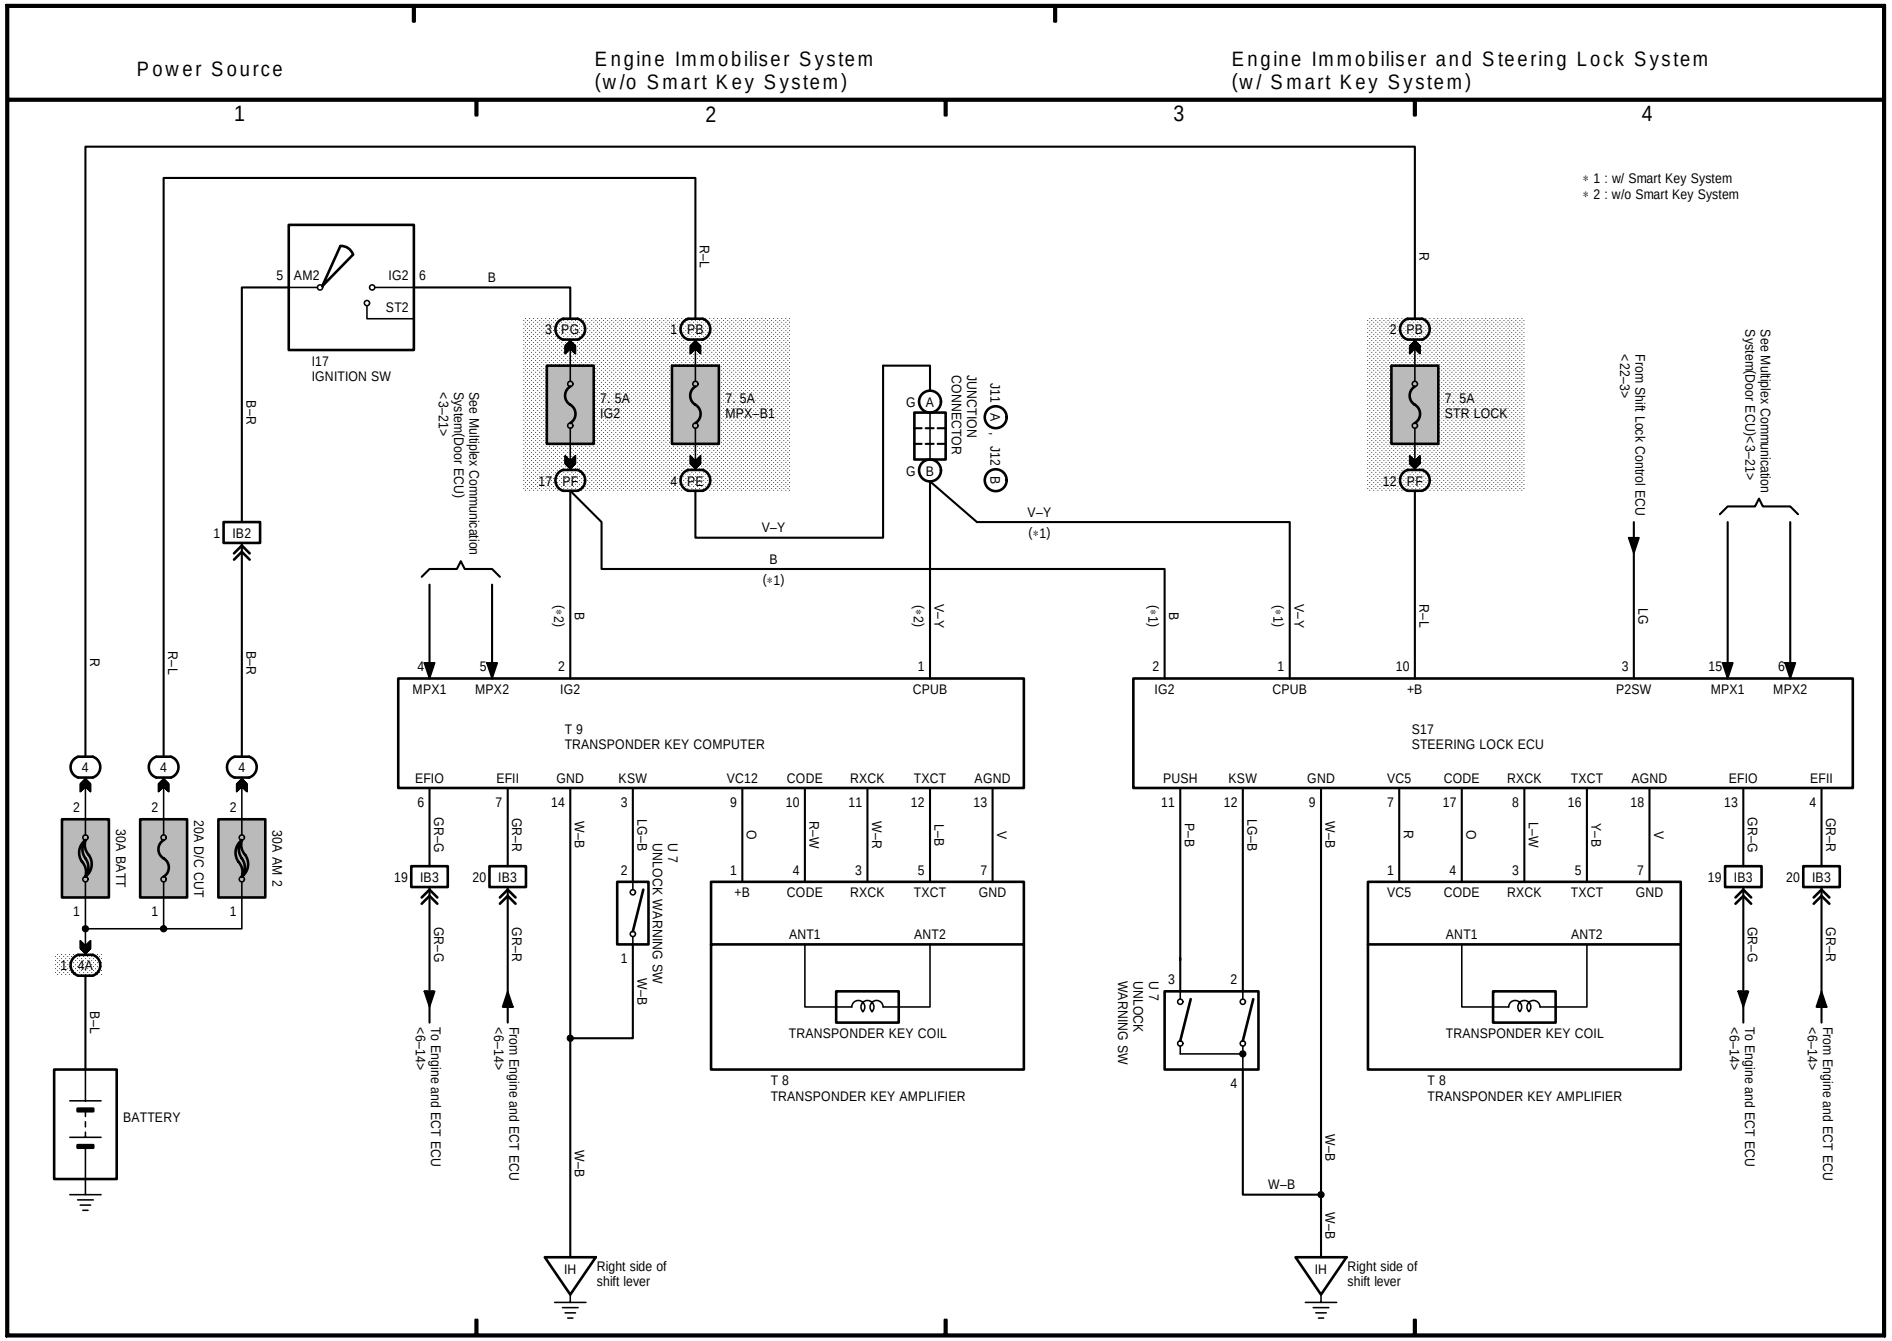
Power Source
Engine Immobiliser System (w/o Smart Key System)
Engine Immobiliser and Steering Lock System (w/ Smart Key System)
1
2
3
4
* 1 : w/ Smart Key System
* 2 : w/o Smart Key System
I17 IGNITION SW
AM2
IG2
ST2
7. 5A IG2
7. 5A MPX–B1
7. 5A STR LOCK
JUNCTION CONNECTOR
J11
J12
See Multiplex Communication System(Door ECU) <3–21>
From Shift Lock Control ECU <22–3>
30A BATT
20A D/C CUT
30A AM 2
4A
BATTERY
T 9 TRANSPONDER KEY COMPUTER
MPX1
MPX2
IG2
CPUB
EFIO
EFII
GND
KSW
VC12
CODE
RXCK
TXCT
AGND
+B
ANT1
ANT2
TRANSPONDER KEY COIL
T 8 TRANSPONDER KEY AMPLIFIER
U 7 UNLOCK WARNING SW
To Engine and ECT ECU <6–14>
From Engine and ECT ECU <6–14>
Right side of shift lever
S17 STEERING LOCK ECU
PUSH
P2SW
VC5
IH