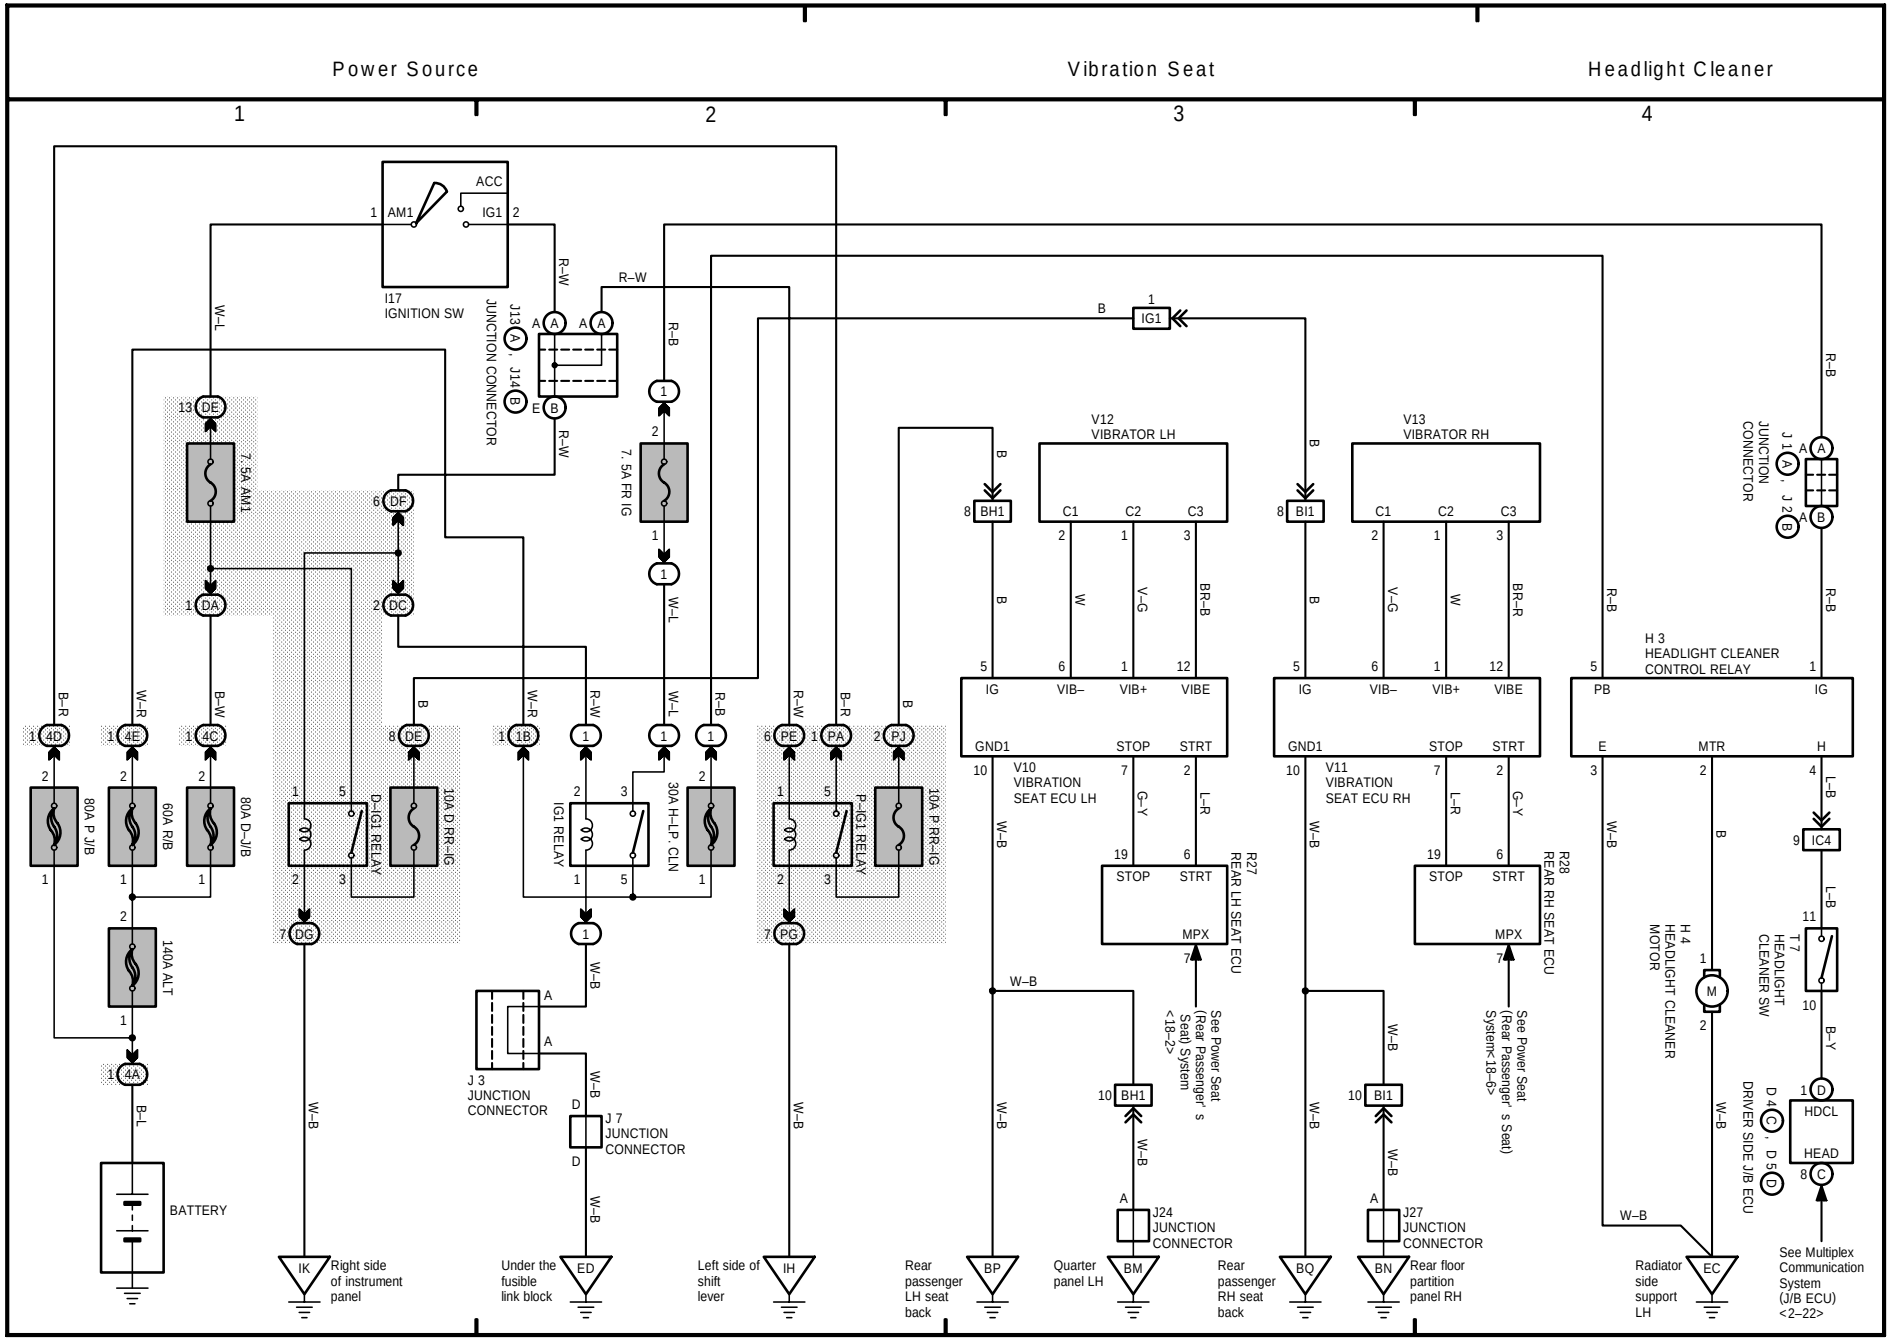
Power Source
Vibration Seat
Headlight Cleaner
1
2
3
4
I17
IGNITION SW
ACC
AM1
IG1
JUNCTION CONNECTOR
J13 , J14
7.5A AM1
7.5A FR IG
80A P J/B
60A R/B
80A D-J/B
140A ALT
BATTERY
D-IG1 RELAY
10A D RR-IG
IG1 RELAY
30A H-LP. CLN
P-IG1 RELAY
10A P RR-IG
J 3
JUNCTION CONNECTOR
J 7
JUNCTION CONNECTOR
Right side of instrument panel
Under the fusible link block
Left side of shift lever
V12
VIBRATOR LH
V13
VIBRATOR RH
V10
VIBRATION SEAT ECU LH
V11
VIBRATION SEAT ECU RH
R27
REAR LH SEAT ECU
R28
REAR RH SEAT ECU
See Power Seat (Rear Passenger's Seat) System <18-2>
See Power Seat (Rear Passenger's Seat) System<18-6>
J24
JUNCTION CONNECTOR
J27
JUNCTION CONNECTOR
Rear passenger LH seat back
Quarter panel LH
Rear passenger RH seat back
Rear floor partition panel RH
H 3
HEADLIGHT CLEANER CONTROL RELAY
H 4
HEADLIGHT CLEANER MOTOR
T 7
HEADLIGHT CLEANER SW
DRIVER SIDE J/B ECU
Radiator side support LH
See Multiplex Communication System (J/B ECU) <2-22>