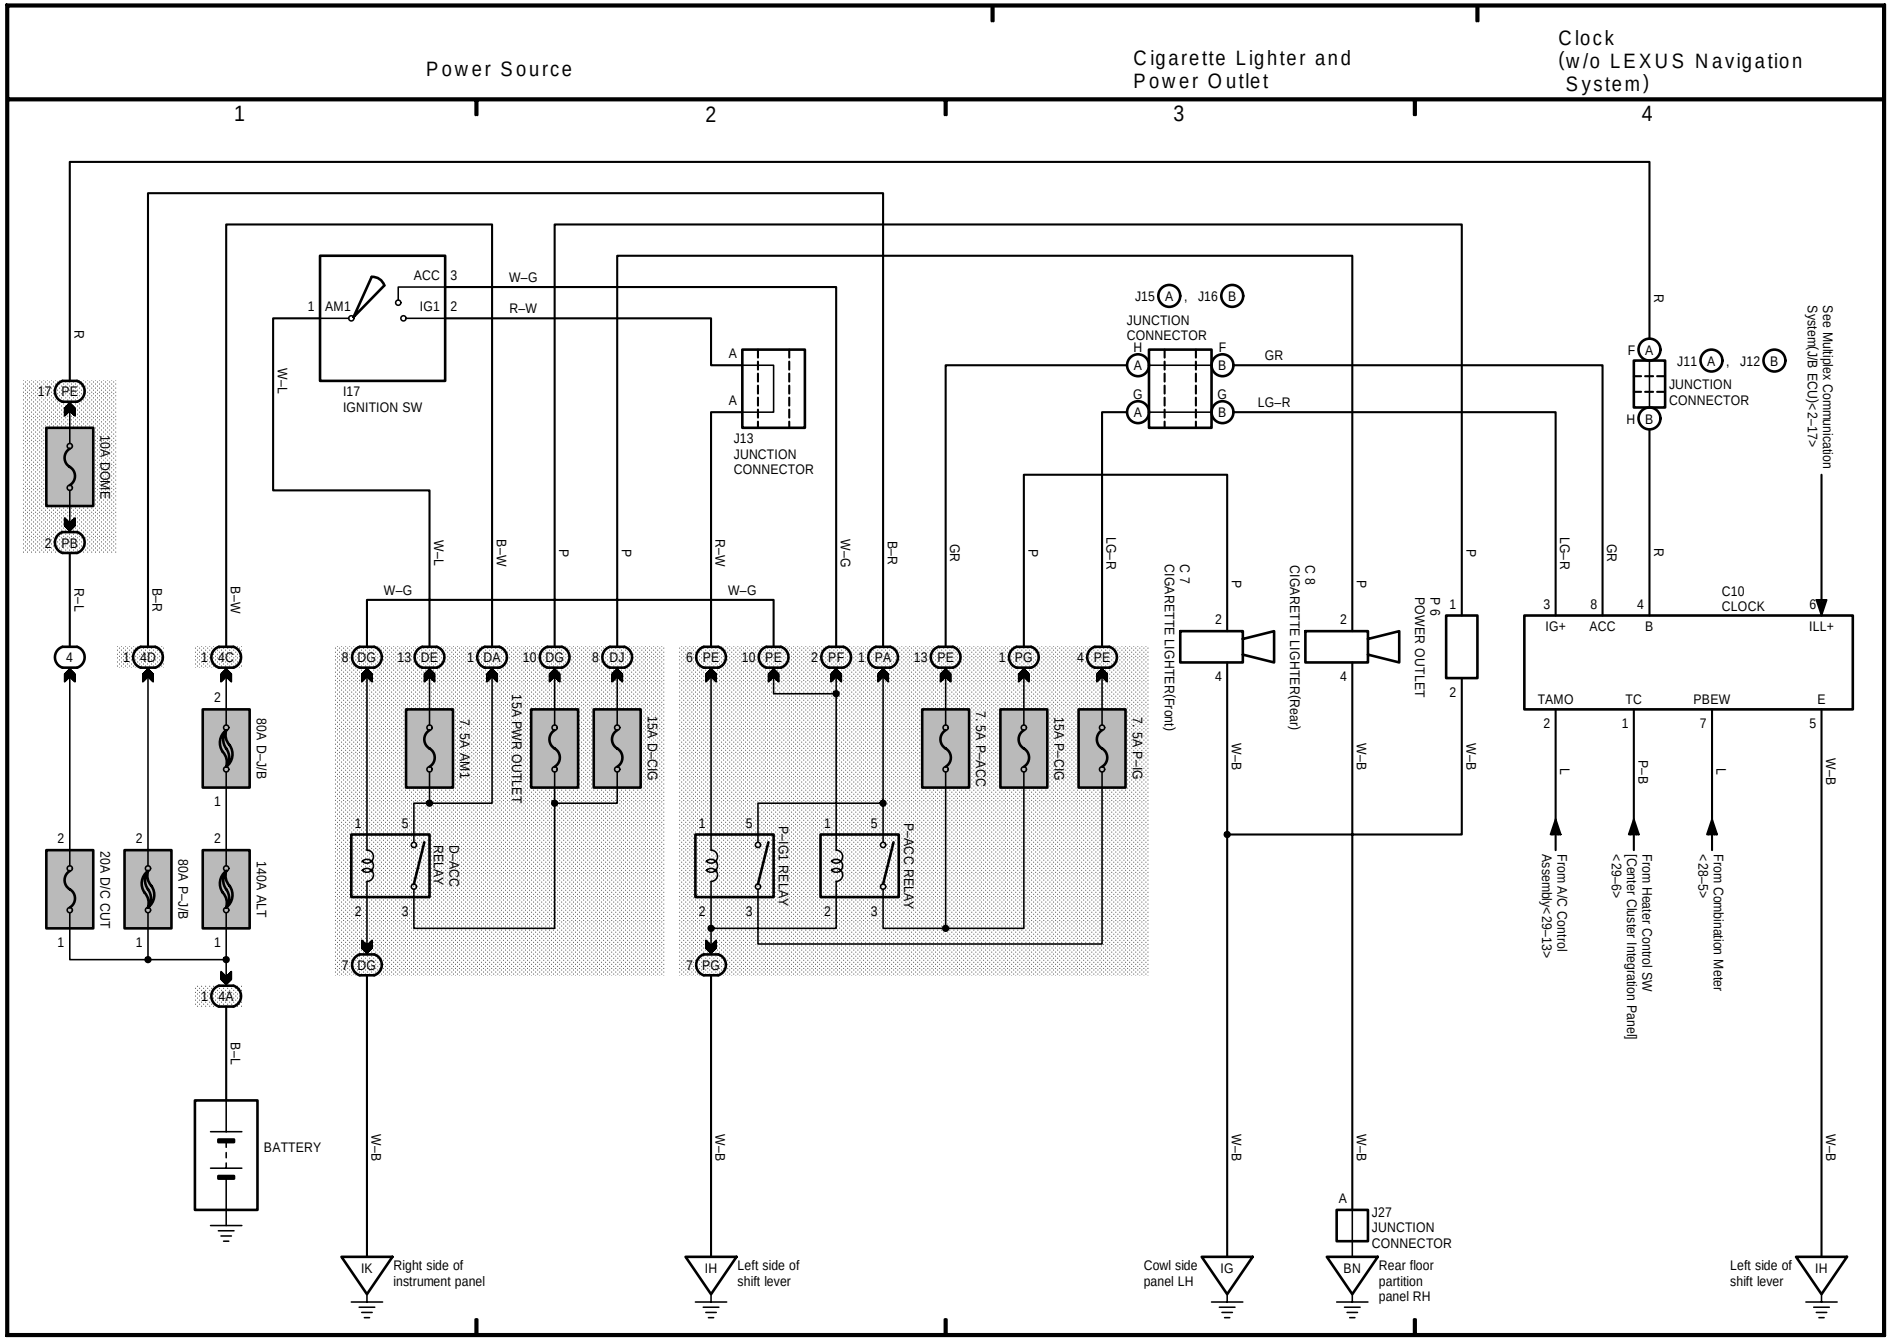
Power Source
Cigarette Lighter and Power Outlet
Clock (w/o LEXUS Navigation System)
1
2
3
4
10A DOME
17 PE
2 PB
R
R–L
4
20A D/C CUT
80A P–J/B
80A D–J/B
140A ALT
4A
B–L
BATTERY
B–R
B–W
4D
4C
I17 IGNITION SW
AM1
ACC
IG1
W–G
R–W
W–L
J13 JUNCTION CONNECTOR
J15 A, J16 B
JUNCTION CONNECTOR
GR
LG–R
7.5A AM1
15A PWR OUTLET
15A D–CIG
D–ACC RELAY
P–IG1 RELAY
P–ACC RELAY
7.5A P–ACC
15A P–CIG
7.5A P–IG
C 7 CIGARETTE LIGHTER(Front)
C 8 CIGARETTE LIGHTER(Rear)
P 6 POWER OUTLET
J11 A, J12 B
JUNCTION CONNECTOR
See Multiplex Communication System(J/B ECU<2–17>
C10 CLOCK
IG+
ACC
B
ILL+
TAMO
TC
PBEW
E
L
P–B
From A/C Control Assembly<29–13>
From Heater Control SW [Center Cluster Integration Panel]<29–6>
From Combination Meter<28–5>
J27 JUNCTION CONNECTOR
IK Right side of instrument panel
IH Left side of shift lever
IG Cowl side panel LH
BN Rear floor partition panel RH
IH Left side of shift lever