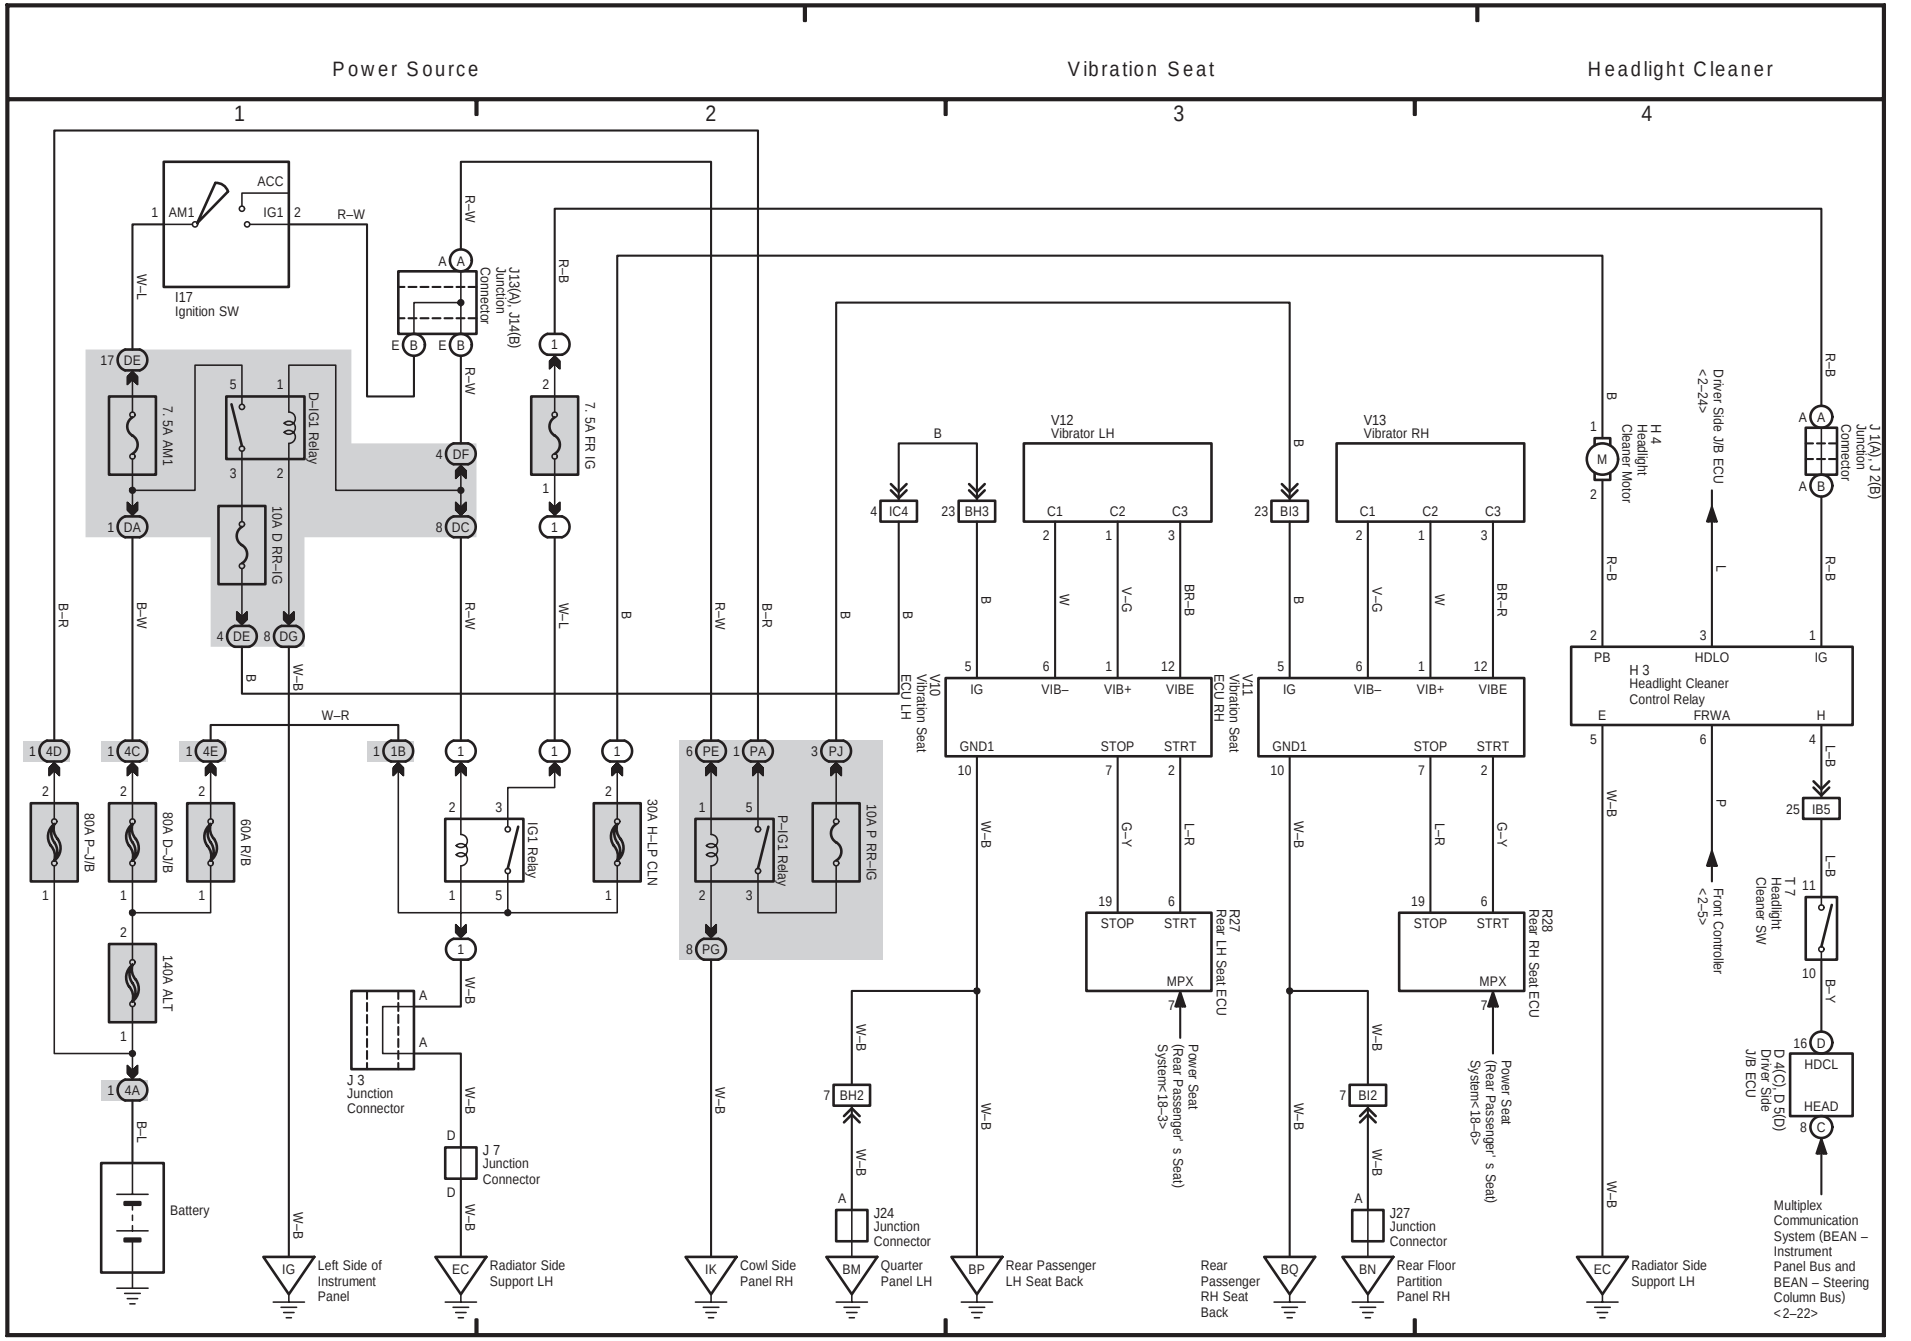
Power Source
Vibration Seat
Headlight Cleaner
1
2
3
4
I17 Ignition SW
ACC
AM1
IG1
R–W
J13(A), J14(B) Junction Connector
7.5A AM1
D–IG1 Relay
10A D RR–IG
7.5A FR IG
80A P–J/B
80A D–J/B
60A R/B
140A ALT
Battery
J 3 Junction Connector
J 7 Junction Connector
IG1 Relay
30A H–LP CLN
P–IG1 Relay
10A P RR–IG
V12 Vibrator LH
V13 Vibrator RH
V10 Vibration Seat ECU LH
V11 Vibration Seat ECU RH
R27 Rear LH Seat ECU
R28 Rear RH Seat ECU
Power Seat (Rear Passenger's Seat) System<18–3>
Power Seat (Rear Passenger's Seat) System<18–6>
J24 Junction Connector
J27 Junction Connector
H 4 Headlight Cleaner Motor
Driver Side J/B ECU <2–24>
J 1(A), J 2(B) Junction Connector
H 3 Headlight Cleaner Control Relay
Front Controller <2–5>
T 7 Headlight Cleaner SW
D 4(C), D 5(D) Driver Side J/B ECU
Multiplex Communication System (BEAN – Instrument Panel Bus and BEAN – Steering Column Bus) <2–22>
Left Side of Instrument Panel
Radiator Side Support LH
Cowl Side Panel RH
Quarter Panel LH
Rear Passenger LH Seat Back
Rear Passenger RH Seat Back
Rear Floor Partition Panel RH
Radiator Side Support LH