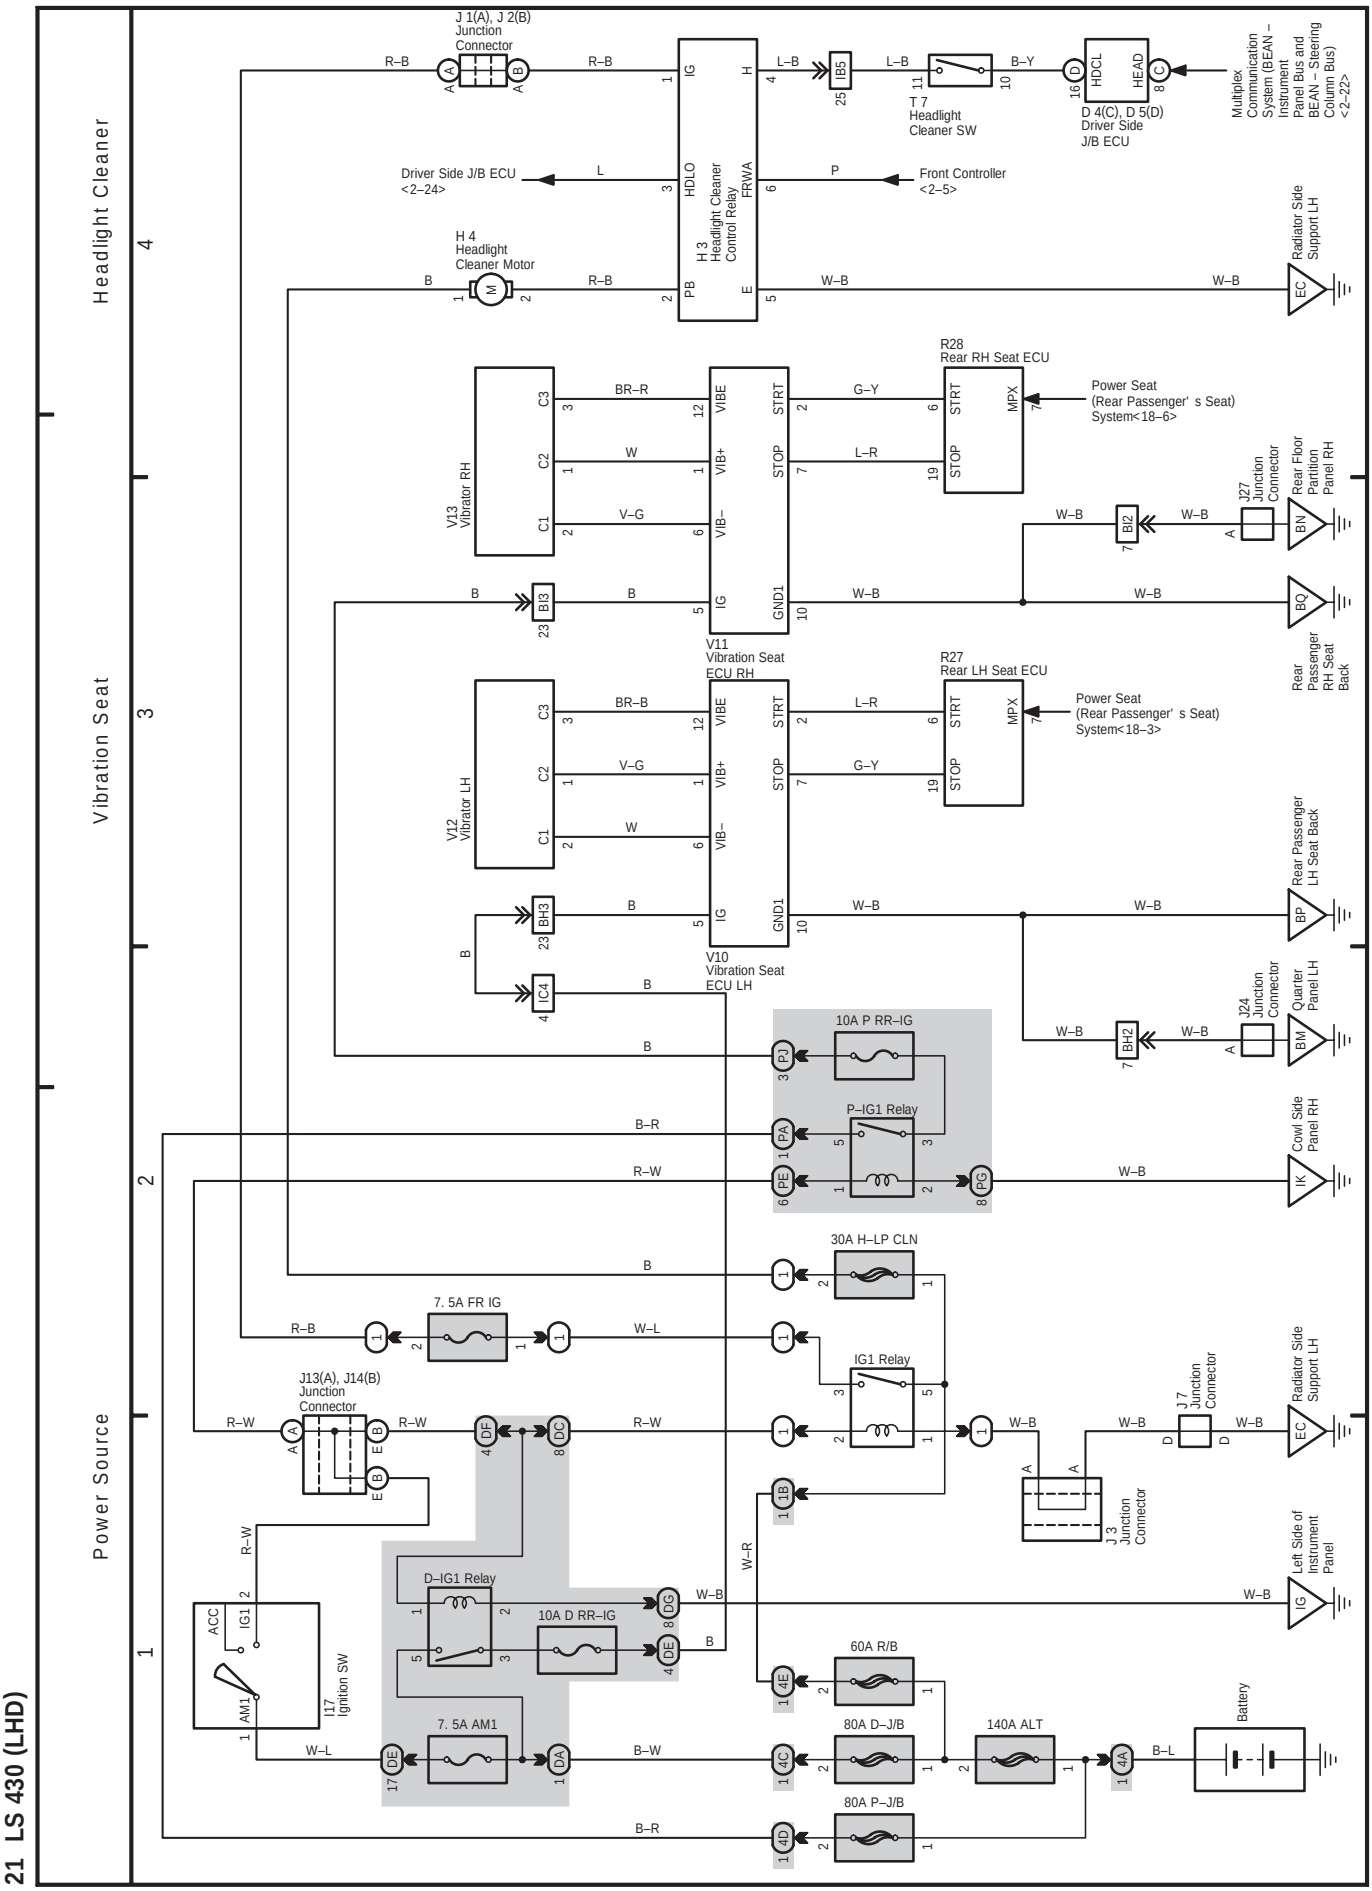
21 LS 430 (LHD)
Headlight Cleaner
Vibration Seat
Power Source
J 1(A), J 2(B) Junction Connector
H 3 Headlight Cleaner Control Relay
T 7 Headlight Cleaner SW
D 4(C), D 5(D) Driver Side J/B ECU
Multiplex Communication System (BEAN – Instrument Panel Bus and BEAN – Steering Column Bus) <2–22>
Driver Side J/B ECU <2–24>
Front Controller <2–5>
H 4 Headlight Cleaner Motor
Radiator Side Support LH
R28 Rear RH Seat ECU
Power Seat (Rear Passenger' s Seat) System<18–6>
V13 Vibrator RH
J27 Junction Connector
Rear Floor Partition Panel RH
V11 Vibration Seat ECU RH
Rear Passenger RH Seat Back
R27 Rear LH Seat ECU
Power Seat (Rear Passenger' s Seat) System<18–3>
V12 Vibrator LH
Rear Passenger LH Seat Back
V10 Vibration Seat ECU LH
J24 Junction Connector
Quarter Panel LH
10A P RR–IG
P–IG1 Relay
Cowl Side Panel RH
30A H–LP CLN
7. 5A FR IG
IG1 Relay
J13(A), J14(B) Junction Connector
J 7 Junction Connector
J 3 Junction Connector
Left Side of Instrument Panel
D–IG1 Relay
10A D RR–IG
I17 Ignition SW
60A R/B
7. 5A AM1
80A D–J/B
140A ALT
Battery
80A P–J/B