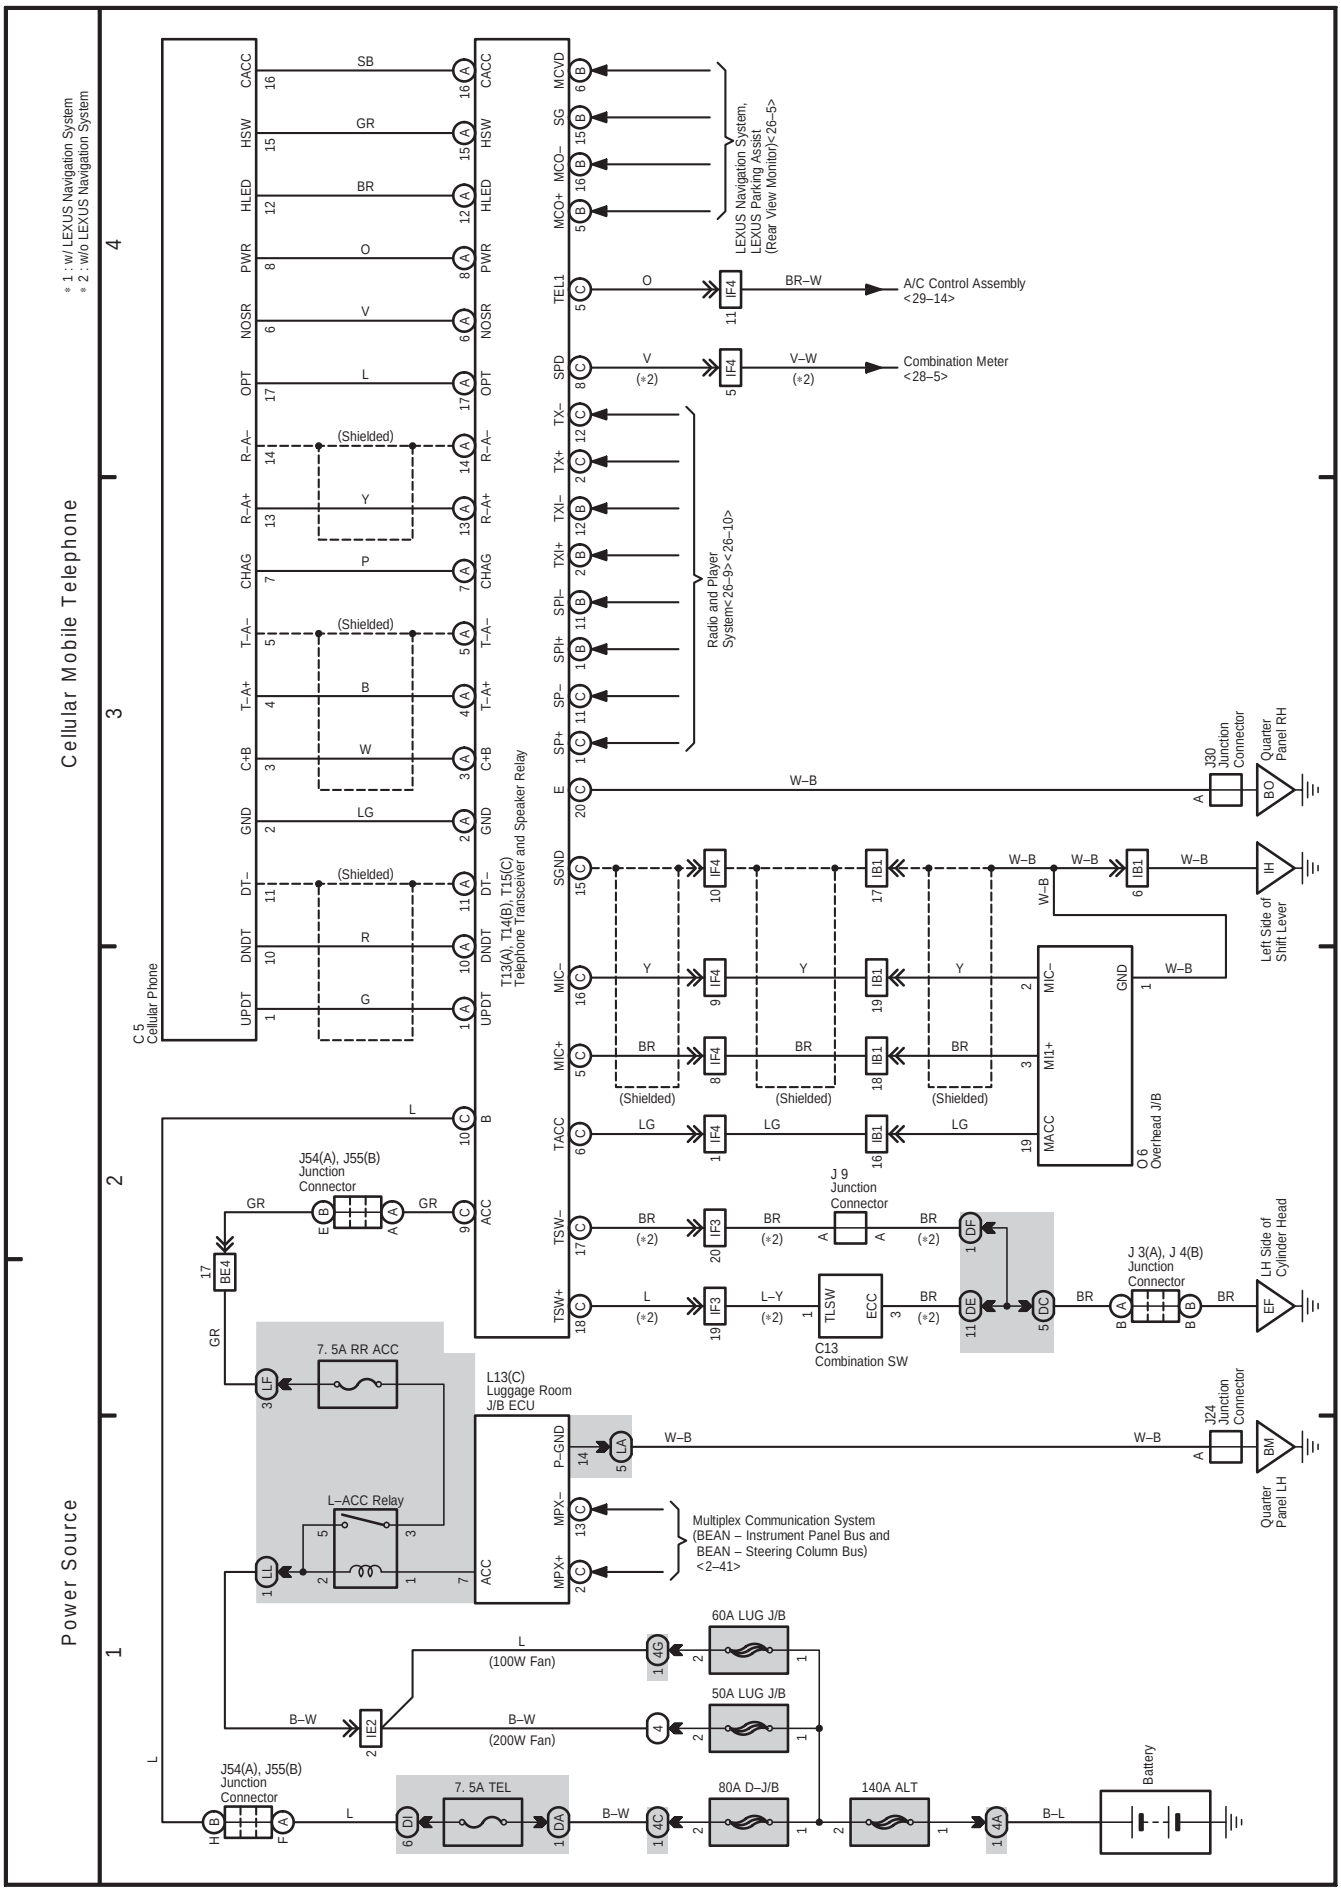
24 LS 430 (RHD)
Power Source
Cellular Mobile Telephone
* 1 : w/ LEXUS Navigation System
* 2 : w/o LEXUS Navigation System
C 5
Cellular Phone
T13(A), T14(B), T15(C)
Telephone Transceiver and Speaker Relay
LEXUS Navigation System,
LEXUS Parking Assist
(Rear View Monitor)<26–5>
A/C Control Assembly
<29–14>
Combination Meter
<28–5>
Radio and Player
System<26–9><26–10>
J30
Junction
Connector
Quarter
Panel RH
Left Side of
Shift Lever
O 6
Overhead J/B
J 9
Junction
Connector
C13
Combination SW
J 3(A), J 4(B)
Junction
Connector
LH Side of
Cylinder Head
J54(A), J55(B)
Junction
Connector
7. 5A RR ACC
L13(C)
Luggage Room
J/B ECU
J24
Junction
Connector
Quarter
Panel LH
L–ACC Relay
Multiplex Communication System
(BEAN – Instrument Panel Bus and
BEAN – Steering Column Bus)
<2–41>
60A LUG J/B
(100W Fan)
50A LUG J/B
(200W Fan)
7. 5A TEL
80A D–J/B
140A ALT
Battery