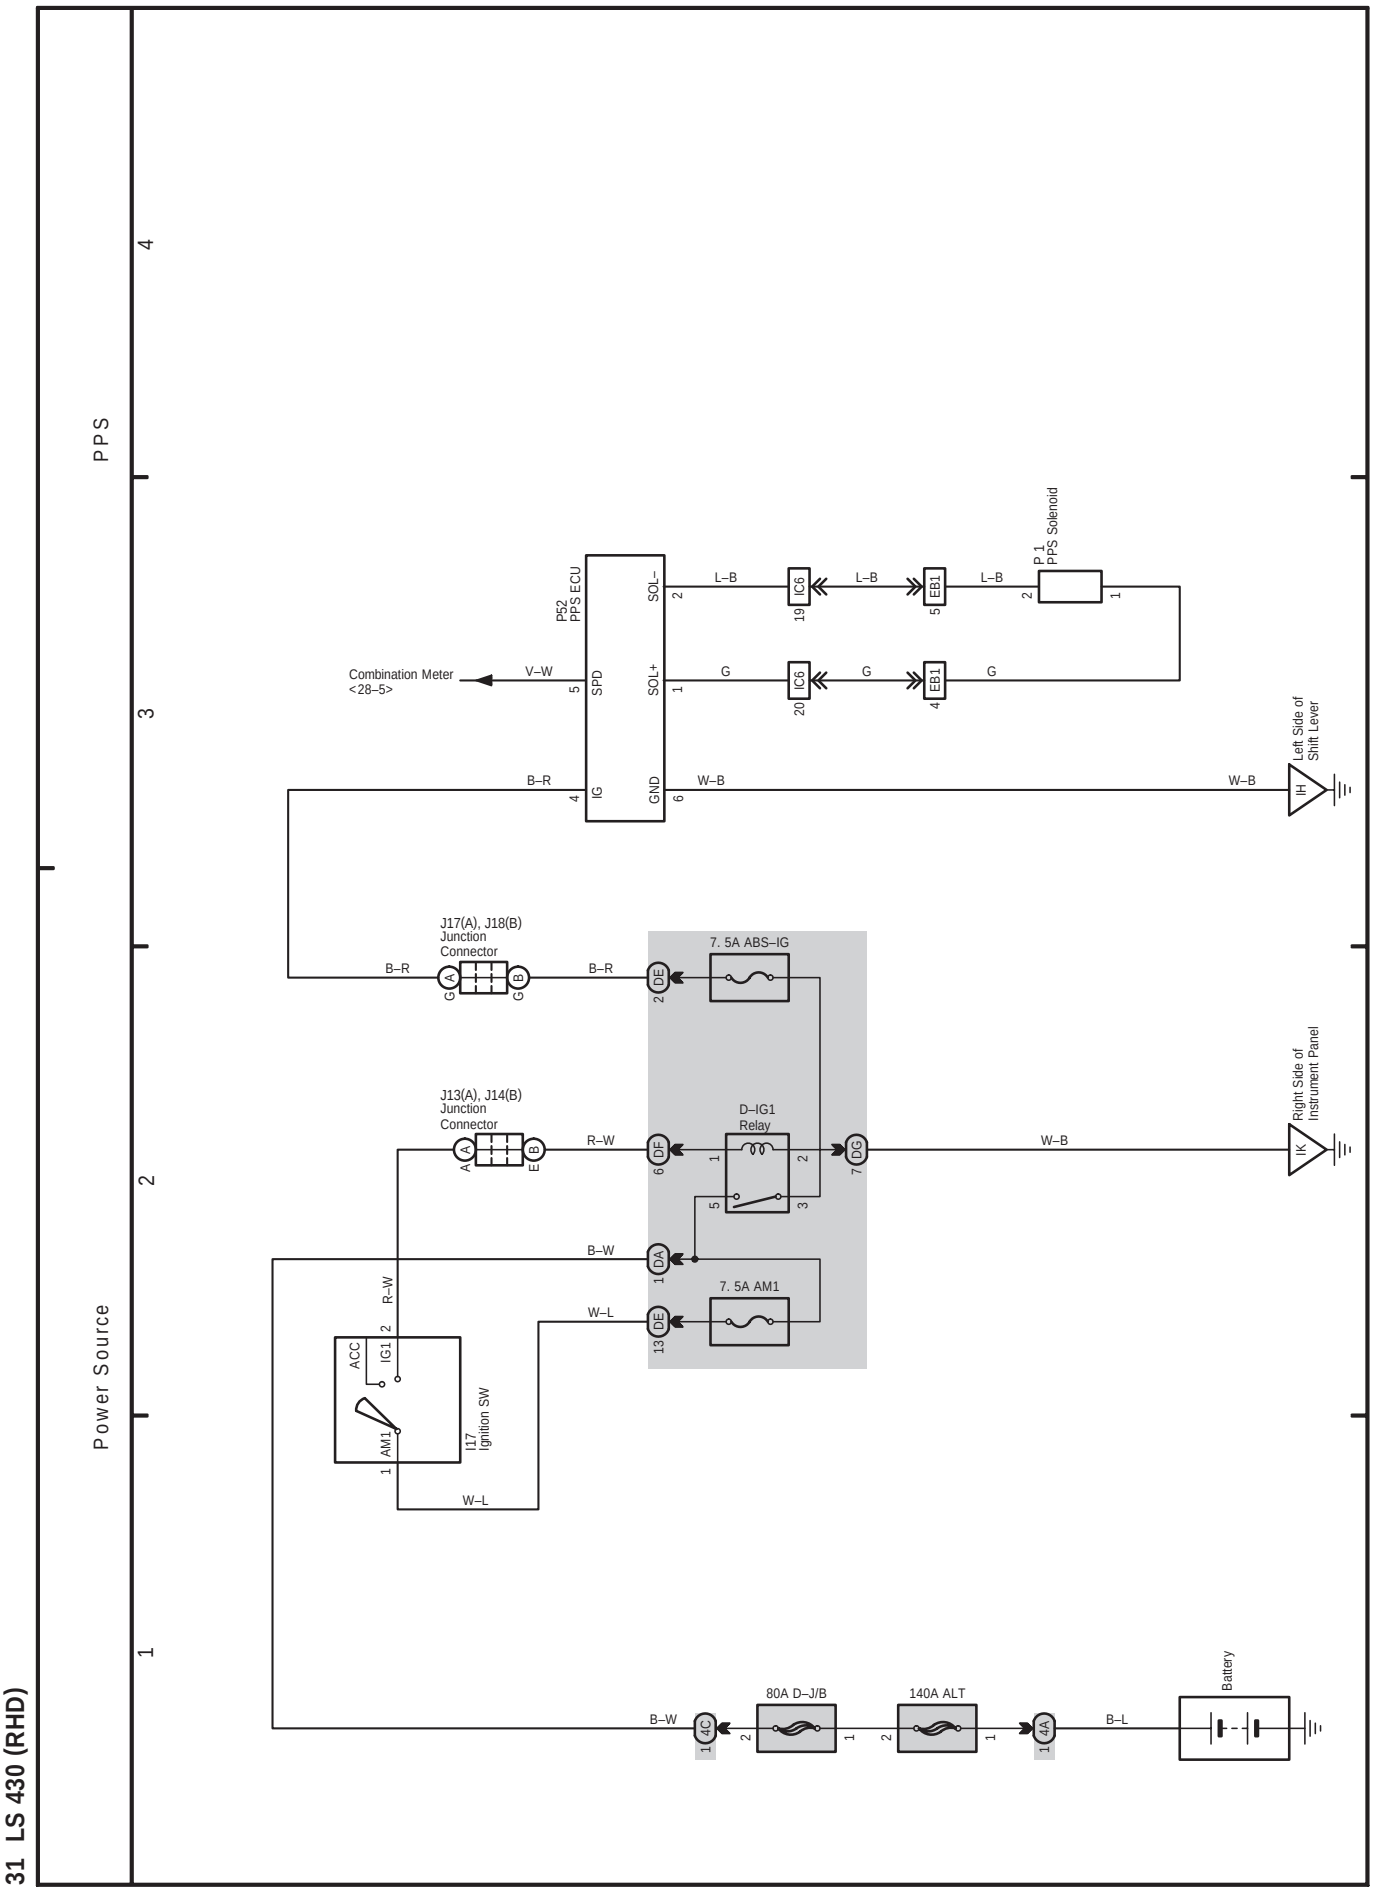
PPS
Power Source
1
2
3
4
P52
PPS ECU
SOL–
SPD
SOL+
IG
GND
Combination Meter
<28–5>
V–W
L–B
G
B–R
W–B
IC6
EB1
P1
PPS Solenoid
Left Side of
Shift Lever
IH
J17(A), J18(B)
Junction
Connector
7. 5A ABS–IG
J13(A), J14(B)
Junction
Connector
D–IG1
Relay
R–W
B–W
W–L
7. 5A AM1
Right Side of
Instrument Panel
IK
ACC
IG1
AM1
I17
Ignition SW
80A D–J/B
140A ALT
Battery
B–L

31 LS 430 (RHD)