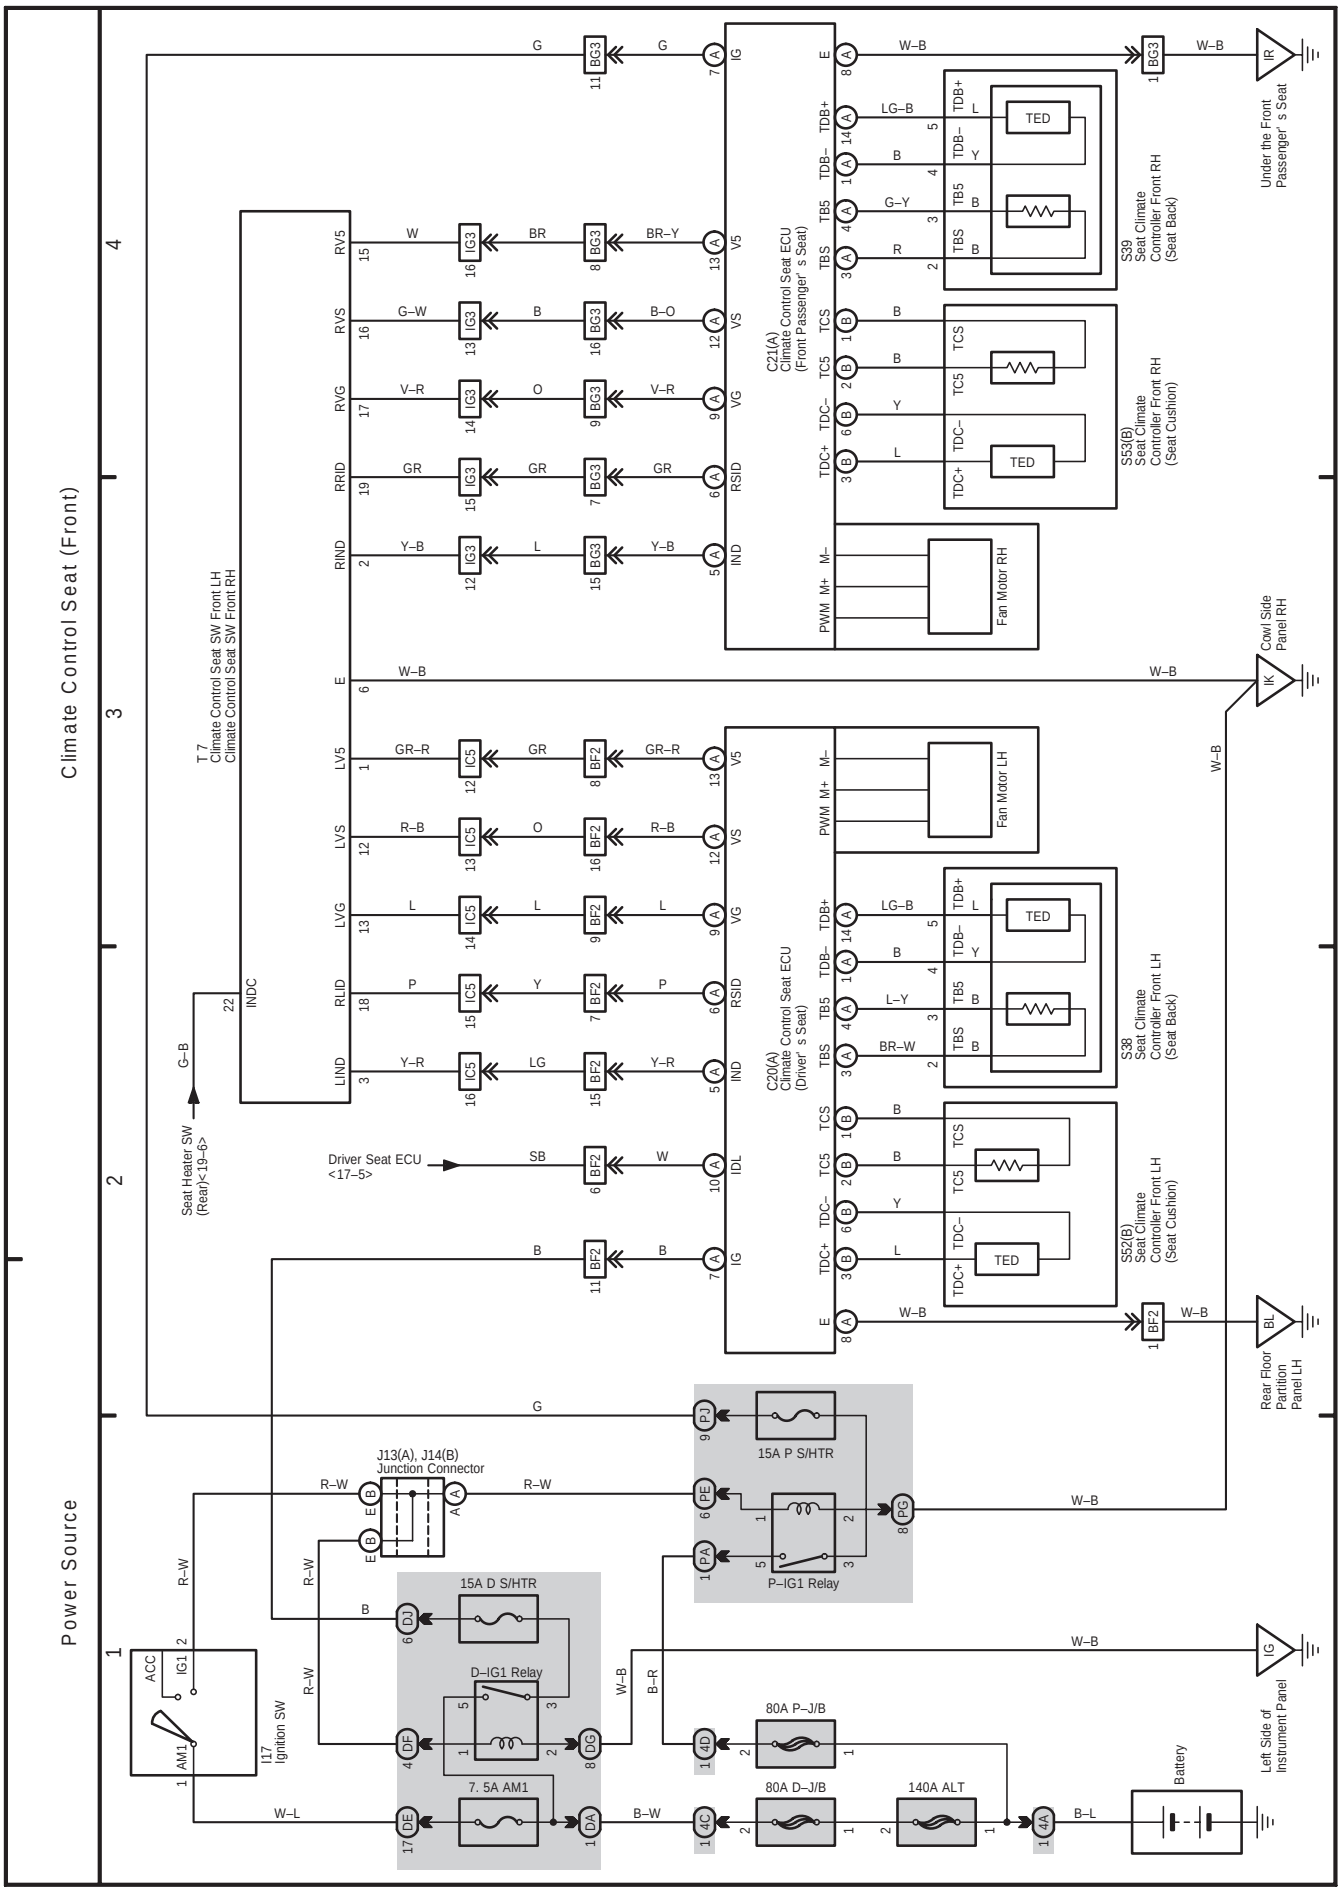
Climate Control Seat (Front)
Power Source
T 7
Climate Control Seat SW Front LH
Climate Control Seat SW Front RH
C21(A)
Climate Control Seat ECU
(Front Passenger' s Seat)
C20(A)
Climate Control Seat ECU
(Driver' s Seat)
S39
Seat Climate
Controller Front RH
(Seat Back)
S53(B)
Seat Climate
Controller Front RH
(Seat Cushion)
S38
Seat Climate
Controller Front LH
(Seat Back)
S52(B)
Seat Climate
Controller Front LH
(Seat Cushion)
TED
Fan Motor RH
Fan Motor LH
Under the Front
Passenger' s Seat
Cowl Side
Panel RH
Rear Floor
Partition
Panel LH
Left Side of
Instrument Panel
Seat Heater SW
(Rear)<19–6>
Driver Seat ECU
<17–5>
J13(A), J14(B)
Junction Connector
15A P S/HTR
P–IG1 Relay
15A D S/HTR
D–IG1 Relay
7. 5A AM1
80A P–J/B
80A D–J/B
140A ALT
Battery
I17
Ignition SW
ACC
IG1
AM1