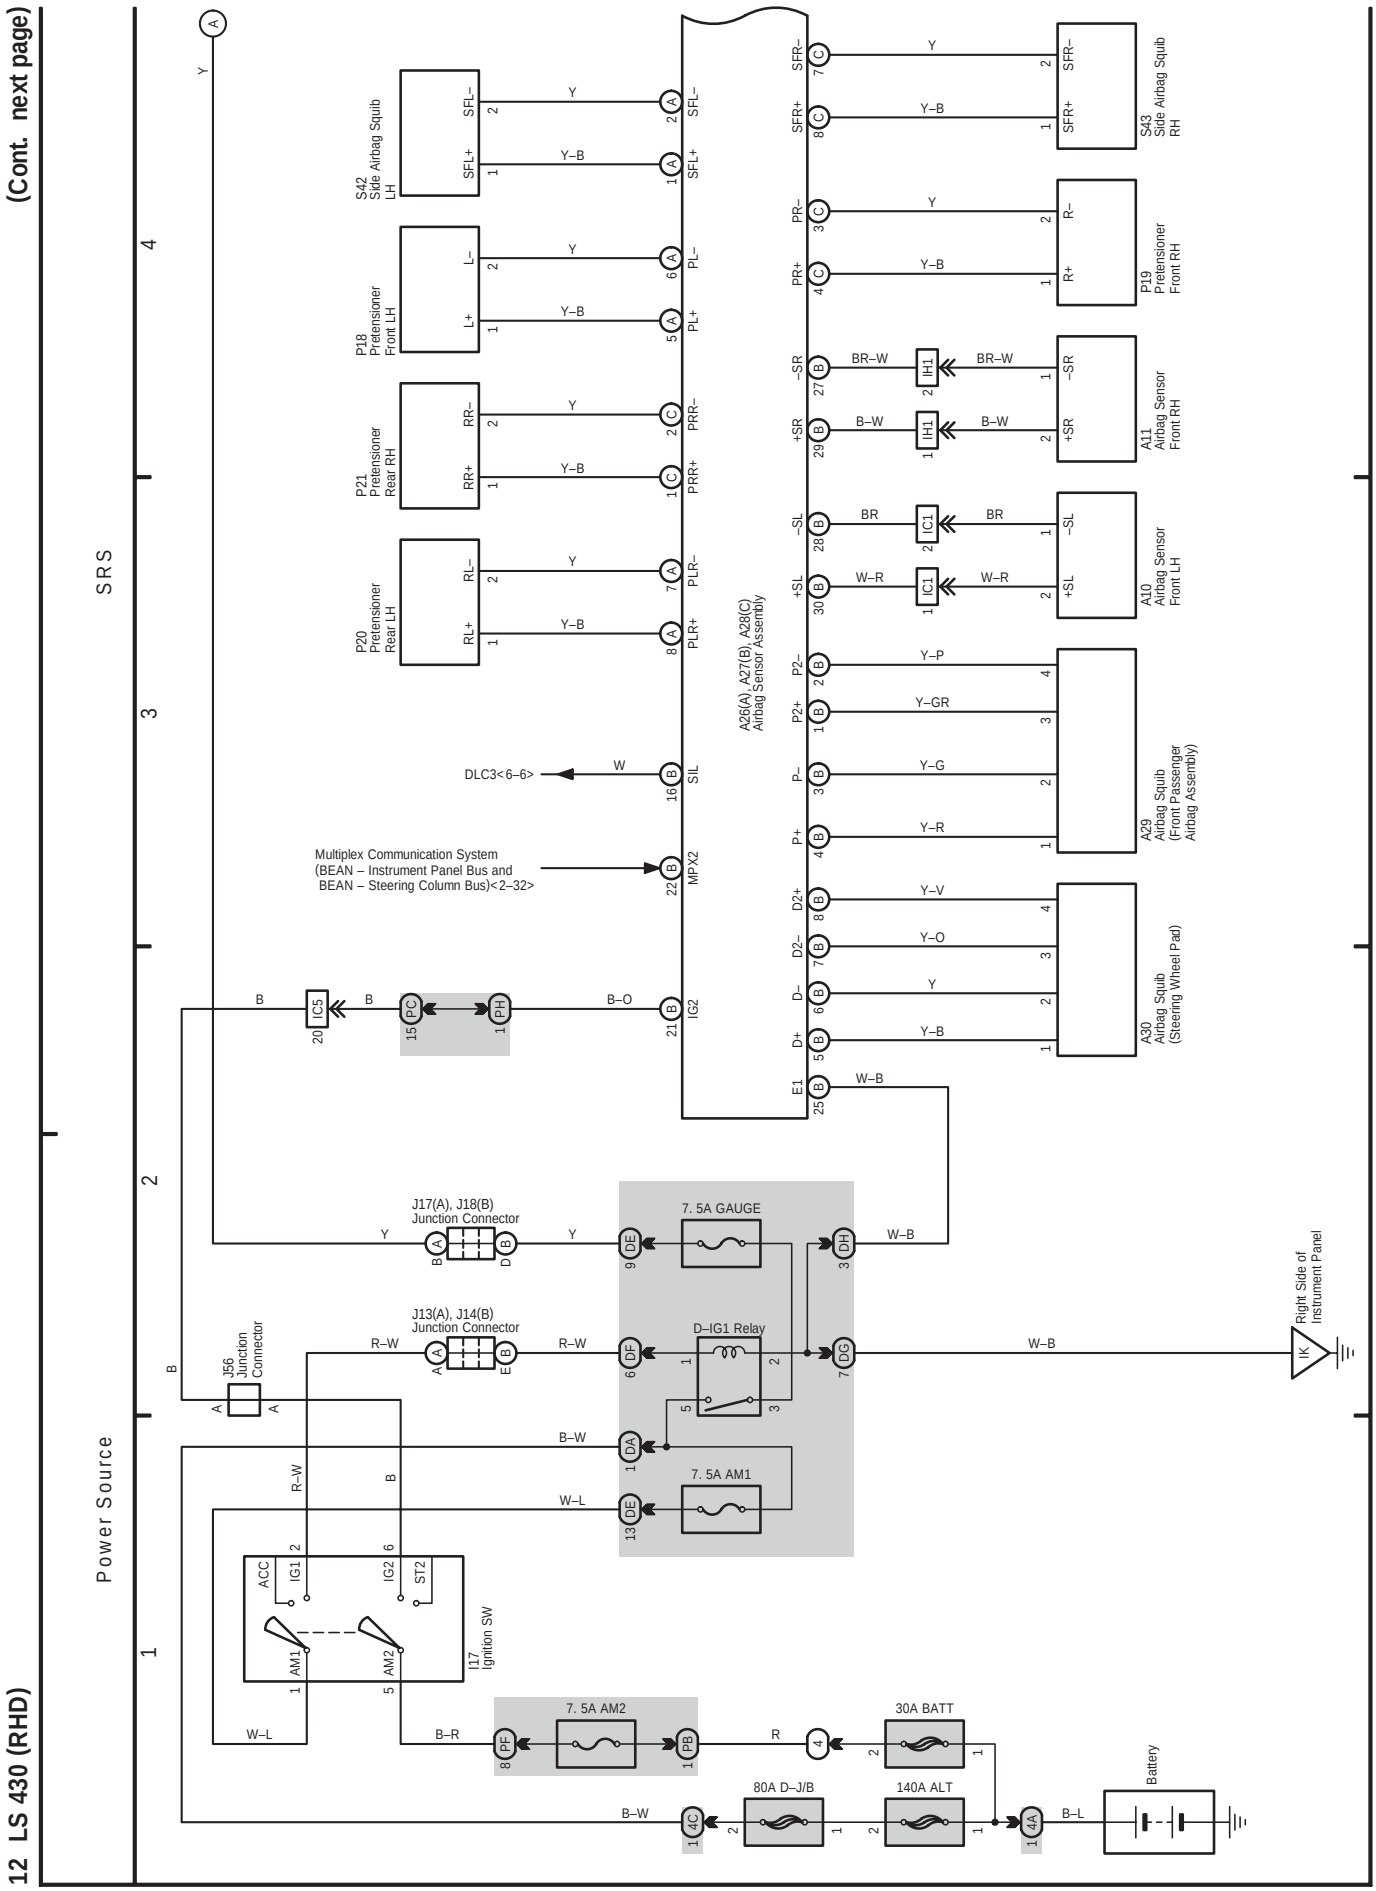
(Cont. next page)
SRS
Power Source
S42 Side Airbag Squib LH
P18 Pretensioner Front LH
P21 Pretensioner Rear RH
P20 Pretensioner Rear LH
S43 Side Airbag Squib RH
P19 Pretensioner Front RH
A11 Airbag Sensor Front RH
A10 Airbag Sensor Front LH
A29 Airbag Squib (Front Passenger Airbag Assembly)
A30 Airbag Squib (Steering Wheel Pad)
A26(A), A27(B), A28(C) Airbag Sensor Assembly
DLC3<6–6>
Multiplex Communication System (BEAN – Instrument Panel Bus and BEAN – Steering Column Bus)<2–32>
J17(A), J18(B) Junction Connector
J13(A), J14(B) Junction Connector
J56 Junction Connector
7. 5A GAUGE
D–IG1 Relay
7. 5A AM1
7. 5A AM2
30A BATT
80A D–J/B
140A ALT
Battery
I17 Ignition SW
Right Side of Instrument Panel
12 LS 430 (RHD)

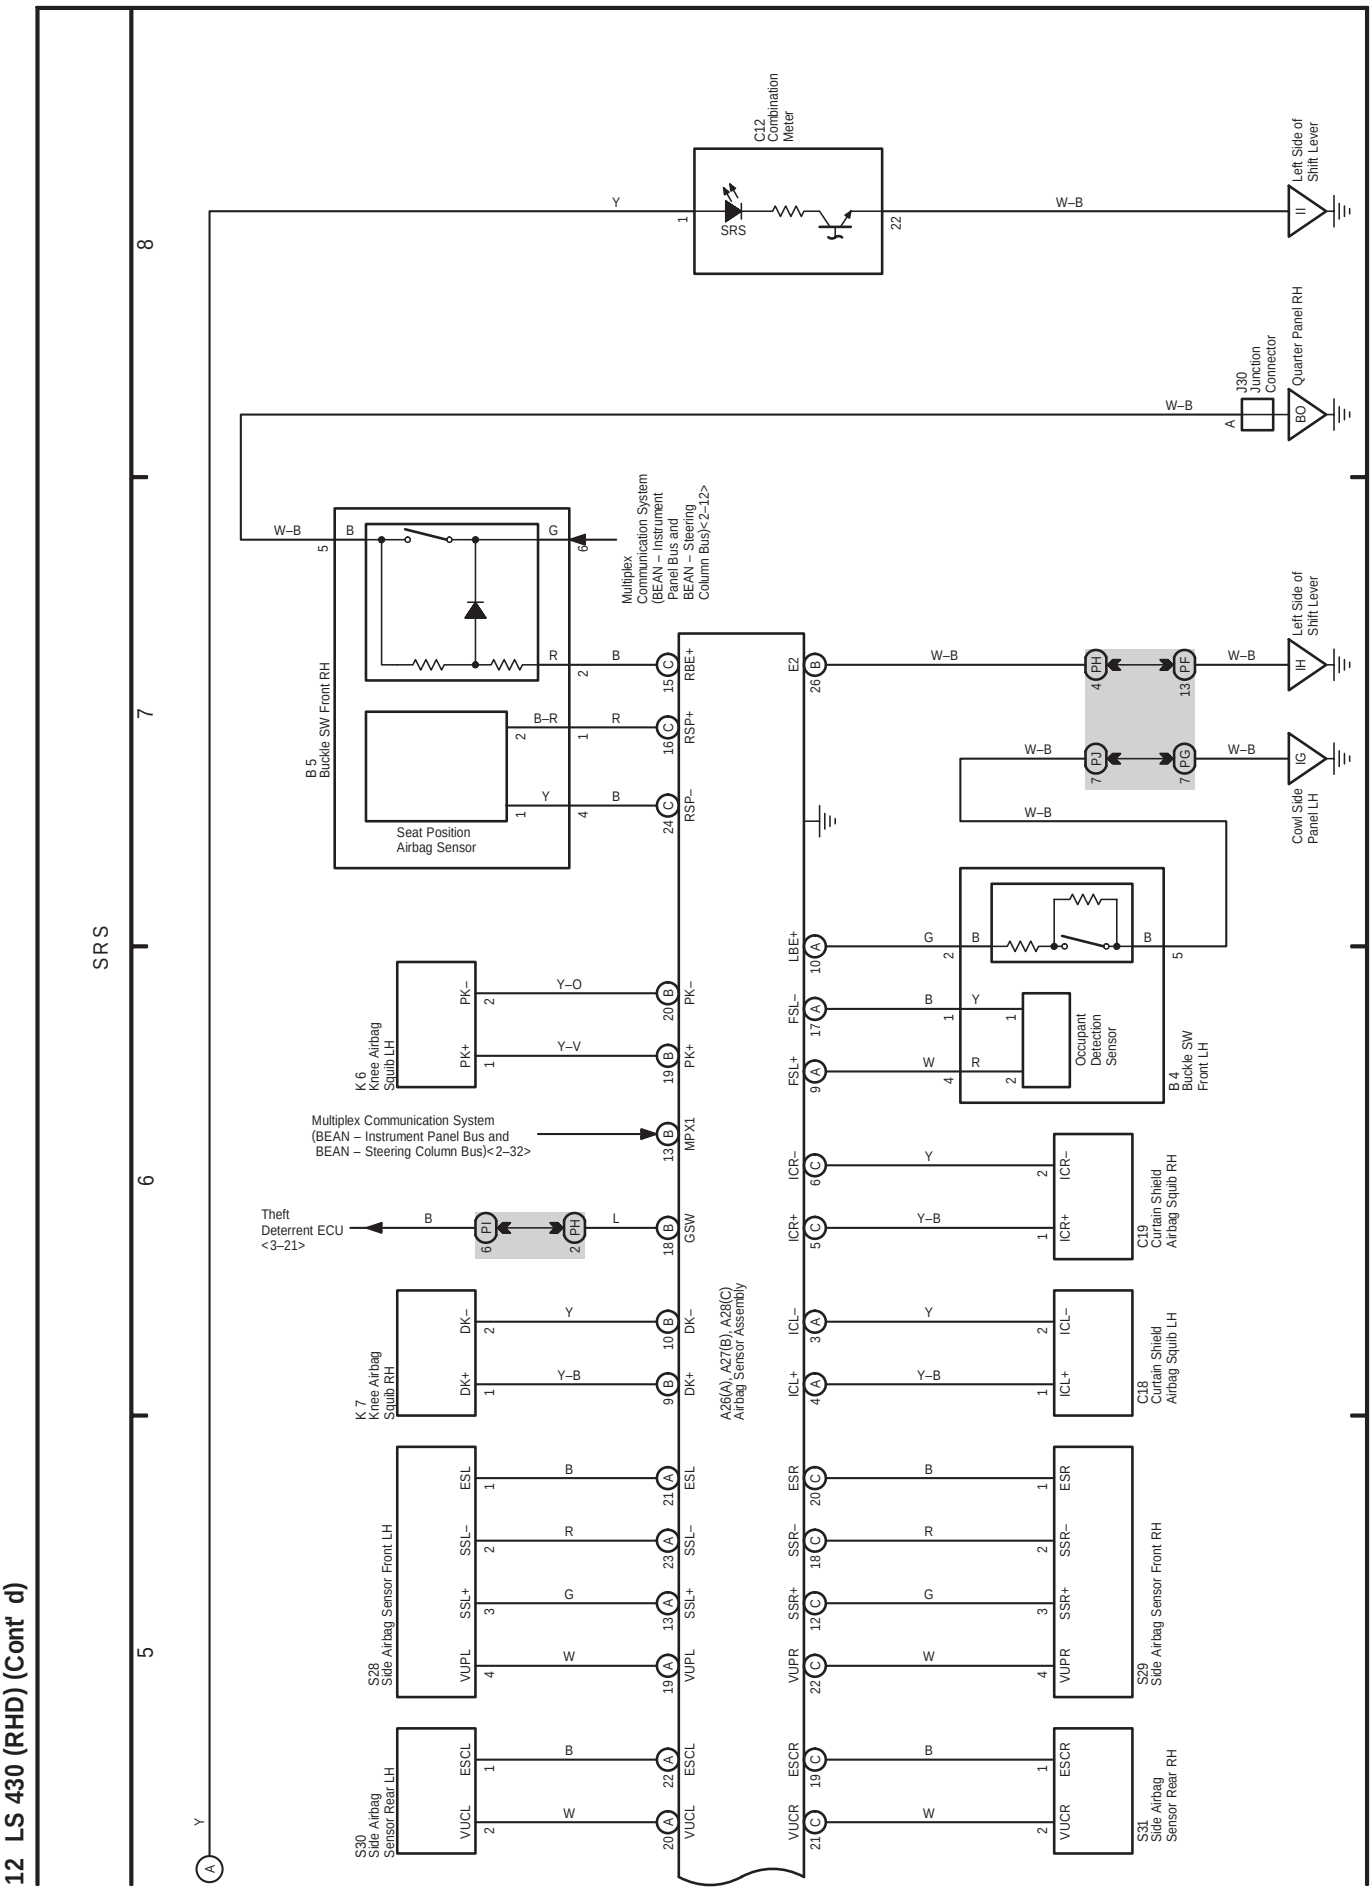
12 LS 430 (RHD) (Cont' d)
SRS
C12 Combination Meter
SRS
Left Side of Shift Lever
J30 Junction Connector
Quarter Panel RH
B 5 Buckle SW Front RH
Seat Position Airbag Sensor
Multiplex Communication System (BEAN – Instrument Panel Bus and BEAN – Steering Column Bus)<2–12>
Cowl Side Panel LH
K 6 Knee Airbag Squib LH
Multiplex Communication System (BEAN – Instrument Panel Bus and BEAN – Steering Column Bus)<2–32>
Theft Deterrent ECU <3–21>
K 7 Knee Airbag Squib RH
A26(A), A27(B), A28(C) Airbag Sensor Assembly
Occupant Detection Sensor
B 4 Buckle SW Front LH
C19 Curtain Shield Airbag Squib RH
C18 Curtain Shield Airbag Squib LH
S28 Side Airbag Sensor Front LH
S29 Side Airbag Sensor Front RH
S30 Side Airbag Sensor Rear LH
S31 Side Airbag Sensor Rear RH