16 LS 430 (RHD)

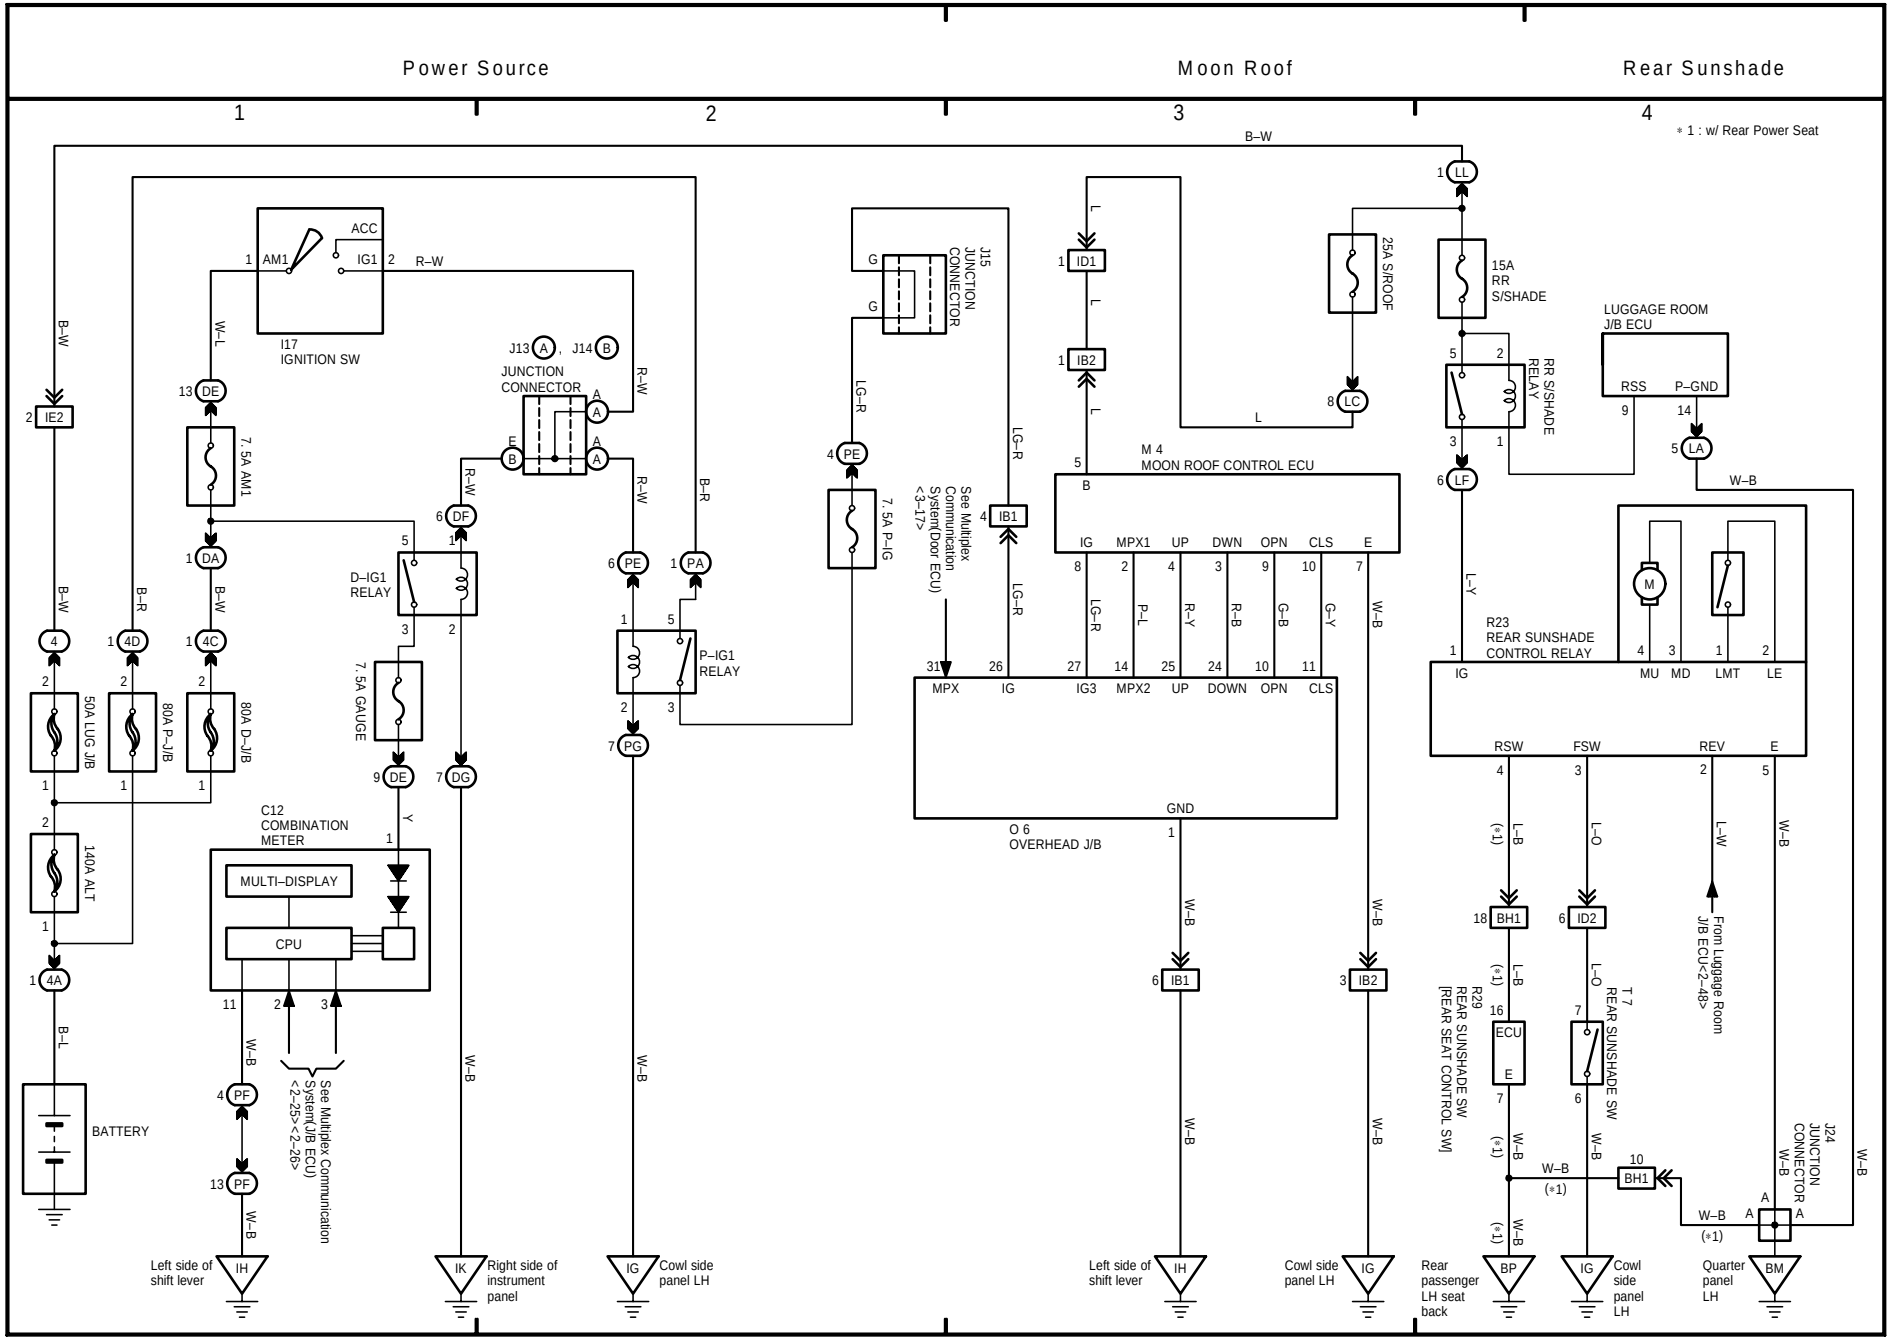
Power Source
Moon Roof
Rear Sunshade
1
2
3
4
* 1 : w/ Rear Power Seat
I17
IGNITION SW
ACC
AM1
IG1
7. 5A AM1
50A LUG J/B
80A P–J/B
80A D–J/B
140A ALT
BATTERY
D–IG1
RELAY
7. 5A GAUGE
P–IG1
RELAY
C12
COMBINATION
METER
MULTI–DISPLAY
CPU
See Multiplex Communication System(J/B ECU) <2–25> <2–26>
JUNCTION
CONNECTOR
J15
JUNCTION
CONNECTOR
7. 5A P–IG
See Multiplex Communication System(Door ECU) <3–17>
M 4
MOON ROOF CONTROL ECU
IG
MPX1
UP
DWN
OPN
CLS
E
MPX
IG3
MPX2
GND
O 6
OVERHEAD J/B
25A S/ROOF
15A
RR
S/SHADE
RR S/SHADE
RELAY
LUGGAGE ROOM
J/B ECU
RSS
P–GND
R23
REAR SUNSHADE
CONTROL RELAY
MU
MD
LMT
LE
RSW
FSW
REV
From Luggage Room J/B ECU<2–48>
R29
REAR SUNSHADE SW
[REAR SEAT CONTROL SW]
T 7
REAR SUNSHADE SW
J24
JUNCTION
CONNECTOR
Left side of shift lever
Right side of instrument panel
Cowl side panel LH
Rear passenger LH seat back
Quarter panel LH