LOCATION

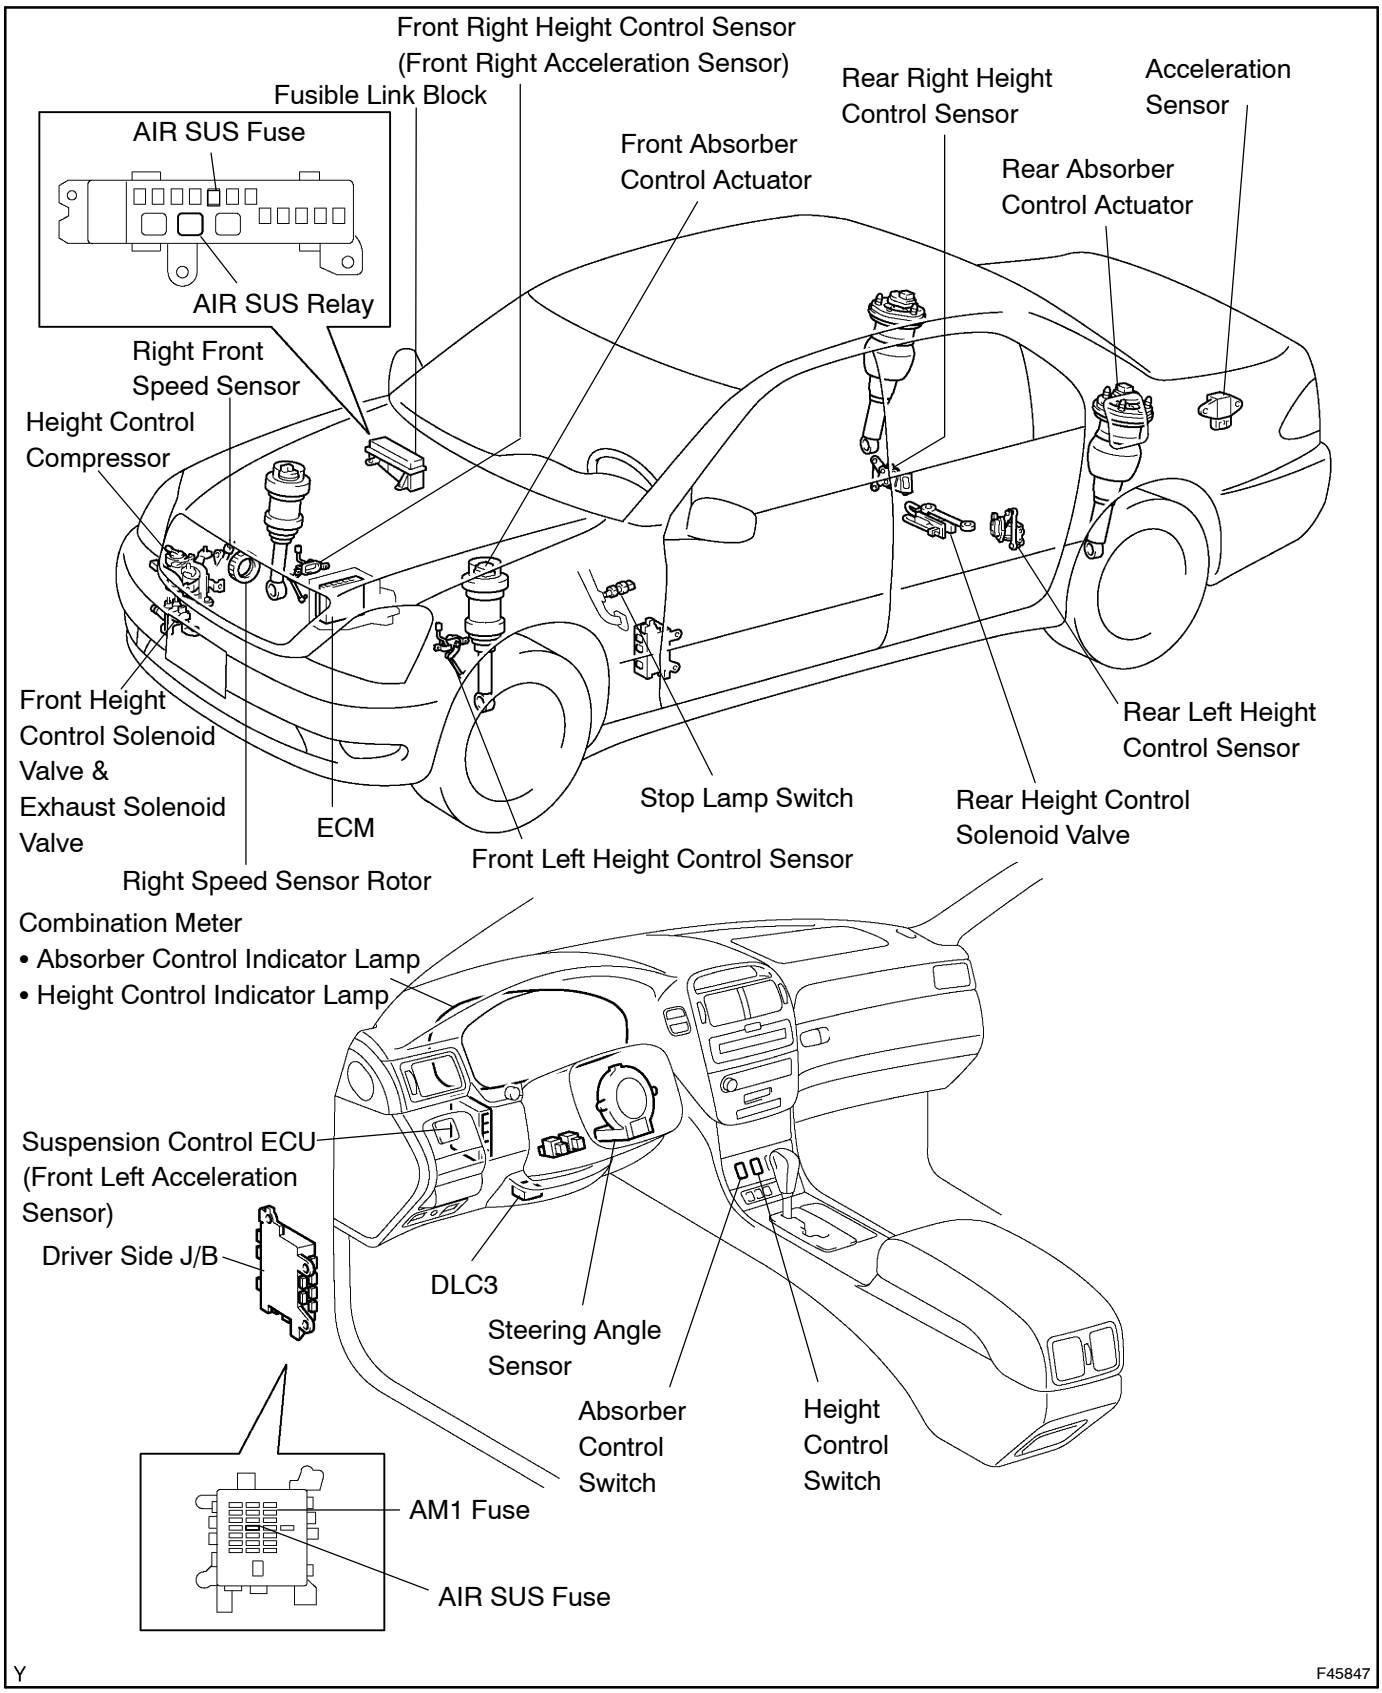
Front Right Height Control Sensor
(Front Right Acceleration Sensor)
Fusible Link Block
AIR SUS Fuse
AIR SUS Relay
Rear Right Height
Control Sensor
Acceleration
Sensor
Front Absorber
Control Actuator
Rear Absorber
Control Actuator
Right Front
Speed Sensor
Height Control
Compressor
Front Height
Control Solenoid
Valve &
Exhaust Solenoid
Valve
ECM
Right Speed Sensor Rotor
Front Left Height Control Sensor
Stop Lamp Switch
Rear Height Control
Solenoid Valve
Rear Left Height
Control Sensor
Combination Meter
• Absorber Control Indicator Lamp
• Height Control Indicator Lamp
Suspension Control ECU
(Front Left Acceleration
Sensor)
Driver Side J/B
DLC3
Steering Angle
Sensor
Absorber
Control
Switch
Height
Control
Switch
AM1 Fuse
AIR SUS Fuse
Y
F45847