05HPX–01

LOCATION

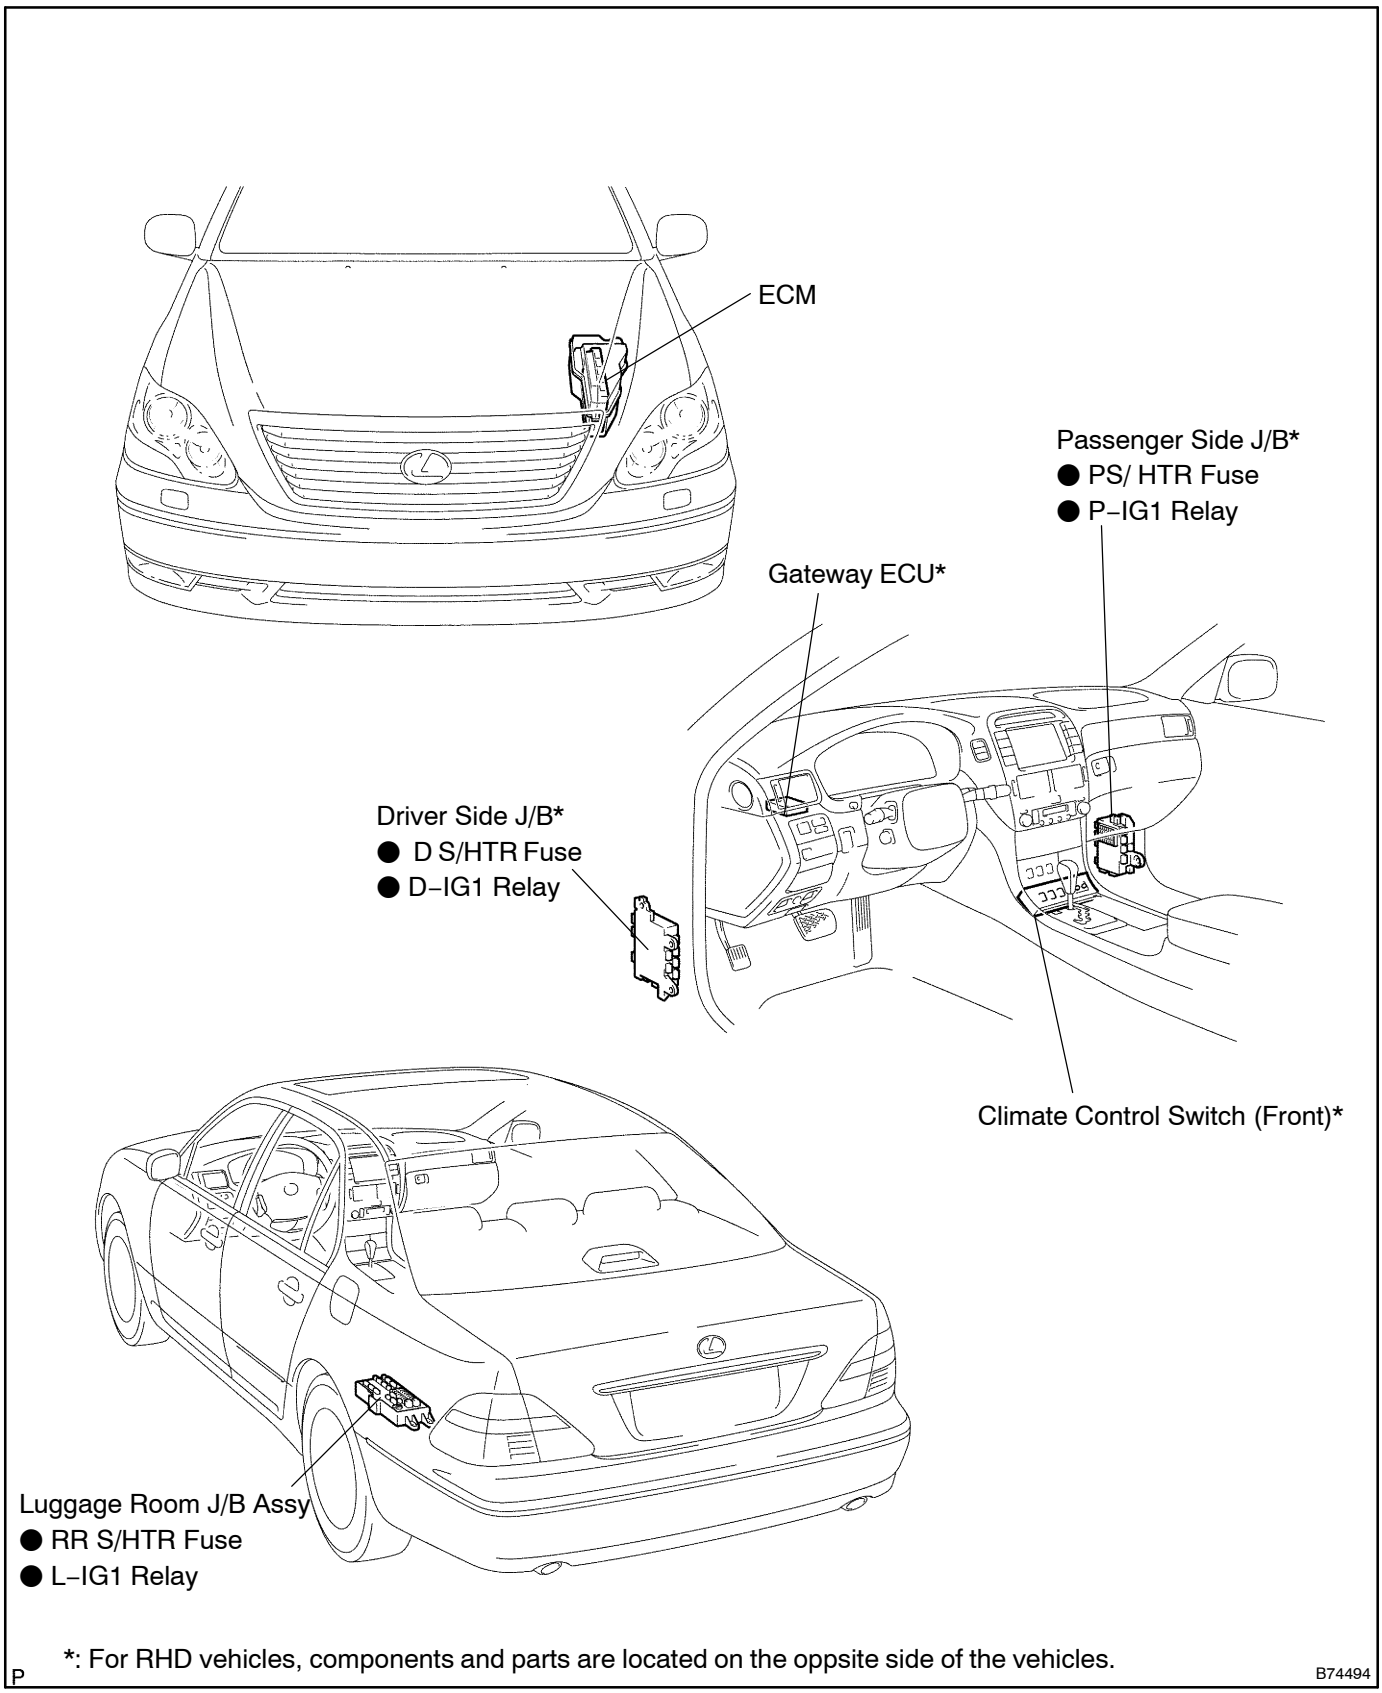

*: For RHD vehicles, components and parts are located on the oppsite side of the vehicles.

P

B74494

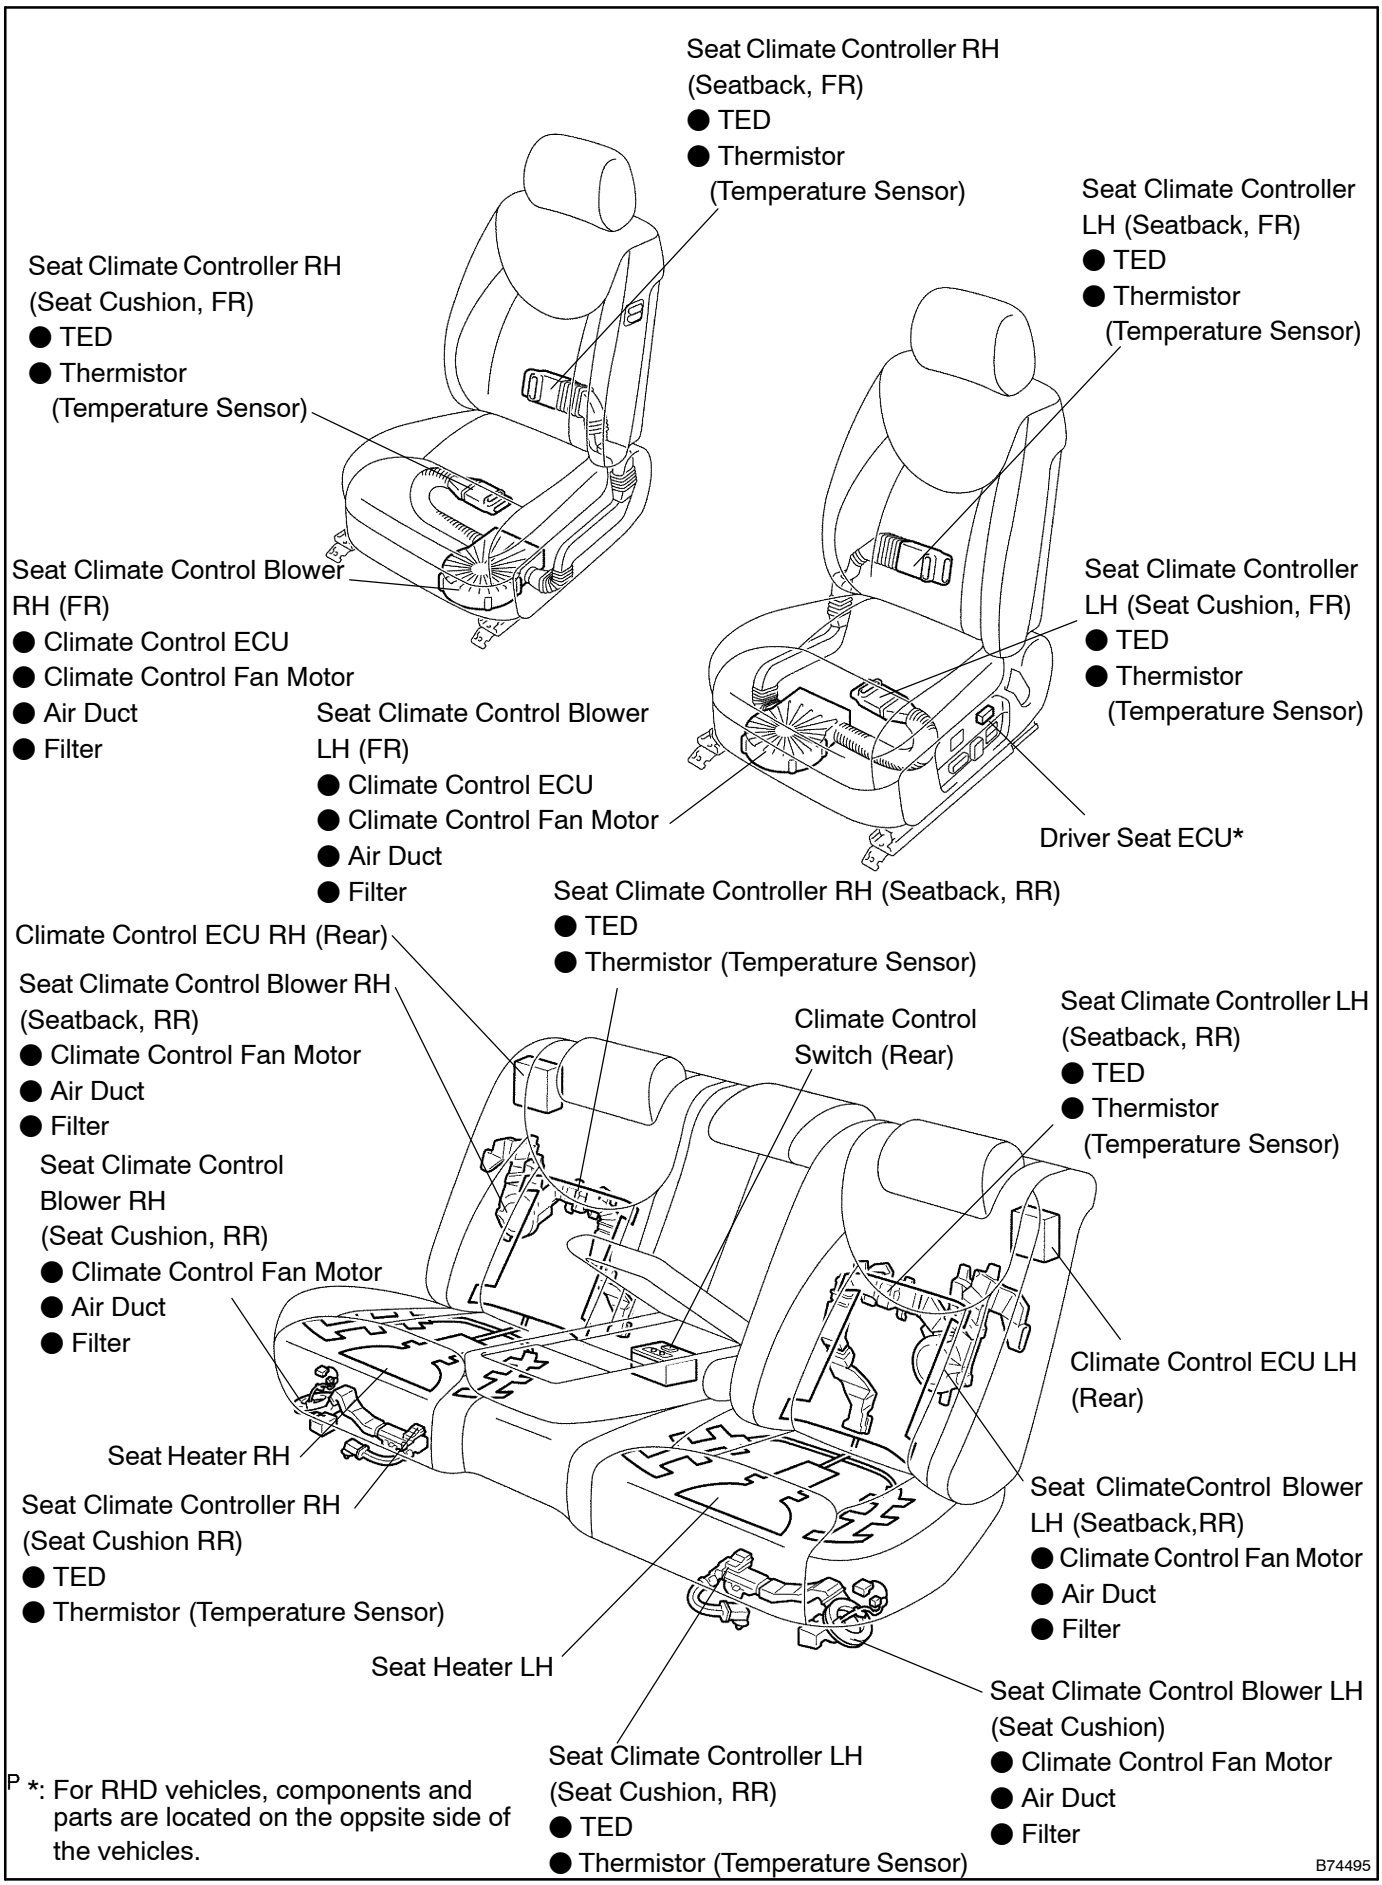

P *: For RHD vehicles, components and parts are located on the oppsite side of the vehicles.