LOCATION

054G5–02

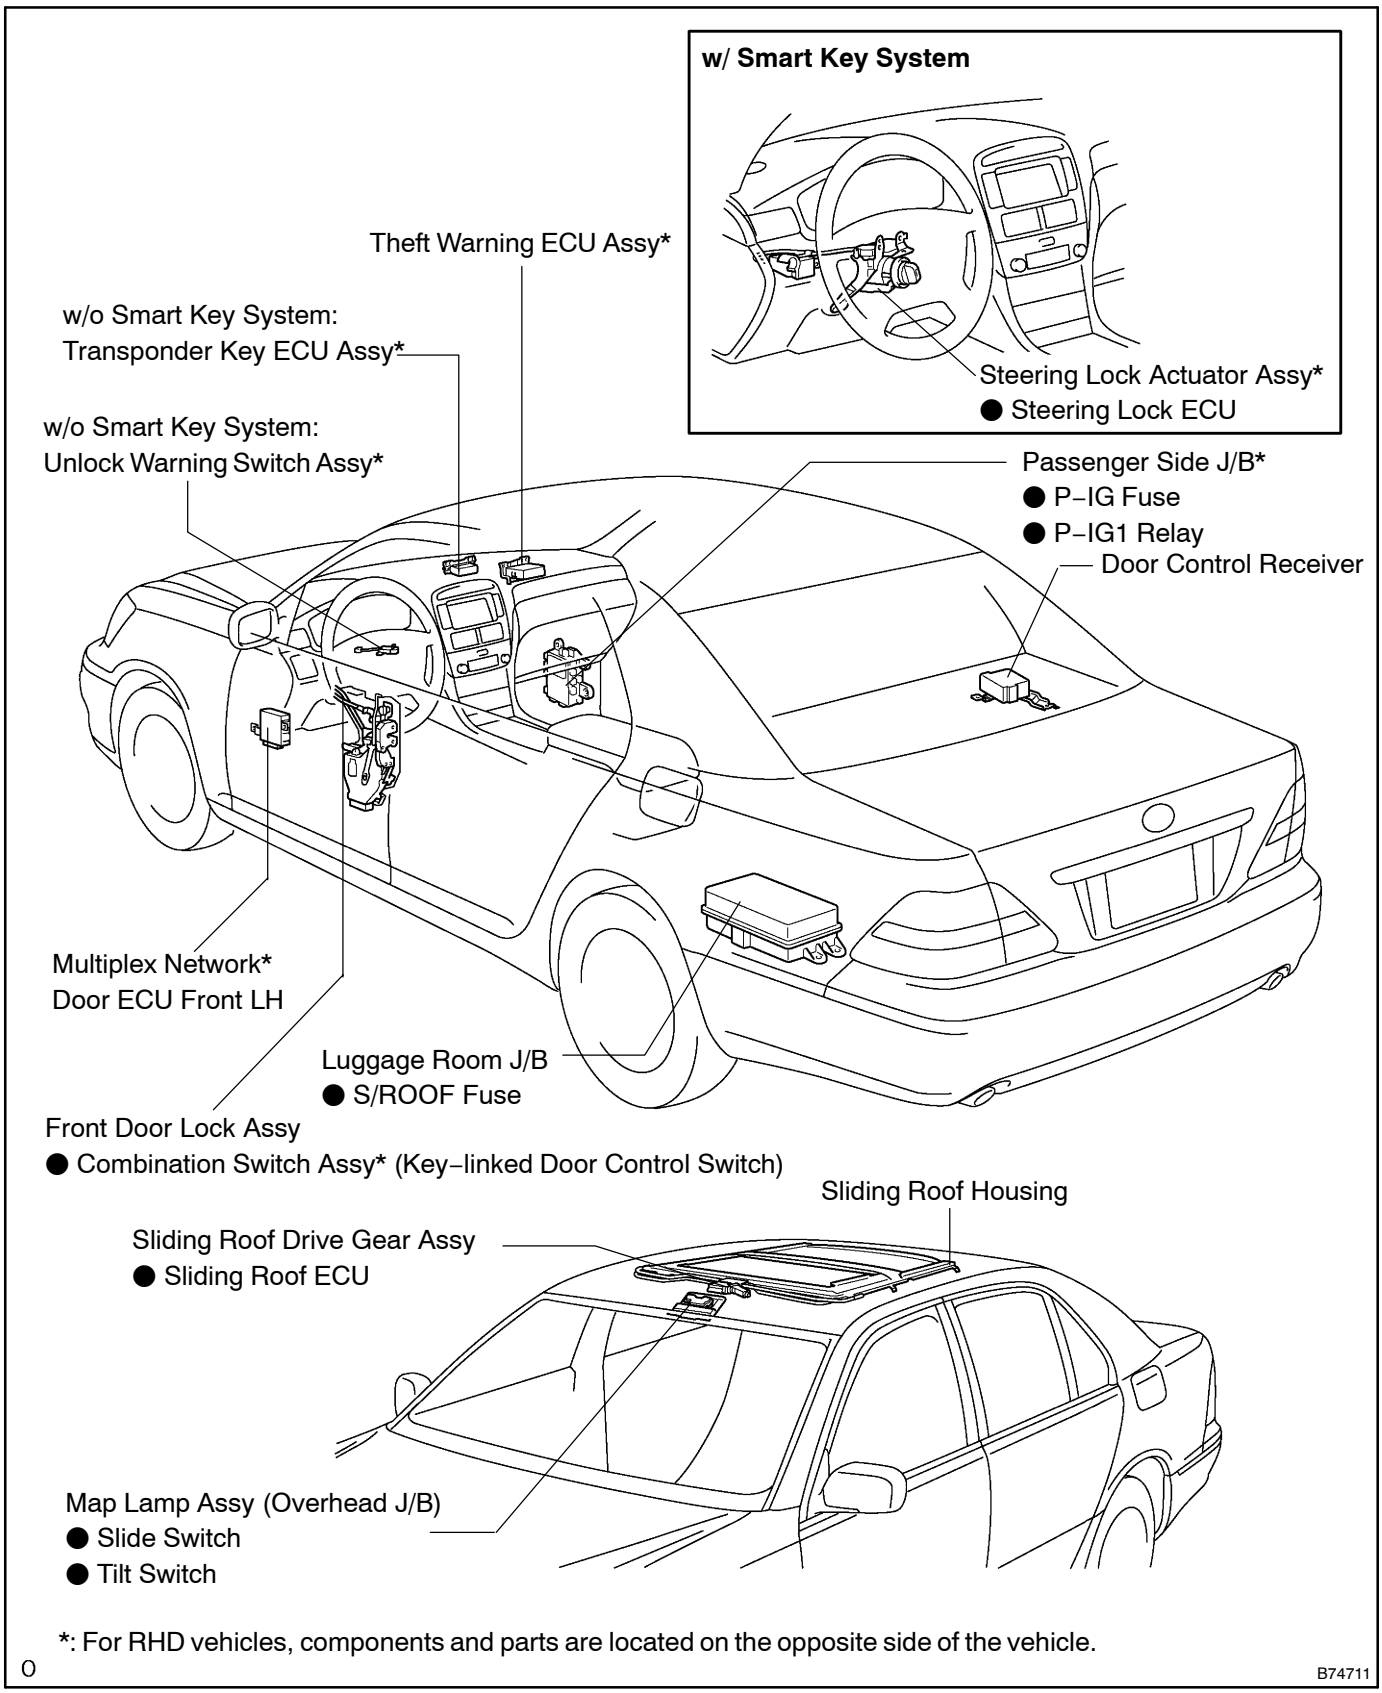

*: For RHD vehicles, components and parts are located on the opposite side of the vehicle.