F RELAY LOCATIONS

: Cowl Side J/B LH Assembly	Cowl Side Left (See Page 22)

(Before Sep. 2015 Production)

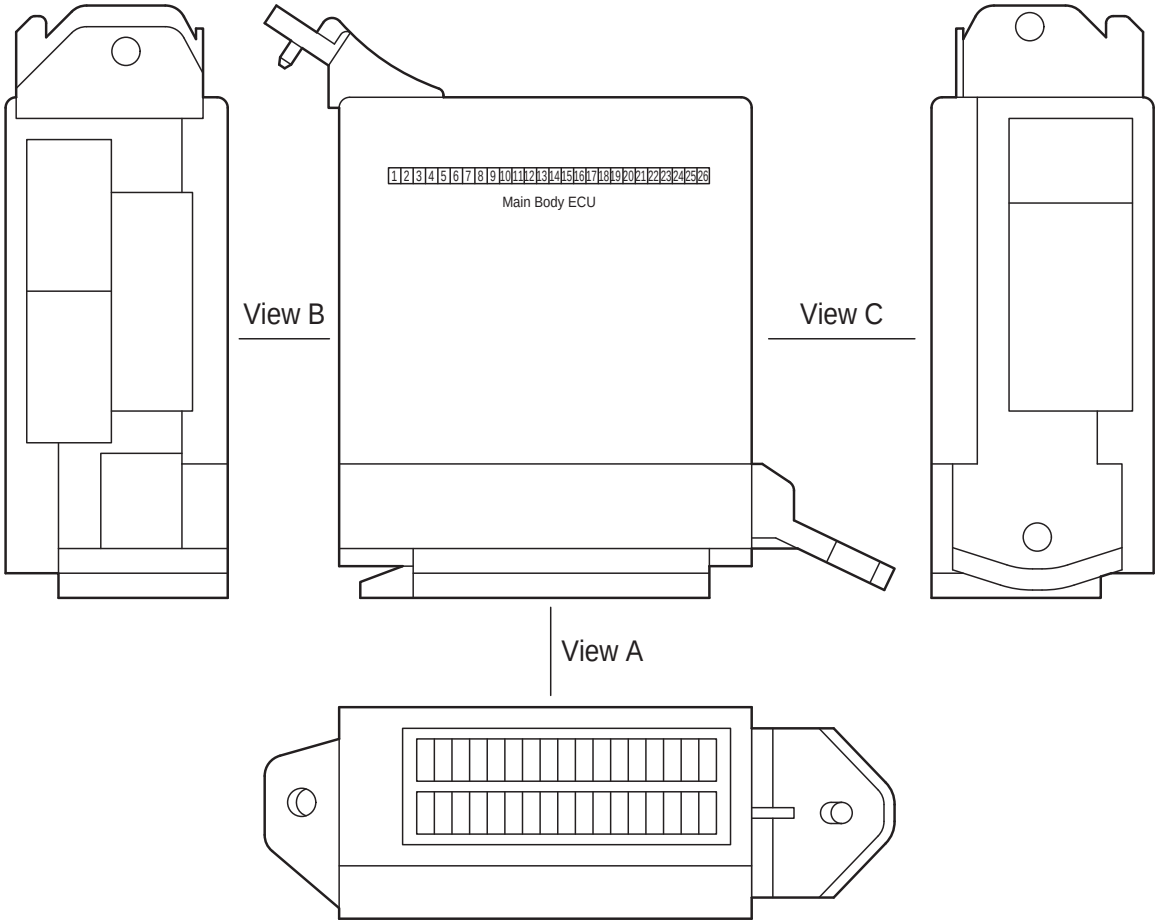

View A

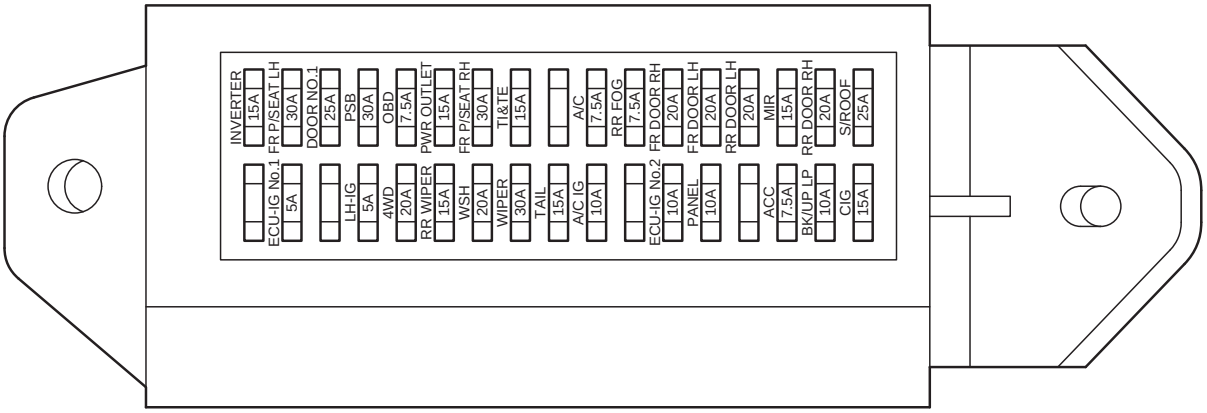
INVERTER 15A
FR P/SEAT LH 30A
DOOR NO.1 25A
PSB 30A
OBD 7.5A
PWR OUTLET 15A
FR P/SEAT RH 30A
TI&TE 15A
A/C 7.5A
RR FOG 7.5A
FR DOOR RH 20A
FR DOOR LH 20A
RR DOOR LH 20A
MIR 15A
RR DOOR RH 20A
S/ROOF 25A
ECU-IG No.1 5A
LH-IG 5A
4WD 20A
RR WIPER 15A
WSH 20A
WIPER 30A
TAIL 15A
A/C IG 10A
ECU-IG No.2 10A
PANEL 10A
ACC 7.5A
BK/UP LP 10A
CIG 15A

: Cowl Side J/B LH Assembly	Cowl Side Left (See Page 22)

(Before Sep. 2015 Production)

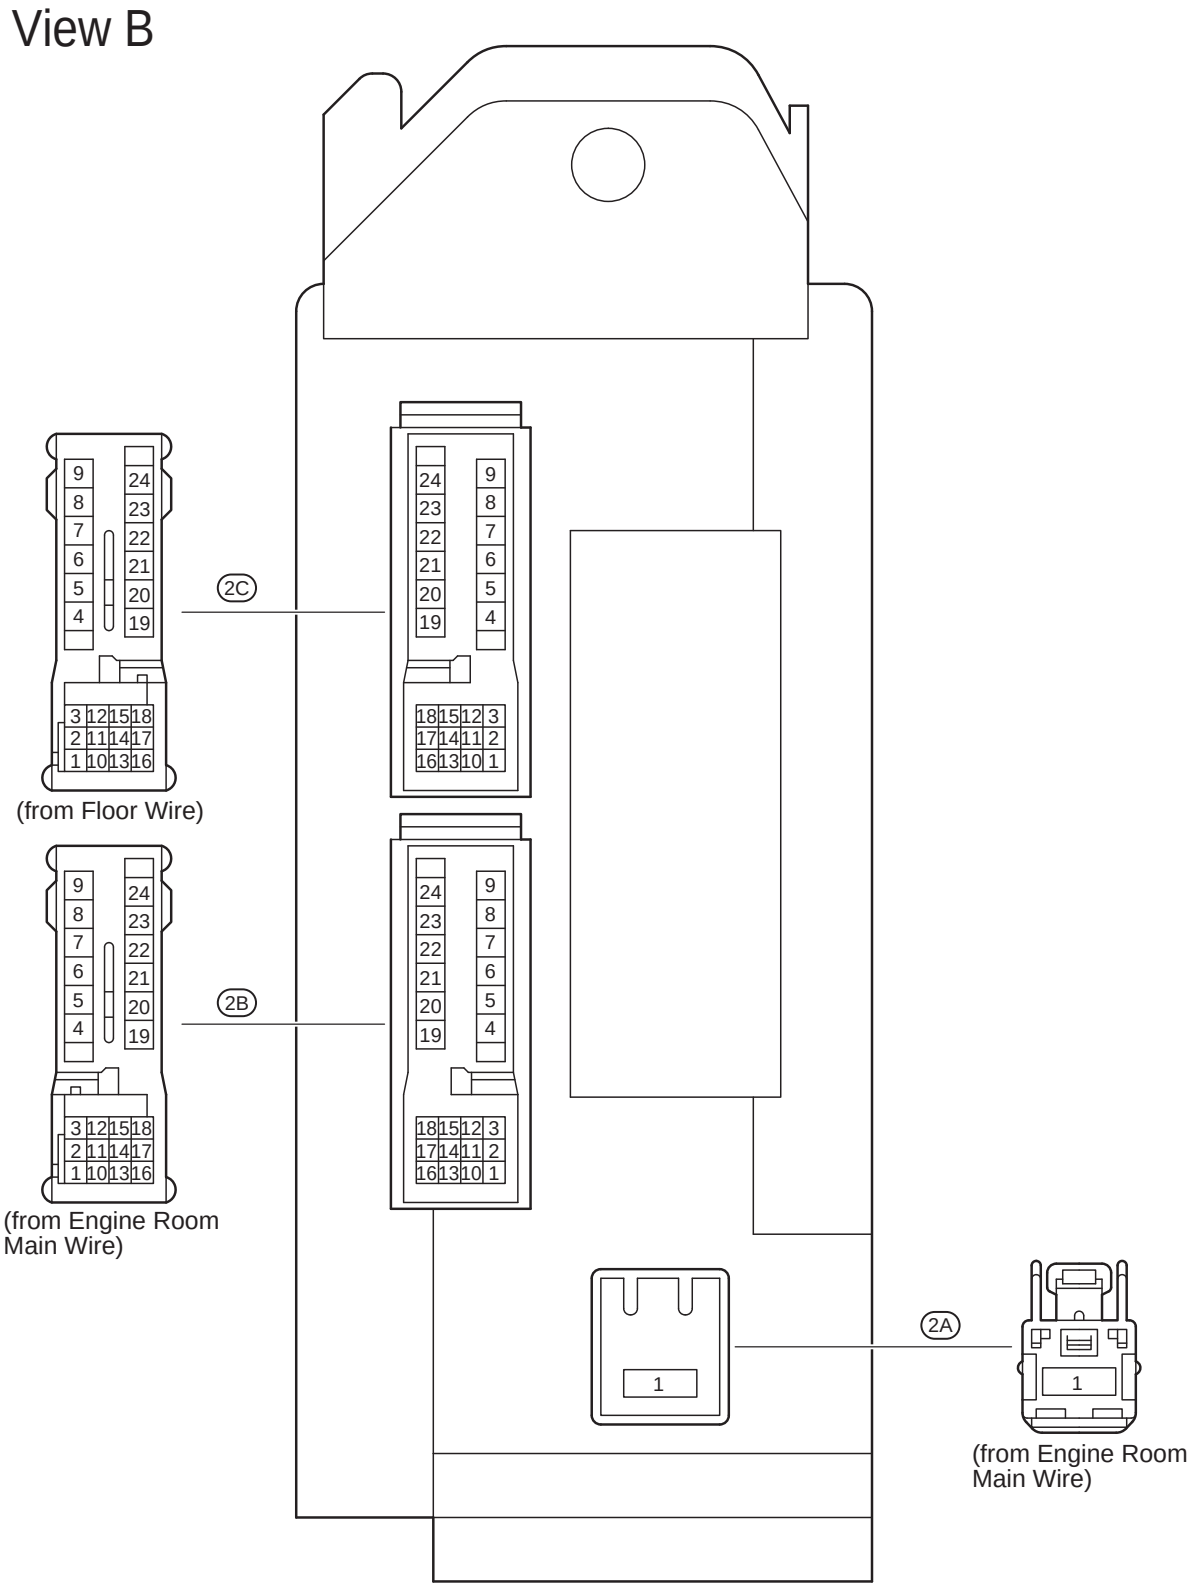

View C

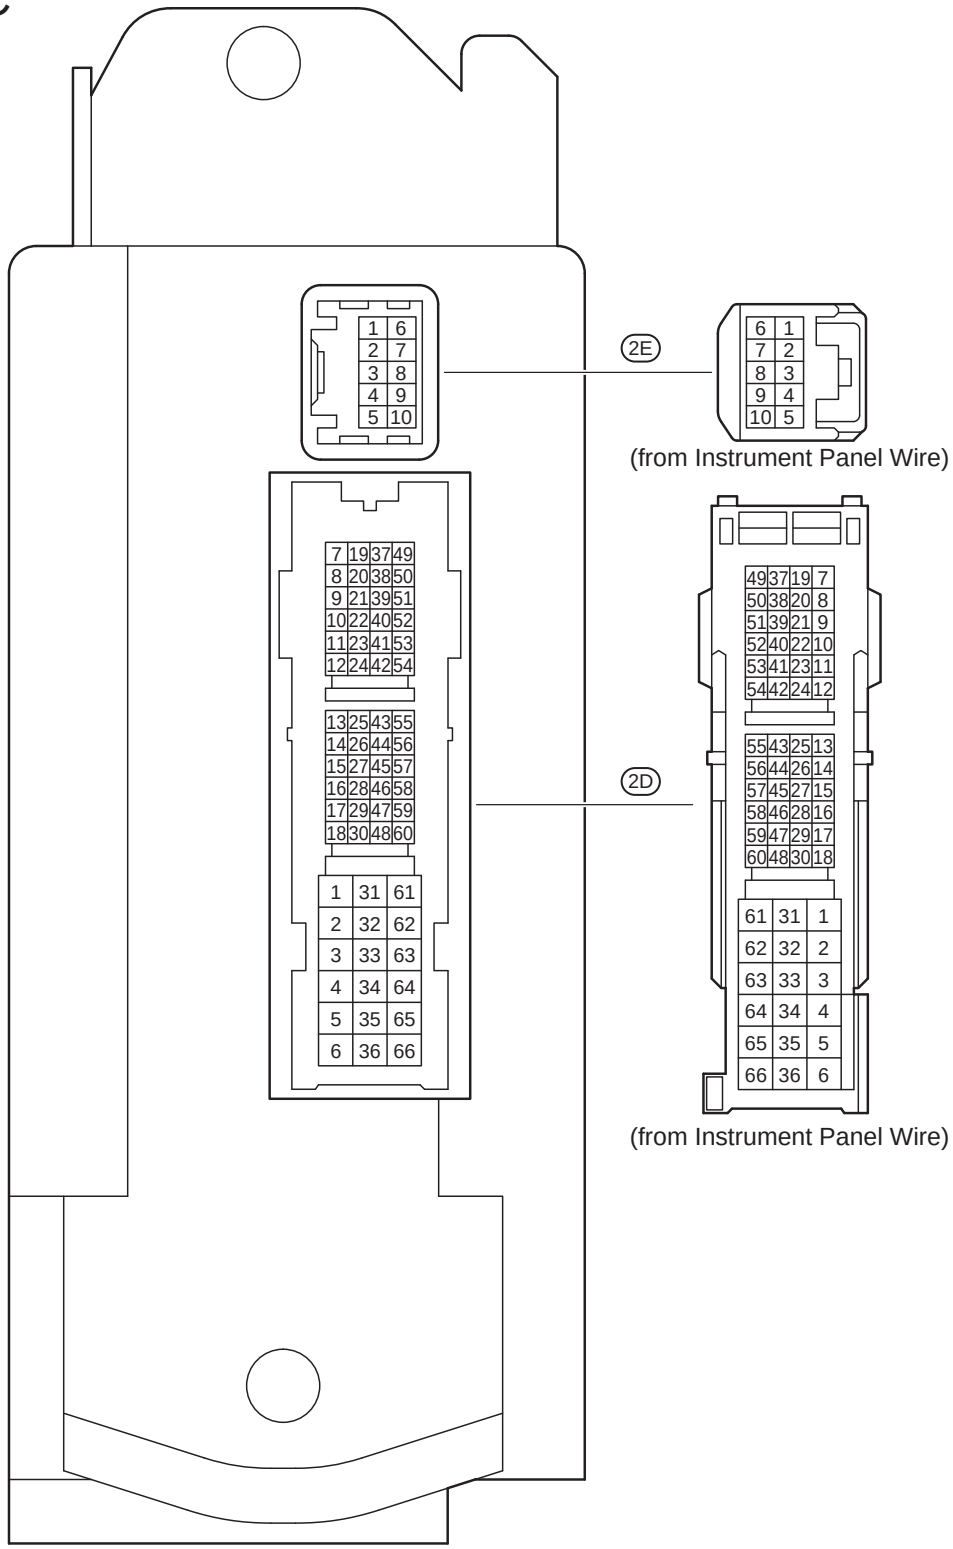
1 6
2 7
3 8
4 9
5 10
2E
6 1
7 2
8 3
9 4
10 5
(from Instrument Panel Wire)
7 19 37 49
8 20 38 50
9 21 39 51
10 22 40 52
11 23 41 53
12 24 42 54
13 25 43 55
14 26 44 56
15 27 45 57
16 28 46 58
17 29 47 59
18 30 48 60
1 31 61
2 32 62
3 33 63
4 34 64
5 35 65
6 36 66
2D
49 37 19 7
50 38 20 8
51 39 21 9
52 40 22 10
53 41 23 11
54 42 24 12
55 43 25 13
56 44 26 14
57 45 27 15
58 46 28 16
59 47 29 17
60 48 30 18
61 31 1
62 32 2
63 33 3
64 34 4
65 35 5
66 36 6
(from Instrument Panel Wire)

F RELAY LOCATIONS

: Cowl Side J/B LH Assembly	**Cowl Side Left (See Page 23)**

(From Sep. 2015 Production)

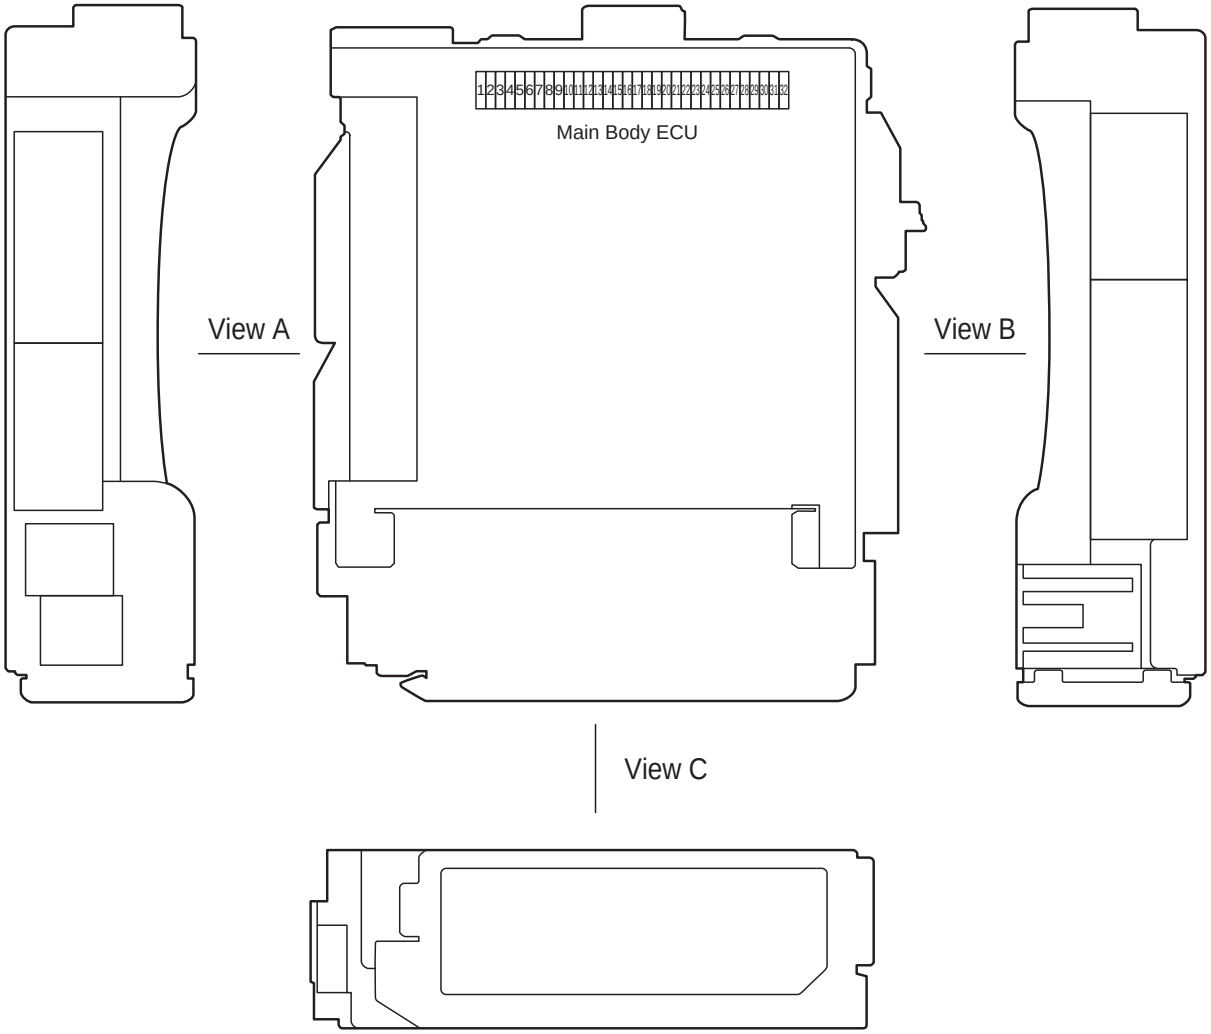

View A

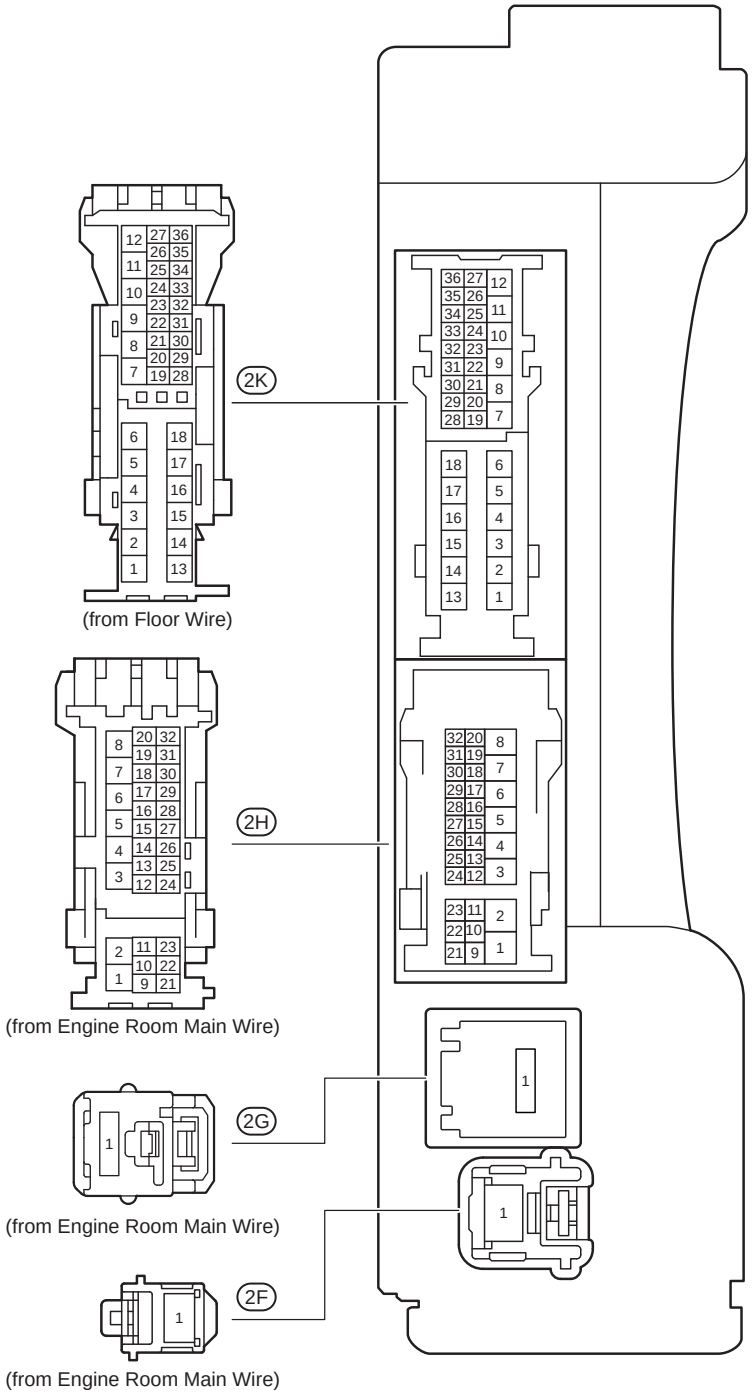
2K
(from Floor Wire)
2H
(from Engine Room Main Wire)
2G
(from Engine Room Main Wire)
2F
(from Engine Room Main Wire)

: Cowl Side J/B LH Assembly	Cowl Side Left (See Page 23)

(From Sep. 2015 Production)

View B

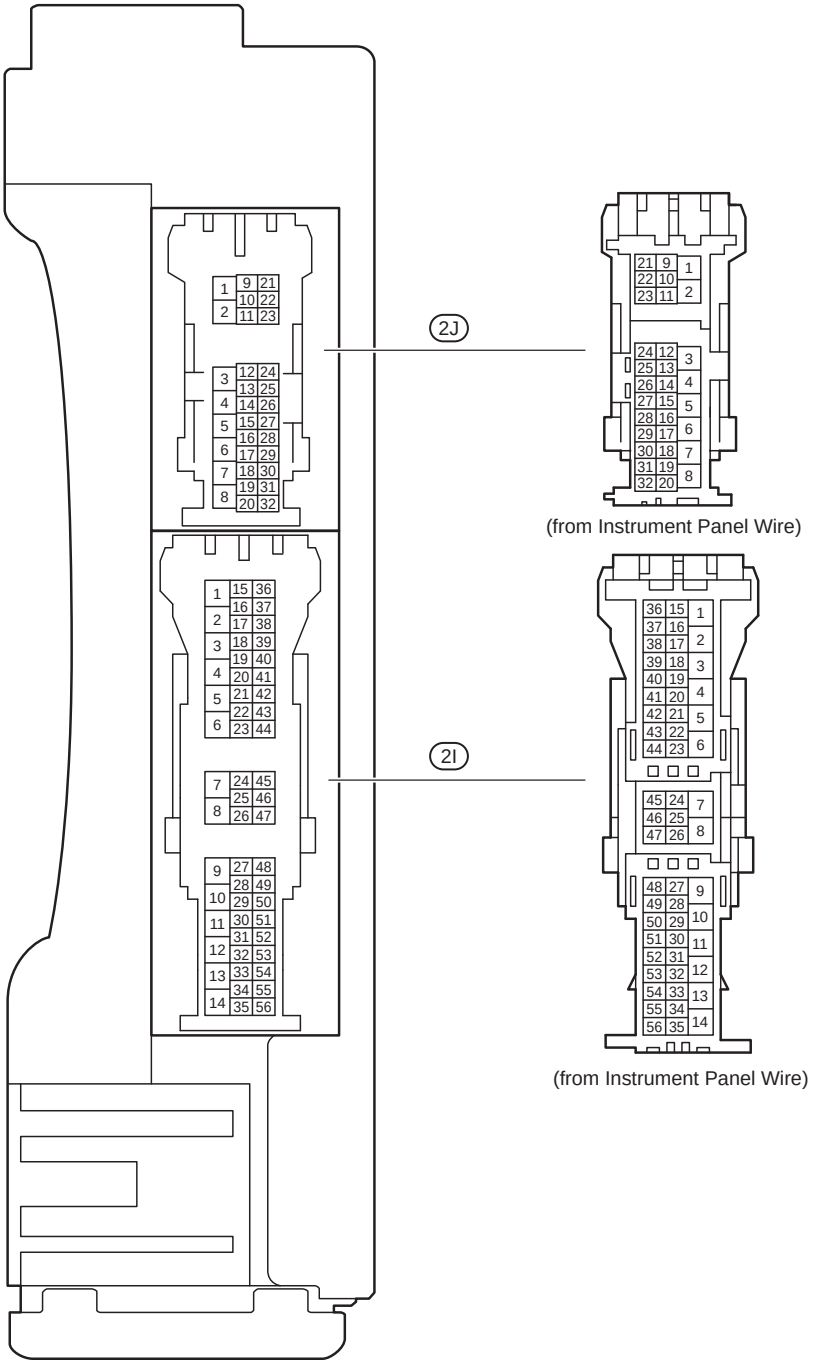

View C
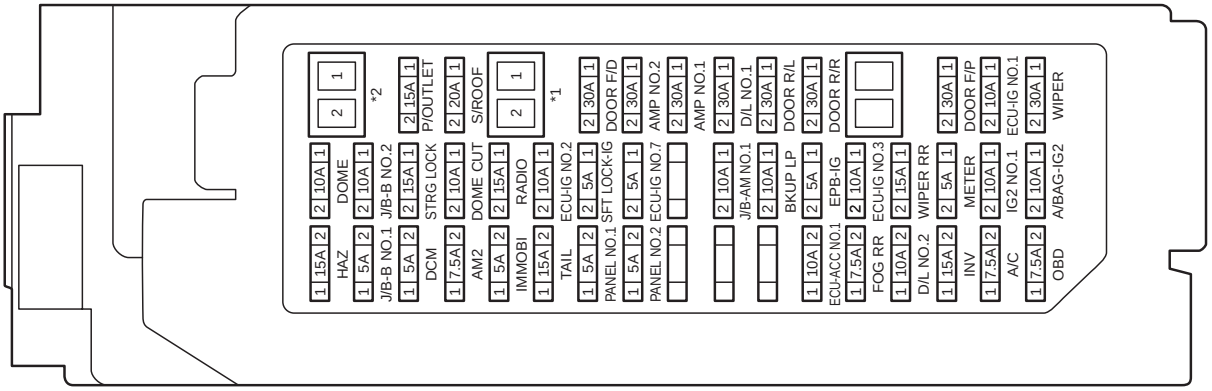
* 1:30A P/SEAT F/R (for High Current)
* 2:30A P/SEAT F/L (for High Current)