Position of Parts in Engine Compartment <RHD 1VD-FTV>

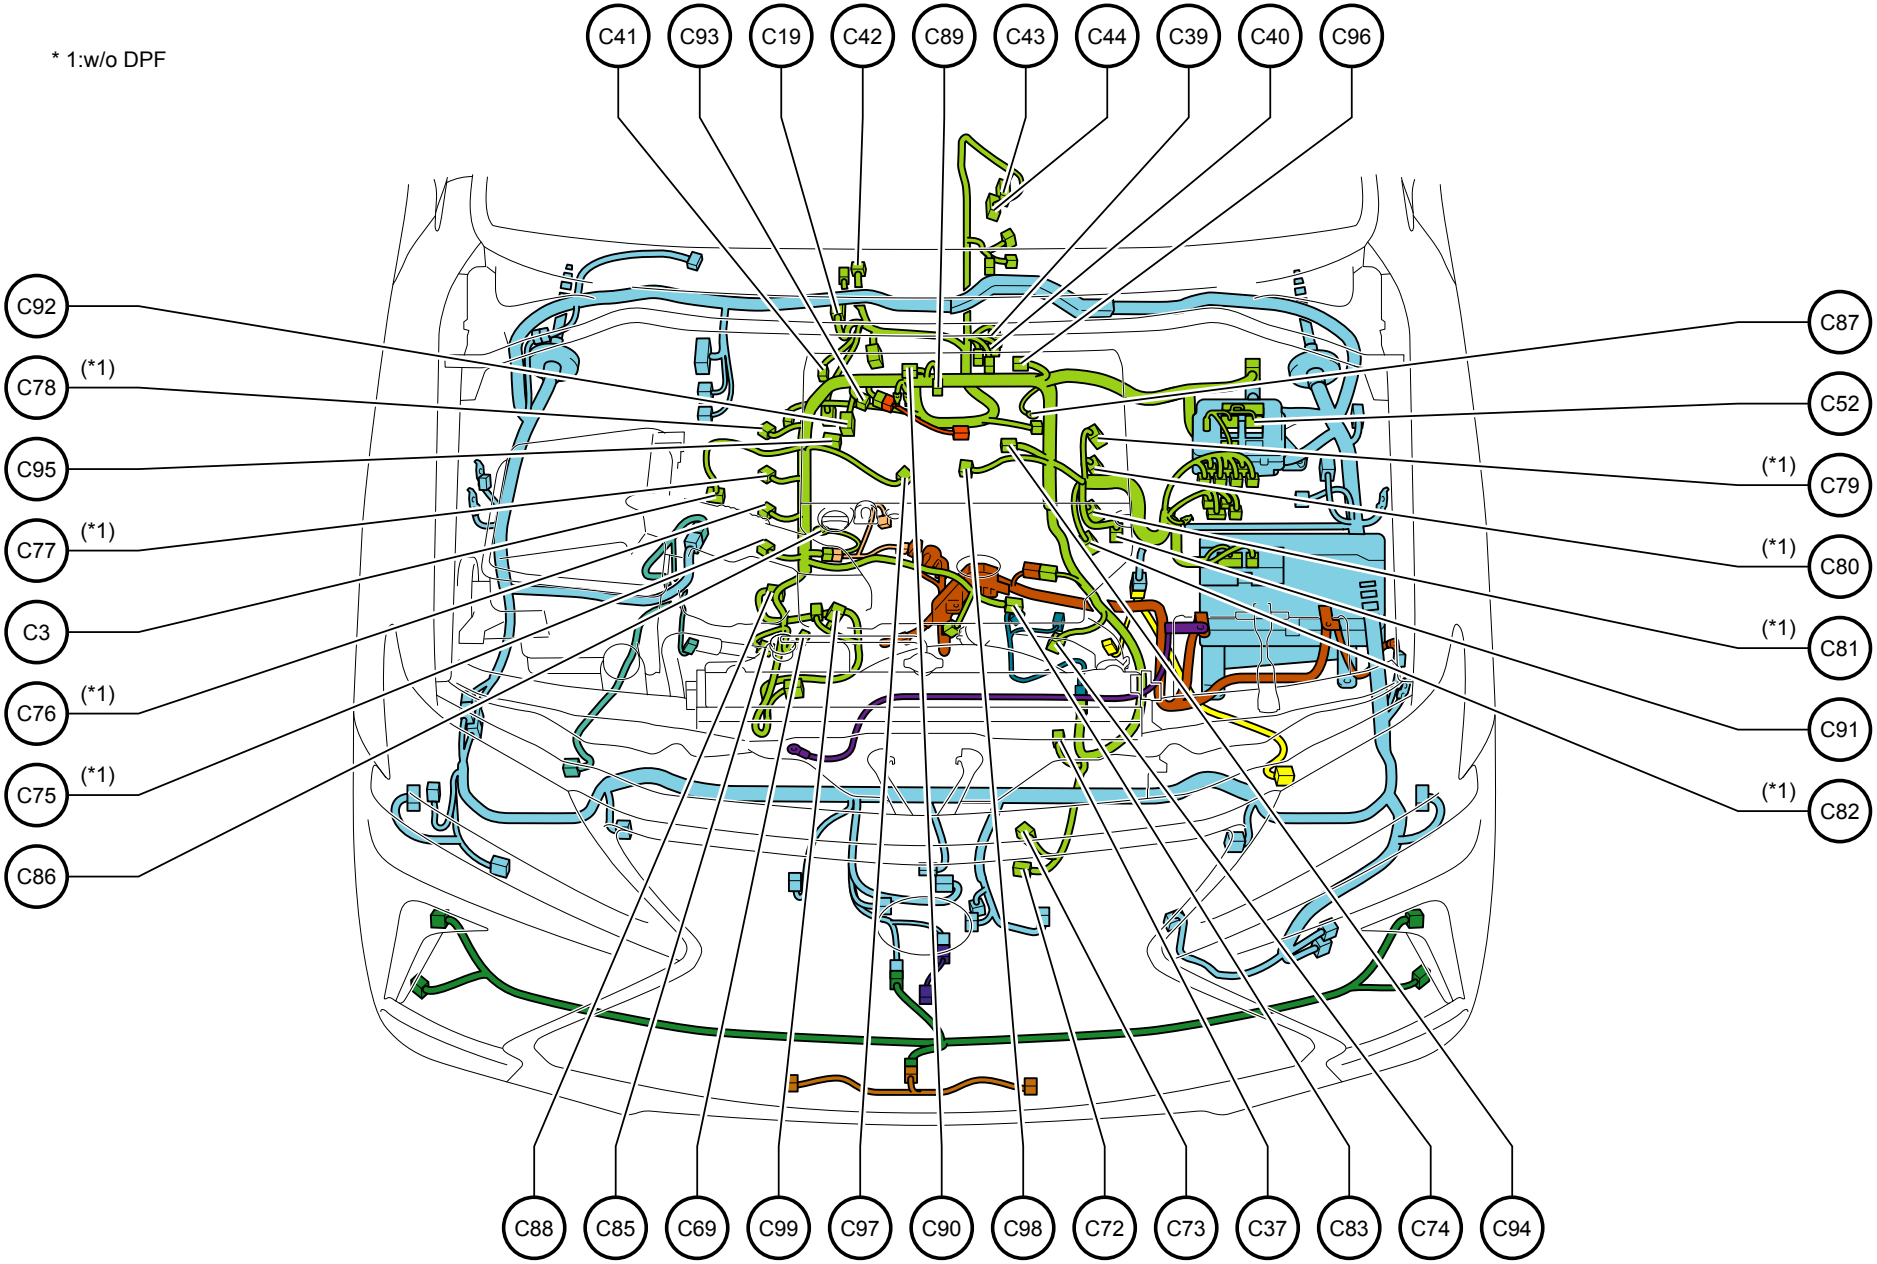

C 3 Mass Air Flow Meter
C 19 Park/Neutral Position Switch
C 37 Cooler Compressor Assembly
C 39 ECT Solenoid
C 40 ECT Solenoid
C 41 Transmission Revolution Sensor (Turbine)
C 42 Transmission Revolution Sensor (Counter Gear)
C 43 Transfer Shift Actuator Assembly
C 44 Transfer Shift Actuator Assembly
C 52 Junction Connector
C 69 Vane Pump Assembly
C 72 Oil Pressure Sender Gage Assembly
C 73 Crankshaft Position Sensor
C 74 Camshaft Position Sensor
C 75 Fuel Injector Assembly No. 1
C 76 Fuel Injector Assembly No. 3
C 77 Fuel Injector Assembly No. 5
C 78 Fuel Injector Assembly No. 7
C 79 Fuel Injector Assembly No. 8
C 80 Fuel Injector Assembly No. 6
C 81 Fuel Injector Assembly No. 4
C 82 Fuel Injector Assembly No. 2
C 83 Temperature Sensor
C 85 Power Steering Oil Pressure Switch
C 86 Glow Plug Assembly
C 87 Glow Plug Assembly
C 88 Engine Oil Level Sensor
C 89 Intake Air Temperature Sensor
C 90 Diesel Turbo Pressure Sensor
C 91 VSV (ACM)
C 92 Fuel Pressure Sensor
C 93 Diesel Throttle Body Assembly RH
C 94 Diesel Throttle Body Assembly LH
C 95 Diesel Throttle Body Assembly RH
C 96 Diesel Throttle Body Assembly LH
C 97 No. 1 EGR Valve Assembly
C 98 No. 2 EGR Valve Assembly
C 99 DC Motor and Nozzle Vane Position Sensor RH

C 3
Black

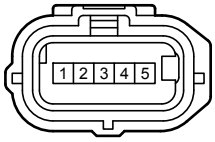

C 19
Gray

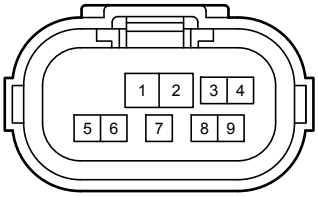

C 37
Gray

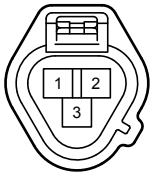

C 39
Gray

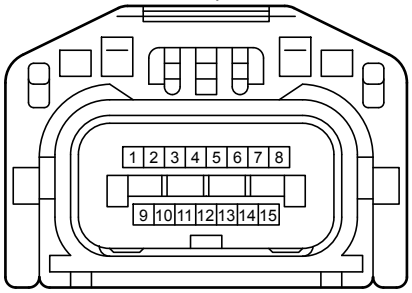

C 40
Gray

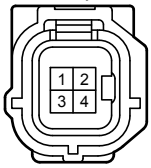

C 41
Black

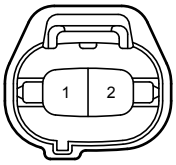

C 42
Black

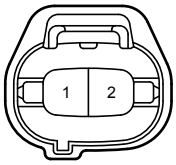

C 43
Black

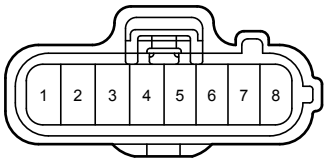

C 44
Dark Gray

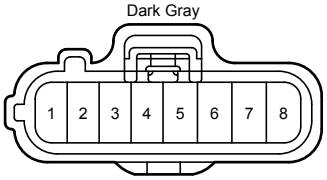

C 52
Blue

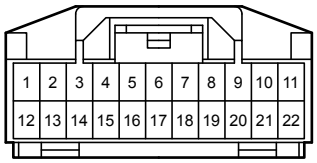

C 69
Black

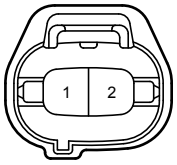

C 72
Black

C 73
Black

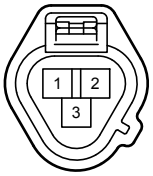

C 74
Black

C 75
Gray

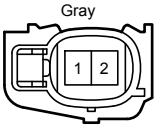

C 76
Black



C 77
Gray

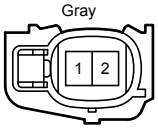

C 78
Black



C 79
Gray

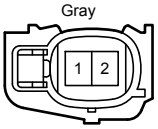

C 80
Black



C 81
Gray

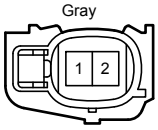

C 82
Black



C 83
Gray

C 85
Black

C 86



C 87



C 88
Gray

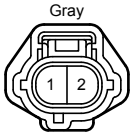

C 89
Gray

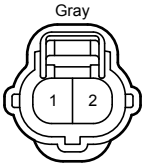

C 90
Black

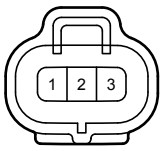

C 91
Black

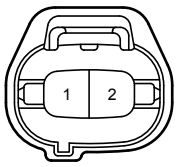

C 92
Black

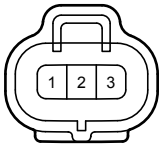

C 93
Black

C 94
Black

C 95
Black

C 96
Black

C 97
Black

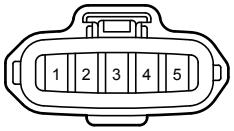

C 98
Black

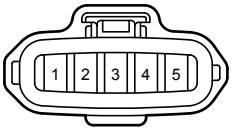
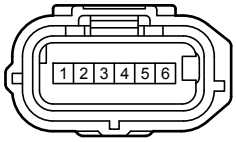
C 99
Black