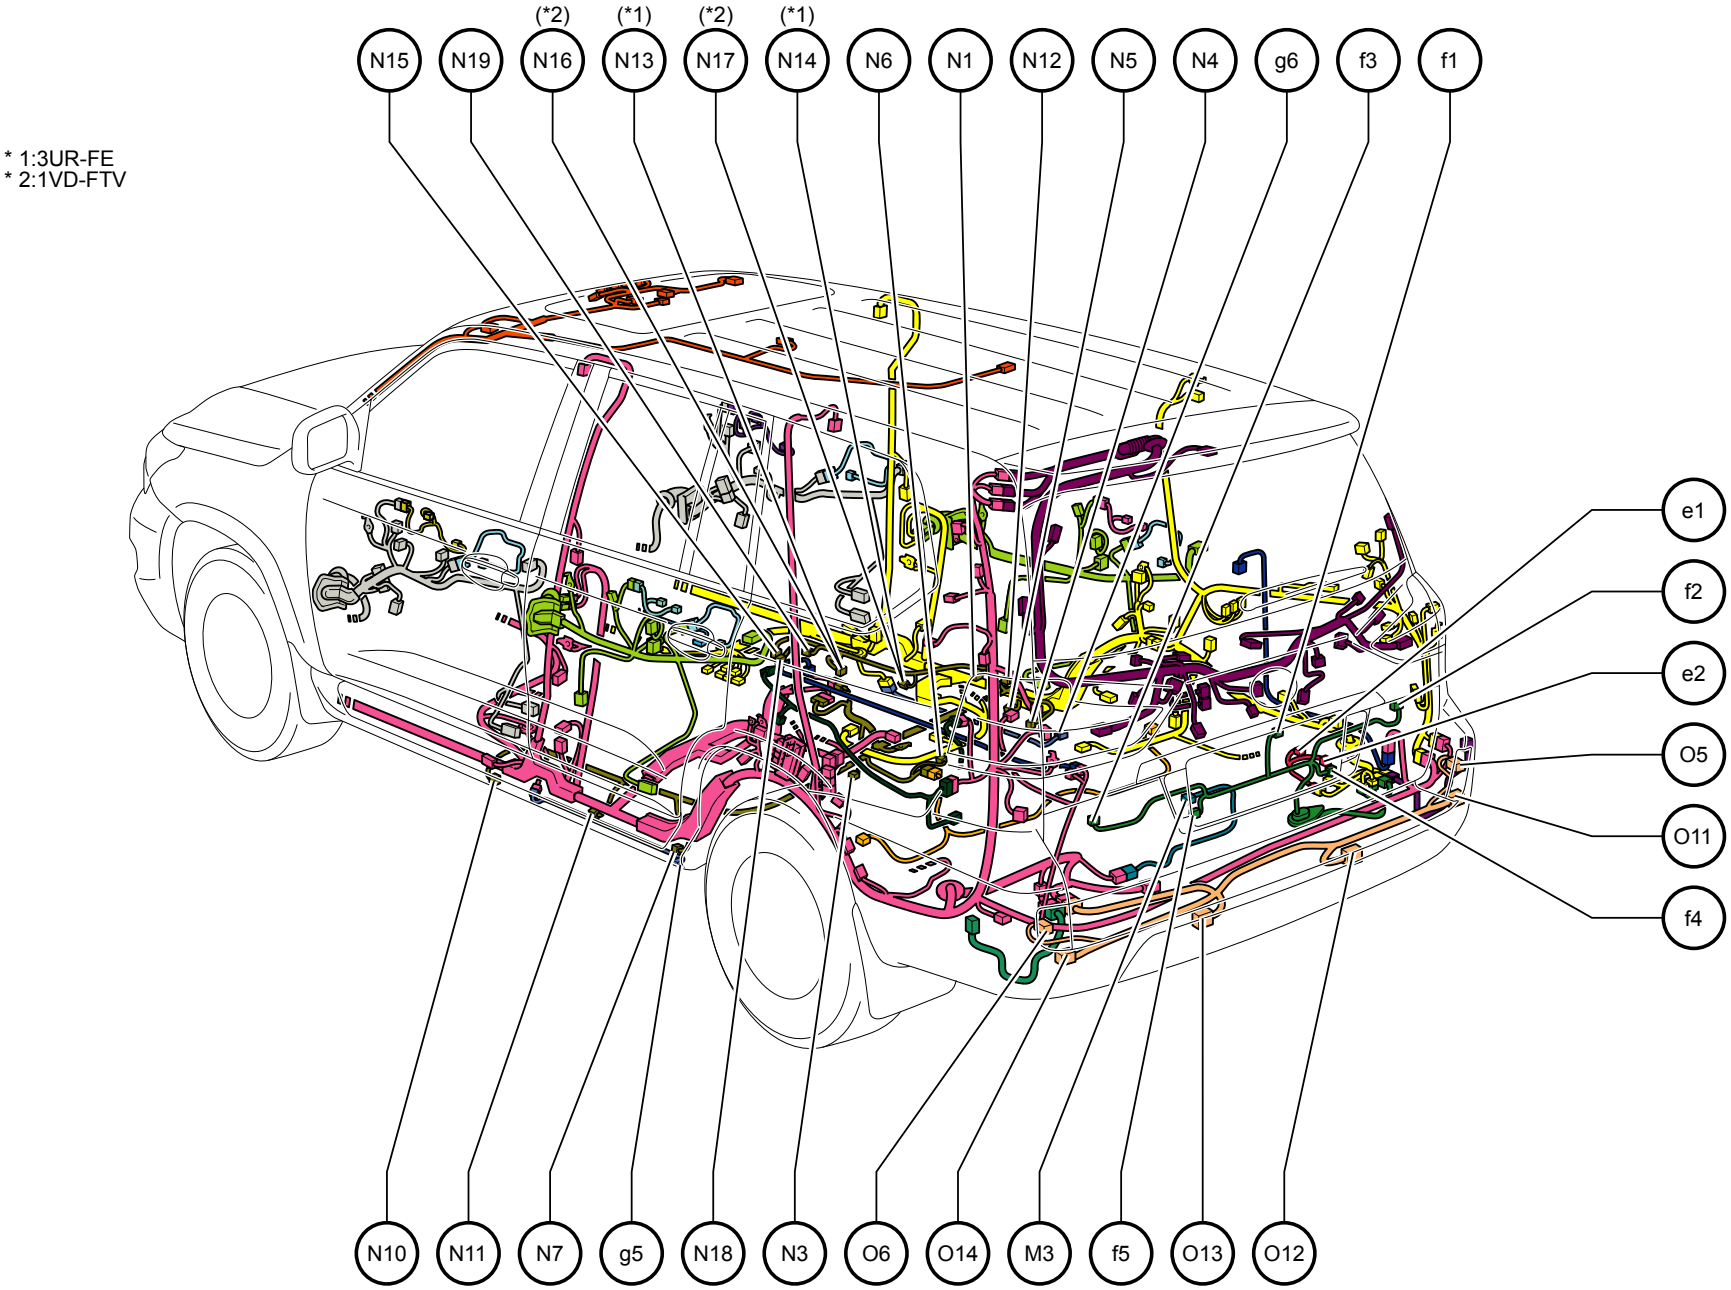
* 1:3UR-FE
* 2:1VD-FTV
N15
N19
(*2)
N16
(*1)
N13
(*2)
N17
(*1)
N14
N6
N1
N12
N5
N4
g6
f3
f1
e1
f2
e2
O5
O11
f4
N10
N11
N7
g5
N18
N3
O6
O14
M3
f5
O13
O12

M 3 Fuel Sender Gage Assembly (Sub)

N 1 Fuel Pump , Fuel Sender Gauge Assembly (Main)
N 3 No.1 Height Control Valve Assembly
N 4 Rear Height Control Sensor Sub-Assembly RH
N 5 Rear Shock Absorber Assembly RH
N 6 Rear Height Control Sensor Sub-Assembly LH
N 7 Rear Shock Absorber Assembly LH
N 10 Front Shock Absorber Assembly LH
N 11 Front Shock Absorber Control Valve Assembly LH
N 12 Fuel Pump Control ECU Assembly
N 13 Front Shock Absorber Assembly RH
N 14 Front Shock Absorber Control Valve Assembly LH
N 15 Parking Brake with Bracket Actuator Assembly
N 16 Front Shock Absorber Assembly RH
N 17 Front Shock Absorber Control Valve Assembly LH
N 18 DPF Temperature Sensor RH (Exhaust Gas Temperature Sensor)
N 19 Differential Pressure Sensor RH

O 5 Rear Fog Light Assembly RH
O 6 Rear Fog Light Assembly LH
O 11 No. 2 Ultrasonic Sensor RH
O 12 No. 3 Ultrasonic Sensor RH
O 13 No. 3 Ultrasonic Sensor LH
O 14 No. 2 Ultrasonic Sensor LH

e 1 Fuel Temperature Sensor
e 2 Pressure Accumulator Sensor

f 1 Back Door Remote Control Assembly
f 2 Tail Gate Lock Assembly Lower RH
f 3 Tail Gate Lock Assembly Lower LH
f 4 Back-Up Light Assembly RH
f 5 Back-Up Light Assembly LH

g 5 Step Light Assembly LH
g 6 Step Light Assembly RH

M 3
White

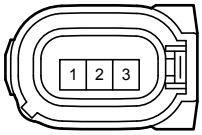

N 1
White

N 3
Black

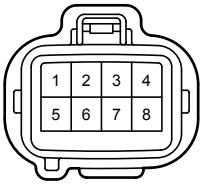

N 4
Black

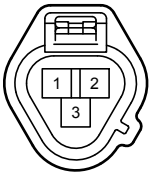

N 5
Gray

N 6
Black

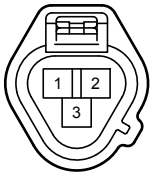

N 7
Gray

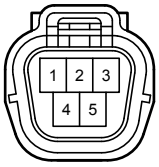

N 10
Gray

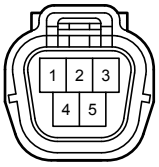

N 11
Gray

N 12
Black

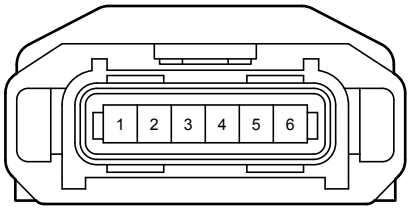

N 13
Gray

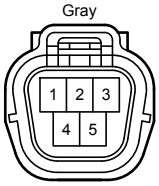

N 14
Gray

N 15
Gray

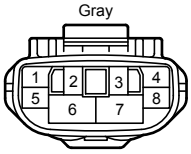

N 16
Gray

N 17
Gray

N 18
Gray

N 19
Black

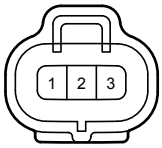

O 5
White

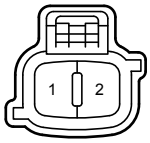

O 6
White

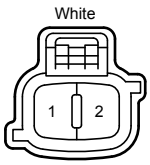

O 11
Black

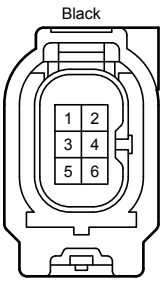

O 12
Black

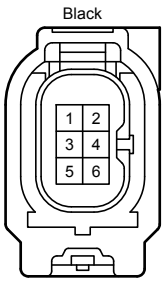

O 13
Black

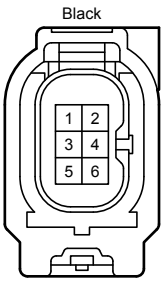

O 14
Black

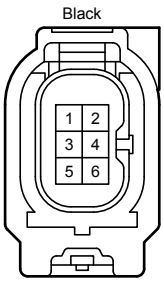

e 1
Gray

e 2
Black

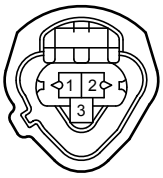

f 1
Black

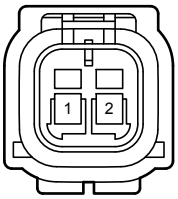

f 2
White

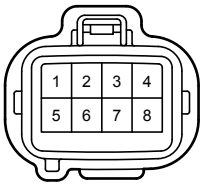

f 3
Gray

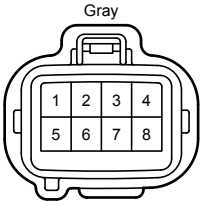

f 4

Gray

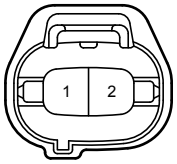

f 5

Gray

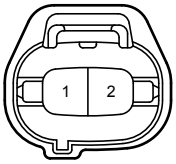

g 5

Gray

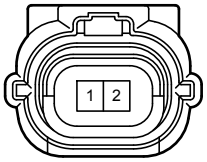

g 6
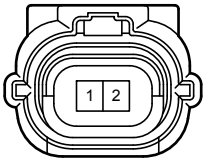
Gray