Position of Parts in Instrument Panel <LHD From Sep. 2015 Production>

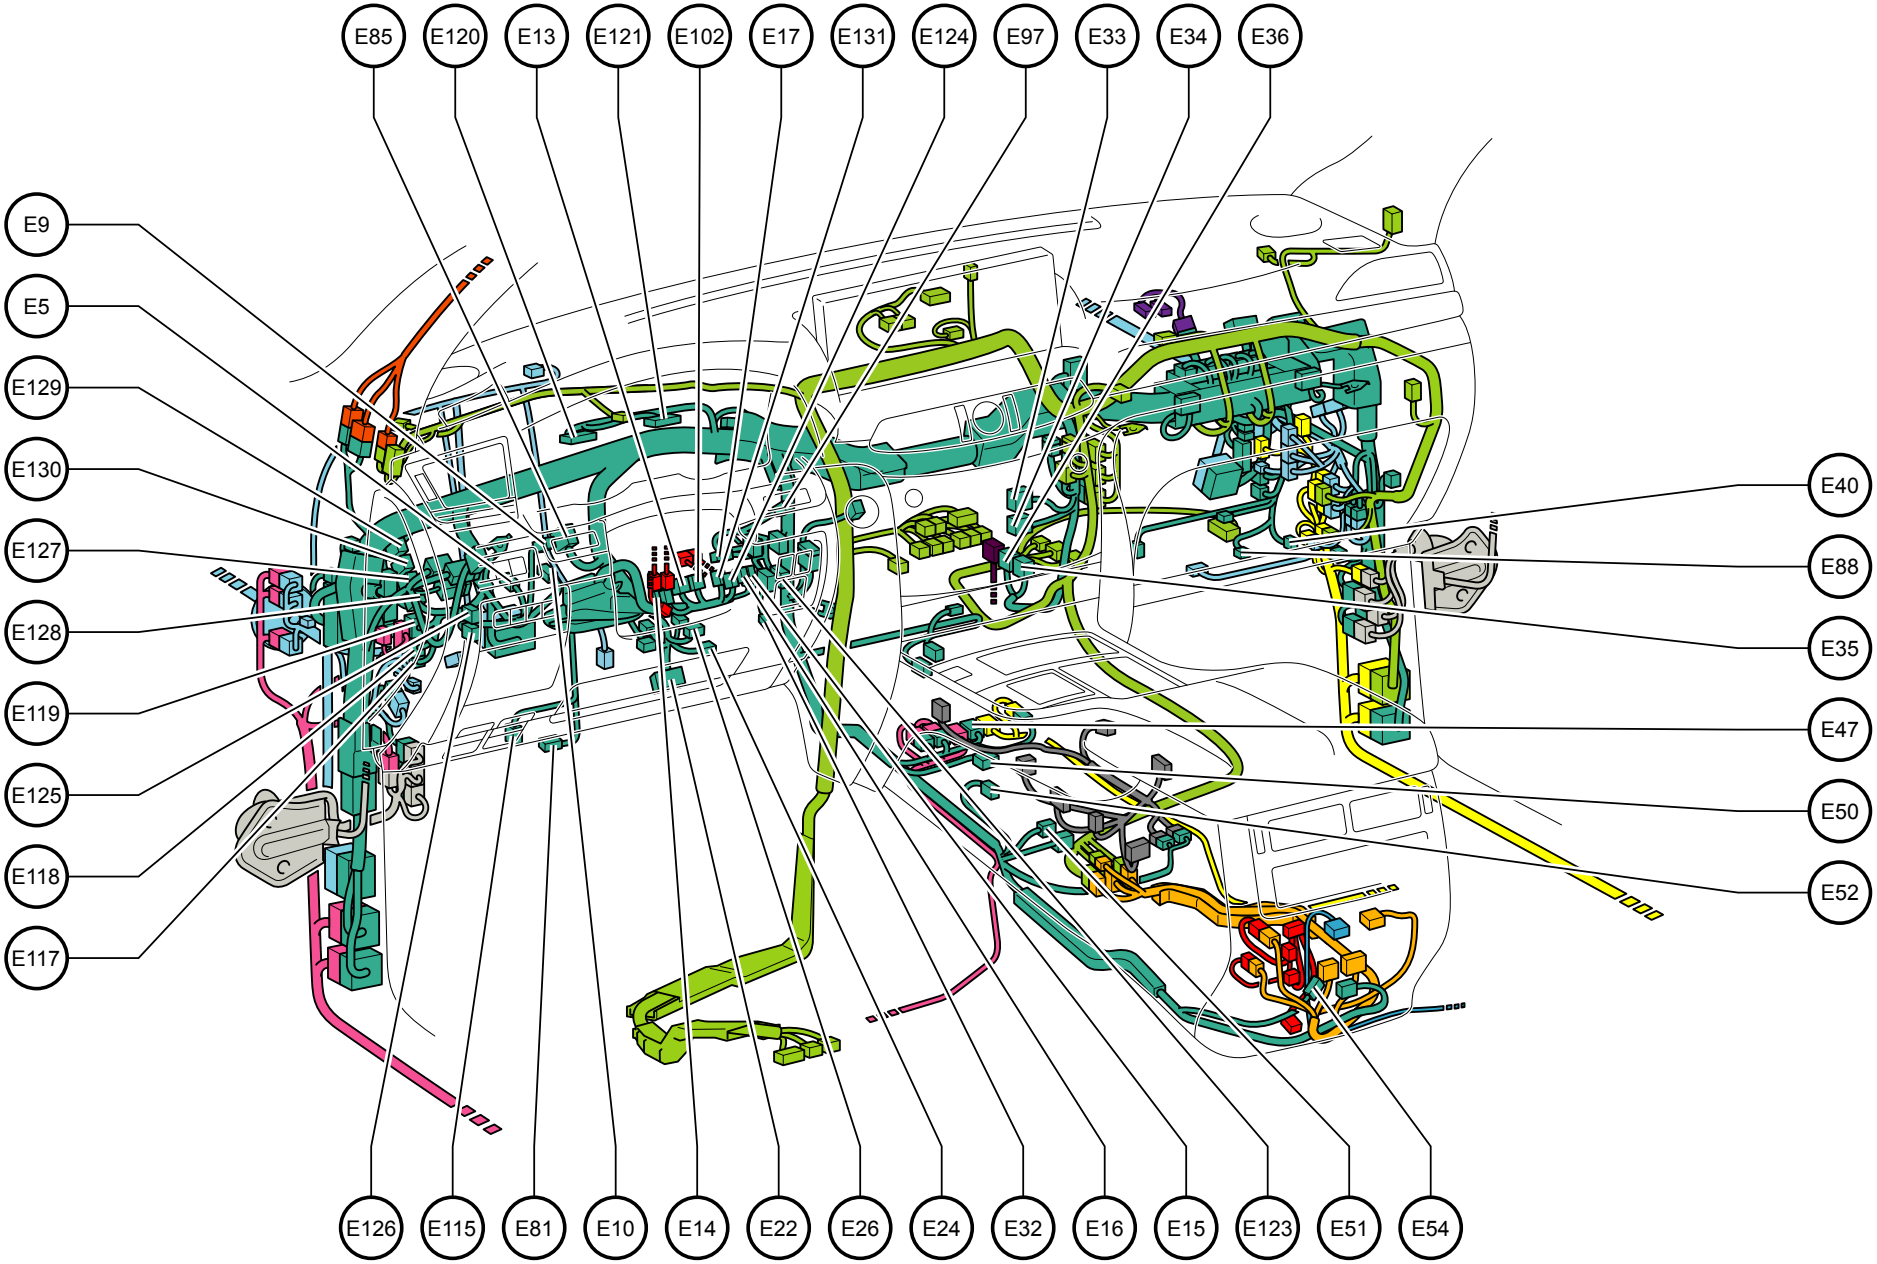

E 5 Skid Control Buzzer Assembly
E 9 Light Control Rheostat
E 10 No.1 Clearance Warning Buzzer
E 13 Spiral Cable Sub-Assembly
E 14 Headlight Dimmer Switch Assembly
E 15 Windshield Wiper Switch Assembly
E 16 Windshield Wiper Switch Assembly
E 17 Power Tilt Motor
E 22 DLC3
E 24 Lower No.1 Instrument Panel Airbag Assembly
E 26 Steering Lock Actuator Assembly
E 32 Room Temperature Sensor
E 33 Quick Heater Assembly
E 34 Quick Heater Assembly
E 35 A/C Amplifier Assembly
E 36 A/C Amplifier Assembly
E 40 Lower No.2 Instrument Panel Airbag Assembly
E 47 Center Airbag Sensor Assembly
E 50 Theft Warning Tilt Sensor
E 51 Shift Lock Control ECU Sub-Assembly
E 52 Transmission Control Switch
E 54 Cooling Box Assembly
E 81 Front Foot Light LH (No.1 Interior Illumination Light Assembly)
E 85 Steering Actuator Assembly
E 88 Front Foot Light RH (No.1 Interior Illumination Light Assembly)
E 97 Main Switch Assembly
E 102 Spiral Cable Sub-Assembly
E 115 Tire Pressure Warning Reset Switch
E 117 Main Body ECU
E 118 Main Body ECU
E 119 Main Body ECU
E 120 Combination Meter Assembly
E 121 Combination Meter Assembly
E 123 Back Door Control Switch
E 124 Spiral Cable Sub-Assembly
E 125 Combination Switch Assembly
E 126 No. 2 Combination Switch Assembly
E 127 Steering Control ECU
E 128 Steering Control ECU
E 129 Steering Control ECU
E 130 Steering Control ECU
E 131 Steering Sensor

E 5
Blue



E 9
White

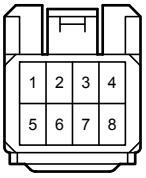

E 10
Black



E 13
Yellow

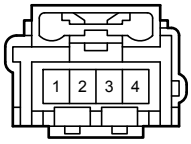

E 14
White

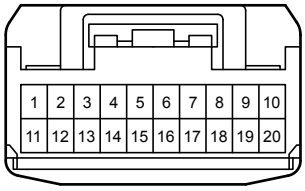

E 15
White

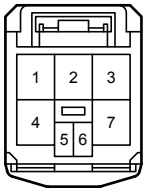

E 16
White

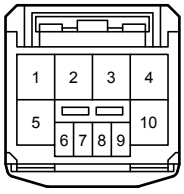

E 17
White

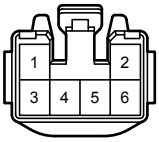

E 22
White

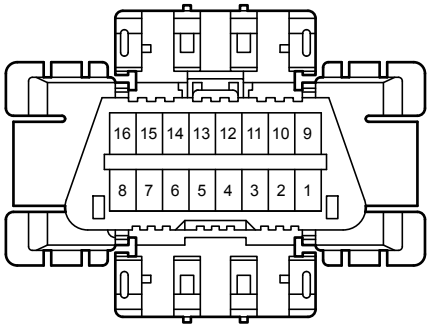

E 24
Black



E 26
Black

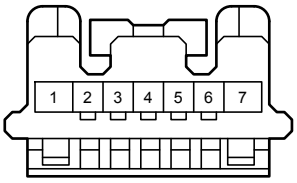

E 32
Black



E 33
White

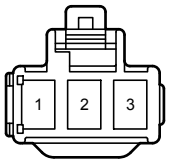

E 34
White

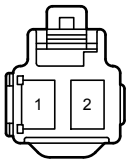

E 35
White

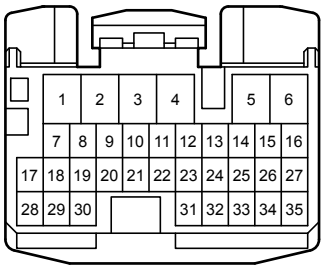

E 36
White

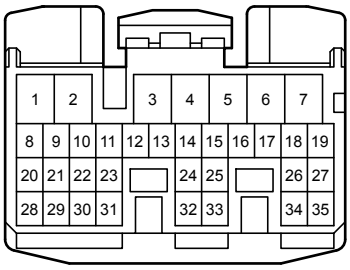

E 40
Black



E 47
Yellow

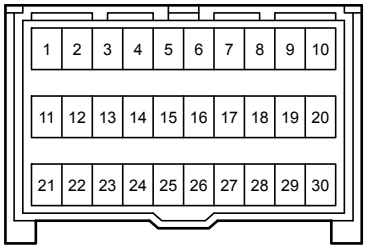

E 50
Black

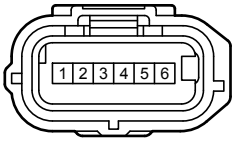

E 51
White

E 52
White

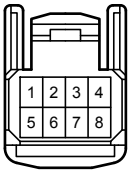

E 54
White



E 81
White



E 85
White

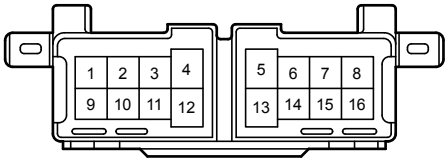

E 88
White



E 97
Black

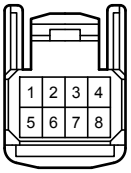

E102
Black

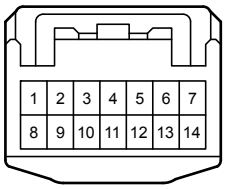

E115
Black



E117
White

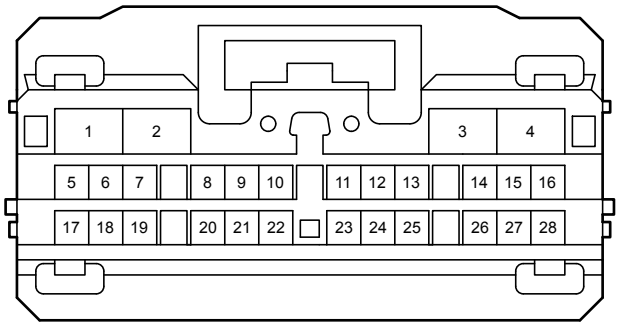

E118
White

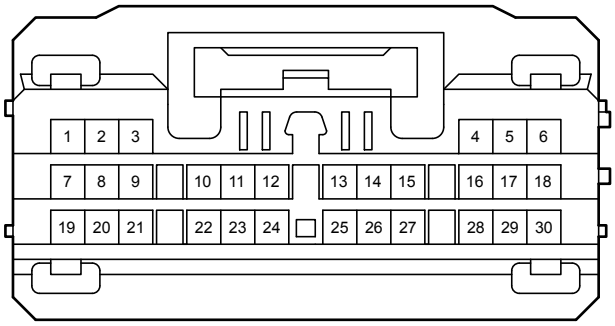

E119
White

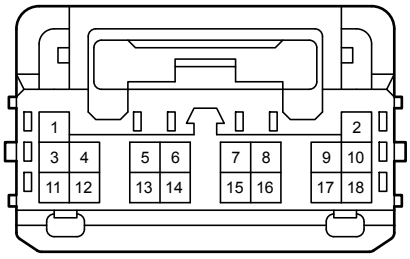

E120
Black

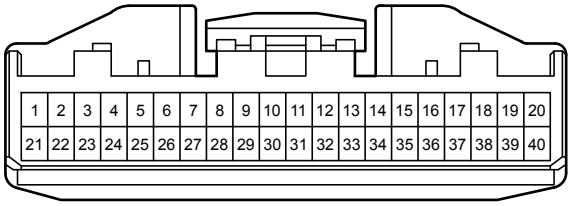

E121
Black

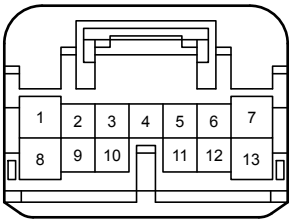

E123
Black

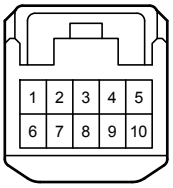

E124
Black



E125
White

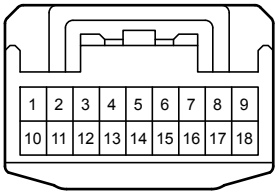

E126
Black

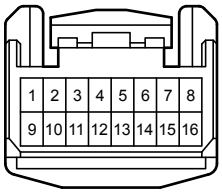

E127
White

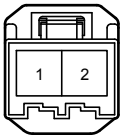

E128
White

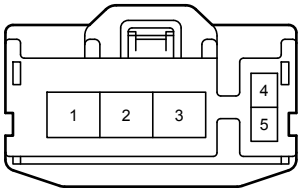

E129
White

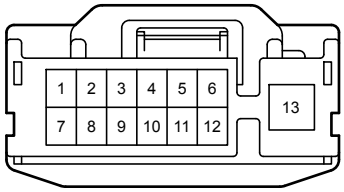

E130
White

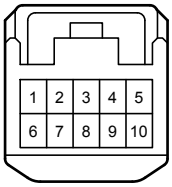
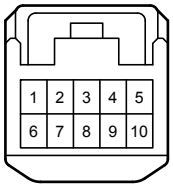
E131
White