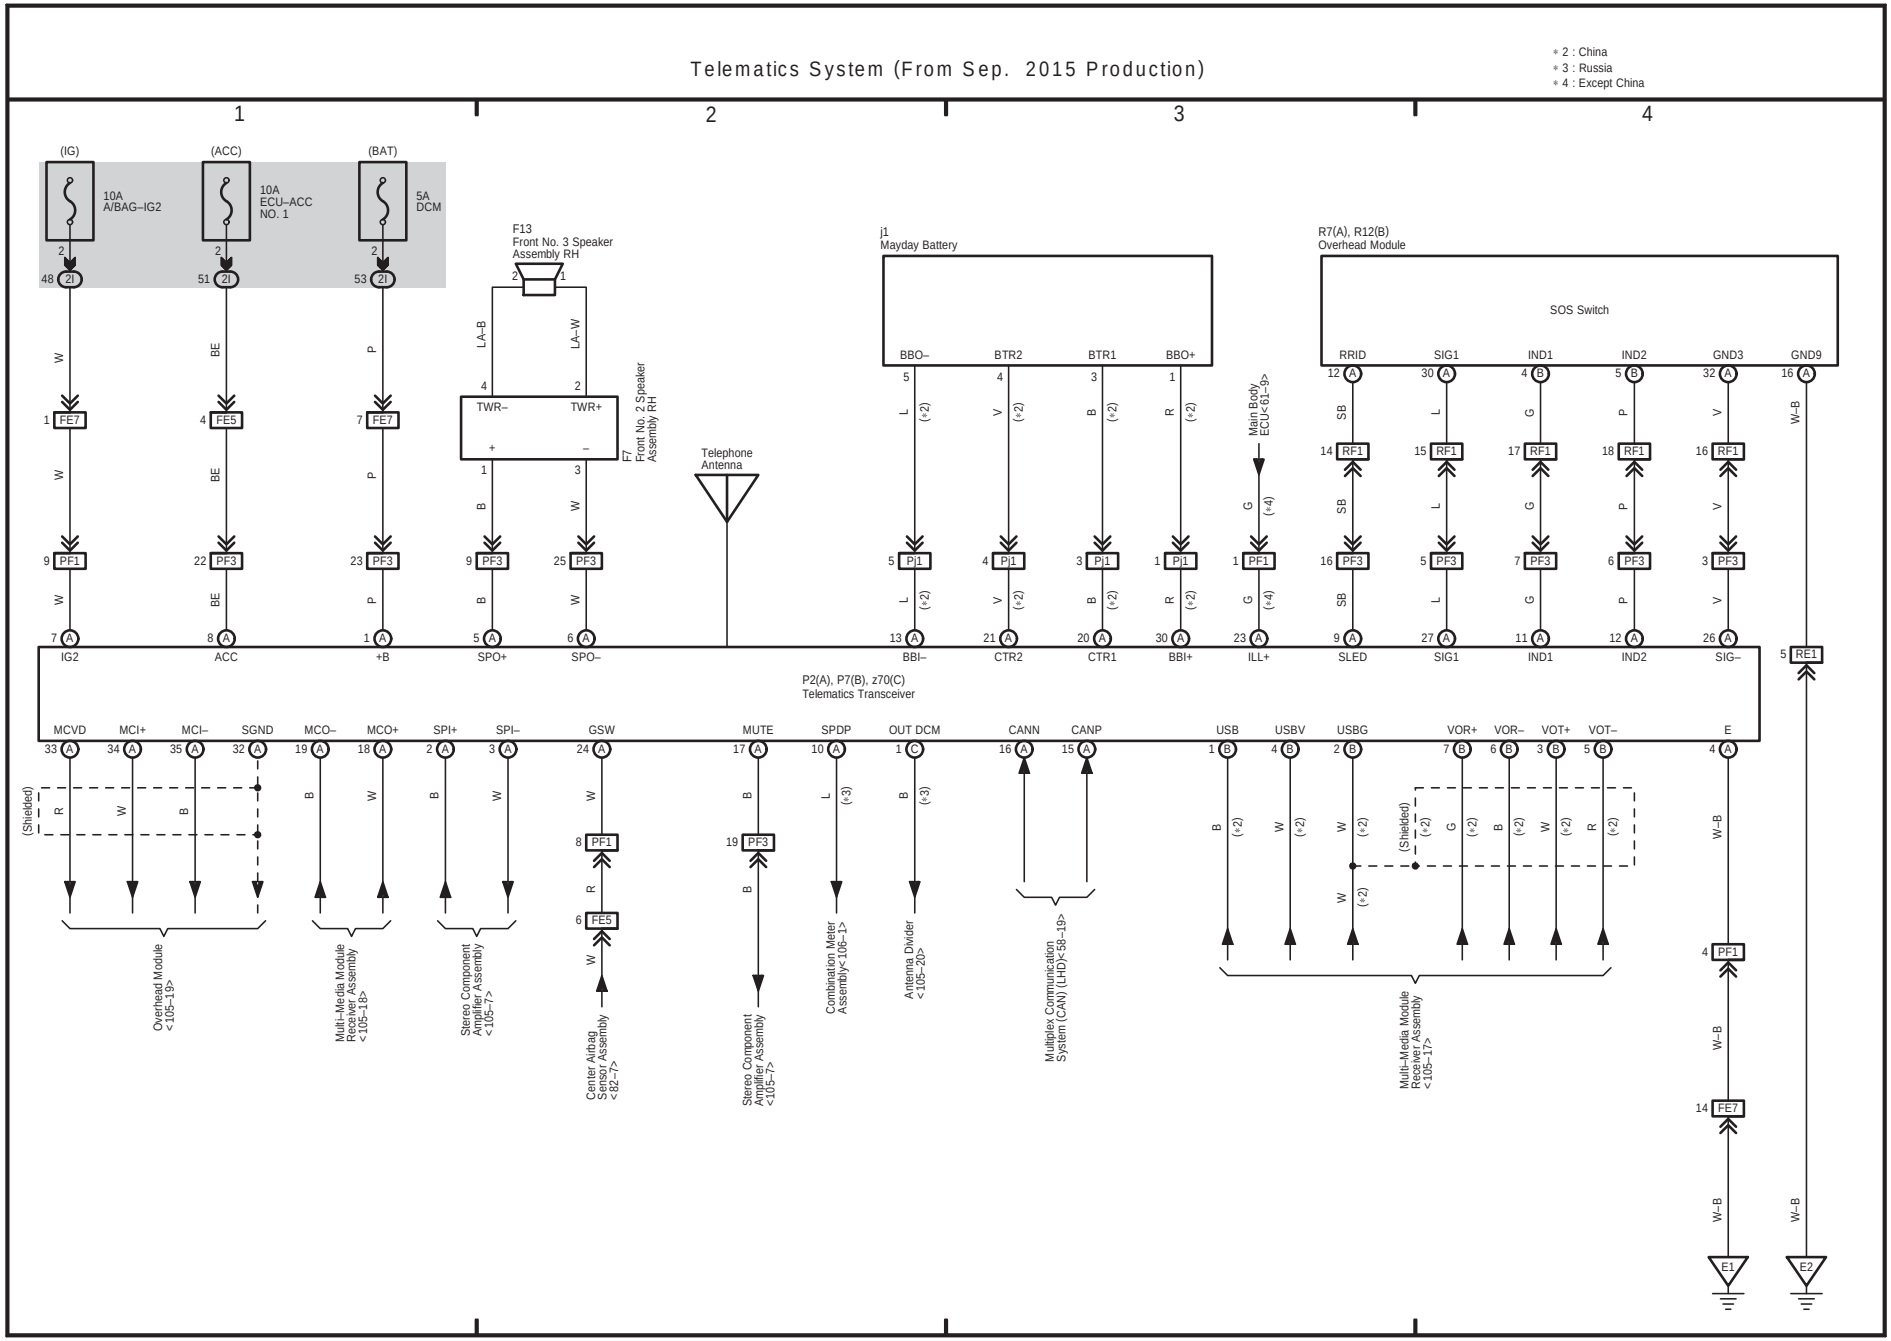
Telematics System (From Sep. 2015 Production)
* 2 : China
* 3 : Russia
* 4 : Except China
(IG)
(ACC)
(BAT)
10A A/BAG–IG2
10A ECU–ACC NO. 1
5A DCM
F13 Front No. 3 Speaker Assembly RH
F7 Front No. 2 Speaker Assembly RH
TWR–
TWR+
LA–B
LA–W
Telephone Antenna
j1 Mayday Battery
BBO–
BTR2
BTR1
BBO+
Main Body ECU<61–9>
R7(A), R12(B) Overhead Module
SOS Switch
RRID
SIG1
IND1
IND2
GND3
GND9
IG2
ACC
+B
SPO+
SPO–
BBI–
CTR2
CTR1
BBI+
ILL+
SLED
SIG1
IND1
IND2
SIG–
P2(A), P7(B), z70(C) Telematics Transceiver
MCVD
MCI+
MCI–
SGND
MCO–
MCO+
SPI+
SPI–
GSW
MUTE
SPDP
OUT DCM
CANN
CANP
USB
USBV
USBG
VOR+
VOR–
VOT+
VOT–
E
(Shielded)
Overhead Module <105–19>
Multi-Media Module Receiver Assembly <105–18>
Stereo Component Amplifier Assembly <105–7>
Center Airbag Sensor Assembly <82–7>
Stereo Component Amplifier Assembly <105–7>
Combination Meter Assembly<106–1>
Antenna Divider <105–20>
Multiplex Communication System (CAN) (LHD)<58–19>
Multi-Media Module Receiver Assembly <105–17>
E1
E2