4 LX 570 / LX 460 / LX 450d

(Cont. next page)

Engine Immobiliser System, Entry & Start System, Starting, Steering Lock, Theft Deterrent and Wireless Door Lock Control (Before Sep. 2015 Production)

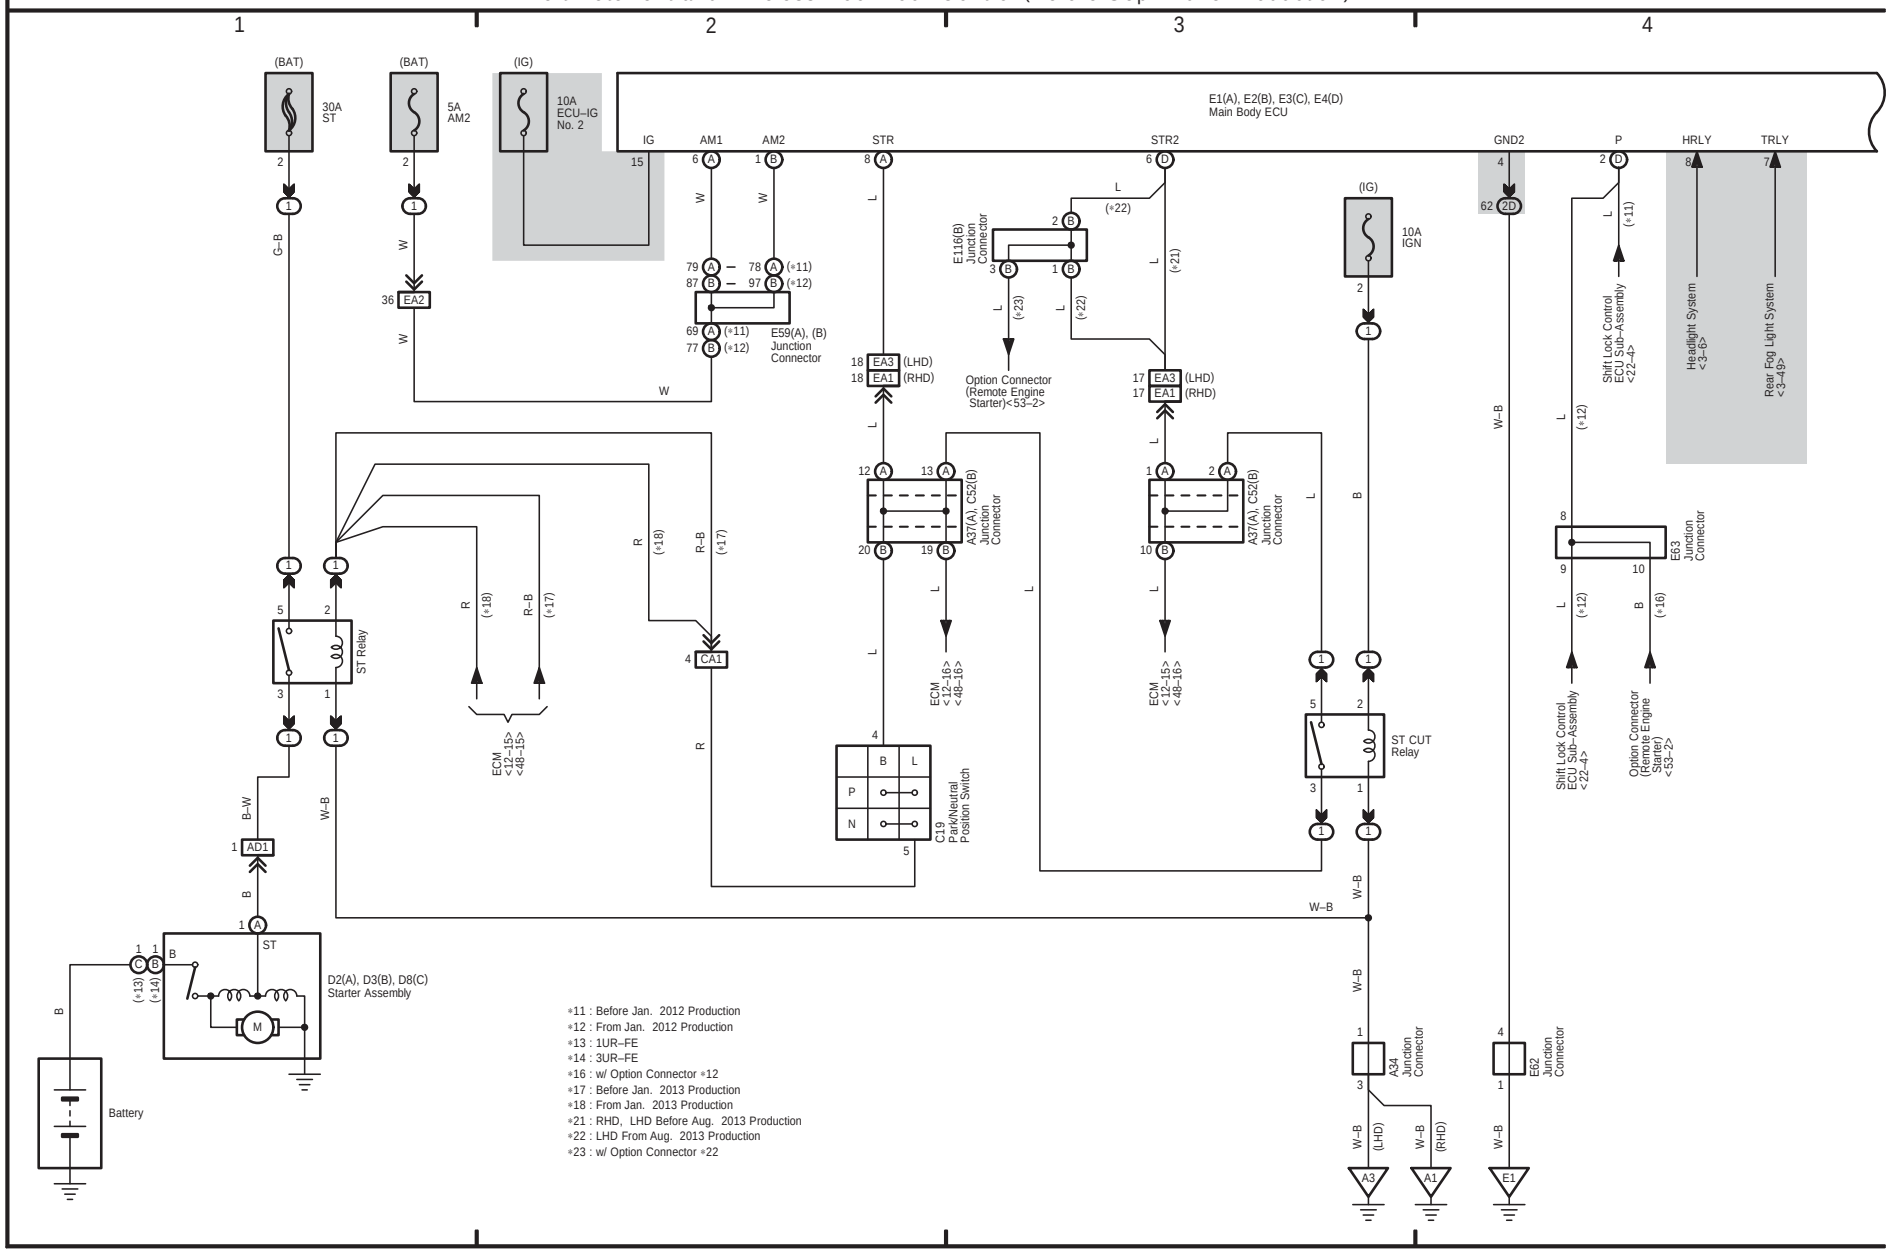

(Cont. next page)

Engine Immobiliser System, Entry & Start System, Starting, Steering Lock, Theft Deterrent and Wireless Door Lock Control (Before Sep. 2015 Production)

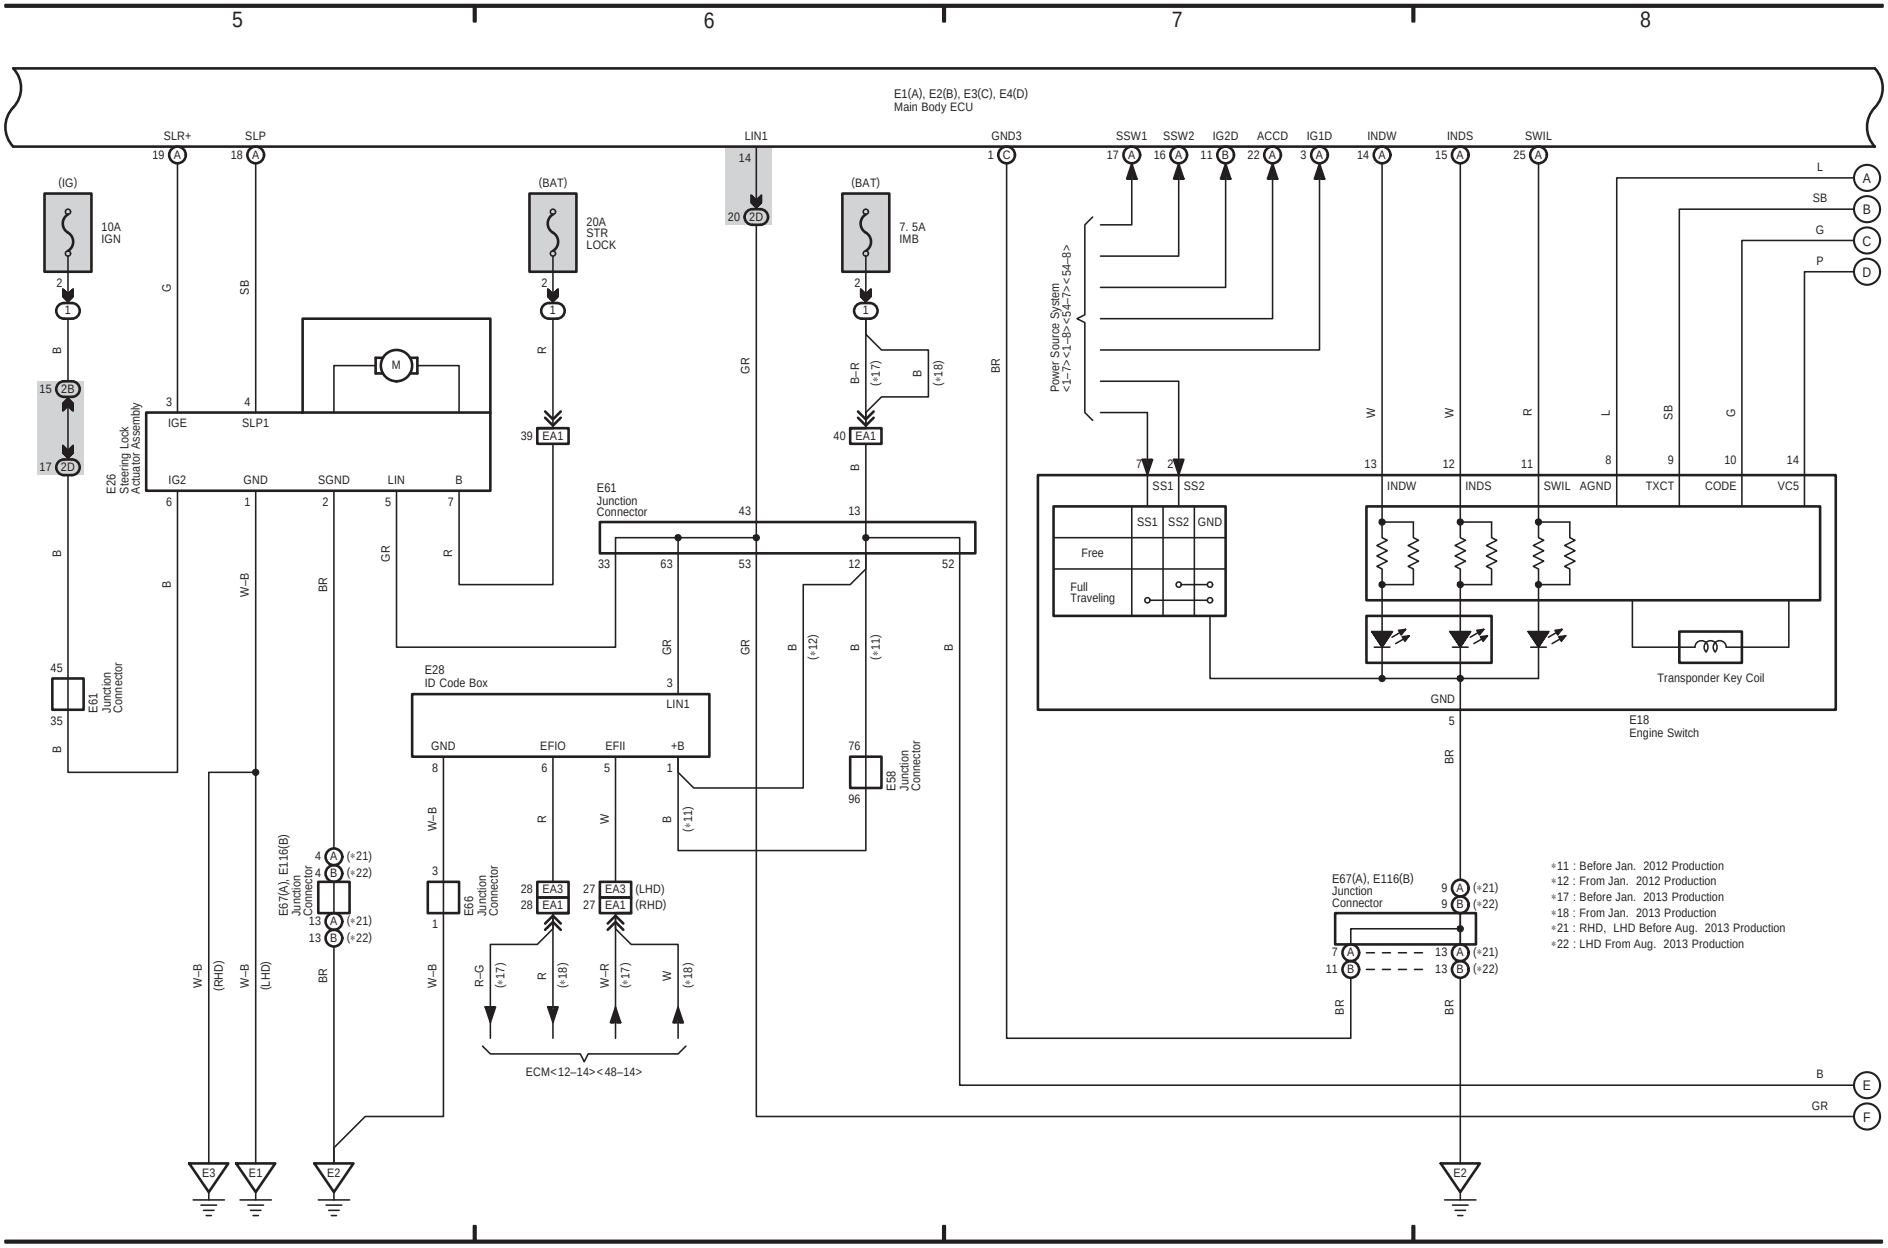

4 LX 570 / LX 460 / LX 450d (Cont' d)

(Cont. next page)

Engine Immobiliser System, Entry & Start System, Starting, Steering Lock, Theft Deterrent and Wireless Door Lock Control (Before Sep. 2015 Production)

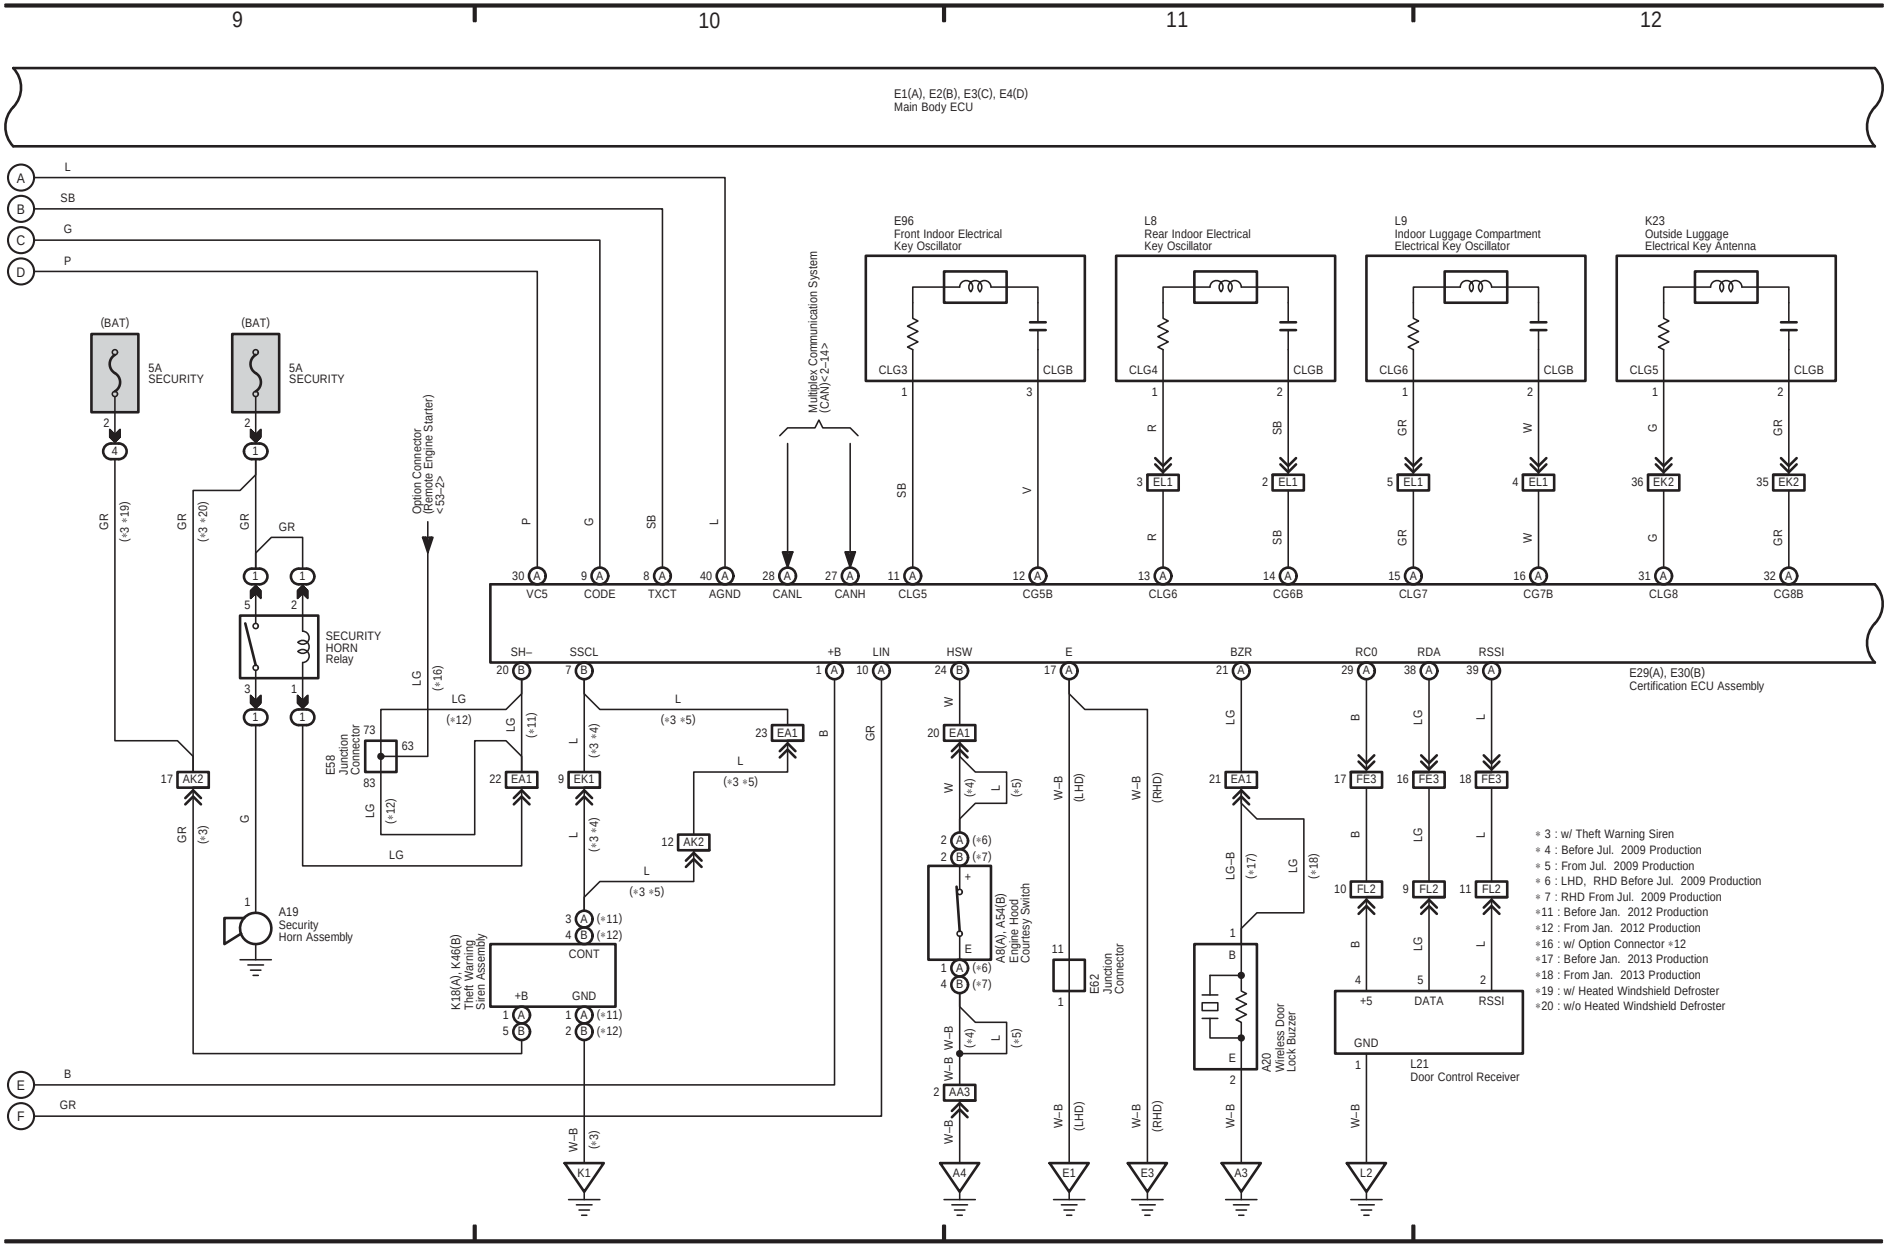

(Cont. next page)

Engine Immobiliser System, Entry & Start System, Starting, Steering Lock, Theft Deterrent and Wireless Door Lock Control (Before Sep. 2015 Production)

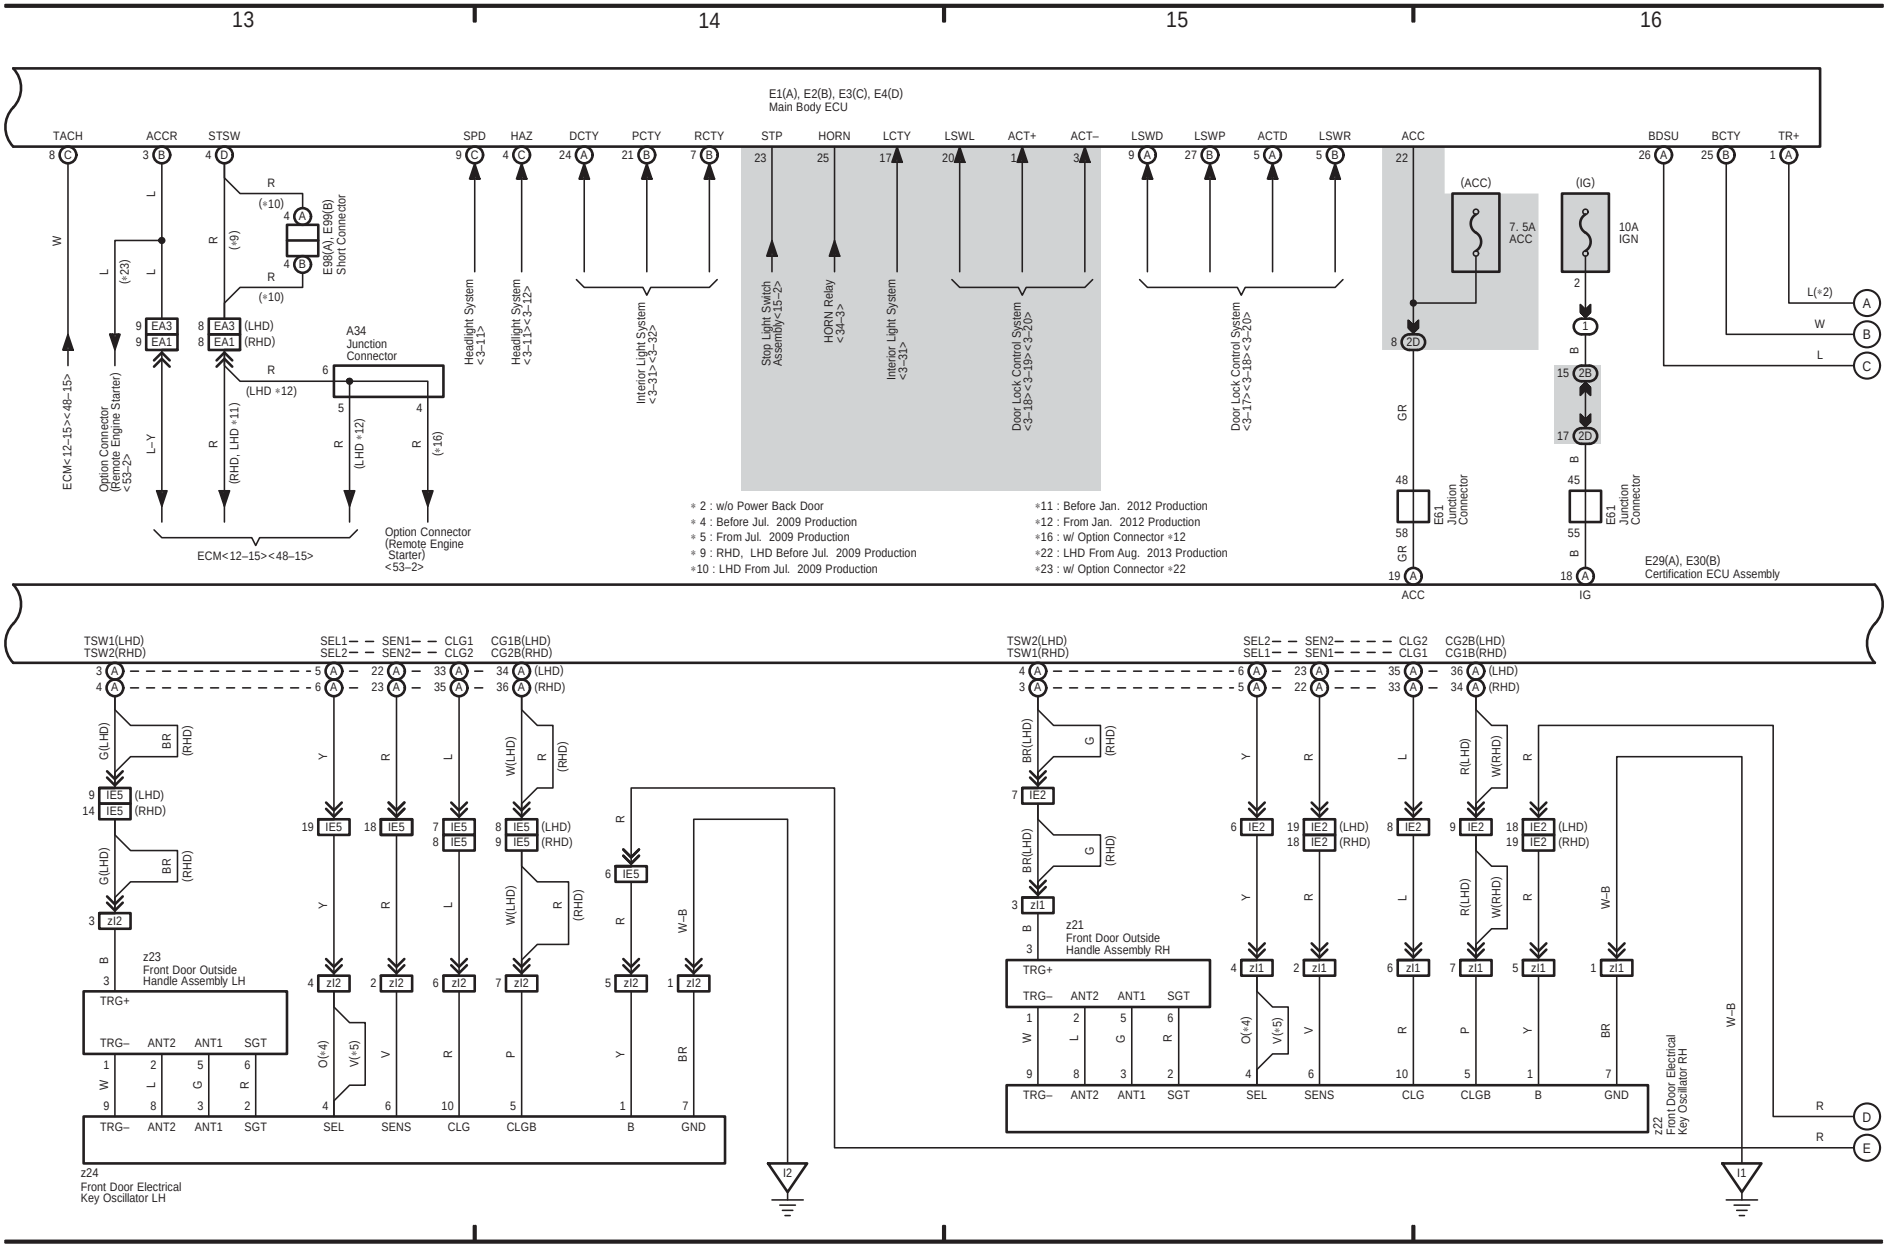

4 LX 570 / LX 460 / LX 450d (Cont' d)

(Cont. next page)

Engine Immobiliser System, Entry & Start System, Starting, Steering Lock, Theft Deterrent and Wireless Door Lock Control (Before Sep. 2015 Production)

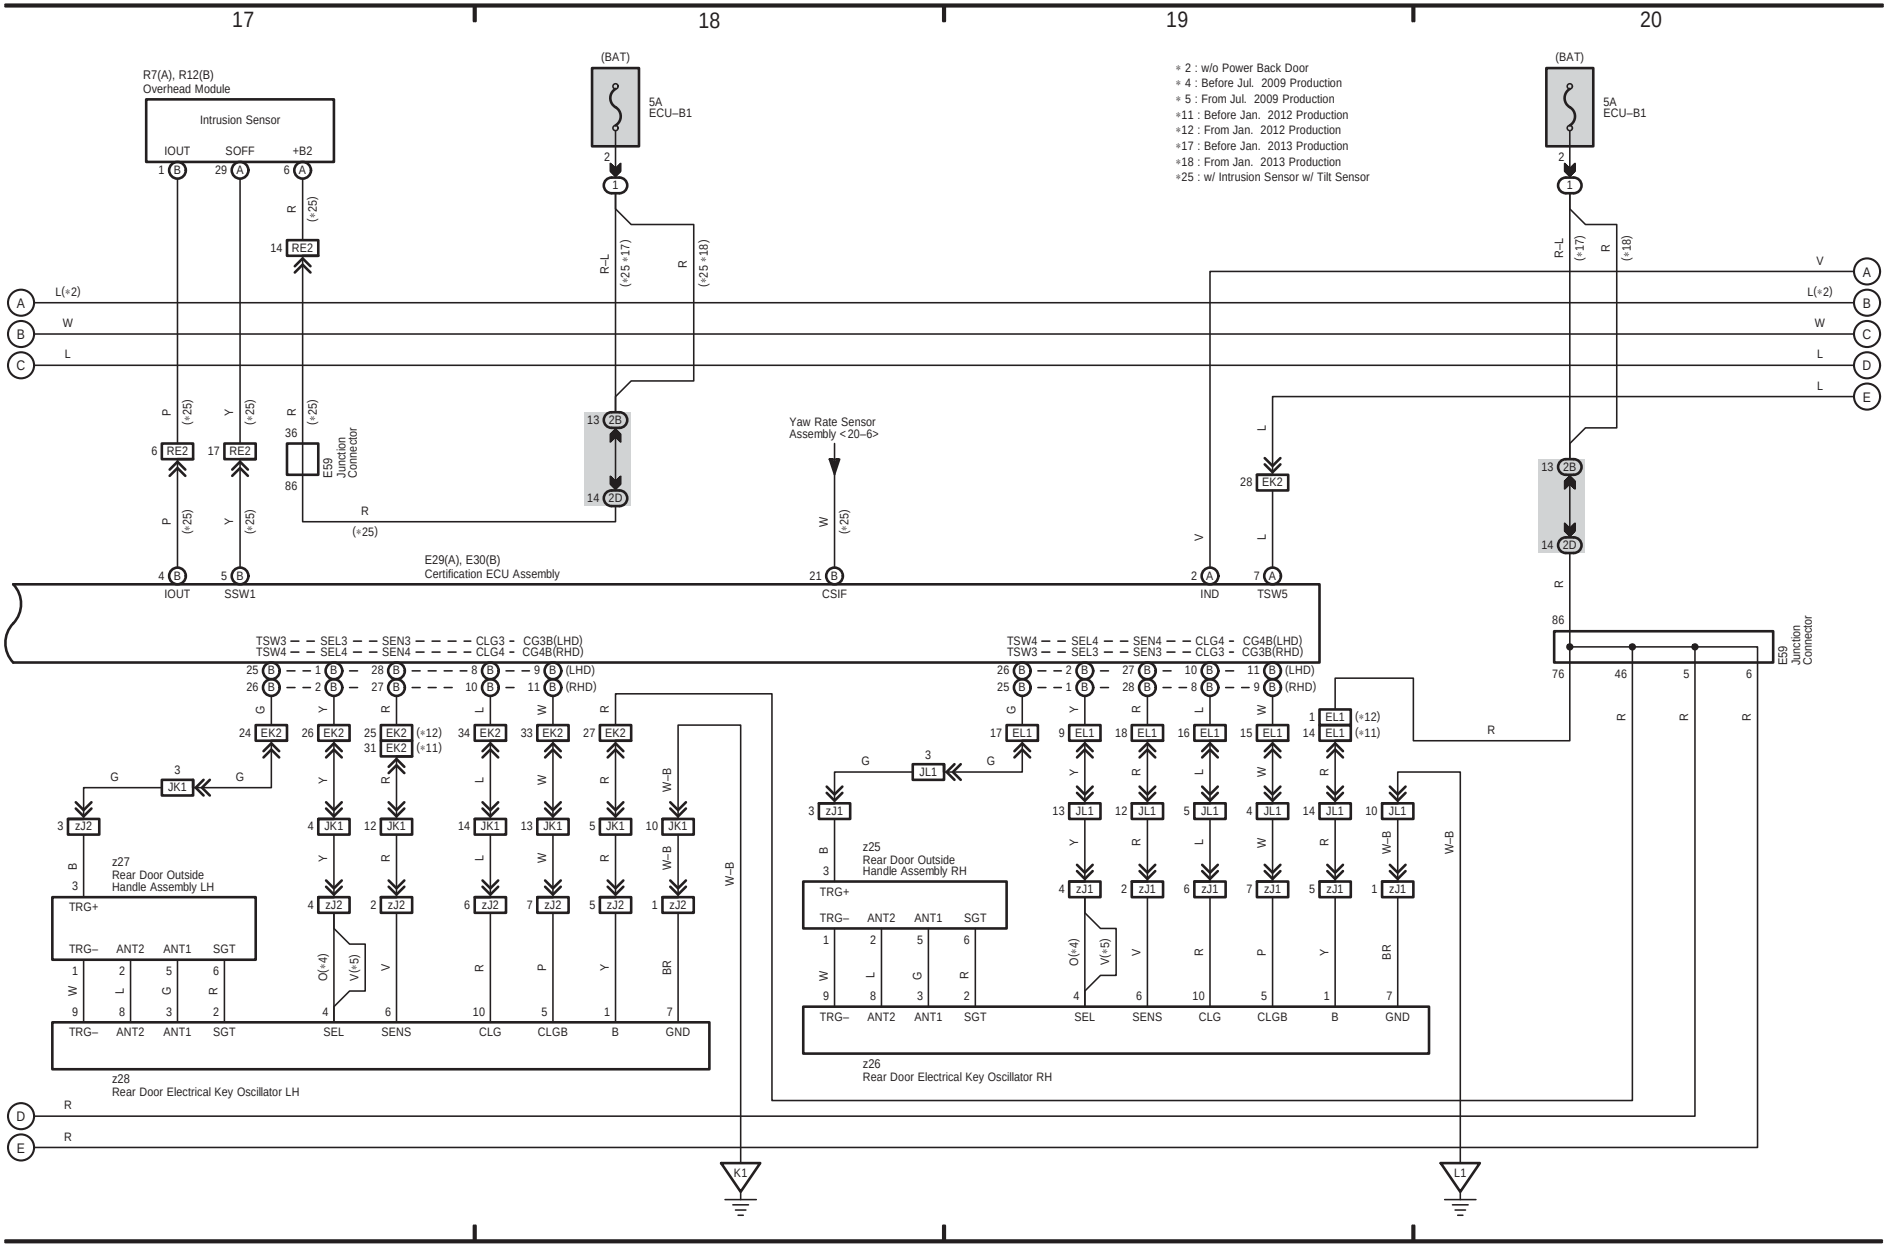

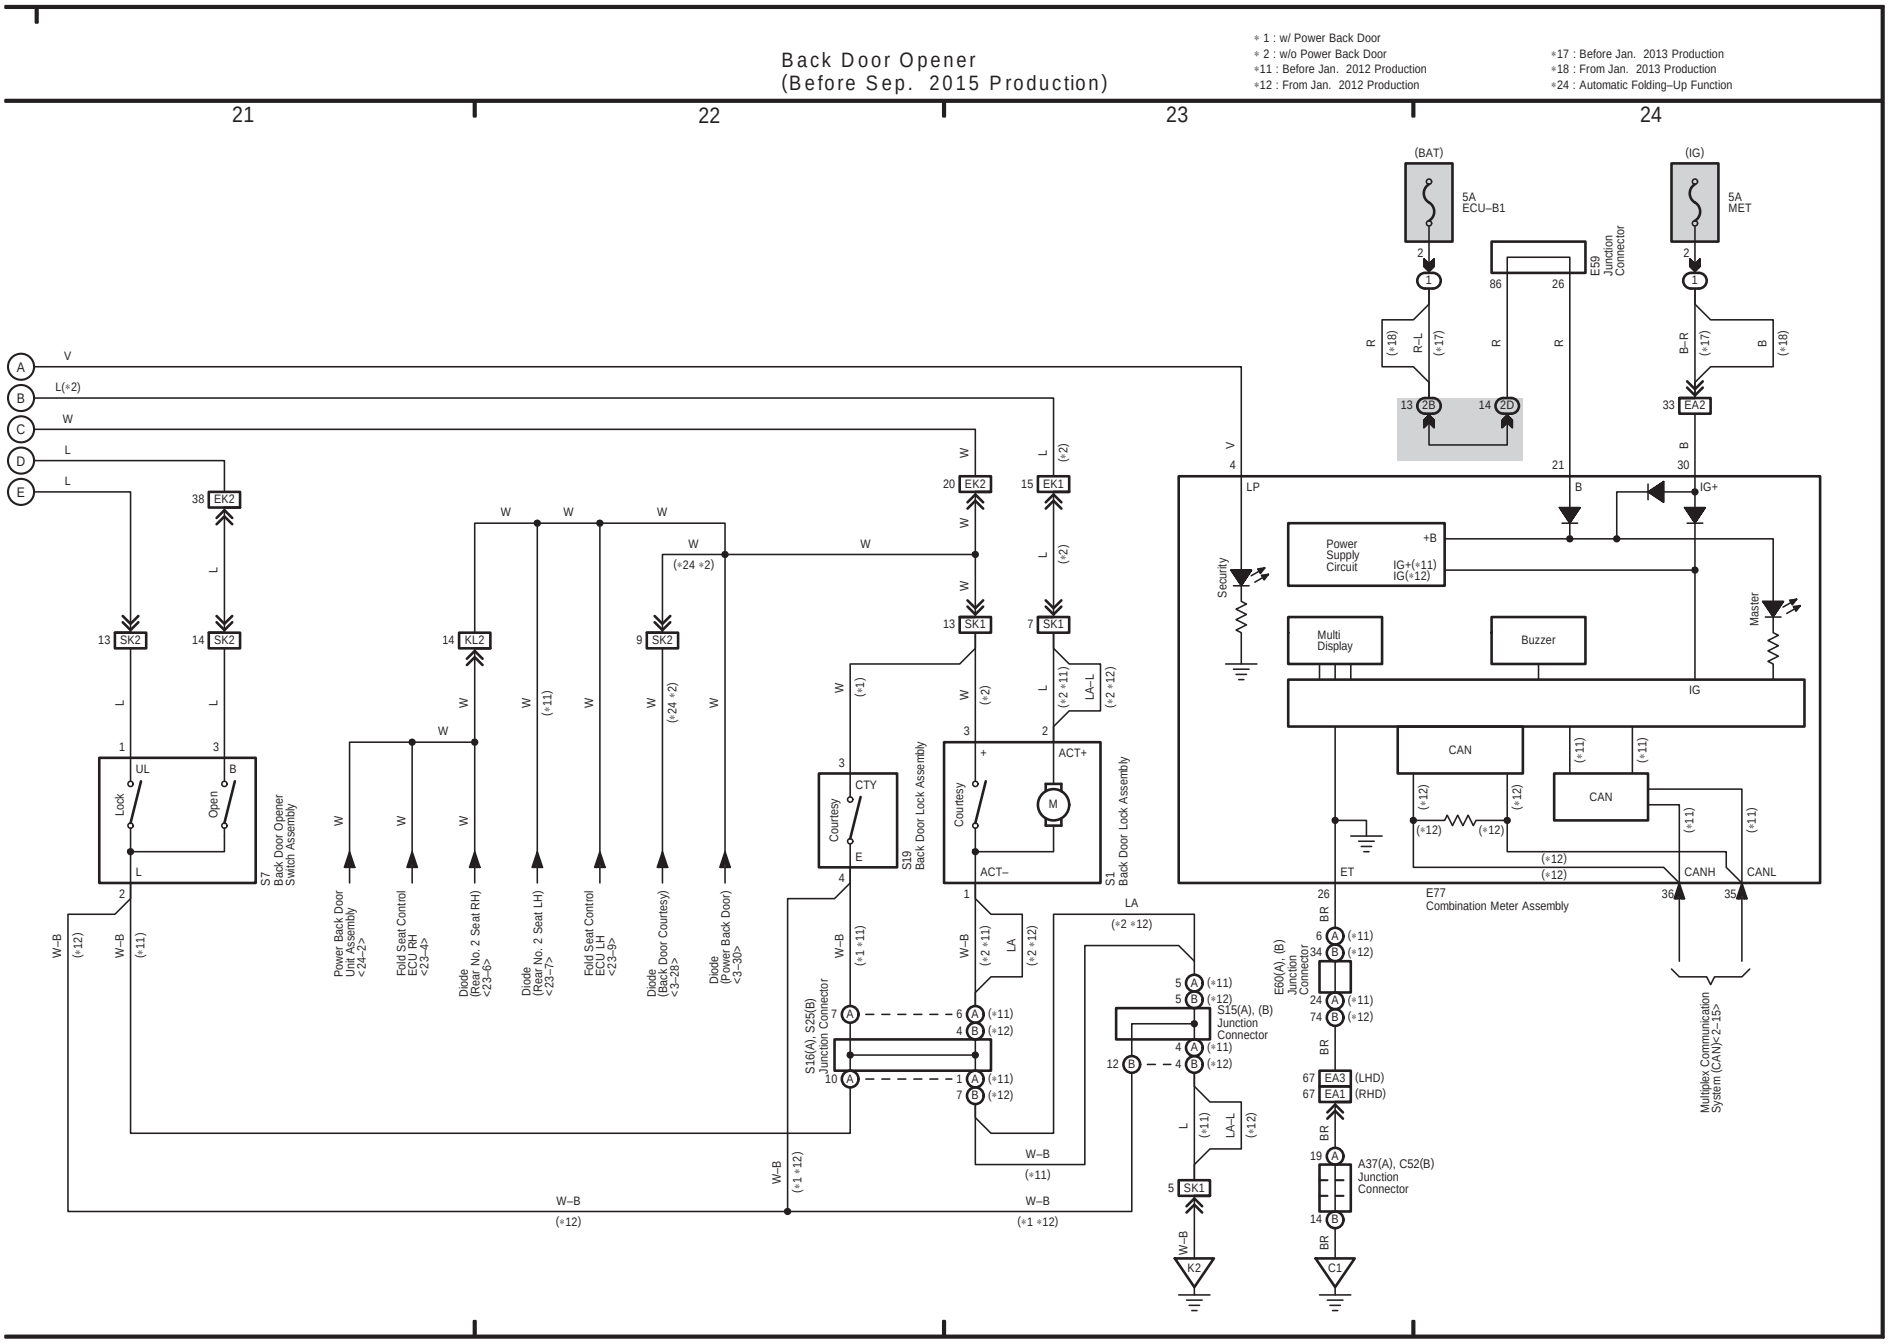
Back Door Opener
(Before Sep. 2015 Production)
∗1 : w/ Power Back Door
∗2 : w/o Power Back Door
∗11 : Before Jan. 2012 Production
∗12 : From Jan. 2012 Production
∗17 : Before Jan. 2013 Production
∗18 : From Jan. 2013 Production
∗24 : Automatic Folding–Up Function
21
22
23
24
(BAT)
(IG)
5A ECU–B1
5A MET
E59 Junction Connector
S7 Back Door Opener Switch Assembly
Lock
Open
Power Back Door Unit Assembly <24–2>
Fold Seat Control ECU RH <23–4>
Diode (Rear No. 2 Seat RH) <23–6>
Diode (Rear No. 2 Seat LH) <23–7>
Fold Seat Control ECU LH <23–9>
Diode (Back Door Courtesy) <3–28>
Diode (Power Back Door) <3–30>
S19 Back Door Lock Assembly
Courtesy
S1 Back Door Lock Assembly
S16(A), S25(B) Junction Connector
S15(A), (B) Junction Connector
E60(A), (B) Junction Connector
A37(A), C52(B) Junction Connector
E77 Combination Meter Assembly
Power Supply Circuit
Security
Multi Display
Buzzer
Master
CAN
CANH
CANL
Multiplex Communication System (CAN)<2–15>
(LHD)
(RHD)