POWER TILT AND POWER TELESCOPIC STEERING COLUMN

COMPONENTS

SR0MV–03

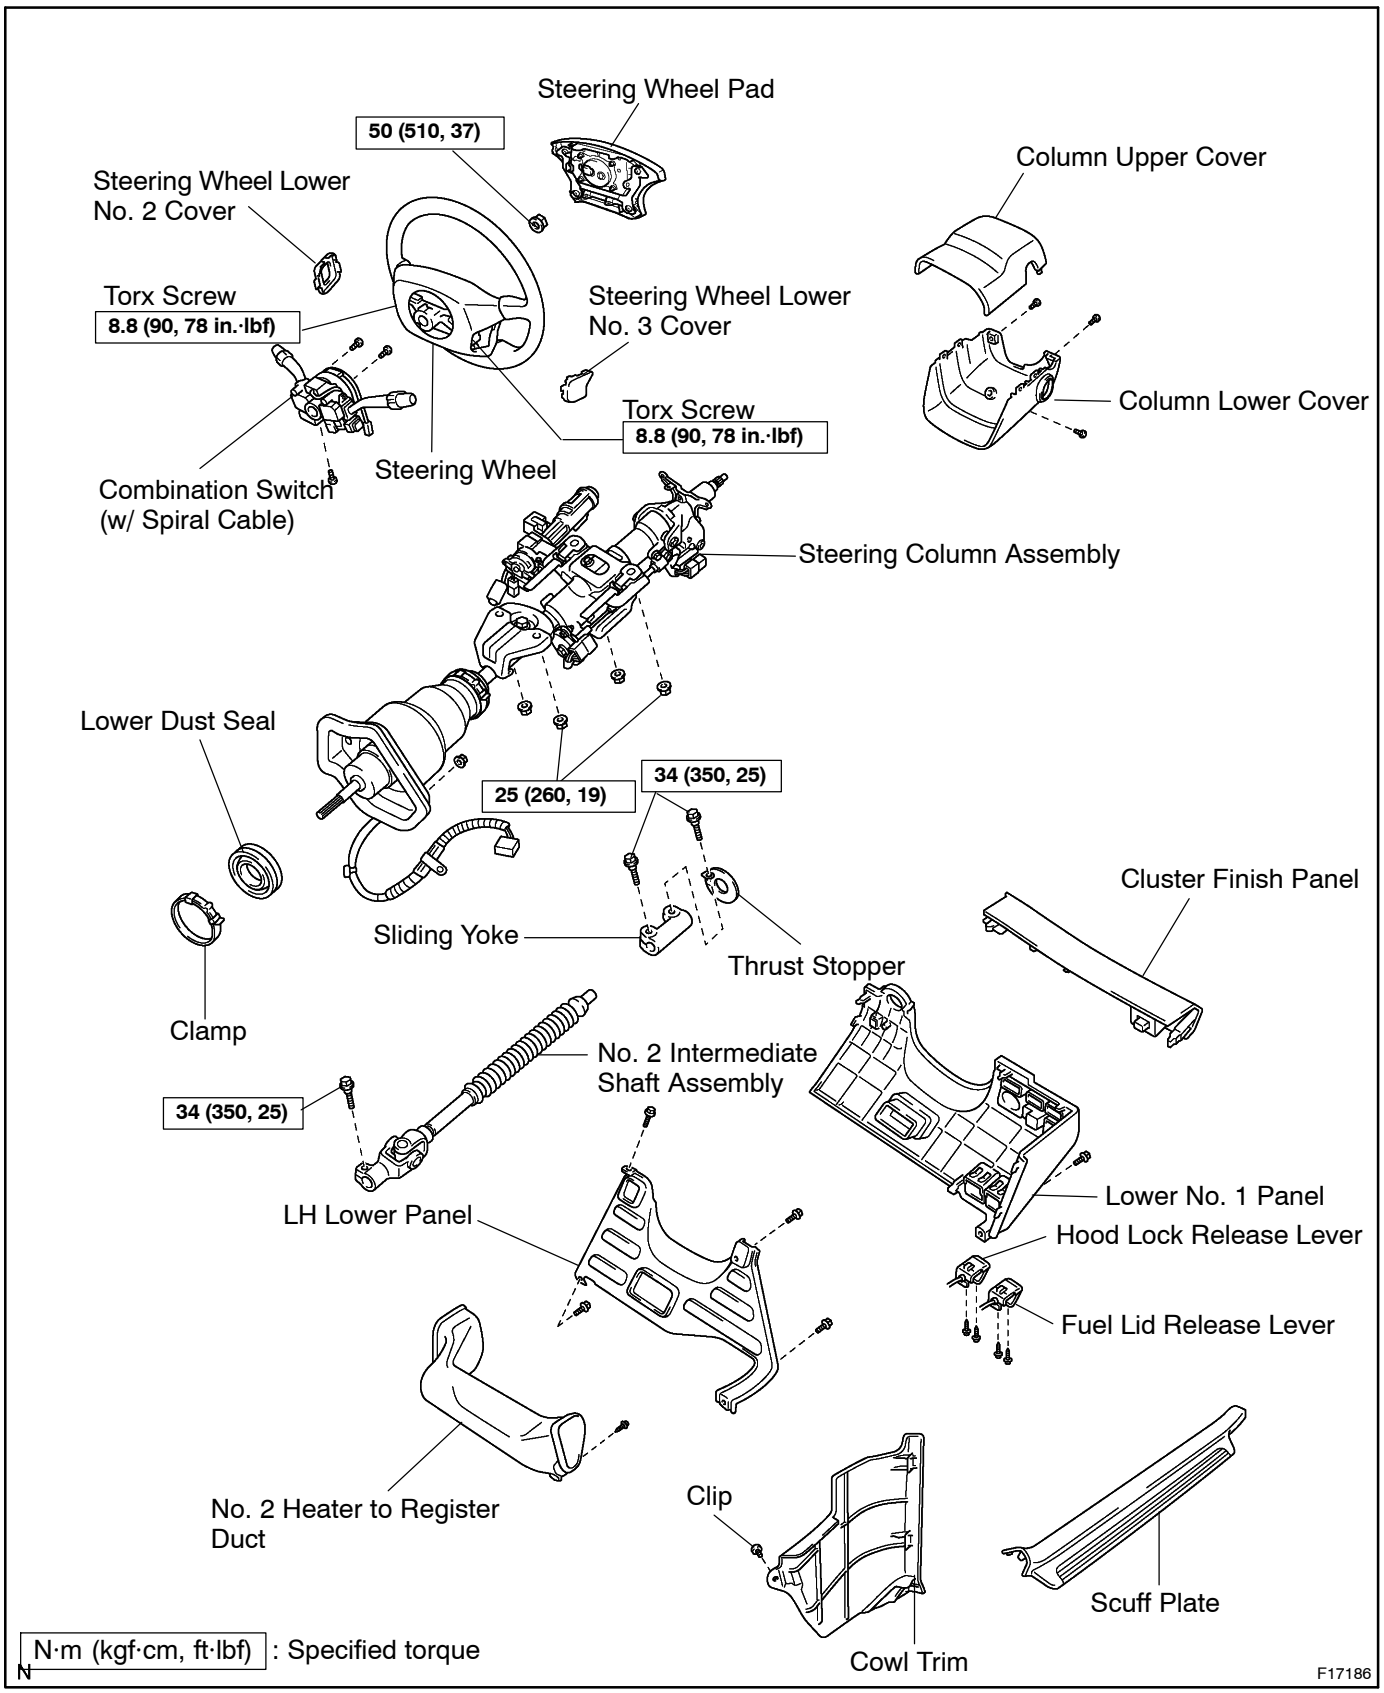

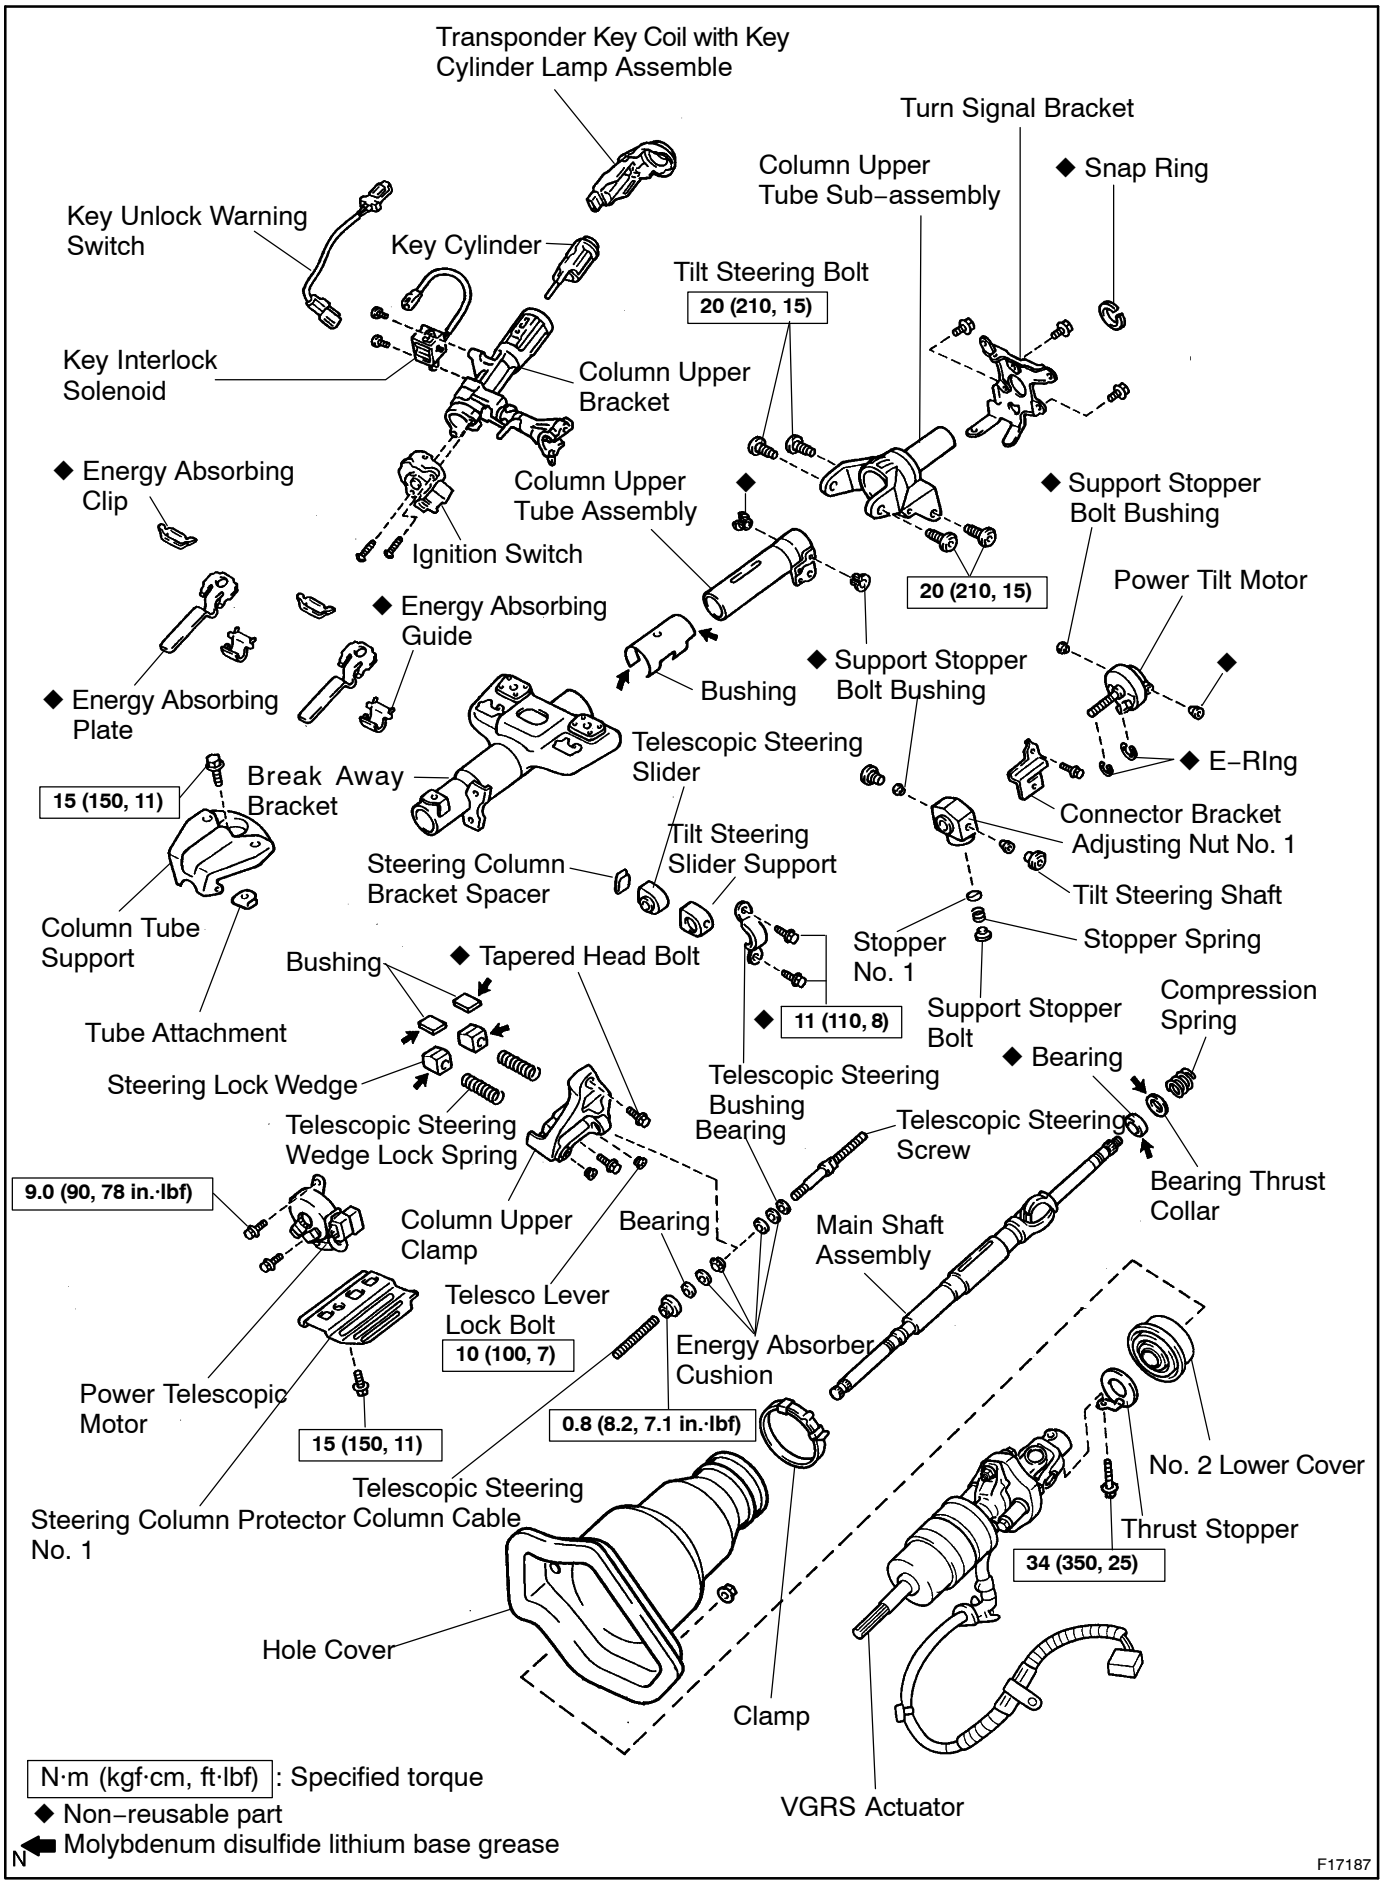
Transponder Key Coil with Key Cylinder Lamp Assemble
Turn Signal Bracket
Column Upper Tube Sub–assembly
◆ Snap Ring
Key Unlock Warning Switch
Key Cylinder
Tilt Steering Bolt
20 (210, 15)
Key Interlock Solenoid
Column Upper Bracket
◆ Energy Absorbing Clip
Column Upper Tube Assembly
◆
◆ Support Stopper Bolt Bushing
Ignition Switch
20 (210, 15)
Power Tilt Motor
◆ Energy Absorbing Guide
◆ Support Stopper Bolt Bushing
◆
Bushing
◆ Energy Absorbing Plate
Telescopic Steering Slider
◆ E–RIng
15 (150, 11)
Break Away Bracket
Connector Bracket
Adjusting Nut No. 1
Tilt Steering Slider Support
Steering Column Bracket Spacer
Tilt Steering Shaft
Column Tube Support
Stopper No. 1
Stopper Spring
Bushing
◆ Tapered Head Bolt
Support Stopper Bolt
Compression Spring
◆ 11 (110, 8)
Tube Attachment
◆ Bearing
Steering Lock Wedge
Telescopic Steering Bushing
Telescopic Steering Wedge Lock Spring
Bearing
Telescopic Steering Screw
Bearing Thrust Collar
9.0 (90, 78 in.·lbf)
Column Upper Clamp
Bearing
Main Shaft Assembly
Telesco Lever Lock Bolt
10 (100, 7)
Energy Absorber Cushion
Power Telescopic Motor
15 (150, 11)
0.8 (8.2, 7.1 in.·lbf)
No. 2 Lower Cover
Telescopic Steering Column Cable
Steering Column Protector No. 1
Thrust Stopper
34 (350, 25)
Hole Cover
Clamp
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
Molybdenum disulfide lithium base grease
VGRS Actuator
N
F17187