27 LX 470

(Cont. next page)

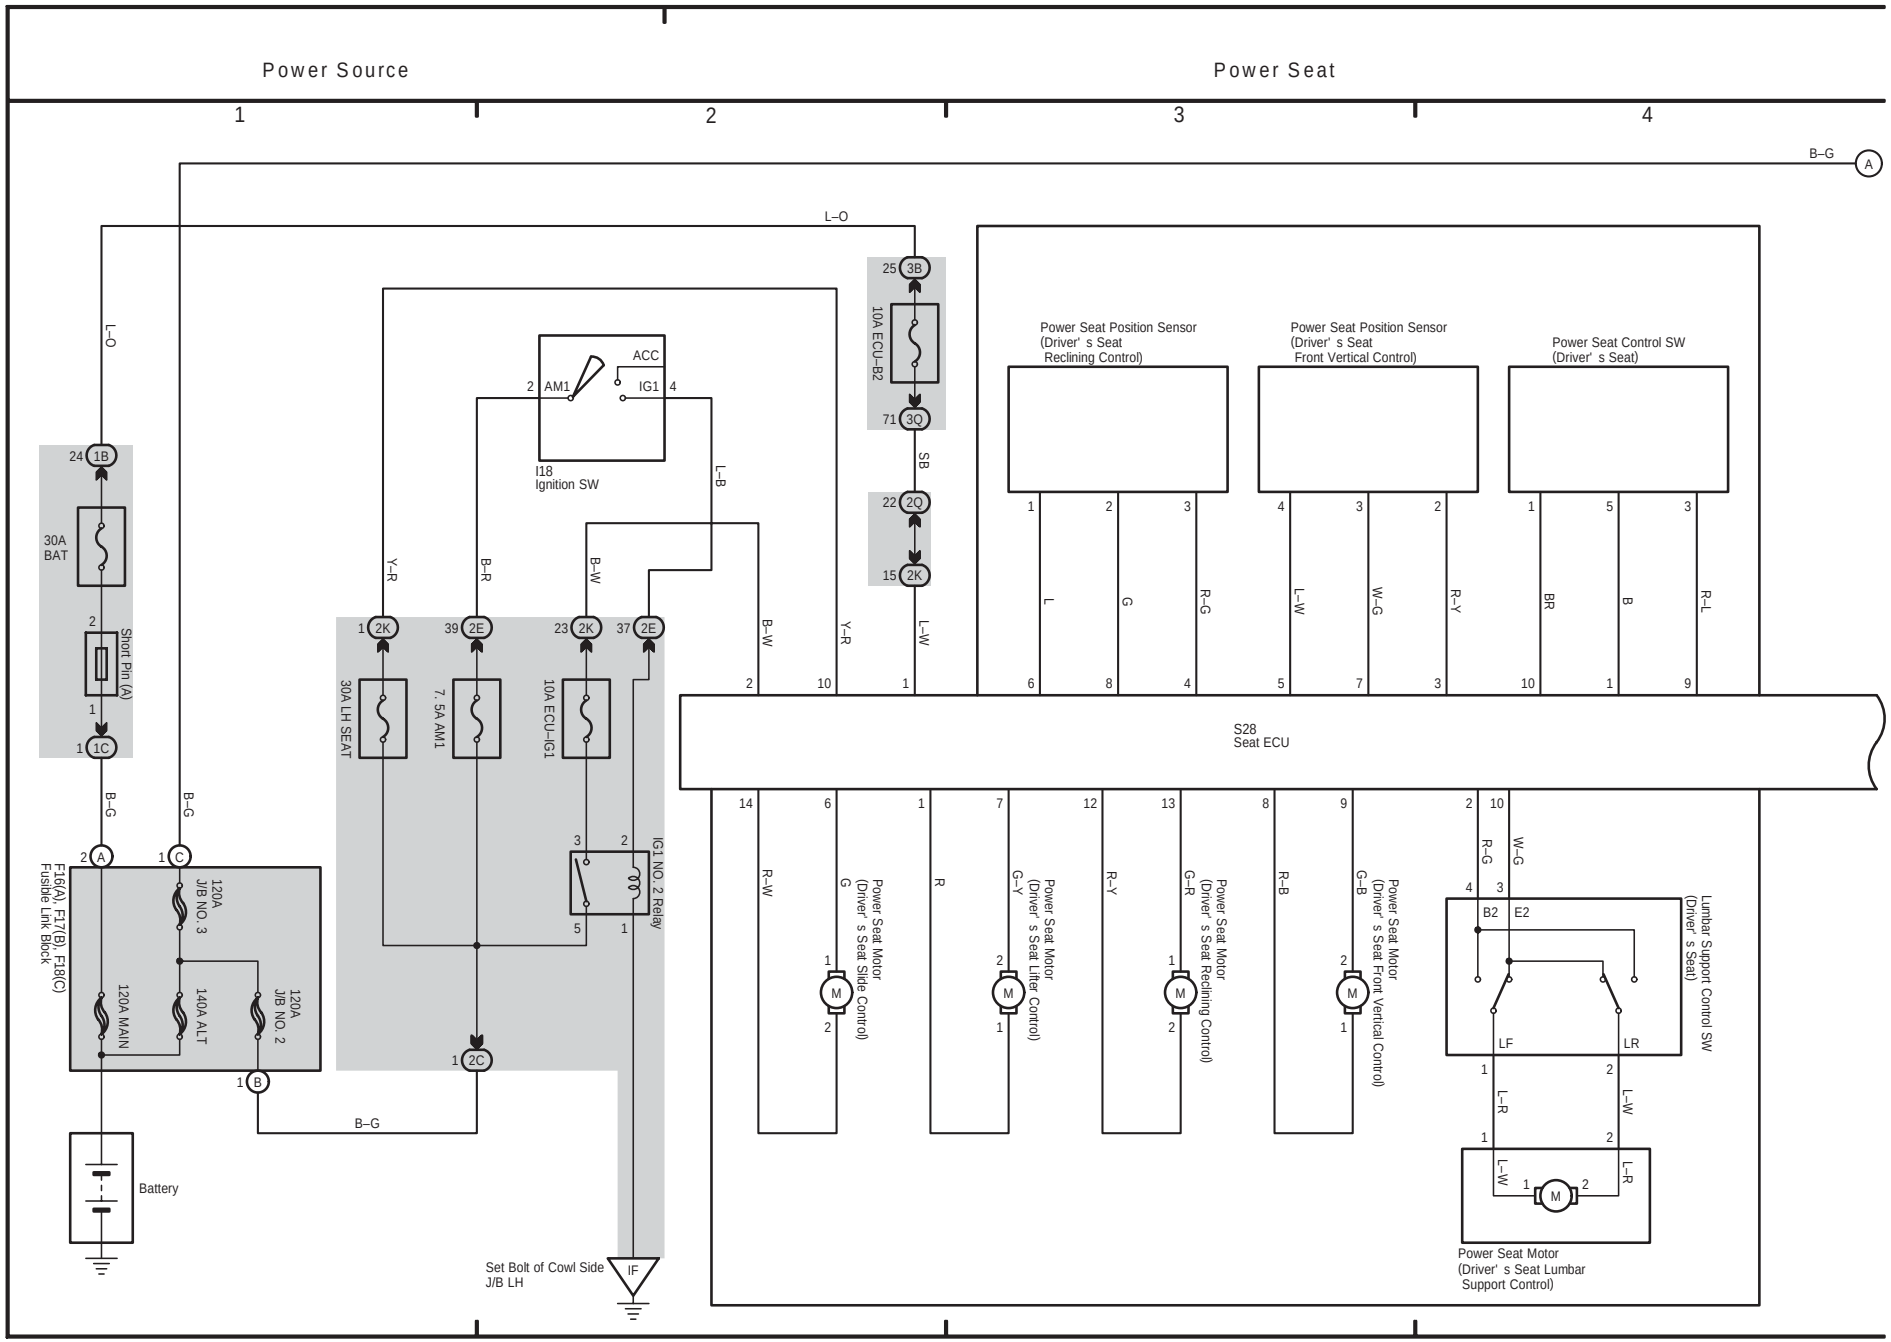

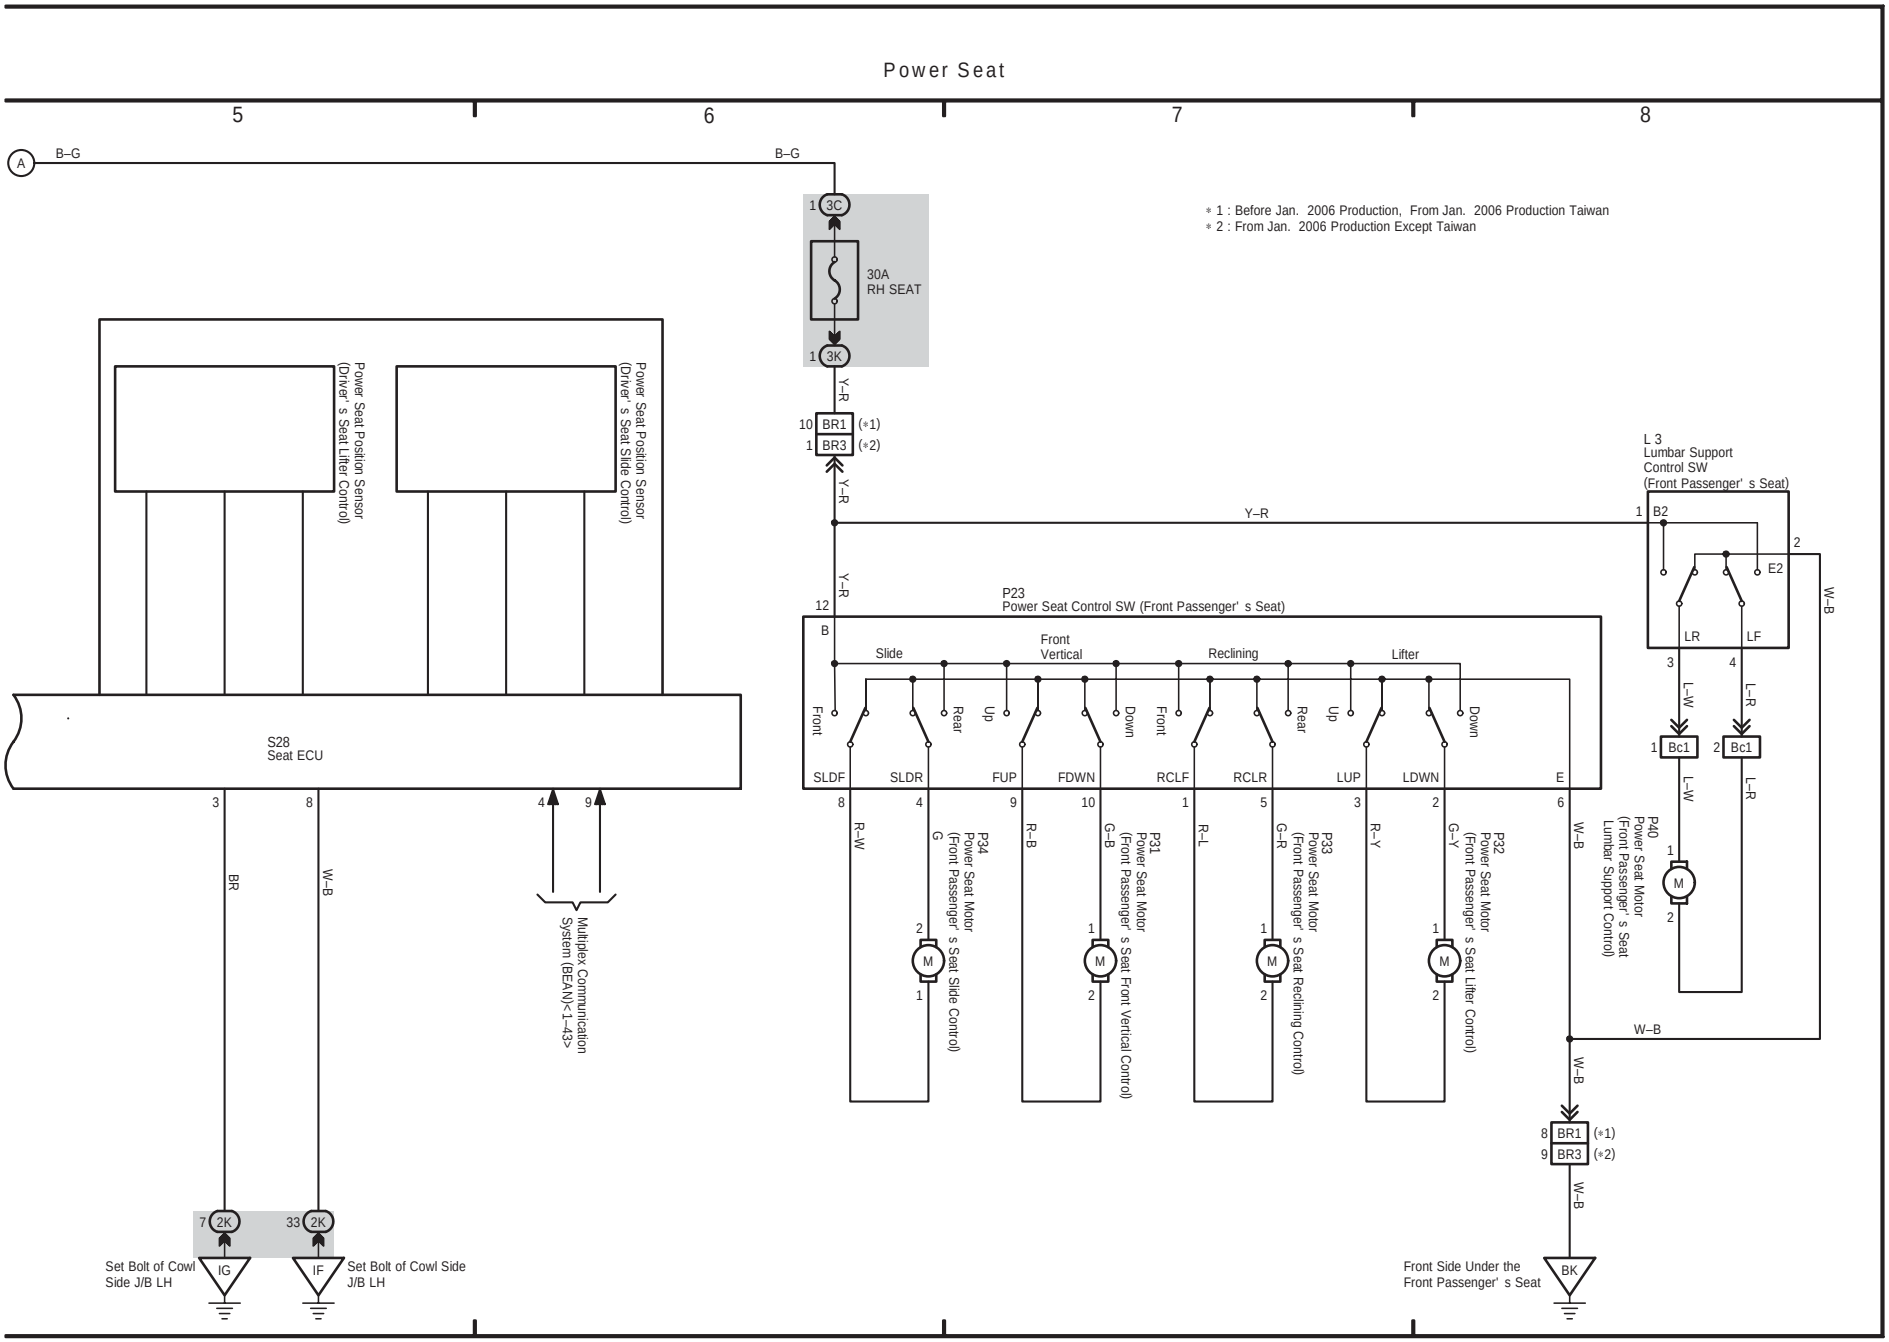
Power Seat
5
6
7
8
A
B–G
B–G
1 3C
30A
RH SEAT
1 3K
Y–R
10 BR1 (*1)
1 BR3 (*2)
Y–R
Y–R
12
B
P23
Power Seat Control SW (Front Passenger' s Seat)
Slide
Front
Vertical
Reclining
Lifter
Front
Rear
Up
Down
Front
Rear
Up
Down
SLDF
SLDR
FUP
FDWN
RCLF
RCLR
LUP
LDWN
E
8
4
9
10
1
5
3
2
6
R–W
R–B
G–B
R–L
G–R
R–Y
G–Y
W–B
P34
Power Seat Motor
(Front Passenger' s Seat Slide Control)
P31
Power Seat Motor
(Front Passenger' s Seat Front Vertical Control)
P33
Power Seat Motor
(Front Passenger' s Seat Reclining Control)
P32
Power Seat Motor
(Front Passenger' s Seat Lifter Control)
P40
Power Seat Motor
(Front Passenger' s Seat
Lumbar Support Control)
L 3
Lumbar Support
Control SW
(Front Passenger' s Seat)
1 B2
2
E2
LR
LF
3
4
L–W
L–R
1 Bc1
2 Bc1
W–B
W–B
W–B
8 BR1 (*1)
9 BR3 (*2)
W–B
BK
Front Side Under the
Front Passenger' s Seat
* 1 : Before Jan. 2006 Production, From Jan. 2006 Production Taiwan
* 2 : From Jan. 2006 Production Except Taiwan
Power Seat Position Sensor
(Driver' s Seat Lifter Control)
Power Seat Position Sensor
(Driver' s Seat Slide Control)
S28
Seat ECU
3
8
4
9
BR
W–B
Multiplex Communication
System (BEAN)<1–43>
7 2K
33 2K
IG
IF
Set Bolt of Cowl
Side J/B LH
Set Bolt of Cowl Side
J/B LH