10 LX 470

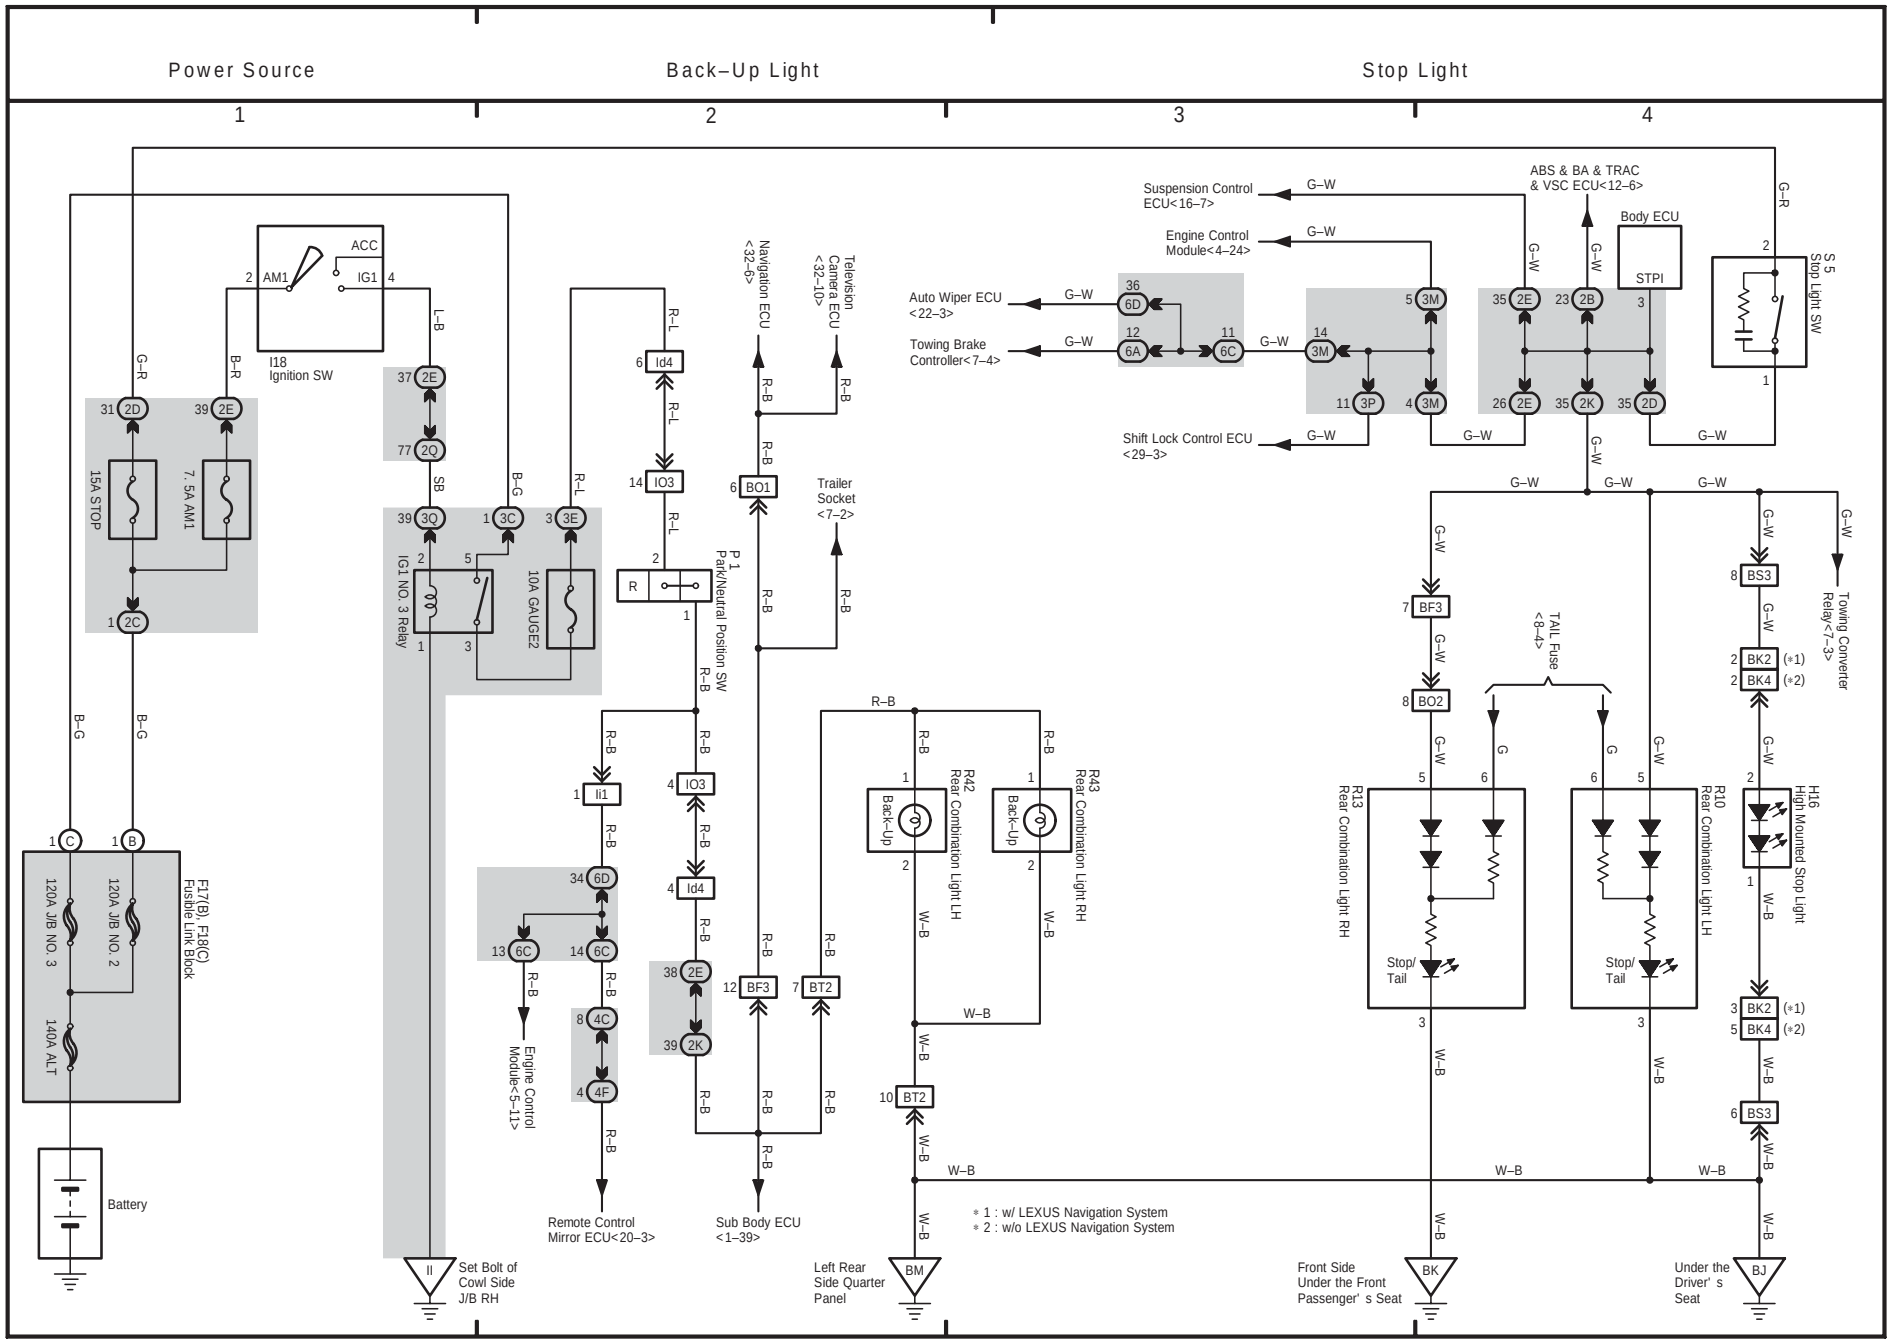
Power Source
Back–Up Light
Stop Light
1
2
3
4
I18
Ignition SW
ACC
AM1
IG1
15A STOP
7. 5A AM1
IG1 NO. 3 Relay
10A GAUGE2
P 1
Park/Neutral Position SW
Navigation ECU
<32–6>
Television
Camera ECU
<32–1D>
Trailer
Socket
<7–2>
Suspension Control
ECU<16–7>
Engine Control
Module<4–24>
Auto Wiper ECU
<22–3>
Towing Brake
Controller<7–4>
Shift Lock Control ECU
<29–3>
ABS & BA & TRAC
& VSC ECU<12–6>
Body ECU
STPI
S 5
Stop Light SW
Towing Converter
Relay<7–3>
TAIL Fuse
<8–4>
R13
Rear Combination Light RH
R10
Rear Combination Light LH
H16
High Mounted Stop Light
Stop/
Tail
R42
Rear Combination Light LH
R43
Rear Combination Light RH
Back–Up
Engine Control
Module<5–11>
Remote Control
Mirror ECU<20–3>
Sub Body ECU
<1–39>
F17(B), F18(C)
Fusible Link Block
120A JB NO. 3
120A JB NO. 2
140A ALT
Battery
Set Bolt of
Cowl Side
J/B RH
Left Rear
Side Quarter
Panel
Front Side
Under the Front
Passenger' s Seat
Under the
Driver' s
Seat
∗ 1 : w/ LEXUS Navigation System
∗ 2 : w/o LEXUS Navigation System