Position of Parts in Seat (LHD Rear Seat)

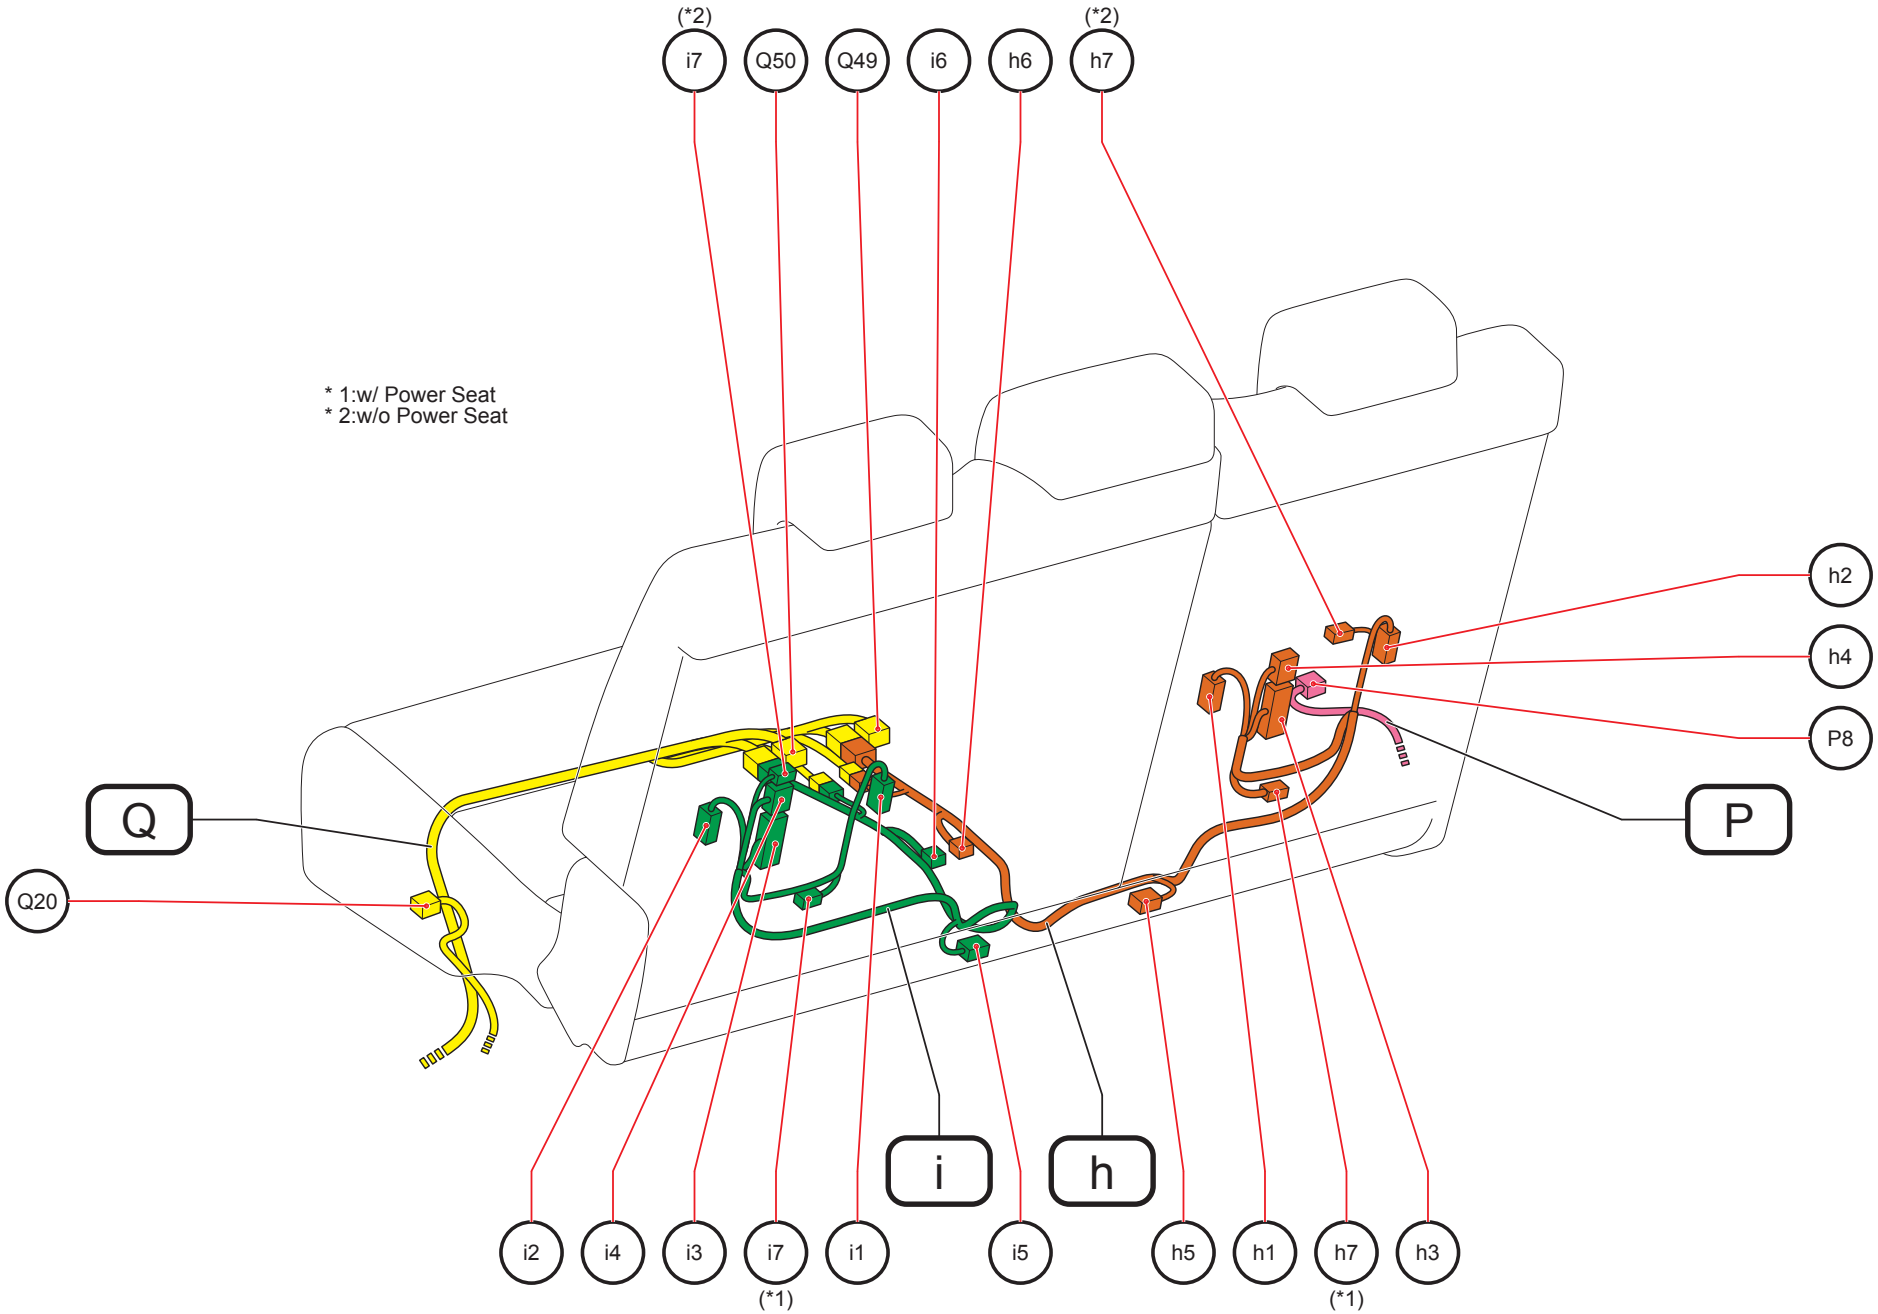

P8 Rear Power Seat Switch RH

Q20 Rear Power Seat Switch LH
Q49 Rear Seat Inner Belt with Center Assembly RH
Q50 Rear Seat Inner Belt Assembly LH

h1 Rear Power Seat Reclining Position Motor RH (Rear Seat Back Frame Sub-Assembly RH)
h2 Rear Power Seat Reclining Position Motor RH (Rear Seat Back Frame Sub-Assembly RH)
h3 Fold Seat Control ECU RH
h4 Fold Seat Control ECU RH
h5 Rear Seat Inner Belt with Center Assembly RH
h6 Bench Type Rear Seat Cushion Cover
h7 Separate Type Rear Seat Back Cover RH

i1 Rear Power Seat Reclining Position Motor LH (Rear Seat Back Frame Sub-Assembly LH)
i2 Rear Power Seat Reclining Position Motor LH (Rear Seat Back Frame Sub-Assembly LH)
i3 Fold Seat Control ECU LH
i4 Fold Seat Control ECU LH
i5 Rear Seat Inner Belt Assembly LH
i6 Bench Type Rear Seat Cushion Cover
i7 Separate Type Rear Seat Back Cover LH

P8
Black

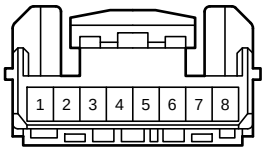

90980-12558

Q20
Black

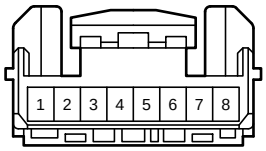

90980-12558

Q49
Gray

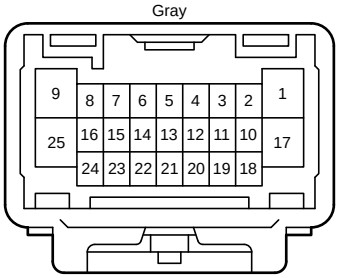

90980-12413

Q50
White

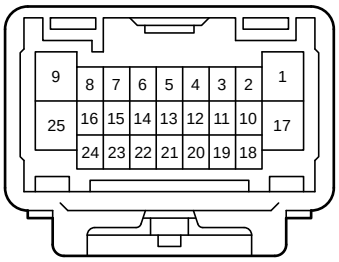

90980-12413

h1
White



90980-12341

h2
White

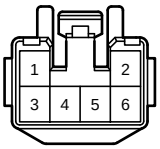

90980-12344

h3
White

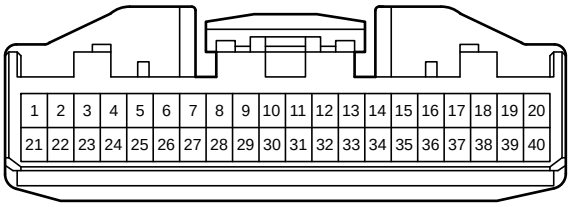

90980-12557

h4
White

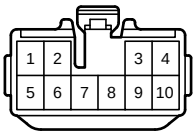

90980-12540

h5
White

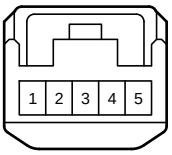

90980-12366

h6
Gray

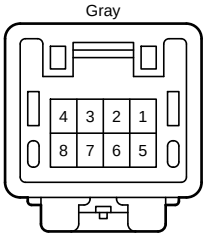

90980-12734

h7
Gray

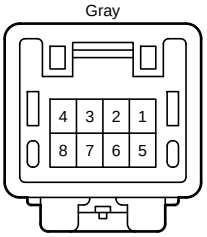

90980-12734

i1
White

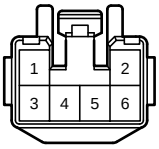

90980-12344

i2
White



90980-12341

i3
White

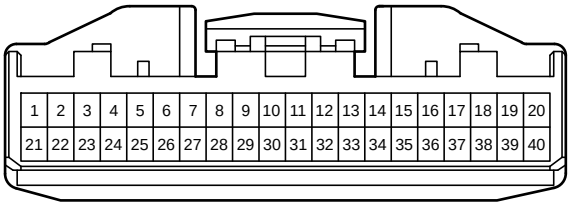

90980-12557

i4
White

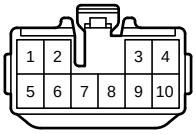

90980-12540

i5
White



90980-12341

i6
White

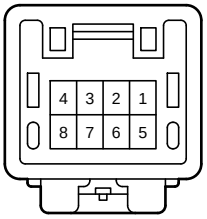

90980-12734

i7

White

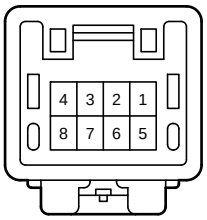

90980-12734