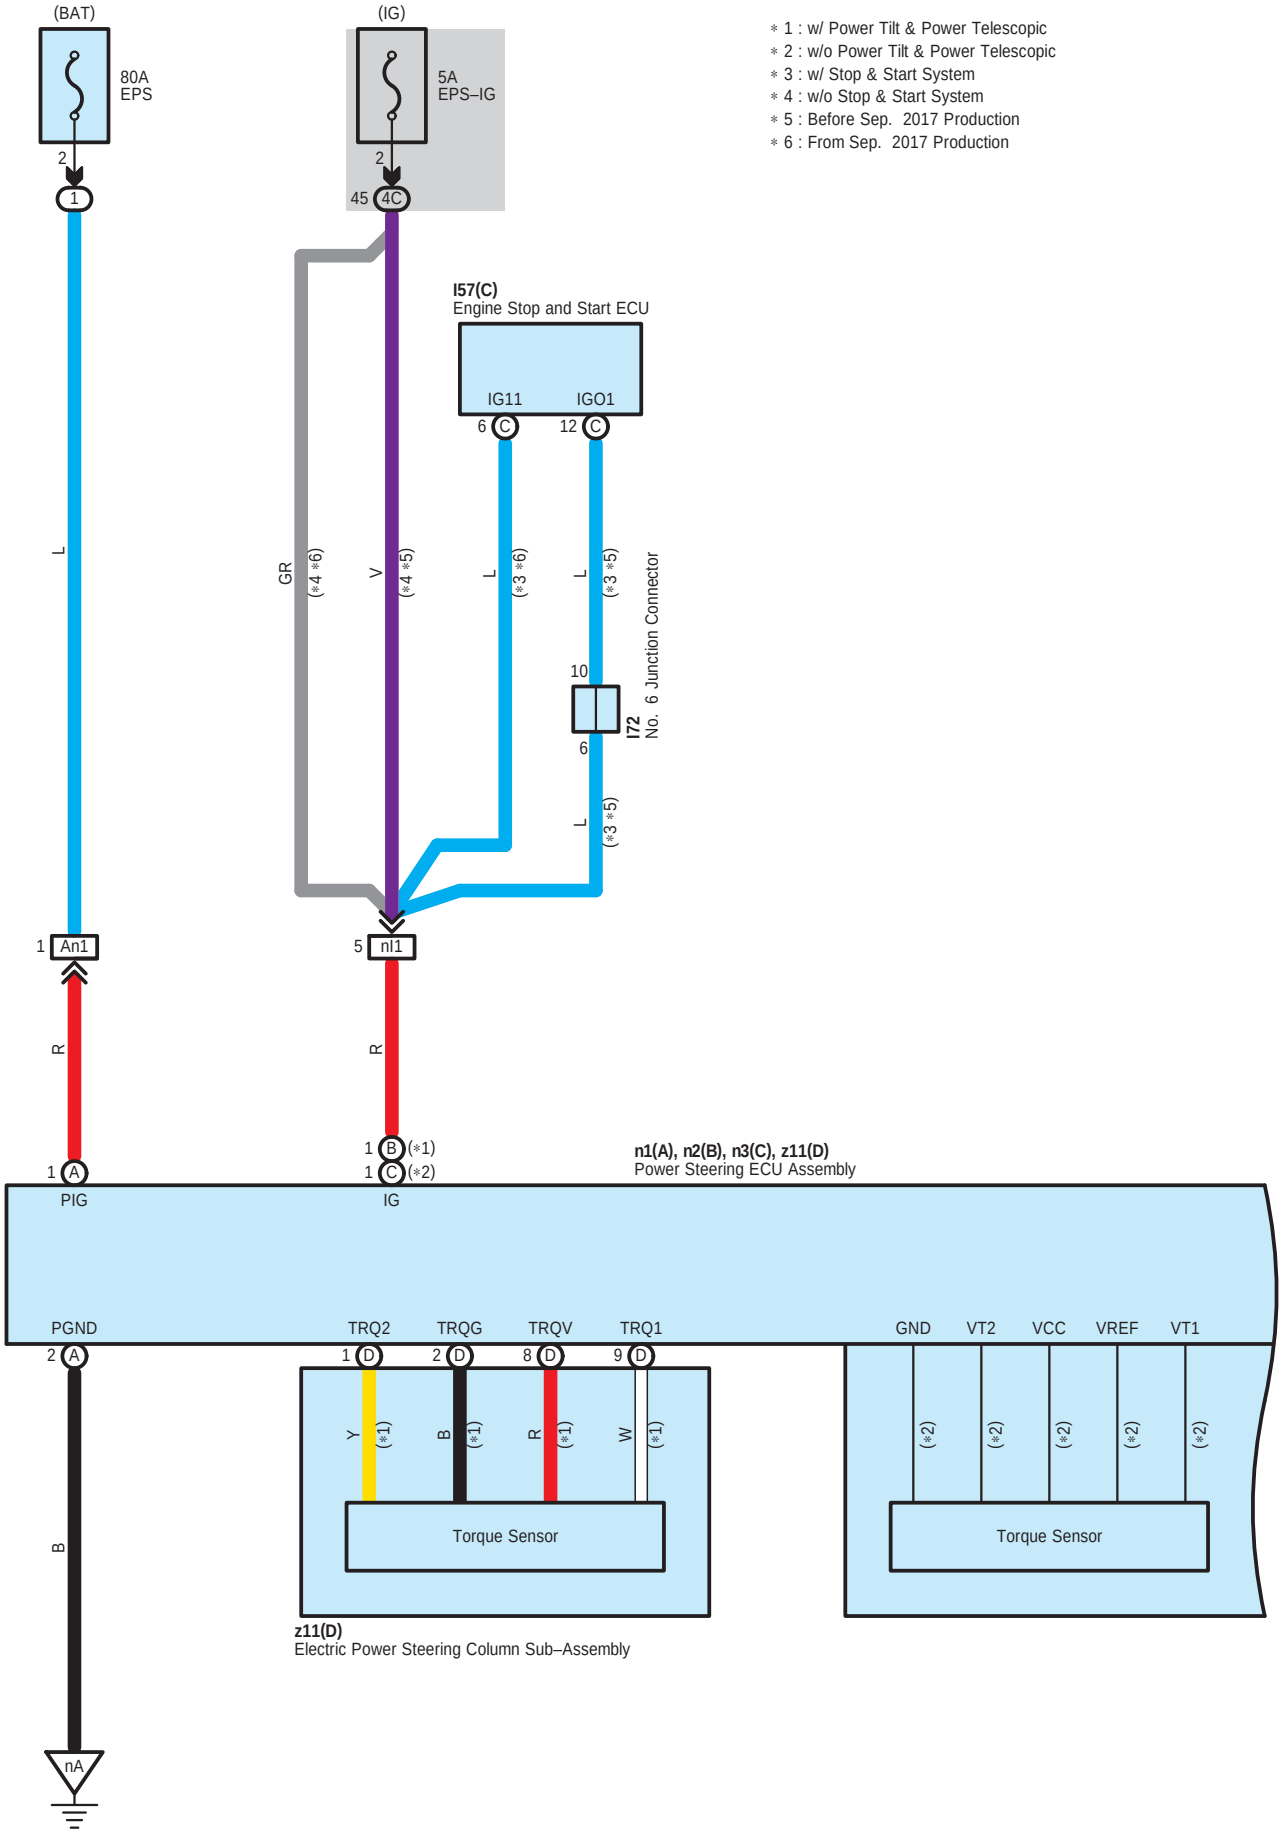
(BAT)
80A
EPS
(IG)
5A
EPS–IG
∗ 1 : w/ Power Tilt & Power Telescopic
∗ 2 : w/o Power Tilt & Power Telescopic
∗ 3 : w/ Stop & Start System
∗ 4 : w/o Stop & Start System
∗ 5 : Before Sep. 2017 Production
∗ 6 : From Sep. 2017 Production
I57(C)
Engine Stop and Start ECU
IG11
IGO1
I72
No. 6 Junction Connector
An1
nI1
n1(A), n2(B), n3(C), z11(D)
Power Steering ECU Assembly
PIG
IG
PGND
TRQ2
TRQG
TRQV
TRQ1
GND
VT2
VCC
VREF
VT1
Torque Sensor
Torque Sensor
z11(D)
Electric Power Steering Column Sub–Assembly
nA

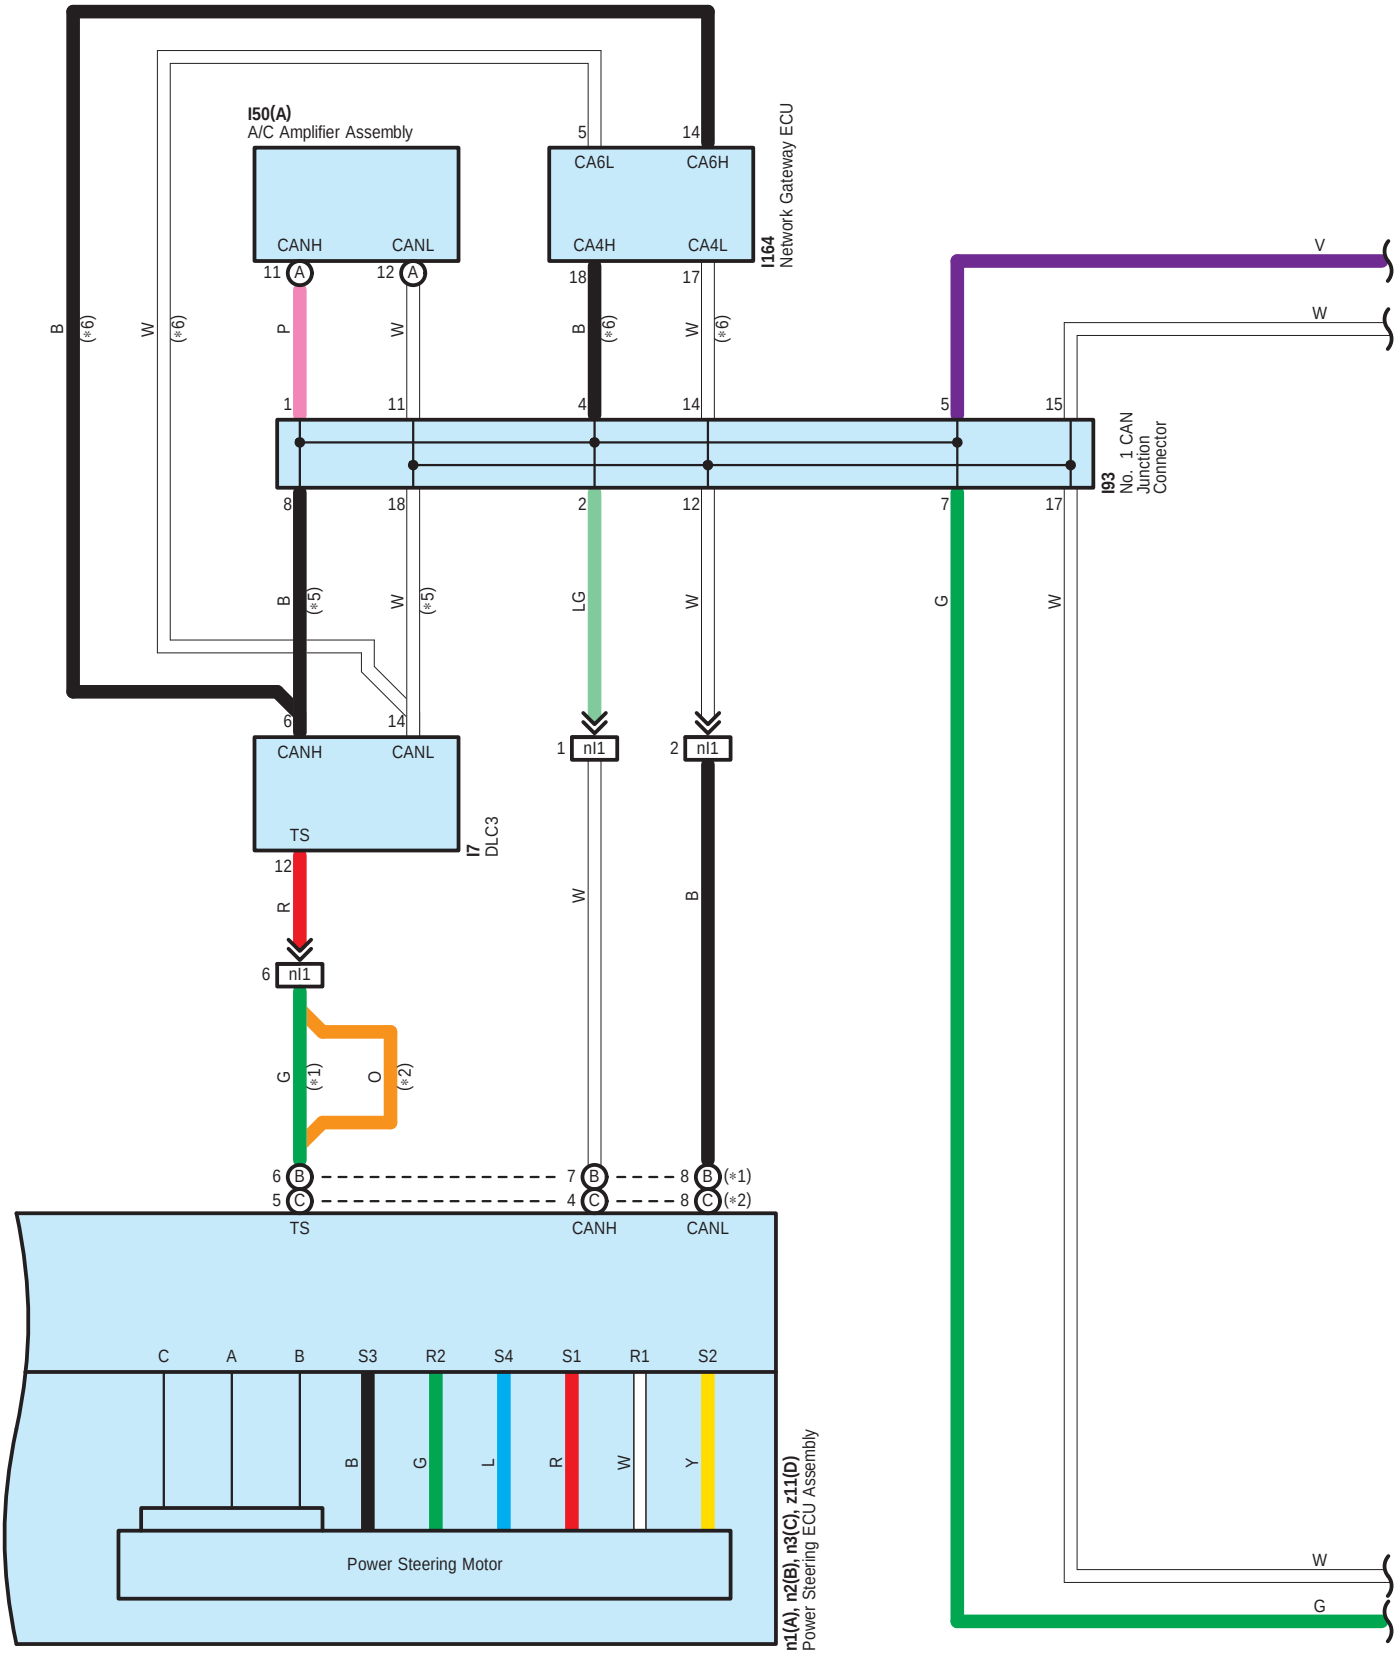
I50(A)
A/C Amplifier Assembly
CANH
CANL
CA6L
CA6H
CA4H
CA4L
I164
Network Gateway ECU
I93
No. 1 CAN Junction Connector
I7
DLC3
TS
nl1
n1(A), n2(B), n3(C), z11(D)
Power Steering ECU Assembly
C
A
B
S3
R2
S4
S1
R1
S2
Power Steering Motor

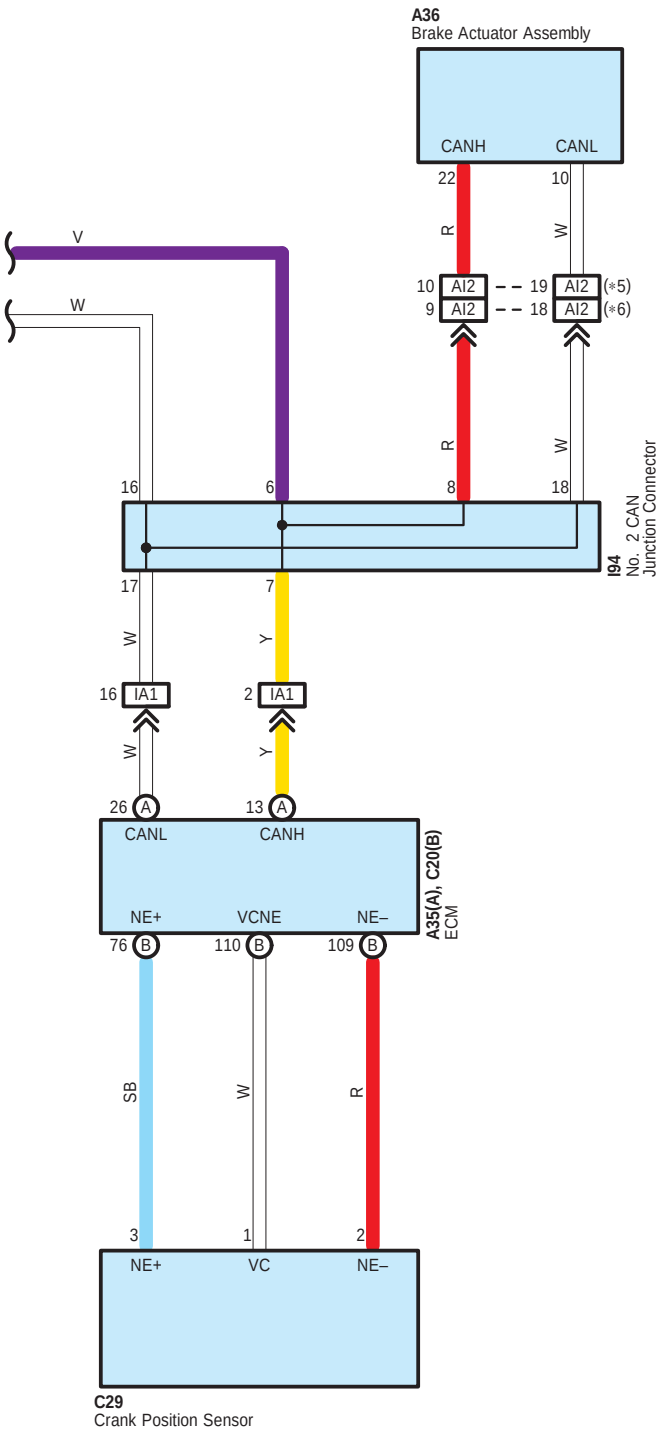

* 3 : w/ Stop & Start System
* 4 : w/o Stop & Start System
* 5 : Before Sep. 2017 Production
* 6 : From Sep. 2017 Production

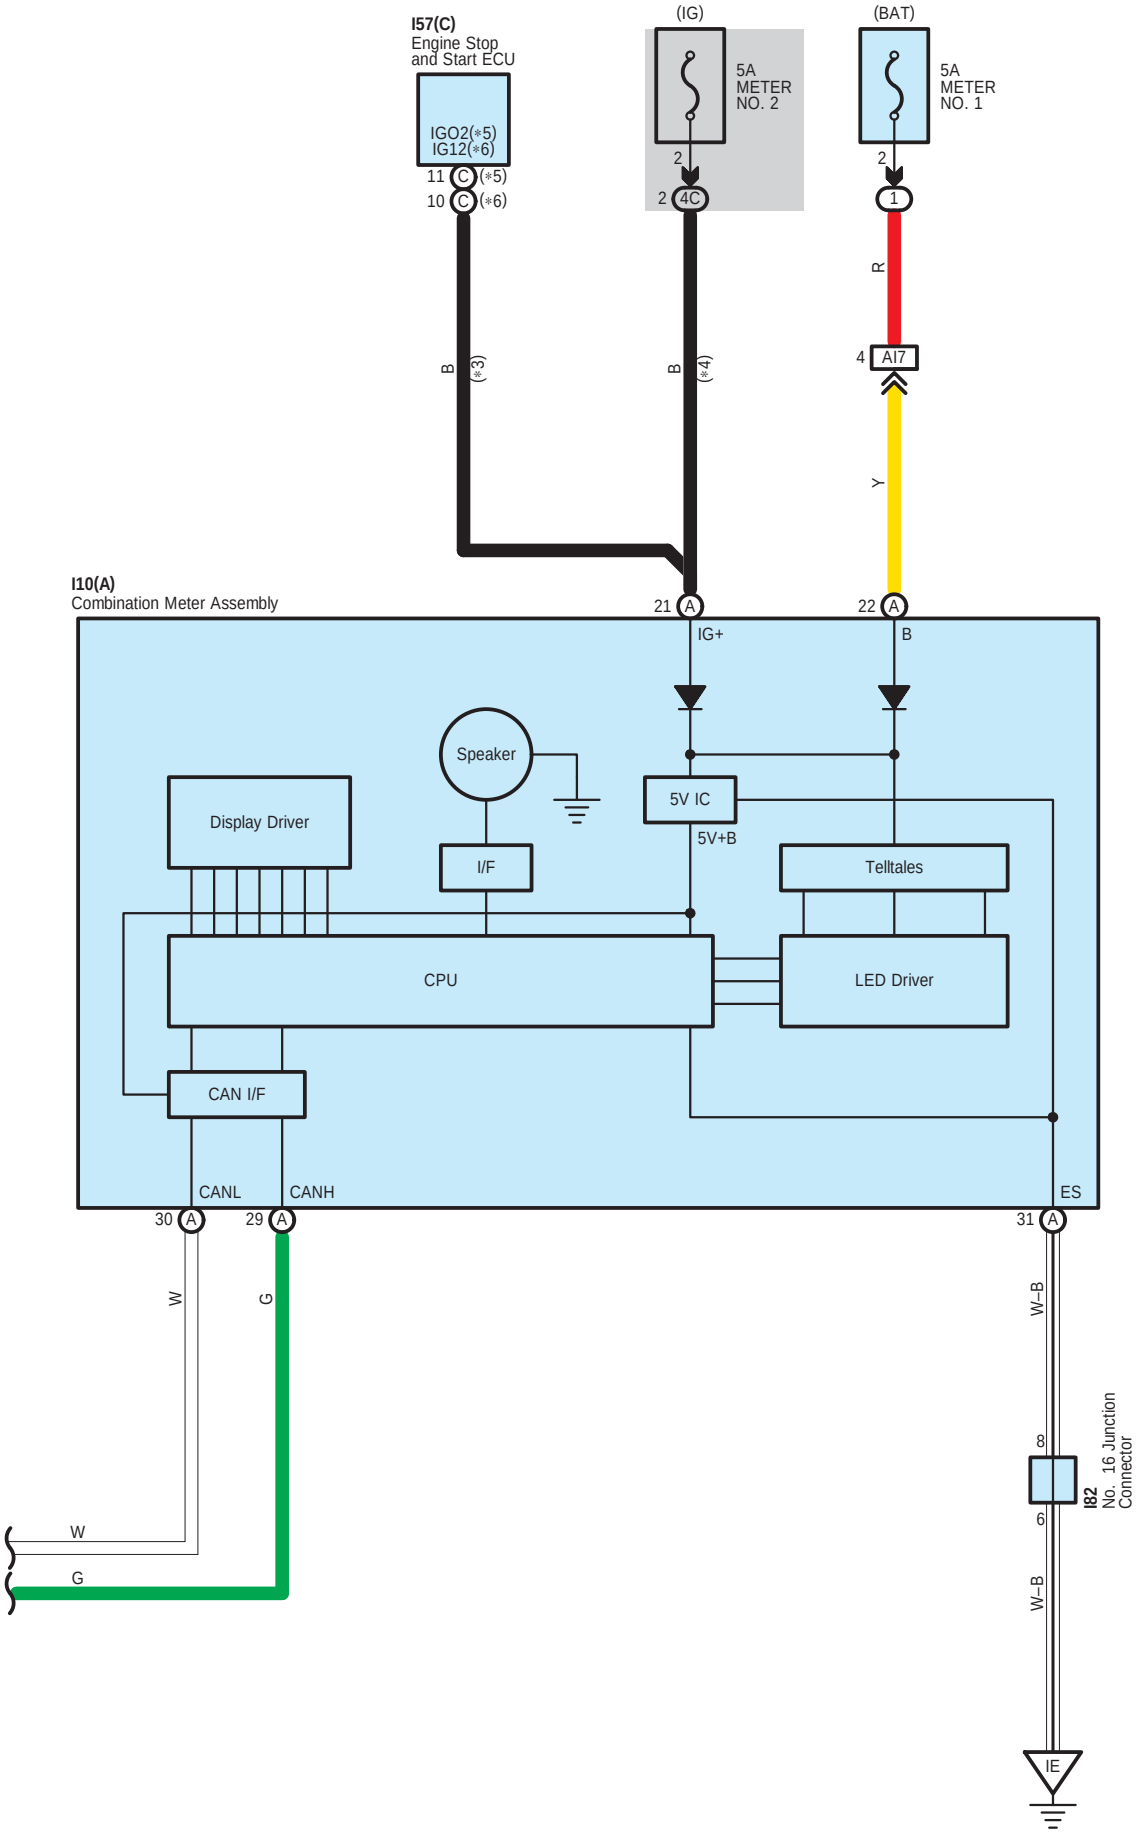
I57(C)
Engine Stop and Start ECU
IGO2(*5)
IG12(*6)
11 C (*5)
10 C (*6)
(IG)
5A METER NO. 2
2
2 4C
(BAT)
5A METER NO. 1
2
1
R
4 AI7
Y
B
(*3)
B
(*4)
I10(A)
Combination Meter Assembly
21 A
IG+
22 A
B
Speaker
5V IC
5V+B
Display Driver
I/F
Telltales
CPU
LED Driver
CAN I/F
CANL
CANH
ES
30 A
29 A
31 A
W
G
W
G
W–B
8
6
I82
No. 16 Junction Connector
W–B
IE

A35
Black

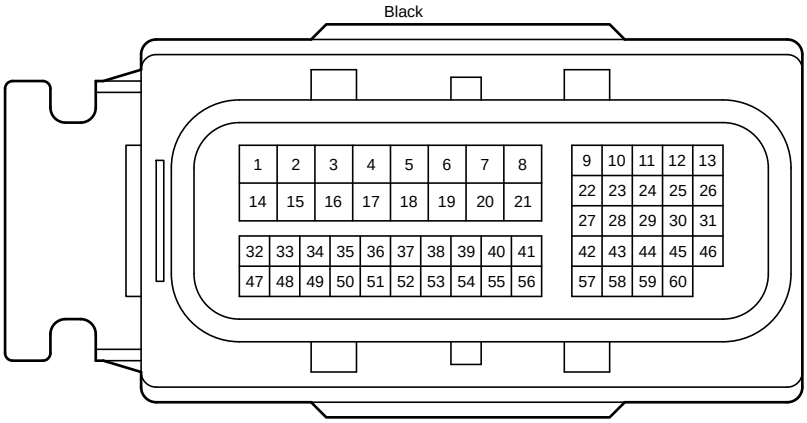

90980-12931

A36
Black

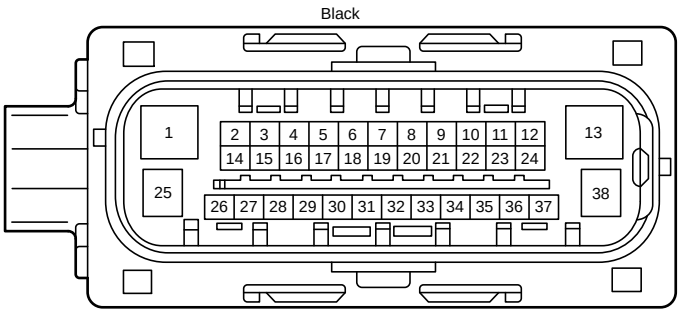

90980-12A95

C20
Black

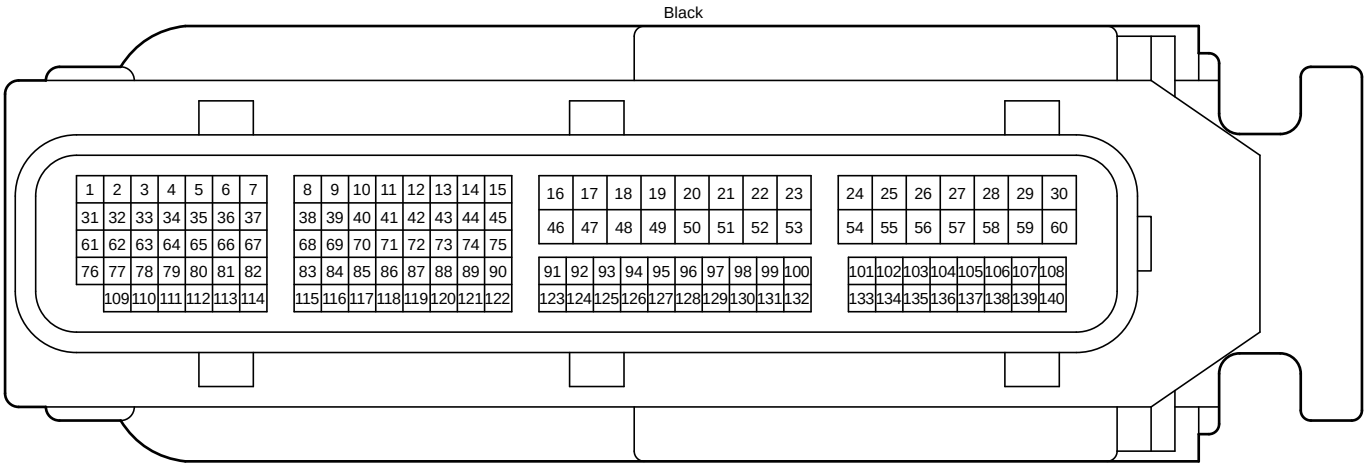

90980-12836

C29
Black

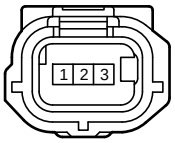

90980-12353

I7
White

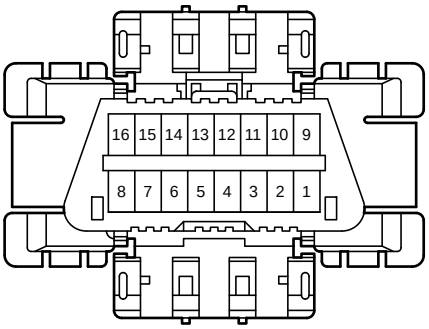

90980-11978

I10
Black

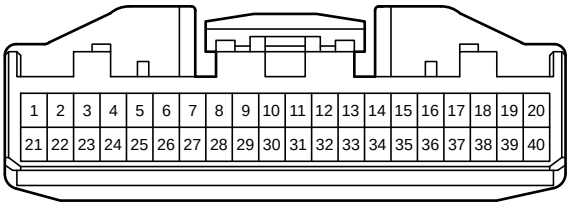

90980-12557

I50
White

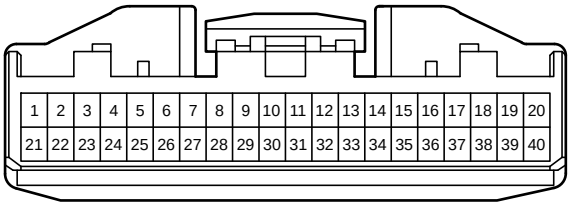

90980-12557

I57
Black

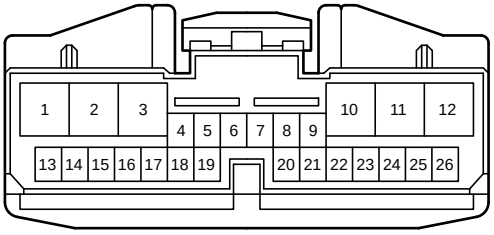

82824-12510

I72
Gray

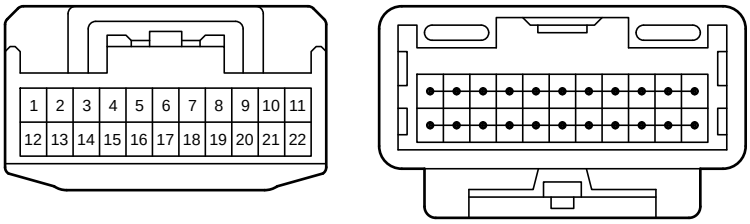

90980-12372

I82
Blue

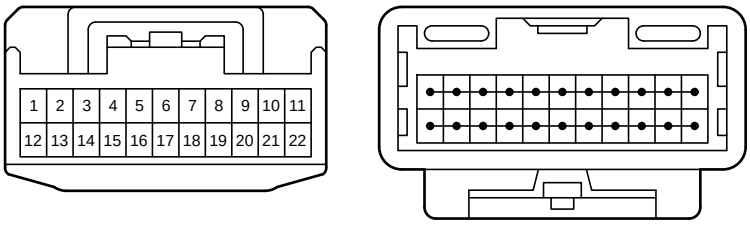

90980-12372
(LHD)

I82
White

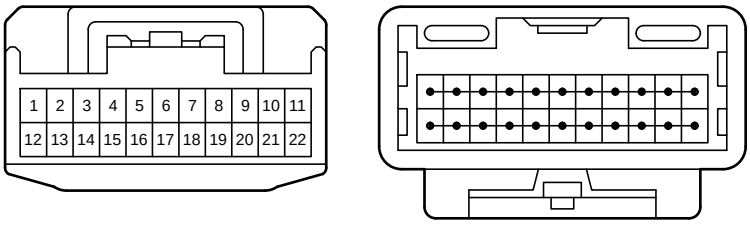

90980-12372
(RHD)

I93
White

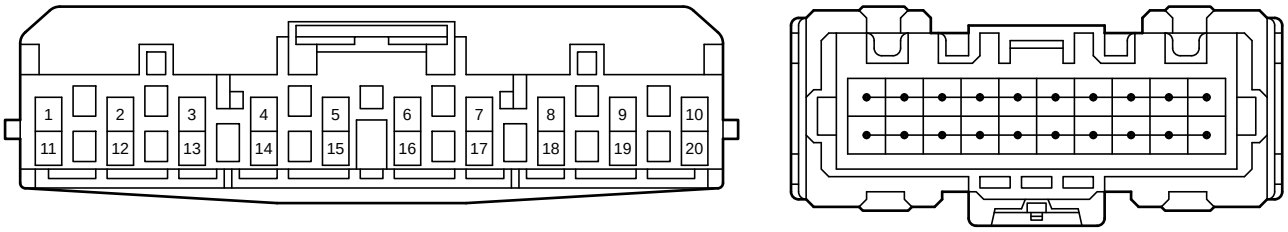

90980-12A58

I94
White

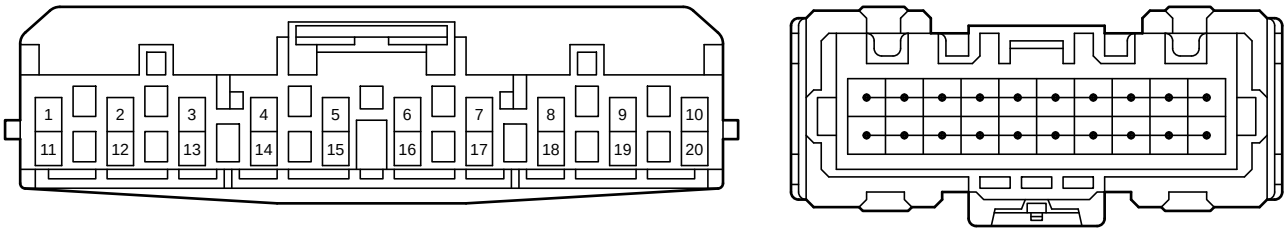

90980-12A58

I164
Black

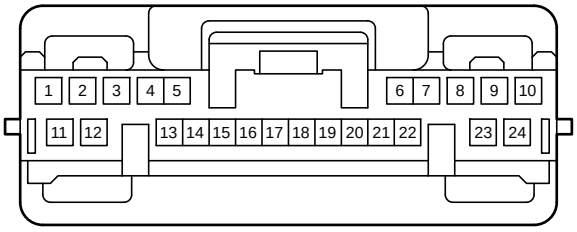

90980-12912

n1
White

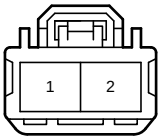

90980-12900

n2
Black

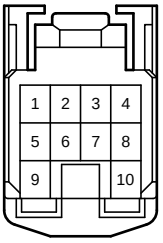

90980-12898

n3
White

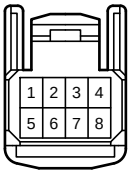

90980-12551

z11
Black

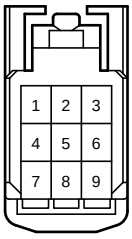

90980-12899

4C
White

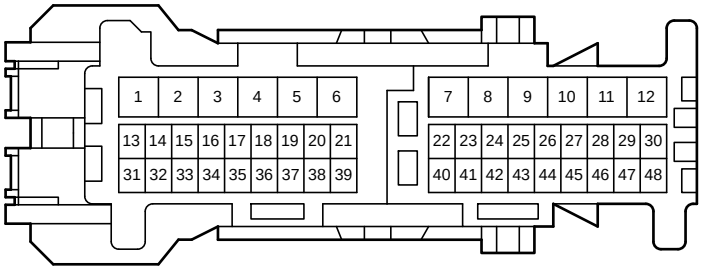

90980-12887

AI2
Black

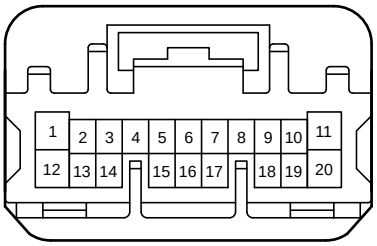

90980-12741

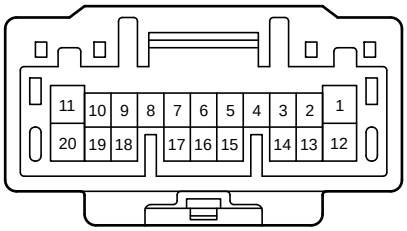

90980-12740

(LHD)

AI2
Blue

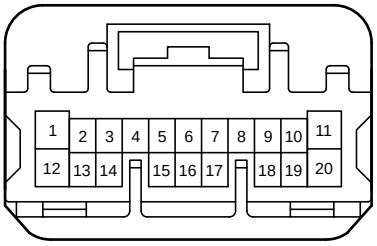

90980-12741

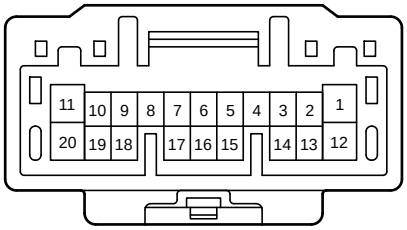

90980-12740

(RHD)

AI7
Gray

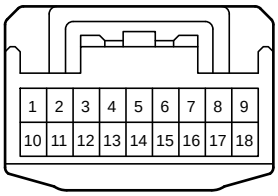

90980-12412

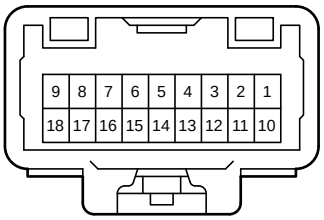

90980-12411

An1
White

90980-11184

90980-11183

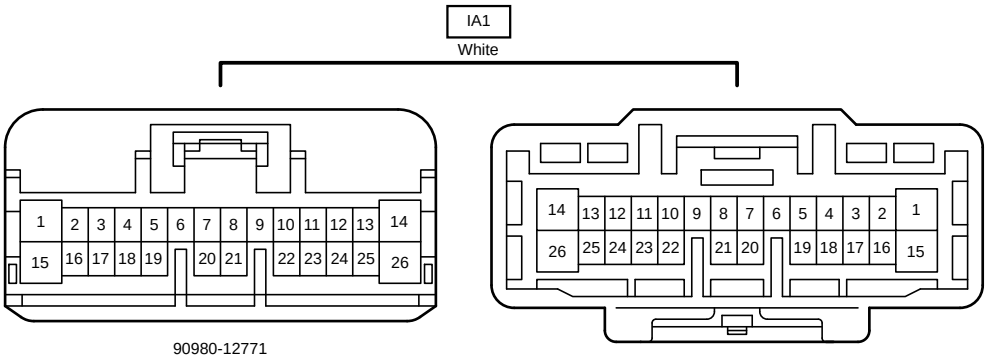

90980-12771

90980-12770

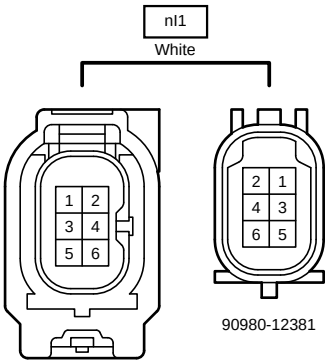

90980-12381

90980-12382