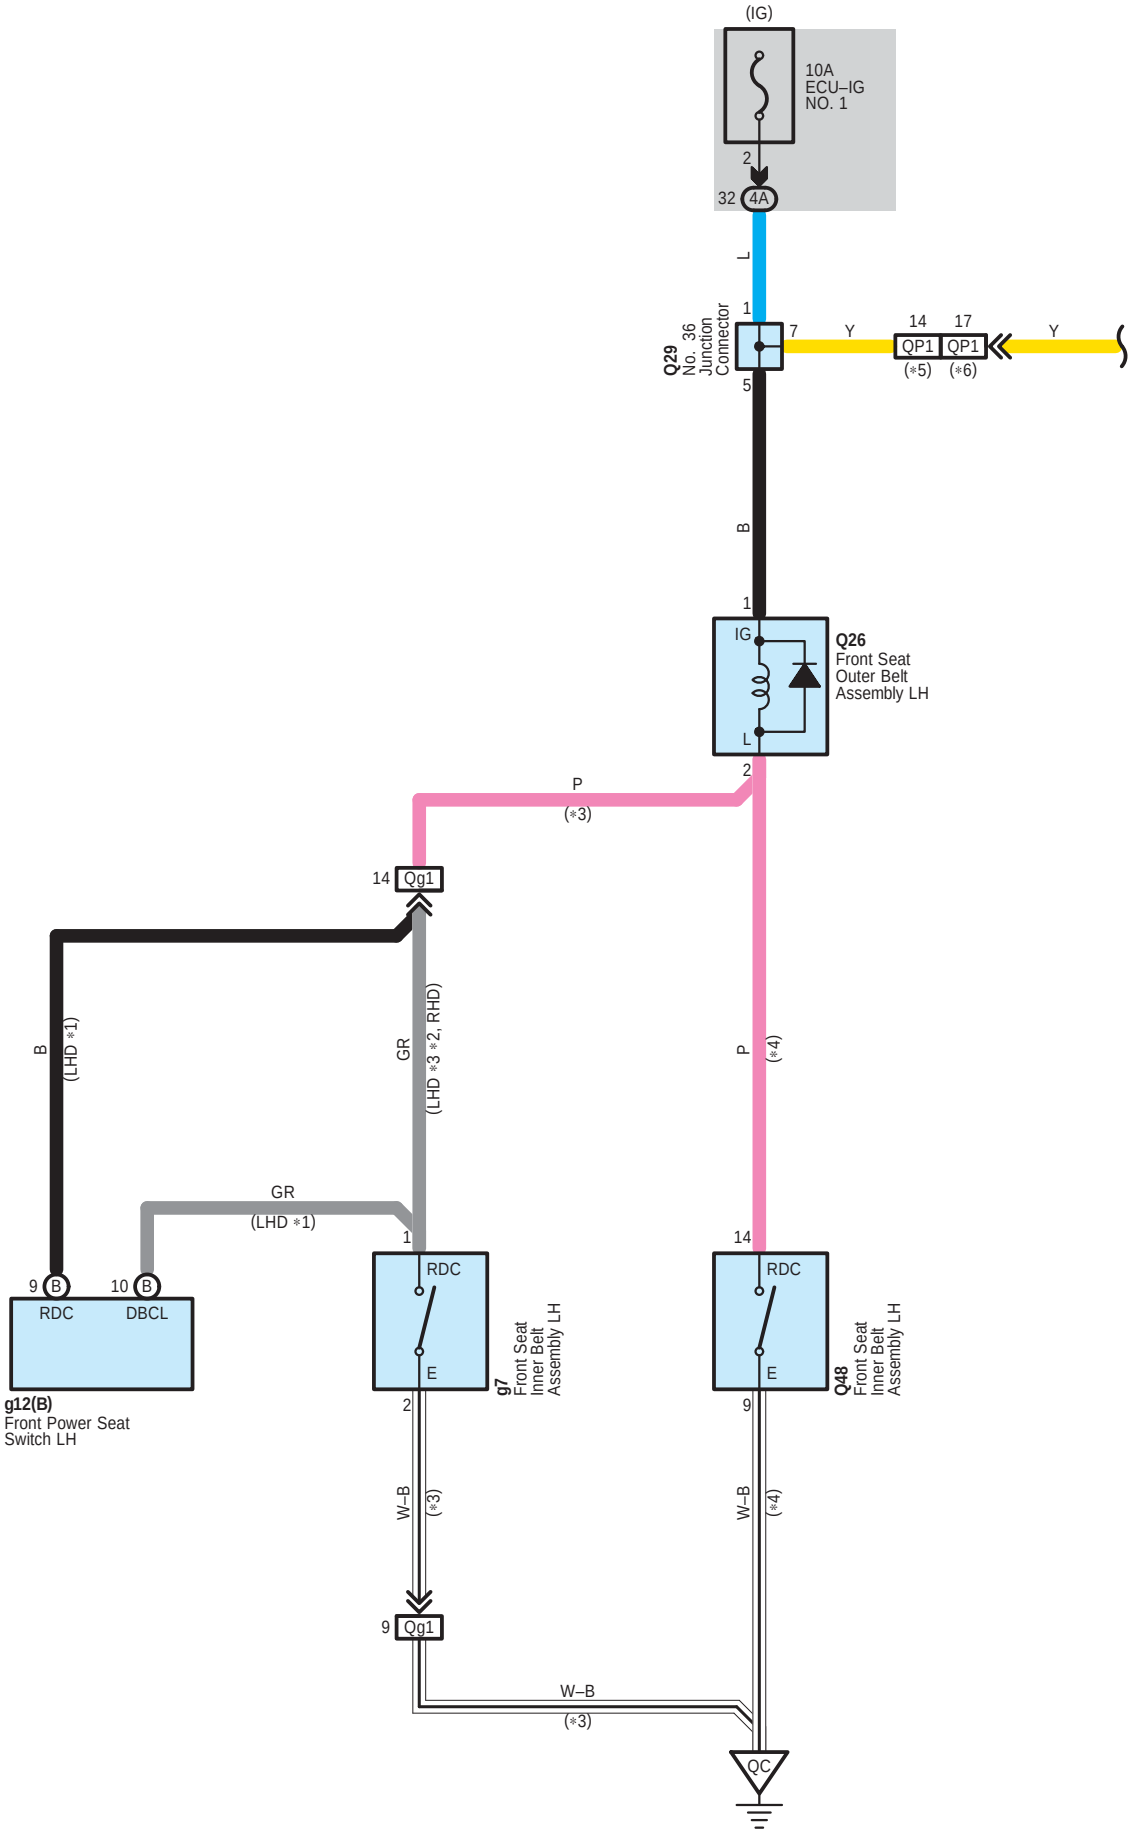
(IG)
10A
ECU–IG
NO. 1
2
32
4A
L
1
Q29
No. 36
Junction
Connector
7
Y
14
17
QP1
QP1
(*5)
(*6)
Y
5
B
1
IG
Q26
Front Seat
Outer Belt
Assembly LH
L
2
P
(*3)
14
Qg1
B
(LHD *1)
GR
(LHD *3 *2, RHD)
P
(*4)
GR
(LHD *1)
1
14
9
B
10
B
RDC
DBCL
g12(B)
Front Power Seat
Switch LH
RDC
E
g7
Front Seat
Inner Belt
Assembly LH
RDC
E
Q48
Front Seat
Inner Belt
Assembly LH
2
9
W–B
(*3)
W–B
(*4)
9
Qg1
W–B
(*3)
QC

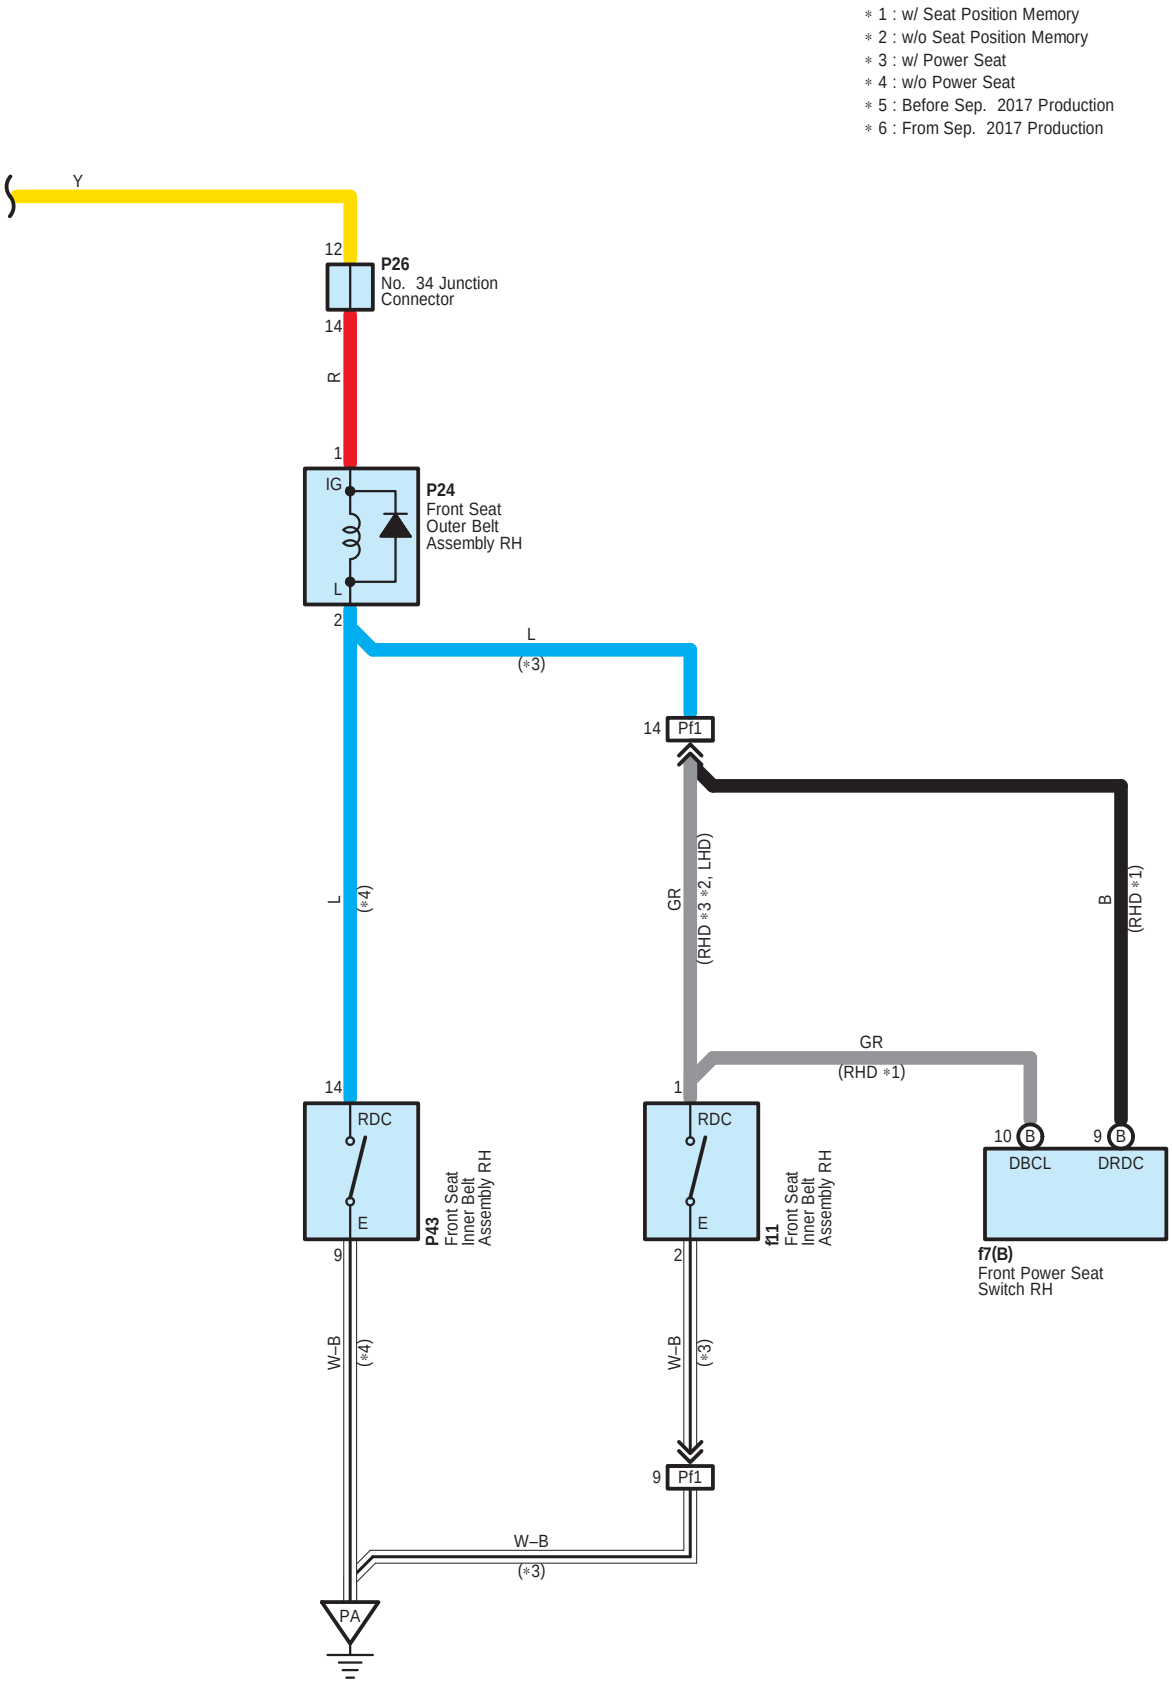
∗ 1 : w/ Seat Position Memory
∗ 2 : w/o Seat Position Memory
∗ 3 : w/ Power Seat
∗ 4 : w/o Power Seat
∗ 5 : Before Sep. 2017 Production
∗ 6 : From Sep. 2017 Production
Y
12
P26
No. 34 Junction Connector
14
R
1
IG
P24
Front Seat Outer Belt Assembly RH
L
2
L
(∗3)
14
Pf1
L
(∗4)
GR
(RHD ∗3 ∗2, LHD)
B
(RHD ∗1)
GR
(RHD ∗1)
14
RDC
E
P43
Front Seat Inner Belt Assembly RH
9
W–B
(∗4)
1
RDC
E
f11
Front Seat Inner Belt Assembly RH
2
W–B
(∗3)
10
B
DBCL
9
B
DRDC
f7(B)
Front Power Seat Switch RH
9
Pf1
W–B
(∗3)
PA

P24
Black



90980-12063
(Korea)

P24
White



90980-12063
(Except Korea)

P26
White

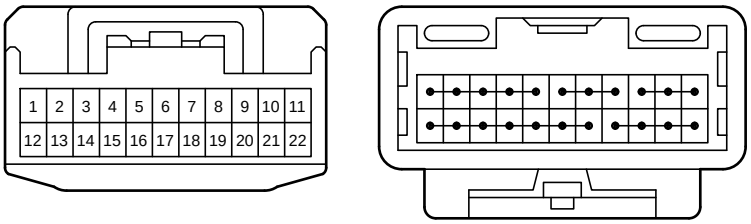

90980-12372

P43
White

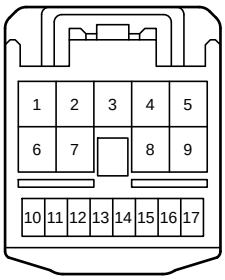

90980-12374

Q26
White



90980-12063

Q29
White

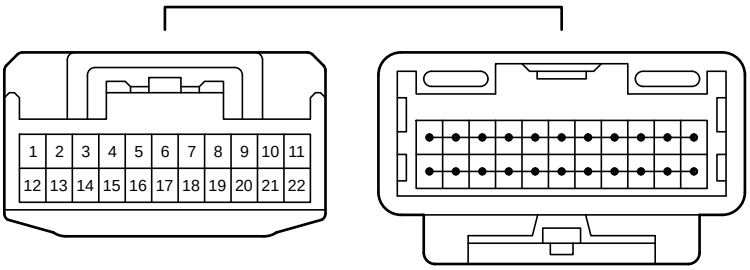

90980-12372

Q48
White

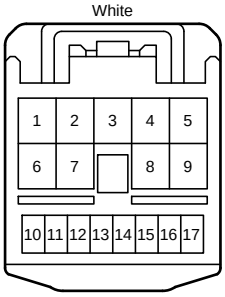

90980-12374

f7
White

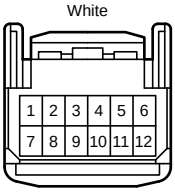

90980-12552

f11
White

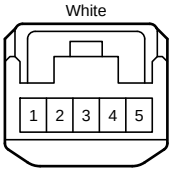

90980-12366

g7
White

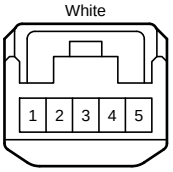

90980-12366

g12
White

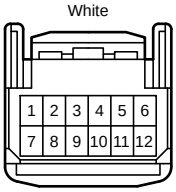

90980-12552

4A
White

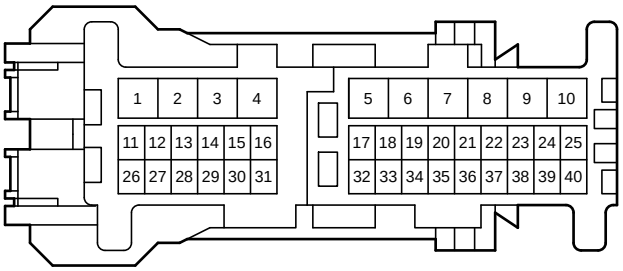

90980-12884

Pf1
White

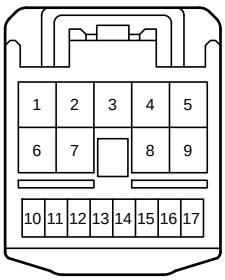

90980-12374

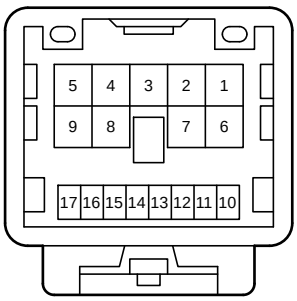

90980-12373

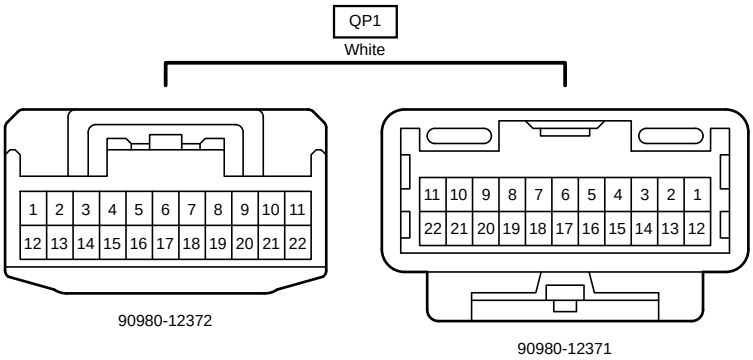

90980-12372

90980-12371

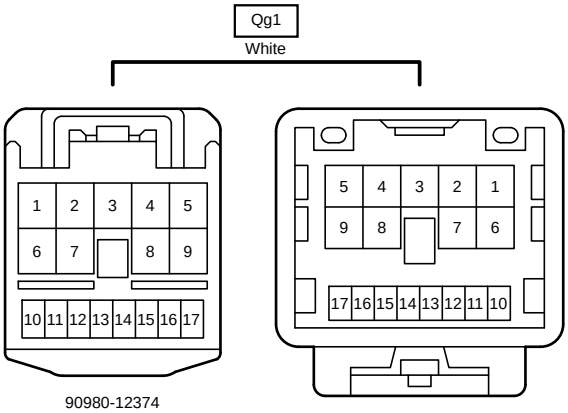

90980-12374

90980-12373