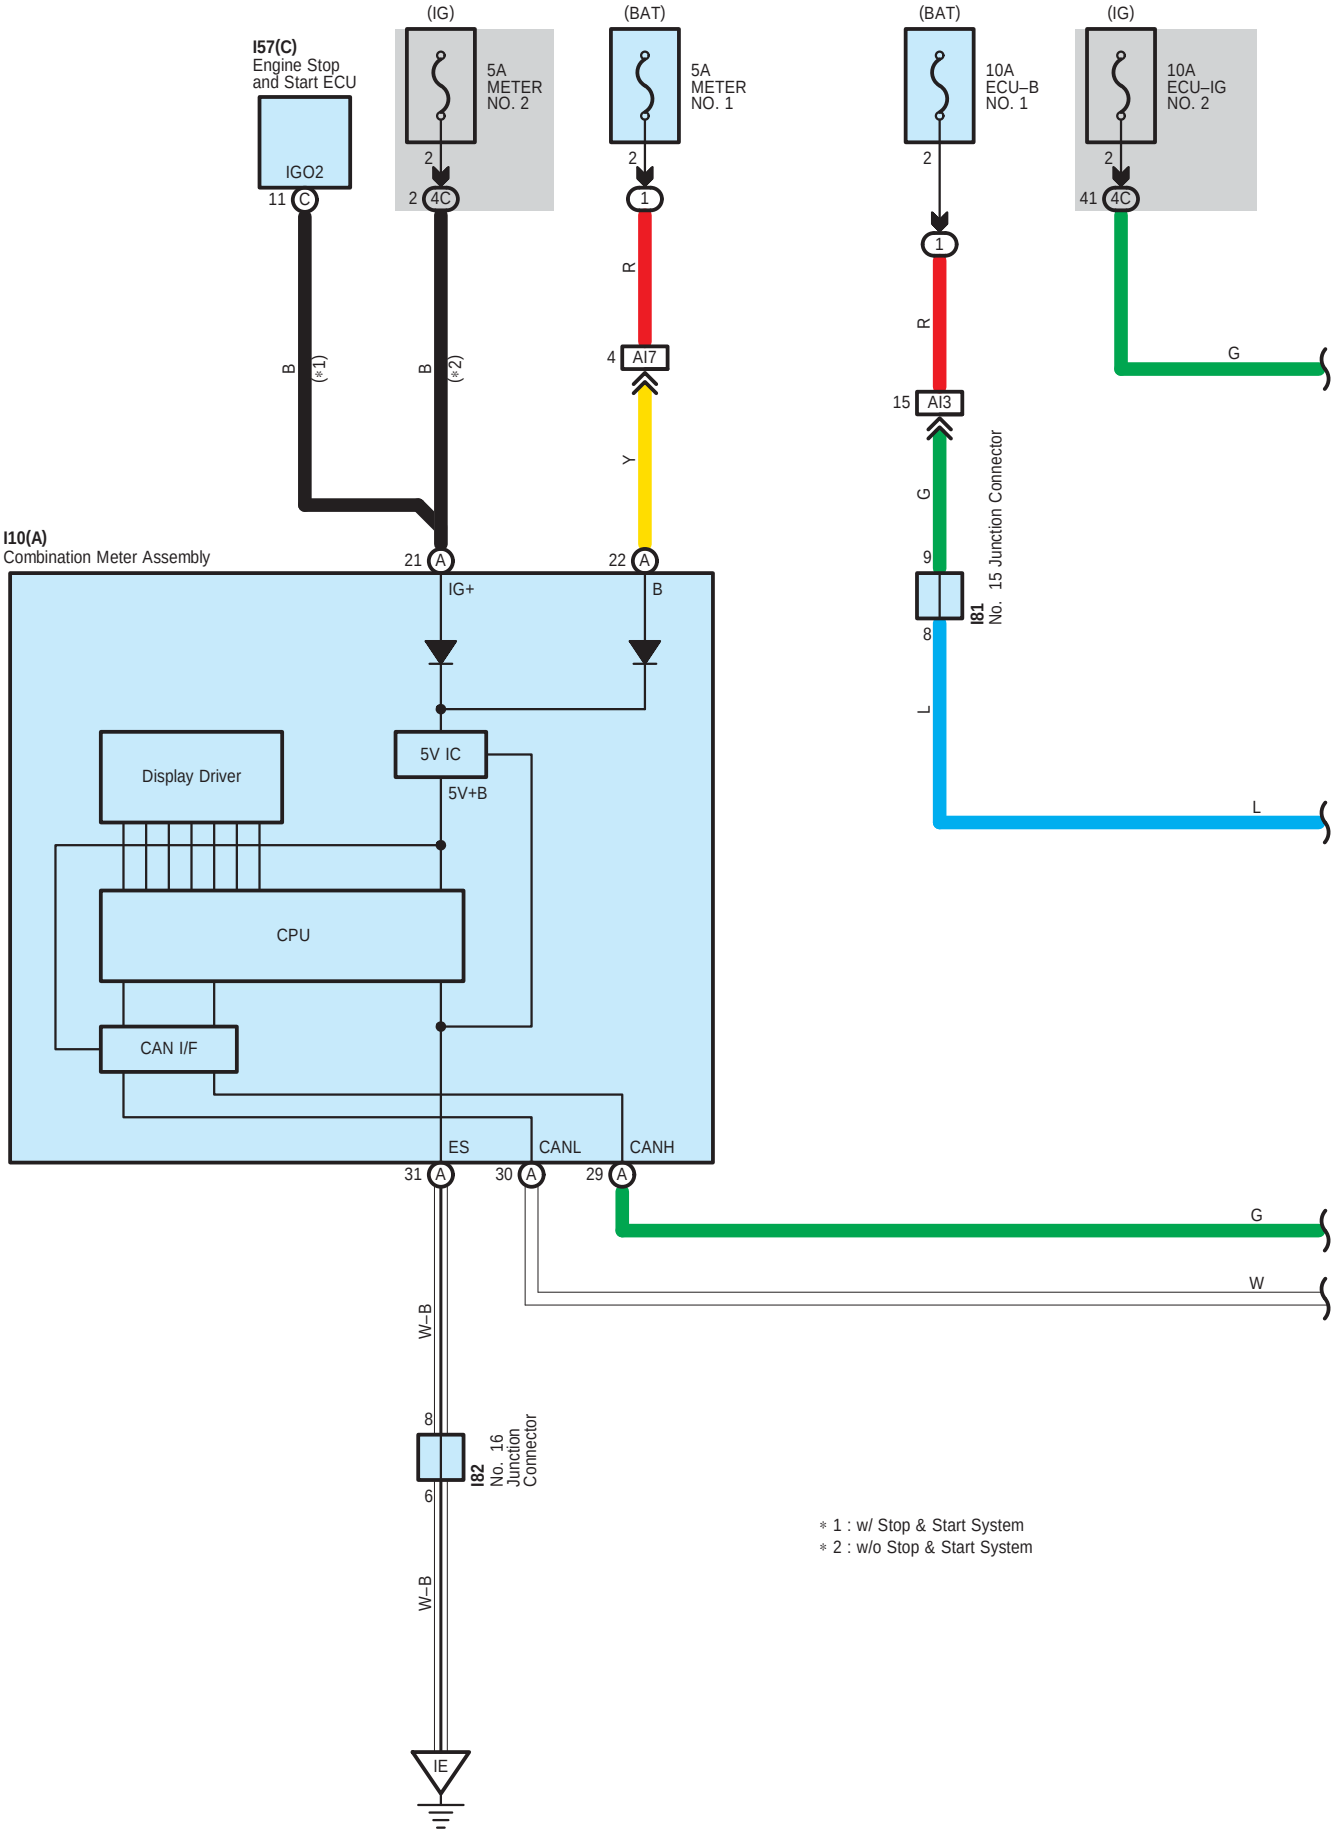
I57(C)
Engine Stop and Start ECU
IGO2
11 C
(IG)
5A METER NO. 2
2
2 4C
(BAT)
5A METER NO. 1
2
1
R
4 AI7
Y
(BAT)
10A ECU–B NO. 1
2
1
R
15 AI3
G
9
I81 No. 15 Junction Connector
8
L
(IG)
10A ECU–IG NO. 2
2
41 4C
G
B (*1)
B (*2)
I10(A)
Combination Meter Assembly
21 A
22 A
IG+
B
5V IC
5V+B
Display Driver
CPU
CAN I/F
ES
CANL
CANH
31 A
30 A
29 A
G
W
W–B
8
I82 No. 16 Junction Connector
6
W–B
IE
L
* 1 : w/ Stop & Start System
* 2 : w/o Stop & Start System

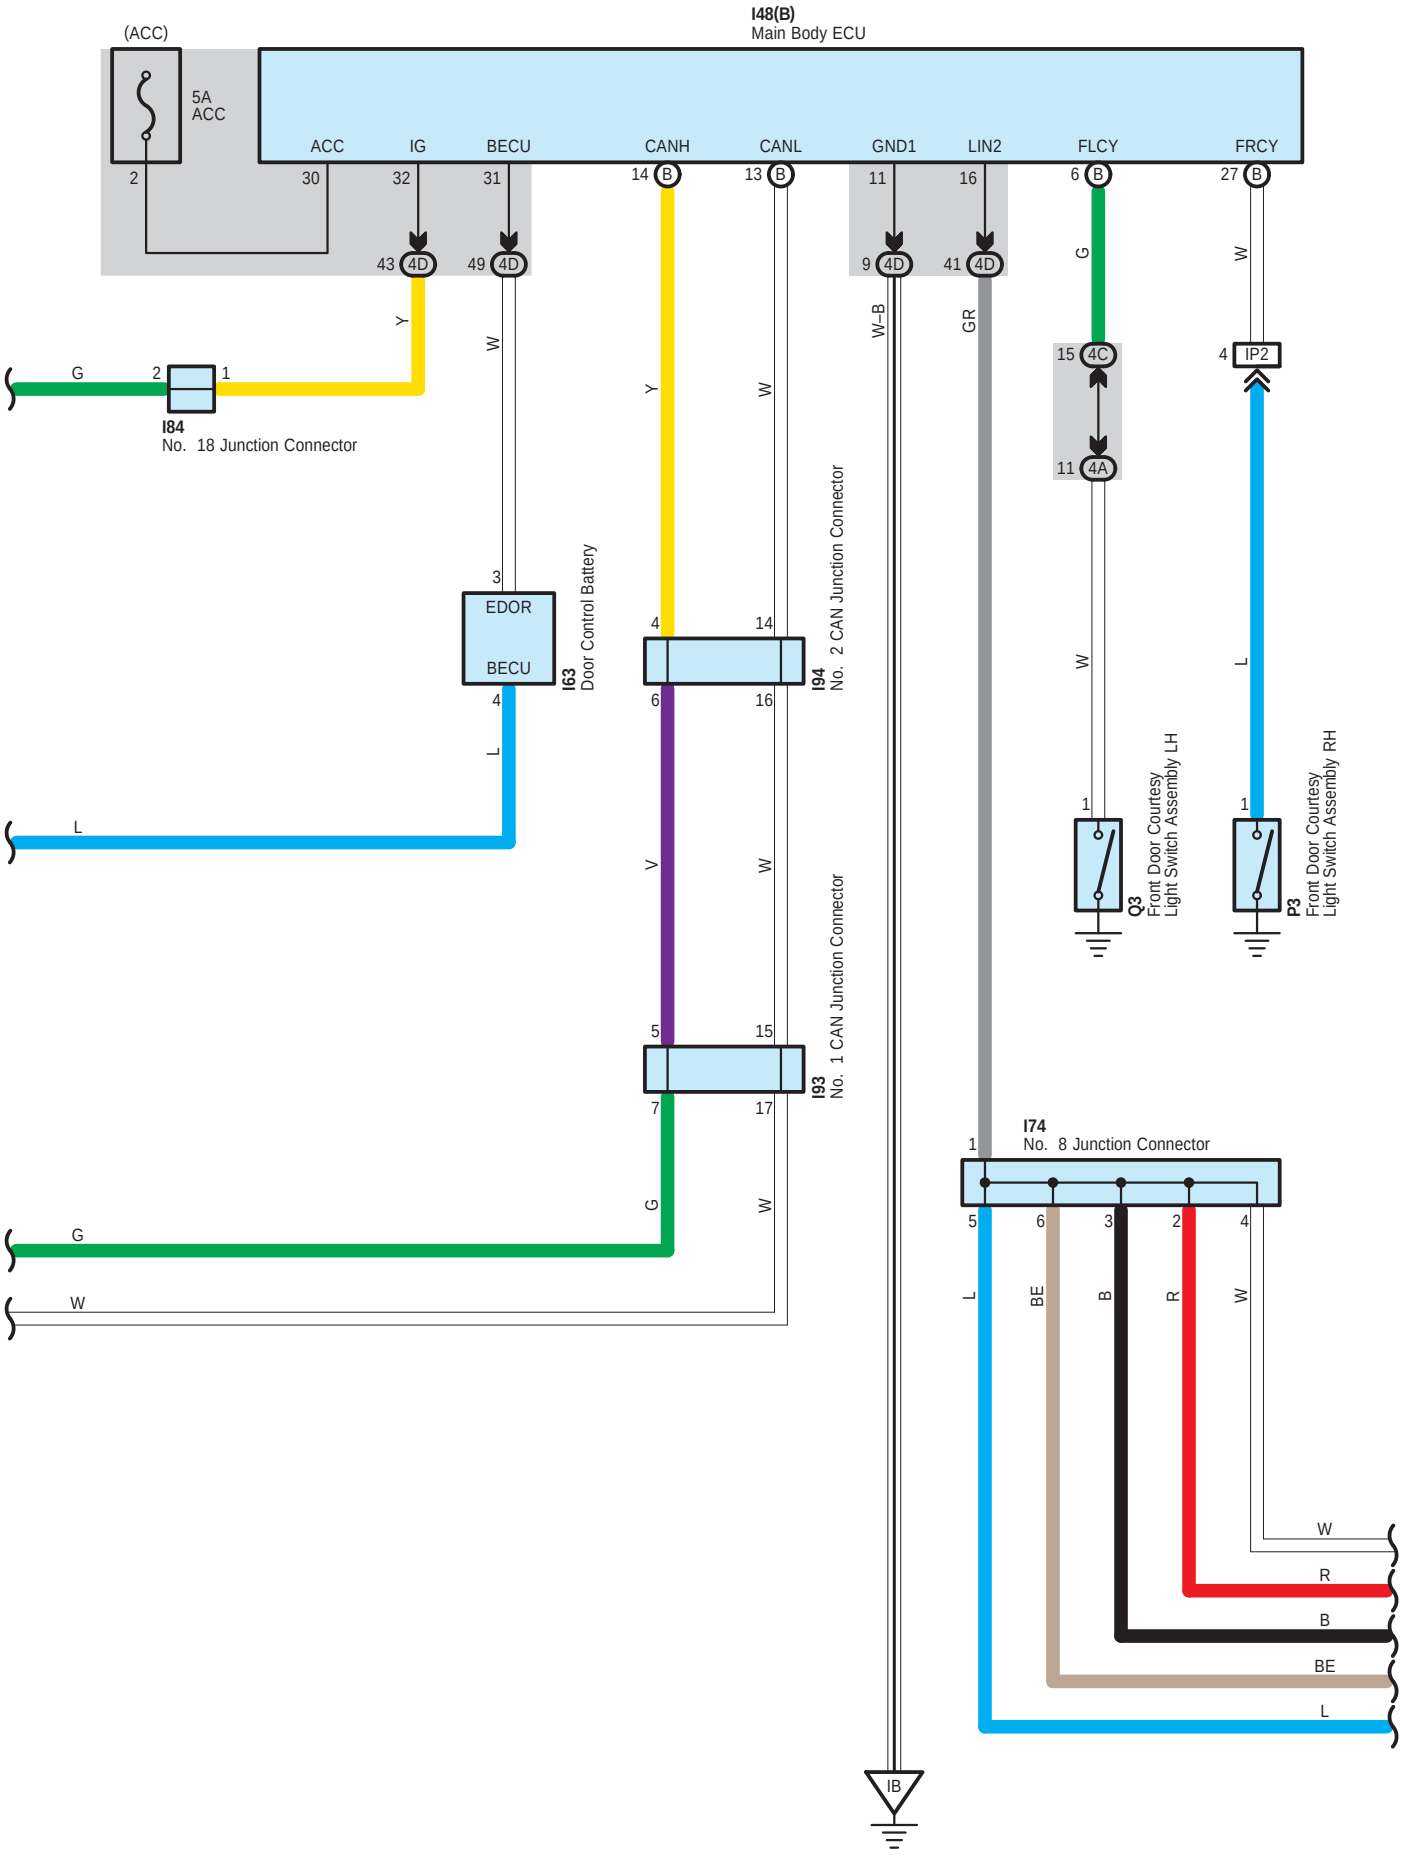
(ACC)
5A
ACC
I48(B)
Main Body ECU
ACC
IG
BECU
CANH
CANL
GND1
LIN2
FLCY
FRCY
I84
No. 18 Junction Connector
EDOR
BECU
I63
Door Control Battery
I94
No. 2 CAN Junction Connector
I93
No. 1 CAN Junction Connector
IP2
Q3
Front Door Courtesy
Light Switch Assembly LH
P3
Front Door Courtesy
Light Switch Assembly RH
I74
No. 8 Junction Connector
IB

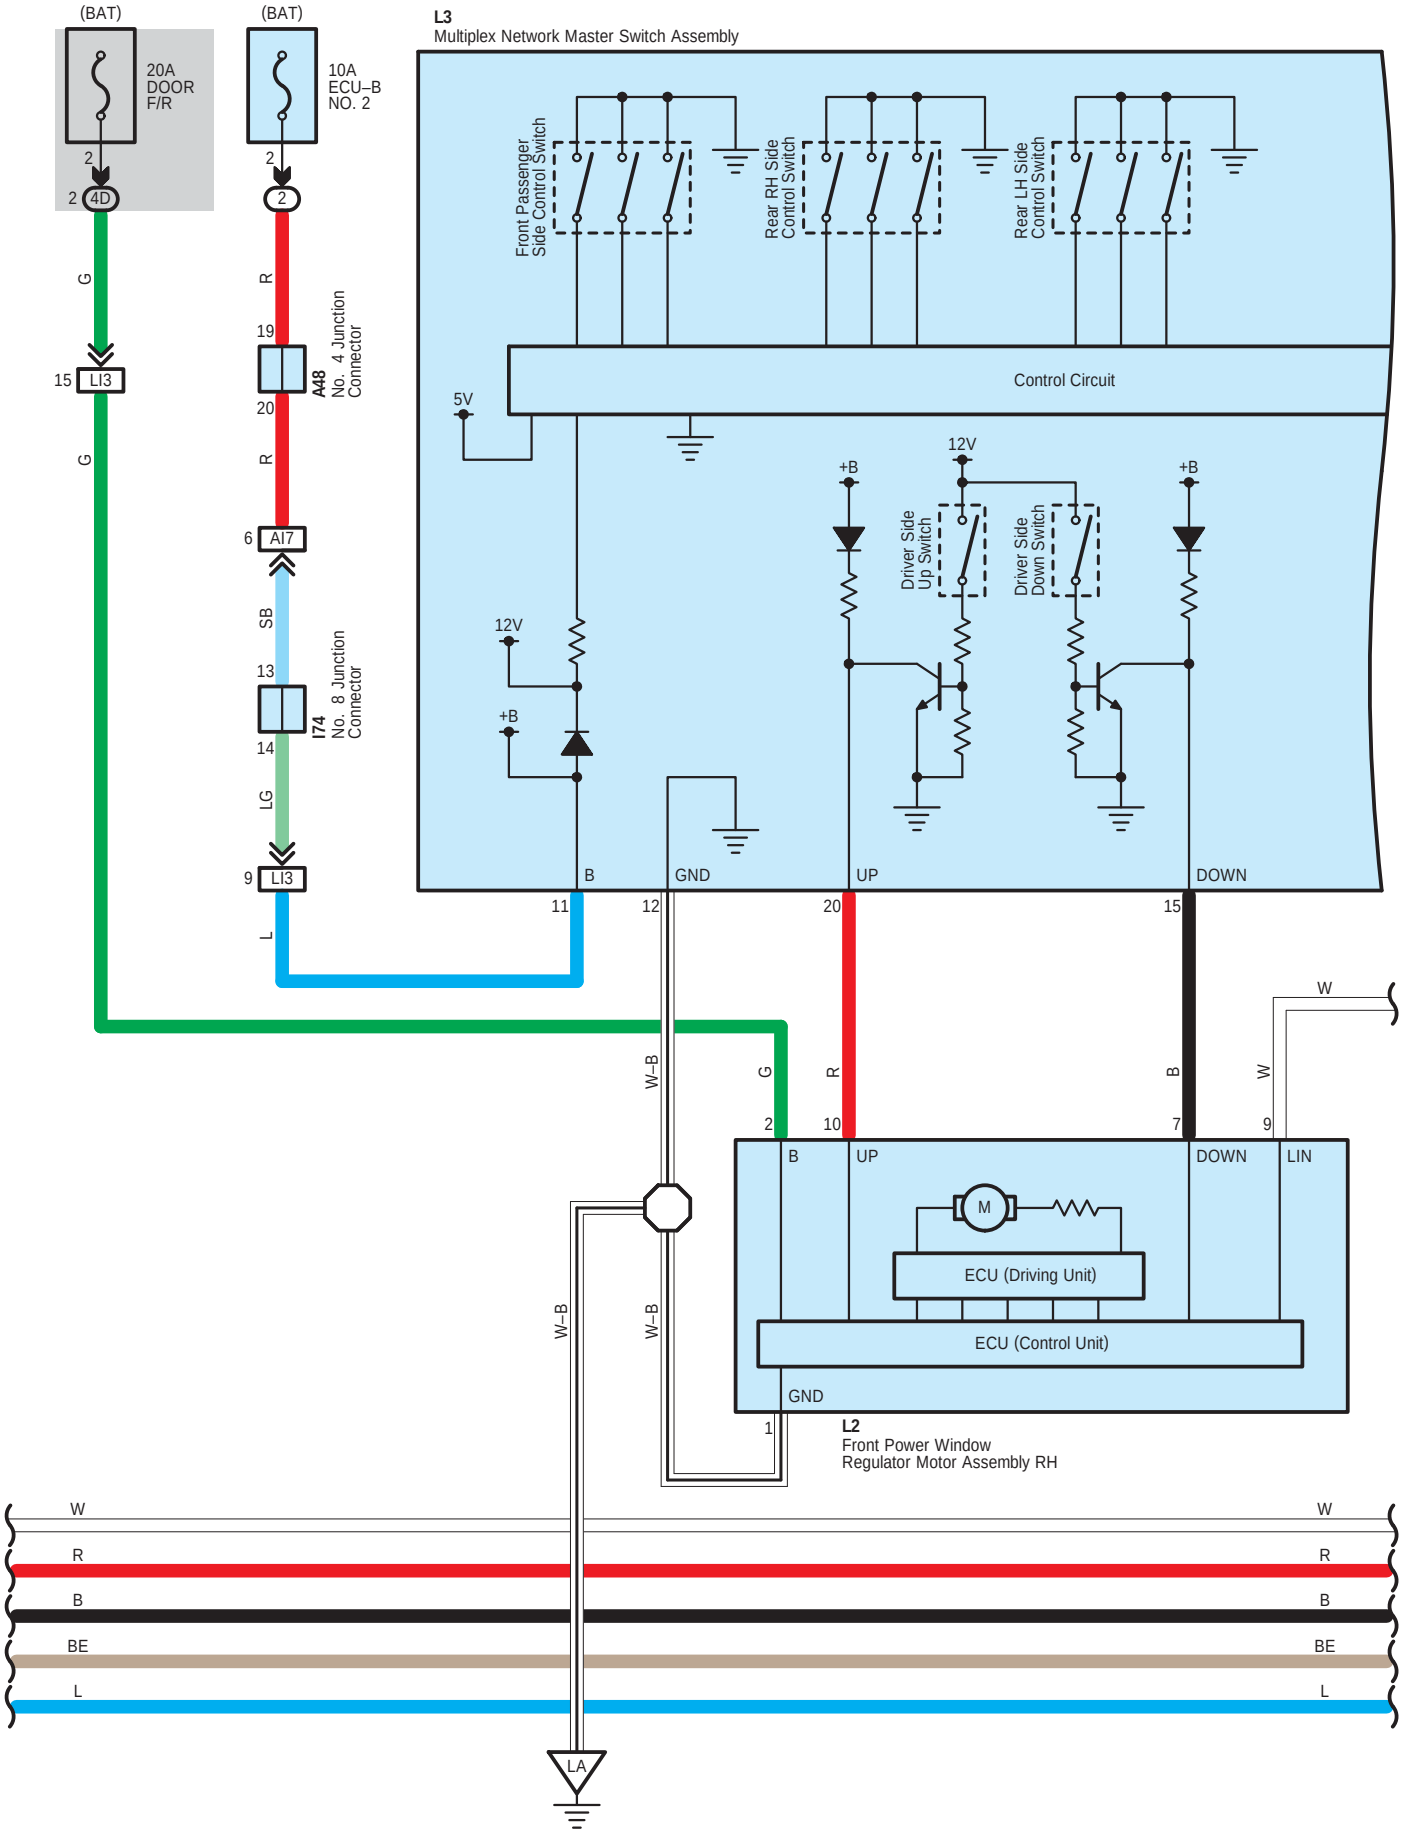
(BAT)
20A
DOOR
F/R
(BAT)
10A
ECU–B
NO. 2
L3
Multiplex Network Master Switch Assembly
Front Passenger
Side Control Switch
Rear RH Side
Control Switch
Rear LH Side
Control Switch
Control Circuit
5V
12V
+B
Driver Side
Up Switch
Driver Side
Down Switch
B
GND
UP
DOWN
4D
LI3
A48
No. 4 Junction
Connector
AI7
I74
No. 8 Junction
Connector
W–B
LIN
M
ECU (Driving Unit)
ECU (Control Unit)
L2
Front Power Window
Regulator Motor Assembly RH
LA

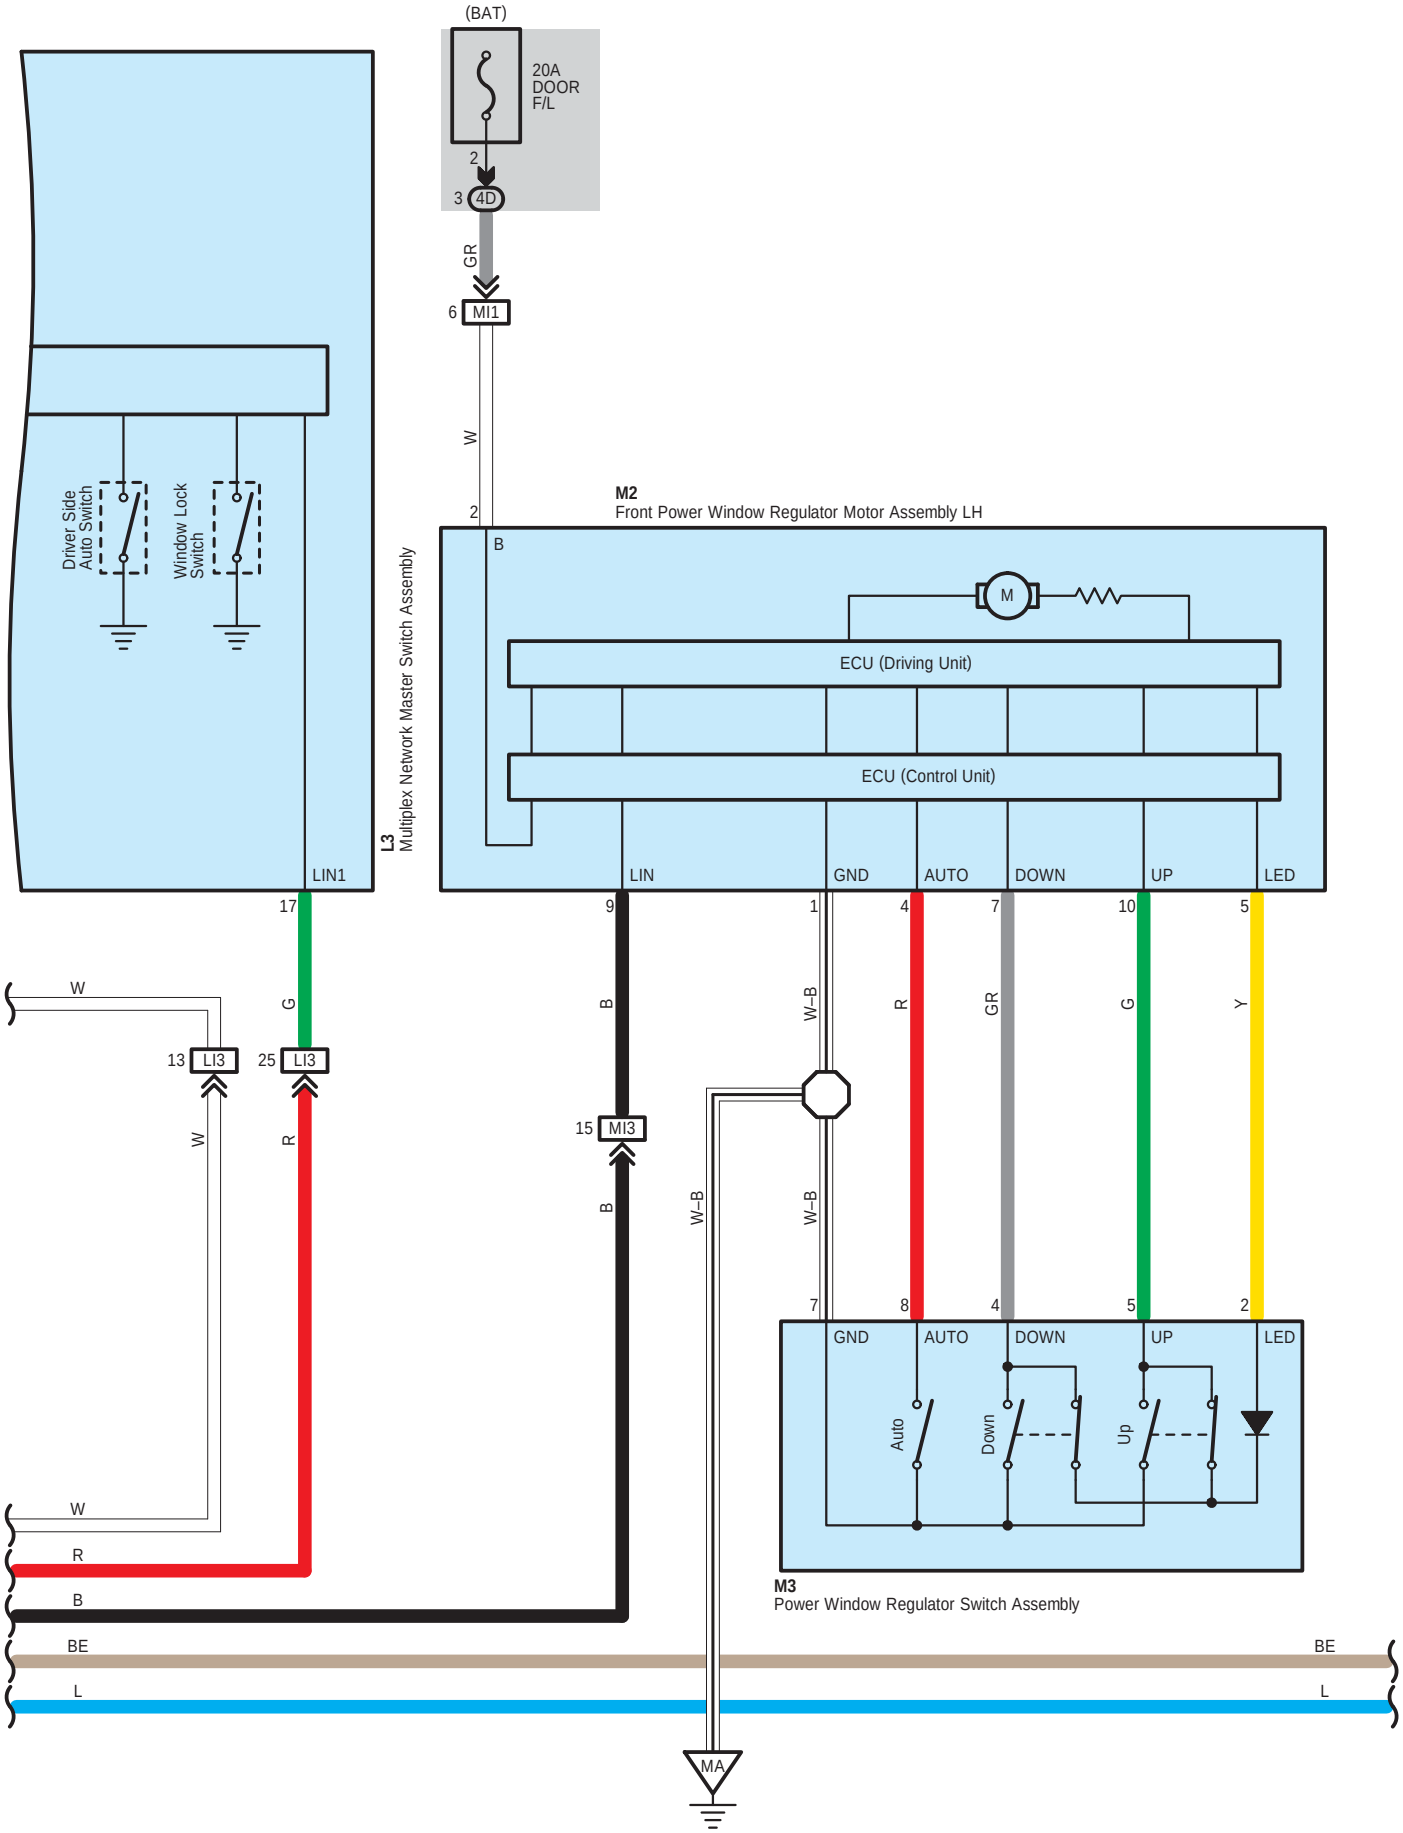
(BAT)
20A
DOOR
F/L
2
3
4D
GR
6
MI1
W
2
M2
Front Power Window Regulator Motor Assembly LH
B
M
ECU (Driving Unit)
ECU (Control Unit)
LIN
GND
AUTO
DOWN
UP
LED
Driver Side
Auto Switch
Window Lock
Switch
L3
Multiplex Network Master Switch Assembly
LIN1
17
9
1
4
7
10
5
W
G
B
W–B
R
GR
G
Y
13
LI3
25
LI3
15
MI3
W
R
B
W–B
W–B
7
8
4
5
2
GND
AUTO
DOWN
UP
LED
Auto
Down
Up
M3
Power Window Regulator Switch Assembly
W
R
B
BE
BE
L
L
MA

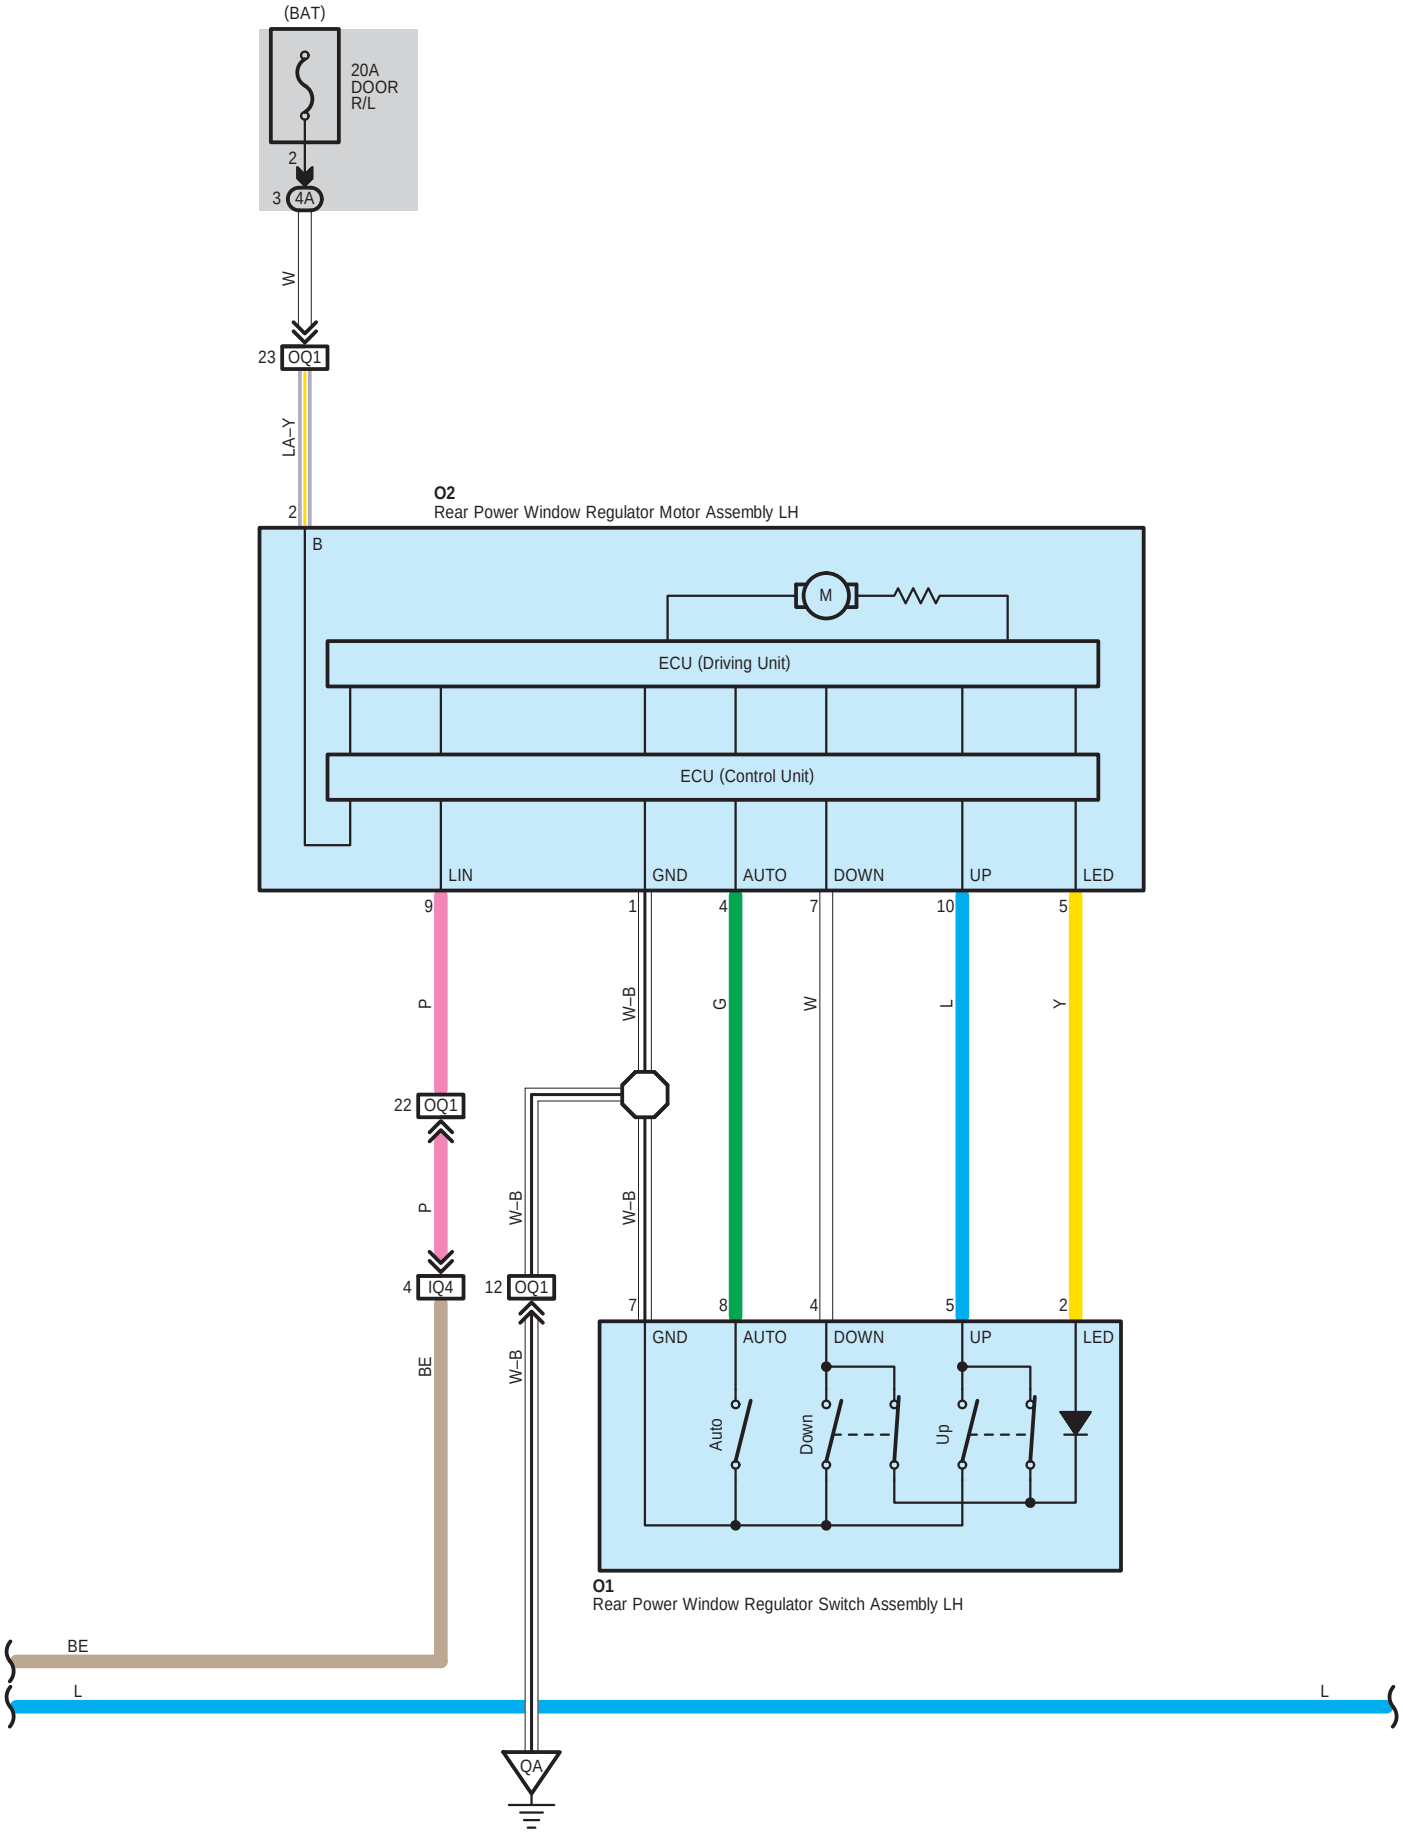
(BAT)
20A
DOOR
R/L
2
3
4A
W
23
OQ1
LA–Y
2
O2
Rear Power Window Regulator Motor Assembly LH
B
M
ECU (Driving Unit)
ECU (Control Unit)
LIN
GND
AUTO
DOWN
UP
LED
9
1
4
7
10
5
P
W–B
G
W
L
Y
22
OQ1
P
W–B
W–B
4
IQ4
12
OQ1
7
8
4
5
2
BE
W–B
GND
AUTO
DOWN
UP
LED
Auto
Down
Up
O1
Rear Power Window Regulator Switch Assembly LH
BE
L
L
QA

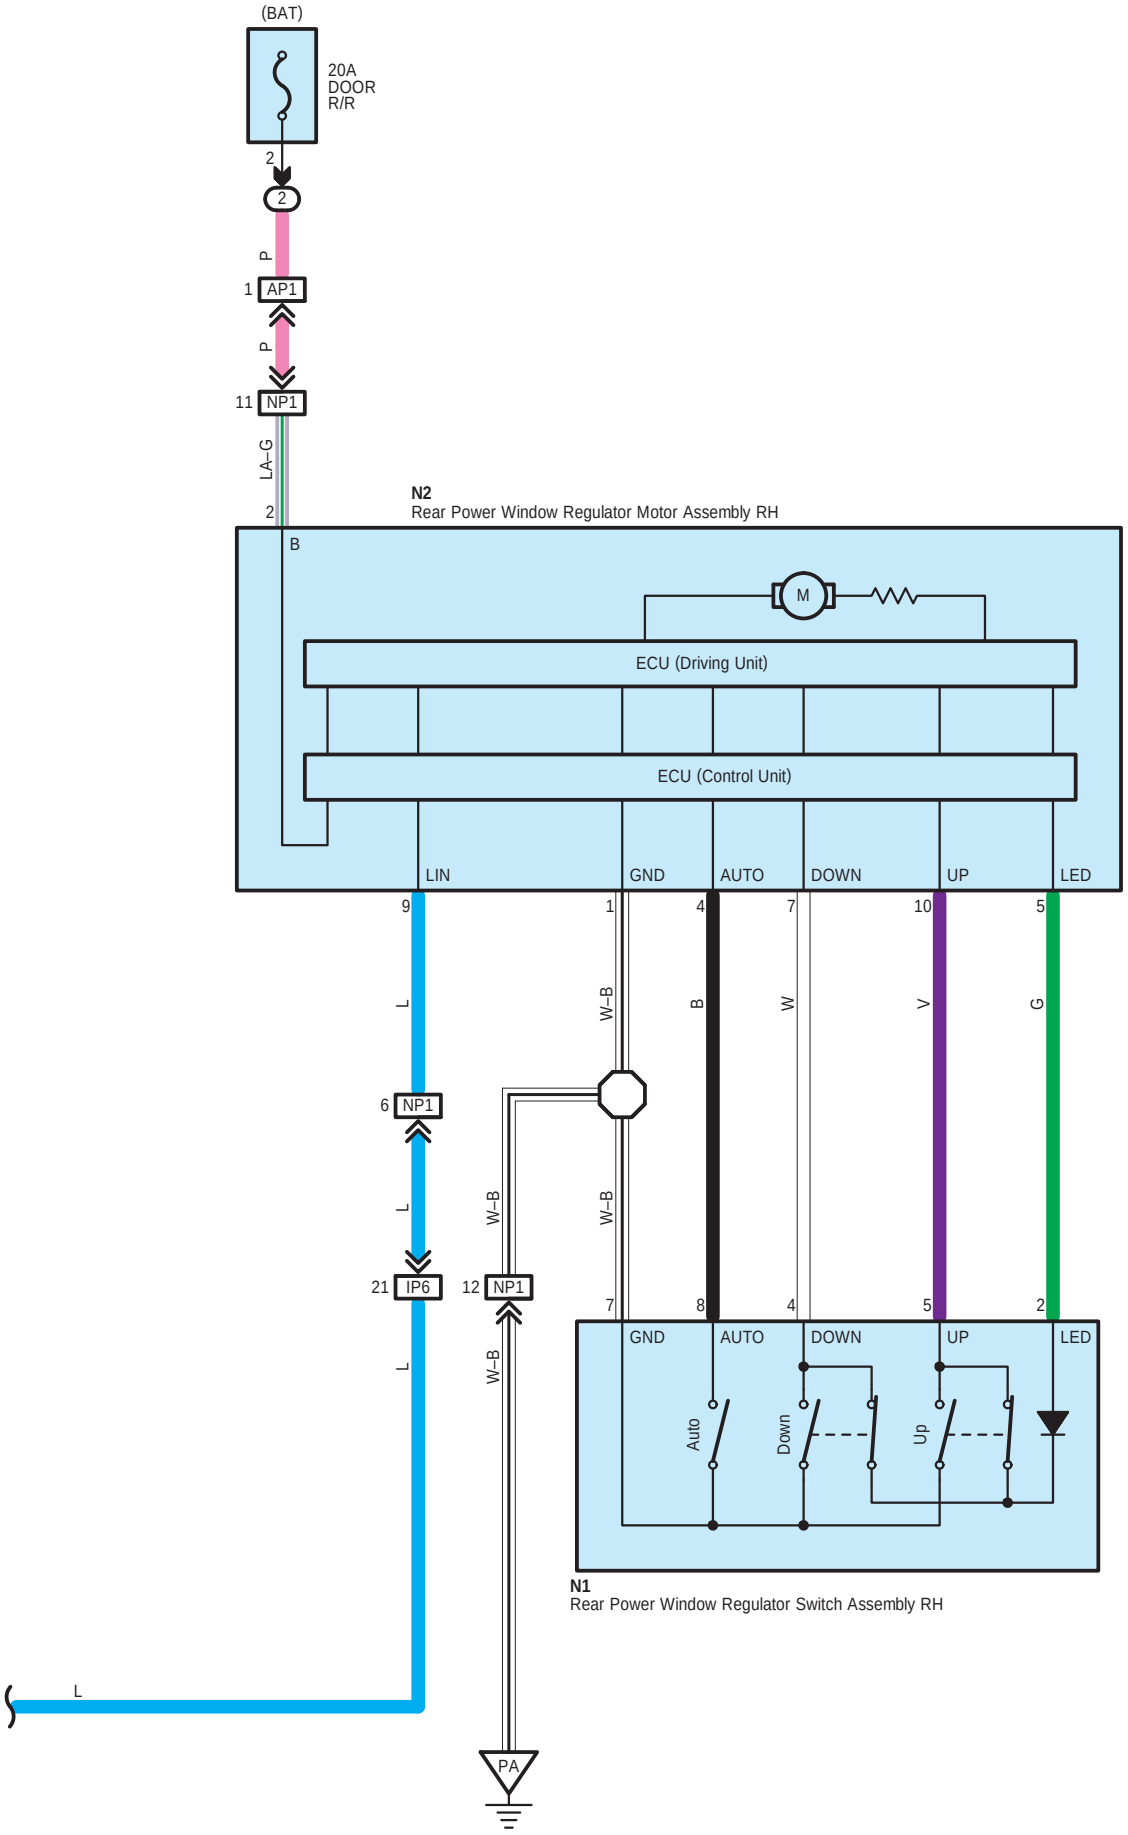
(BAT)
20A
DOOR
R/R
2
2
P
1 AP1
P
11 NP1
LA–G
2
N2
Rear Power Window Regulator Motor Assembly RH
B
M
ECU (Driving Unit)
ECU (Control Unit)
LIN
GND
AUTO
DOWN
UP
LED
9
1
4
7
10
5
L
W–B
B
W
V
G
6 NP1
L
W–B
W–B
21 IP6
12 NP1
7
8
4
5
2
GND
AUTO
DOWN
UP
LED
L
W–B
Auto
Down
Up
N1
Rear Power Window Regulator Switch Assembly RH
L
PA

A48
Blue

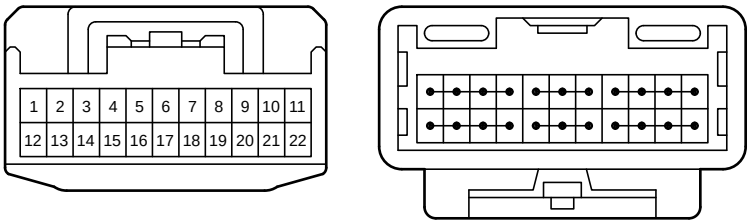

90980-12372

I10
Black

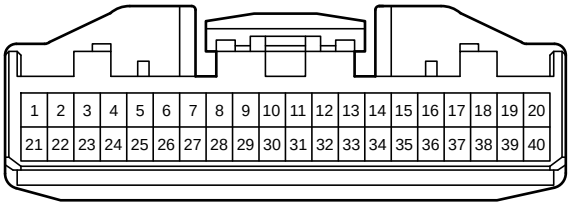

90980-12557

I48
White

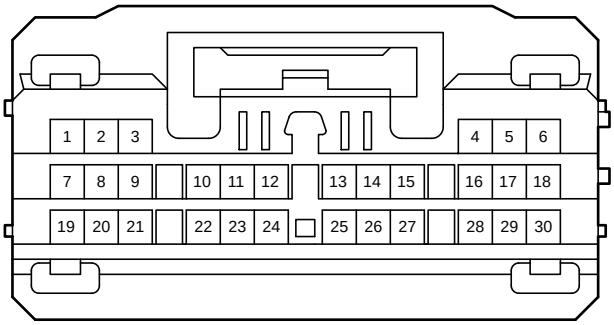

90980-12909

I57
Black

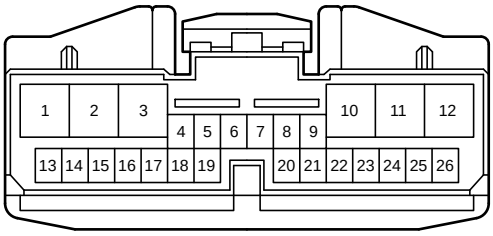

82824-12510

I63
Gray

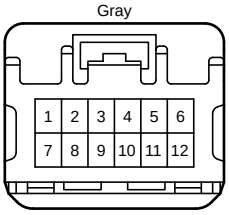

90980-12737

I74
Black

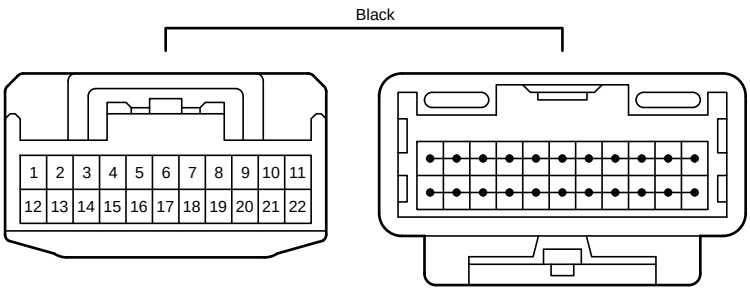

90980-12372

I81

Gray

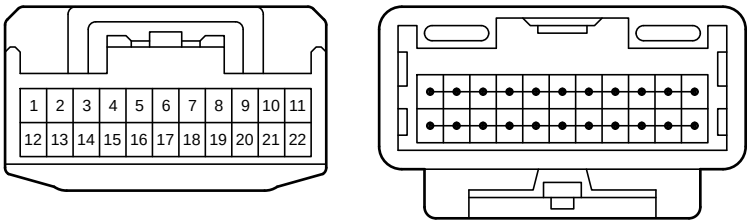

90980-12372

I82

Blue

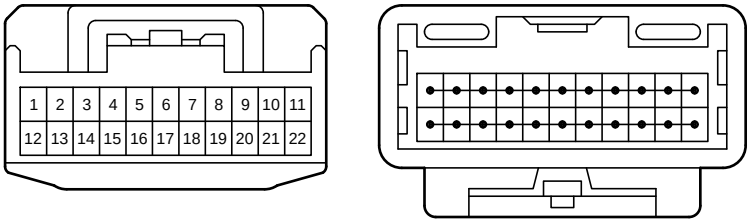

90980-12372
(LHD)

I82

White

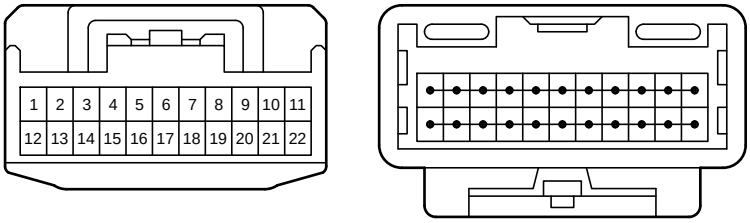

90980-12372
(RHD)

I84

Black

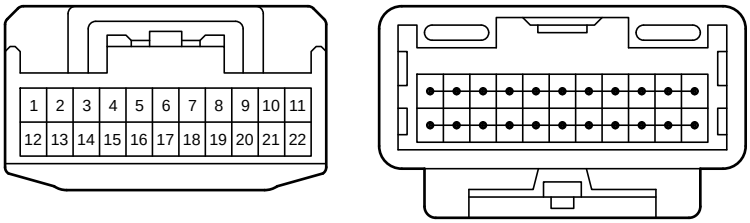

90980-12372
(LHD)

I84
Gray

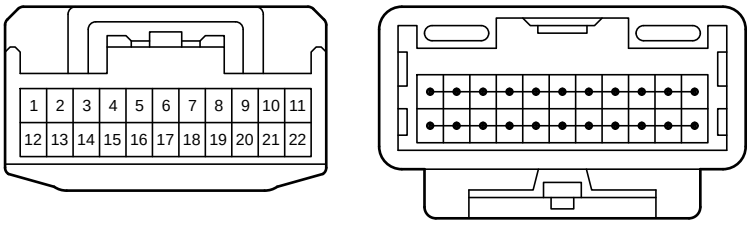

90980-12372
(RHD)

I93
White

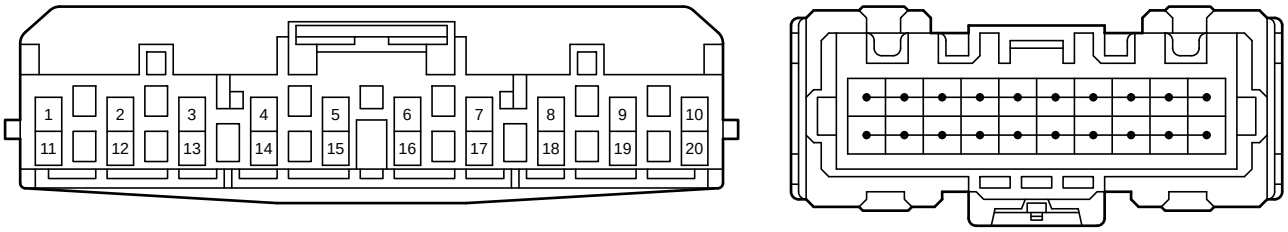

90980-12A58

I94
White

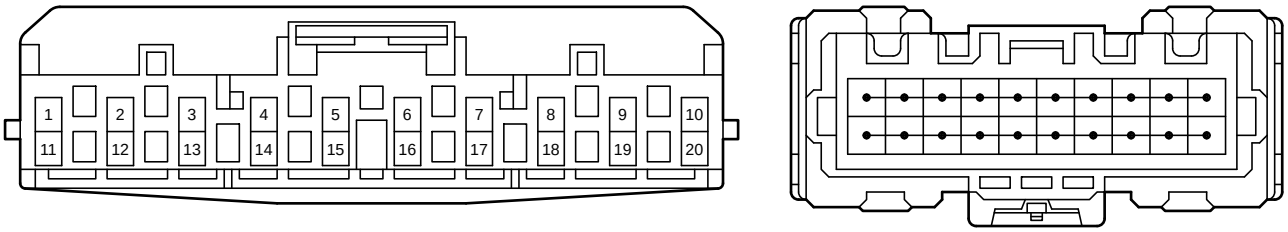

90980-12A58

L2
White

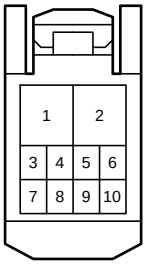

90980-12328

L3
White

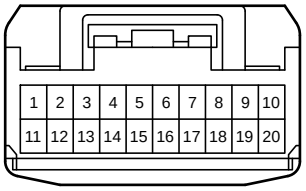

90980-12460

M2
White

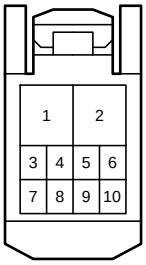

90980-12328

M3
Black

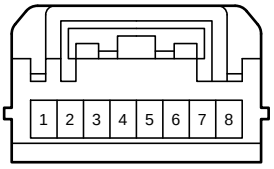

90980-12550

N1
Black

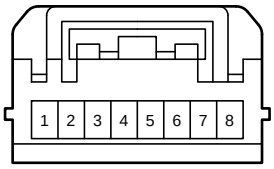

90980-12550

N2
White

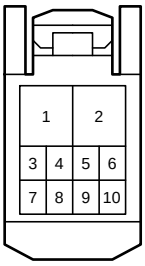

90980-12328

O1
Black

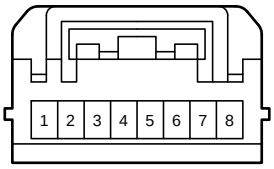

90980-12550

O2
White

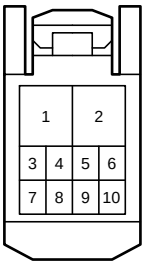

90980-12328

P3
Black

90980-10871

Q3
Black

90980-10871

4A
White

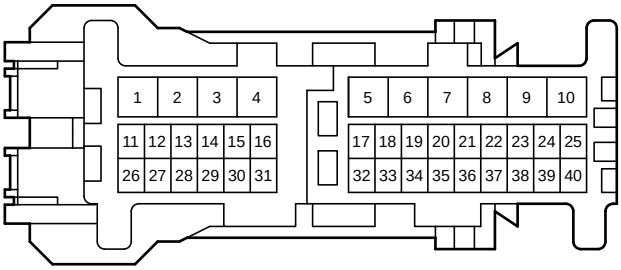

90980-12884

4C
White

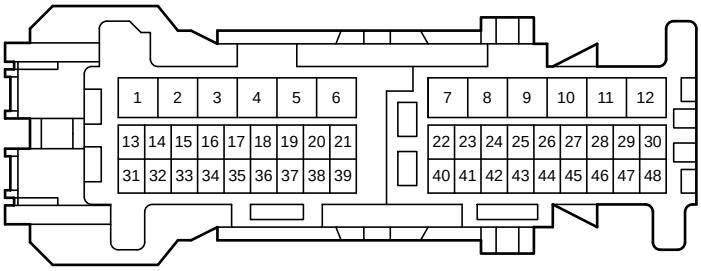

90980-12887

4D
White

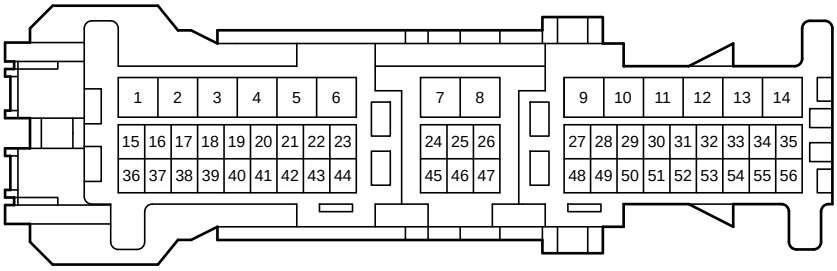

90980-12890

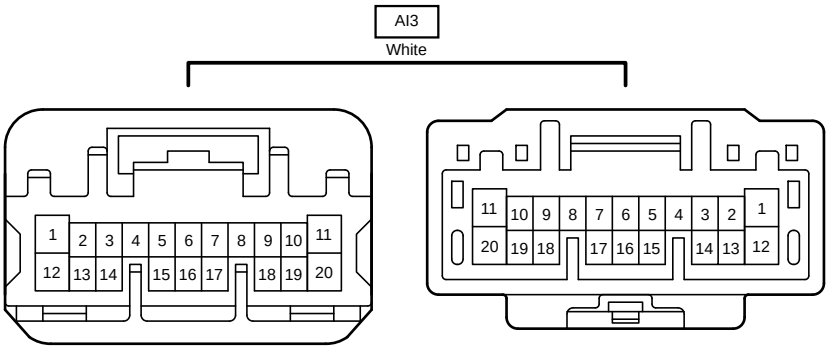

90980-12741

90980-12740

(LHD)

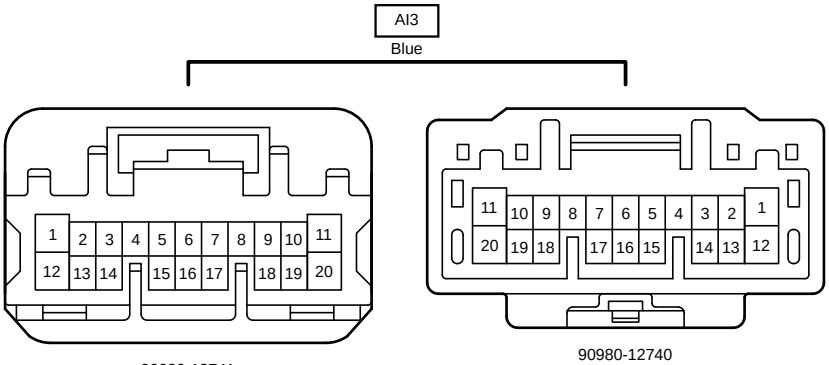

90980-12741

90980-12740

(RHD)

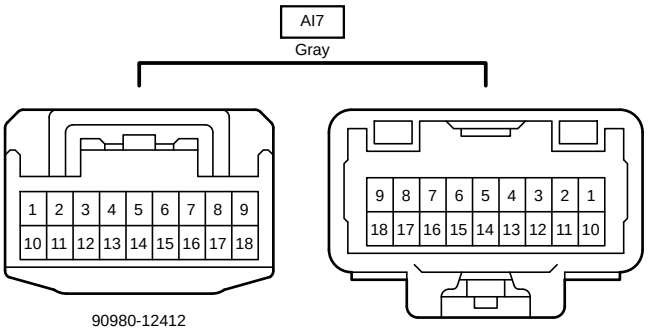

90980-12412

90980-12411

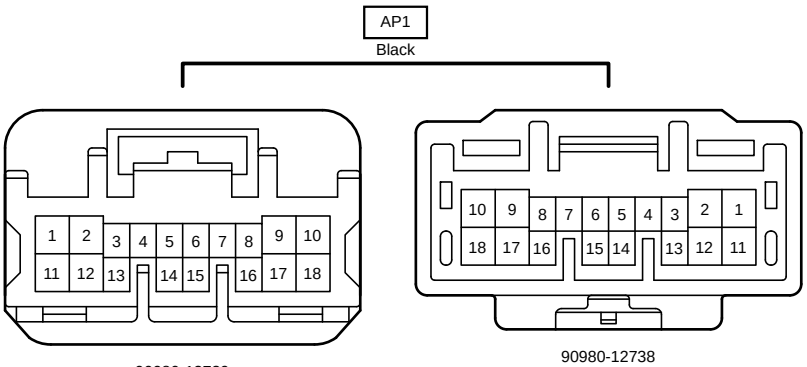

90980-12739

90980-12738

IP2
Blue

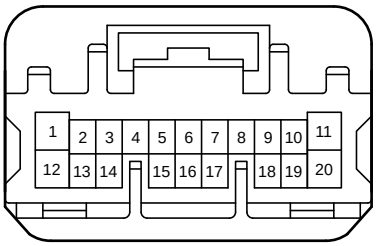

90980-12741

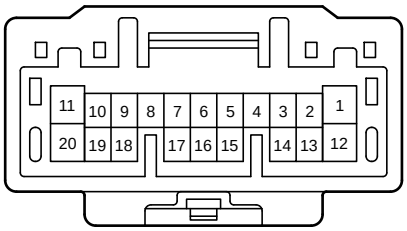

90980-12740

IP6
Gray

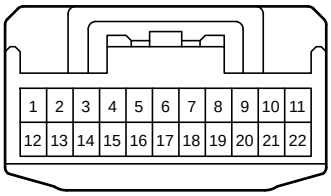

90980-12372

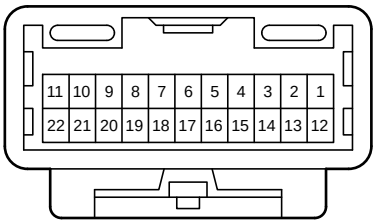

90980-12371

IQ4
Gray

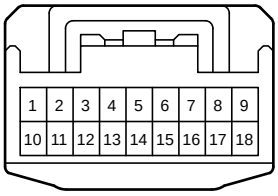

90980-12412

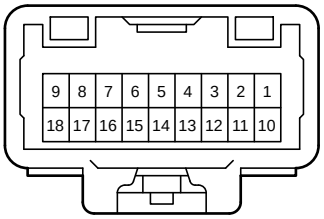

90980-12411

LI3
Black

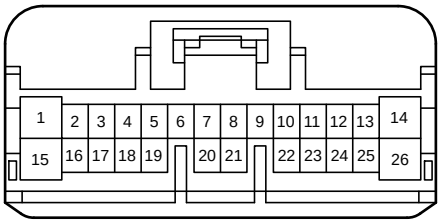

90980-12771

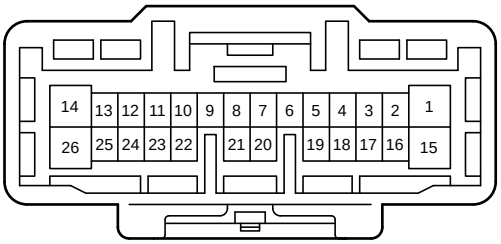

90980-12770

MI1
White

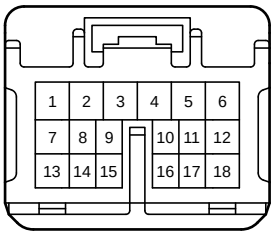

90980-12745

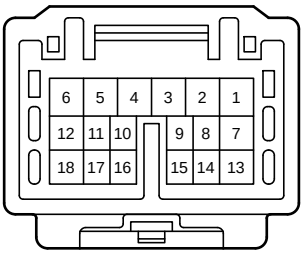

90980-12744

MI3
Black

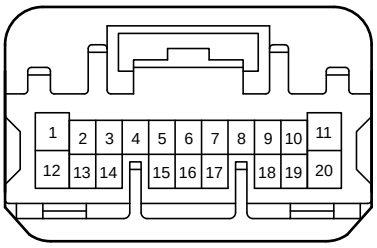

90980-12741

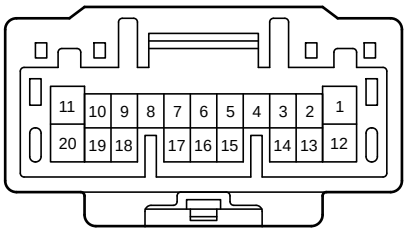

90980-12740

NP1
White

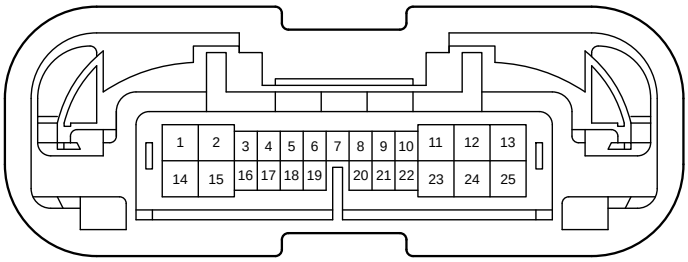

90980-12802

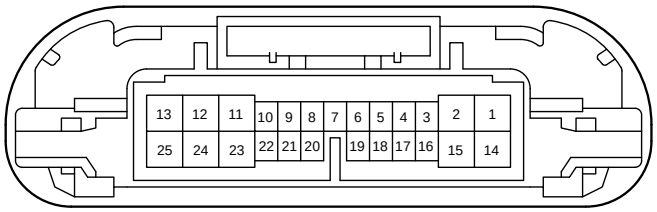

90980-12801

OQ1
White

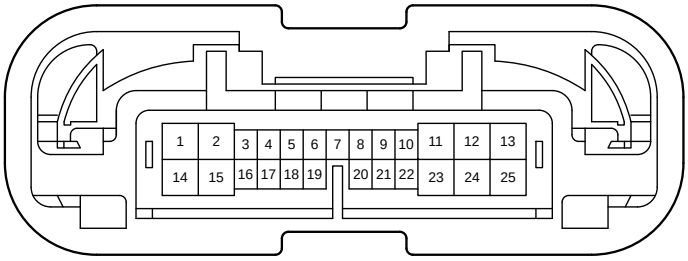

90980-12802

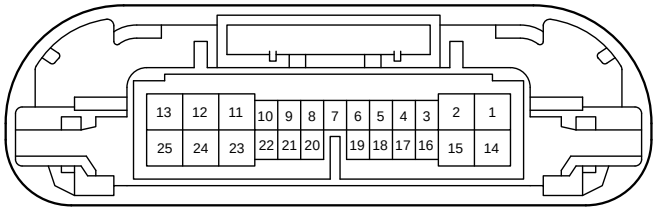

90980-12801