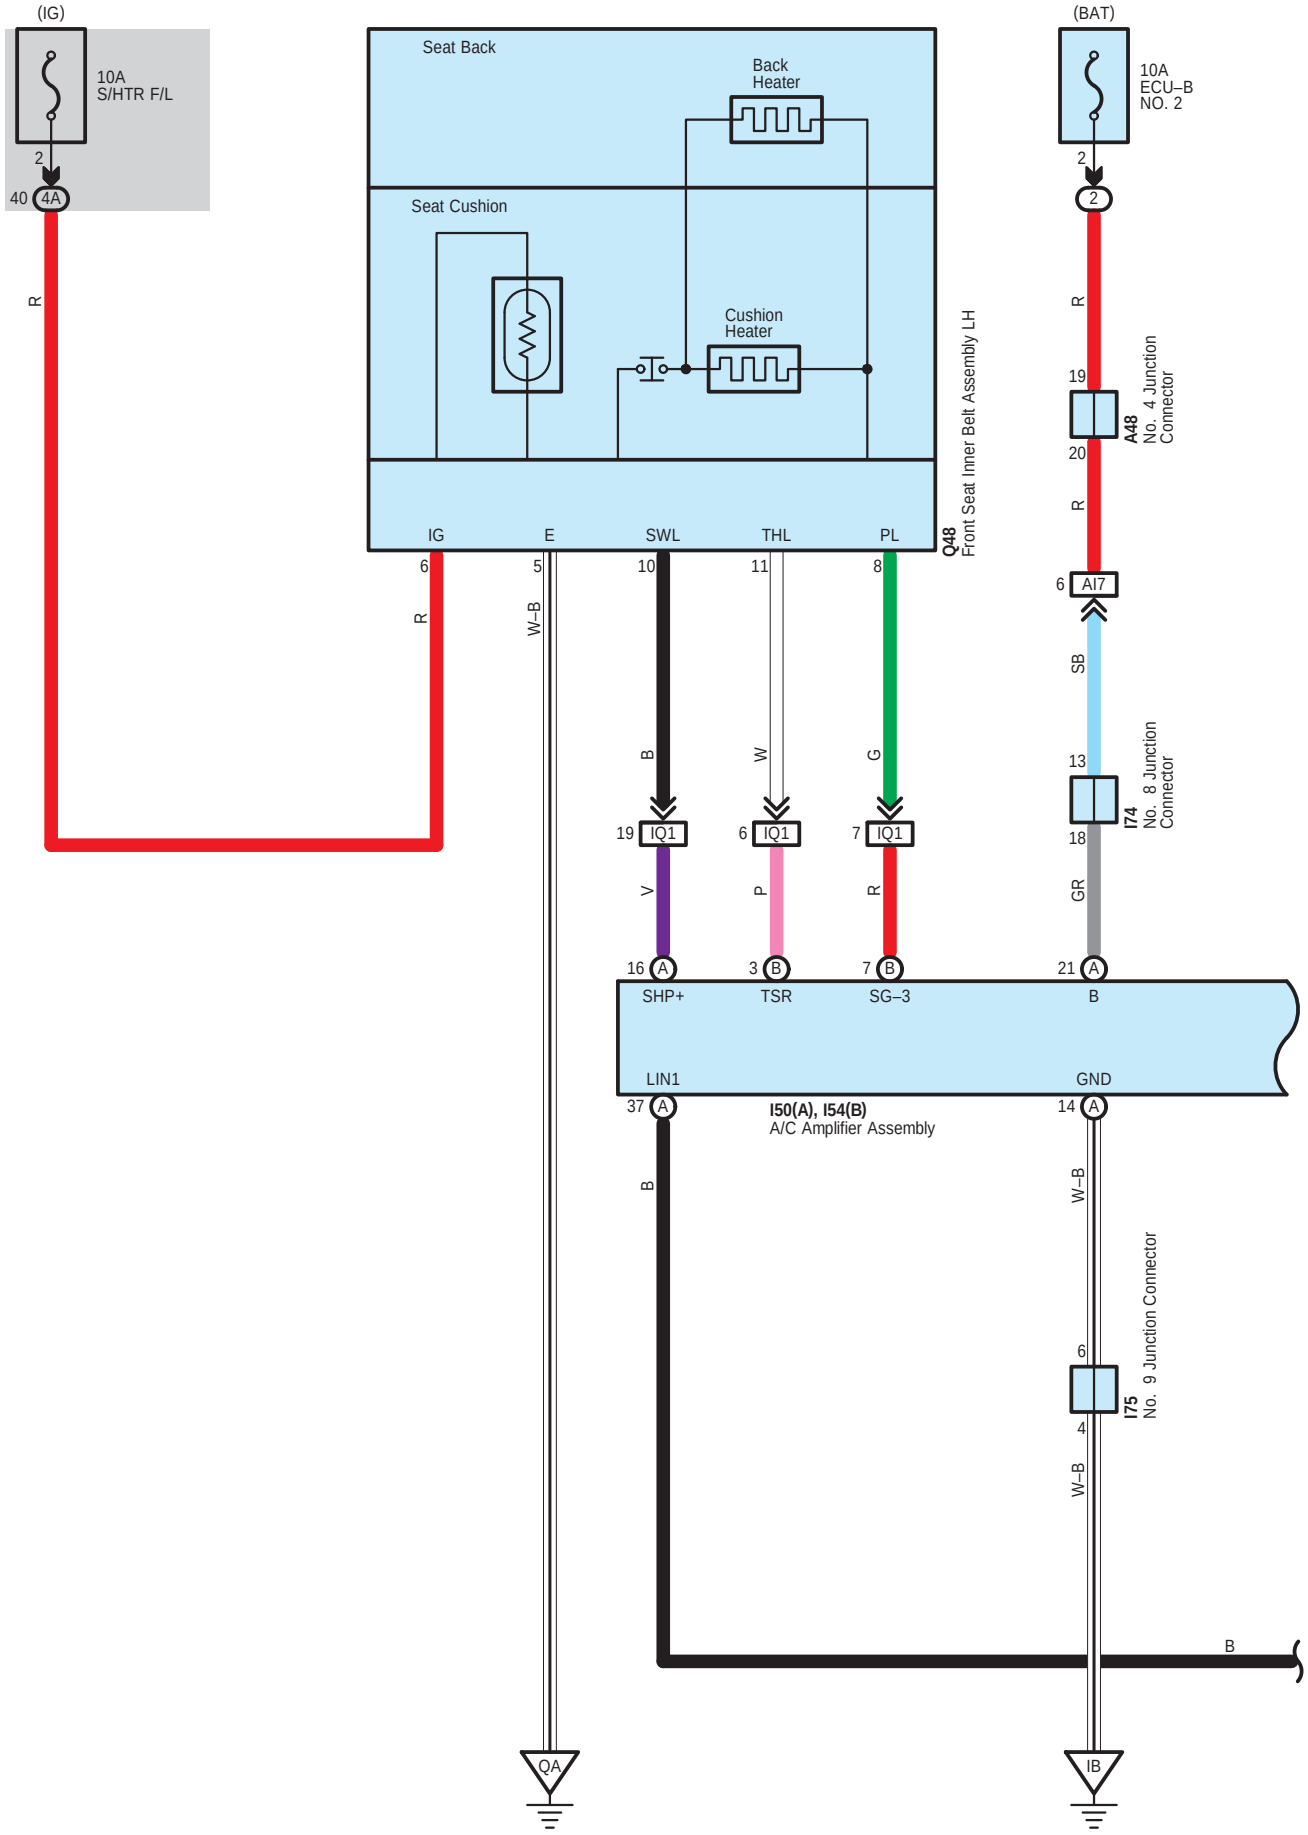
(IG)
10A
S/HTR F/L
2
40 4A
R
Seat Back
Back
Heater
Seat Cushion
Cushion
Heater
IG
E
SWL
THL
PL
Q48
Front Seat Inner Belt Assembly LH
6
5
10
11
8
R
W–B
B
W
G
19 IQ1
6 IQ1
7 IQ1
V
P
R
16 A
3 B
7 B
SHP+
TSR
SG–3
LIN1
GND
37 A
14 A
I50(A), I54(B)
A/C Amplifier Assembly
B
W–B
W–B
6
4
I75
No. 9 Junction Connector
B
QA
IB
(BAT)
10A
ECU–B
NO. 2
2
2
R
19
A48
No. 4 Junction
Connector
20
R
6 AI7
SB
13
I74
No. 8 Junction
Connector
18
GR
21 A
B

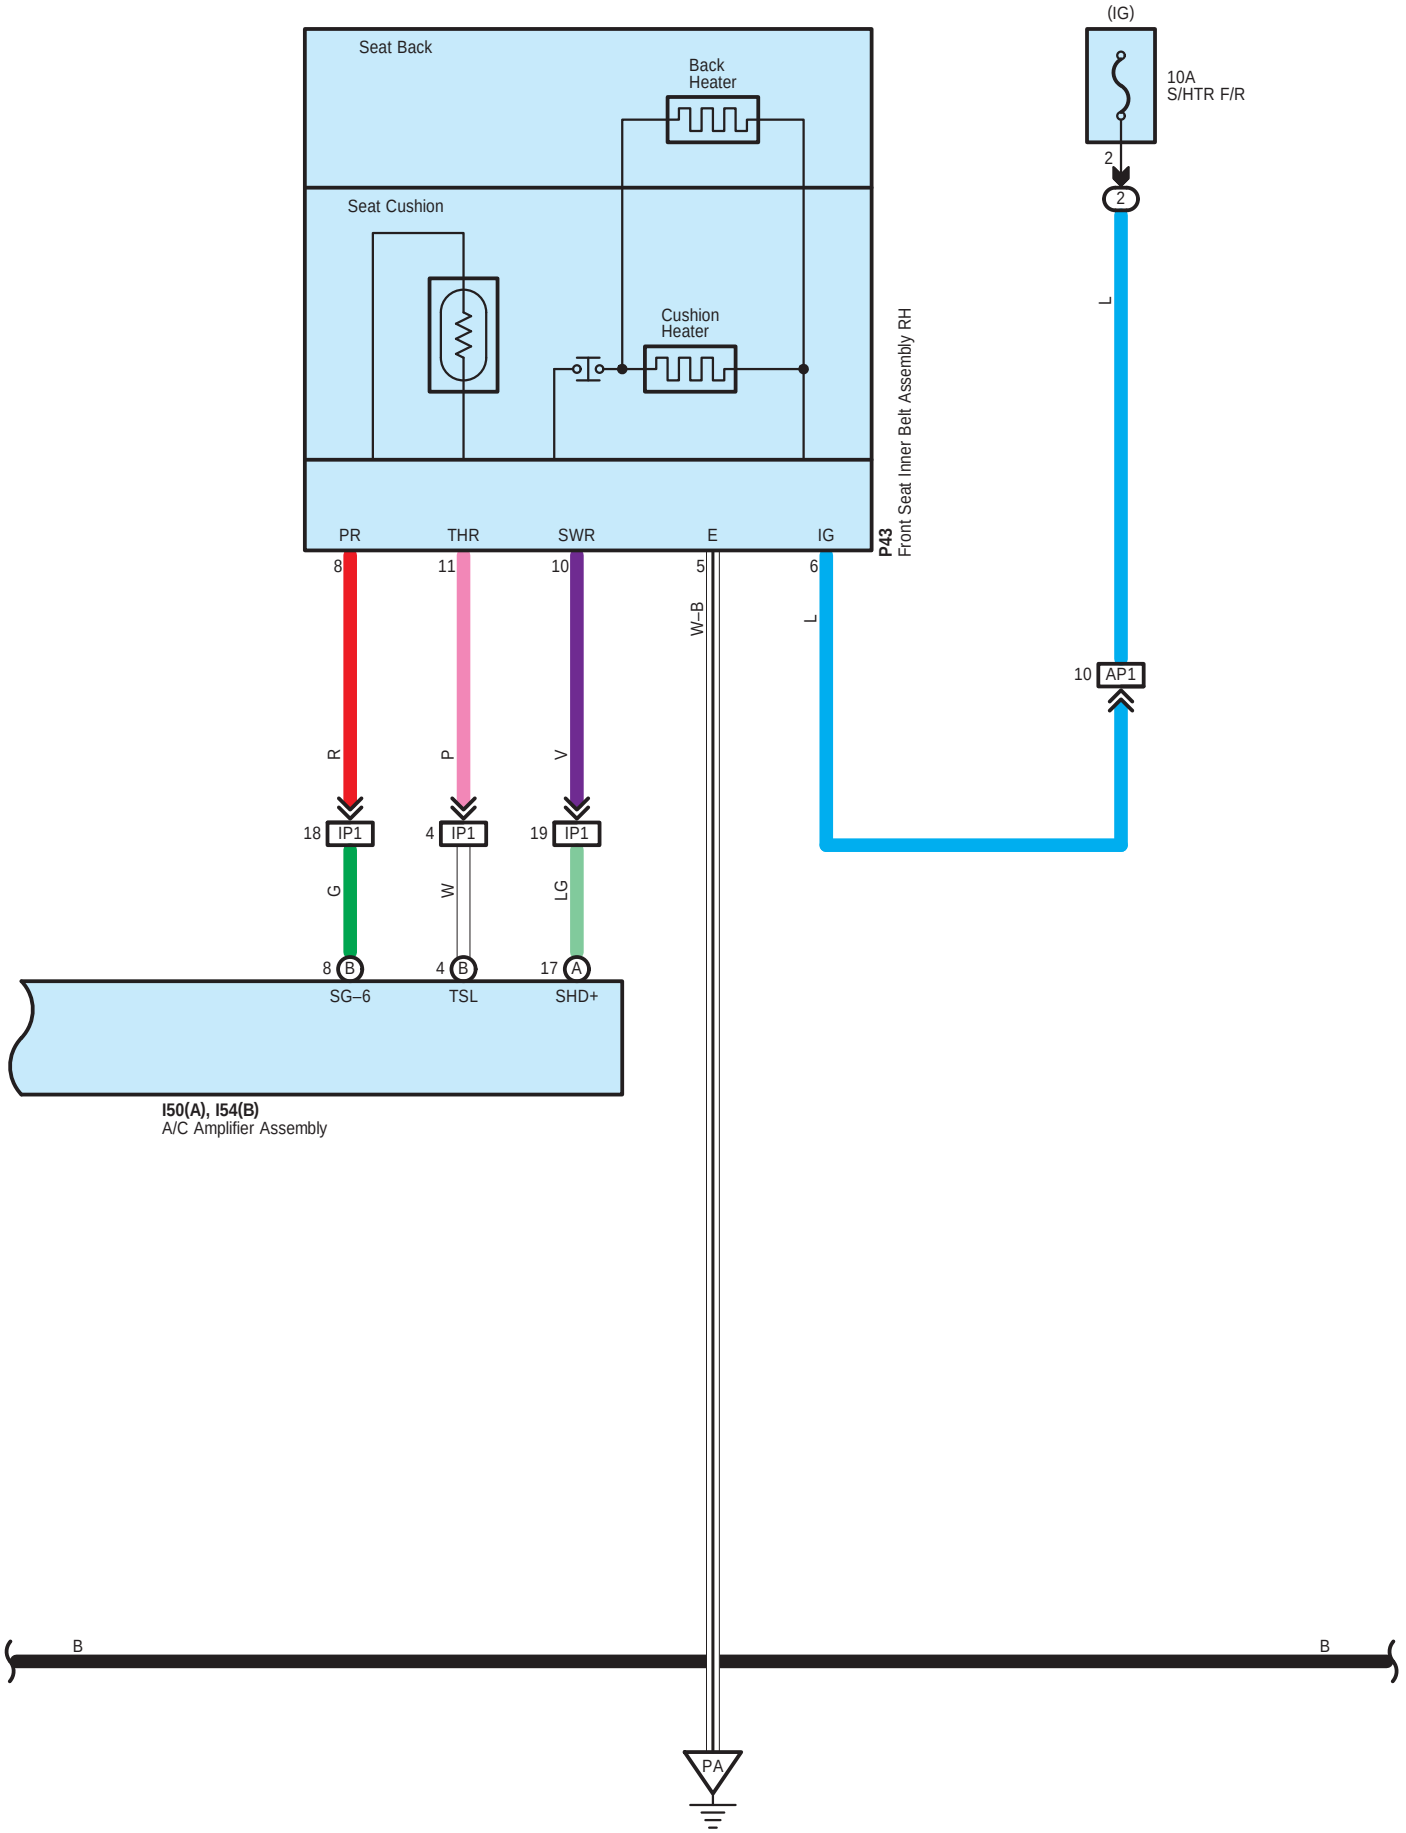
Seat Back
Back Heater
Seat Cushion
Cushion Heater
PR
THR
SWR
E
IG
P43
Front Seat Inner Belt Assembly RH
(IG)
10A
S/HTR F/R
2
2
L
10
AP1
8
11
10
5
6
W–B
L
R
P
V
18
IP1
4
IP1
19
IP1
G
W
LG
8
B
4
B
17
A
SG–6
TSL
SHD+
I50(A), I54(B)
A/C Amplifier Assembly
B
B
PA

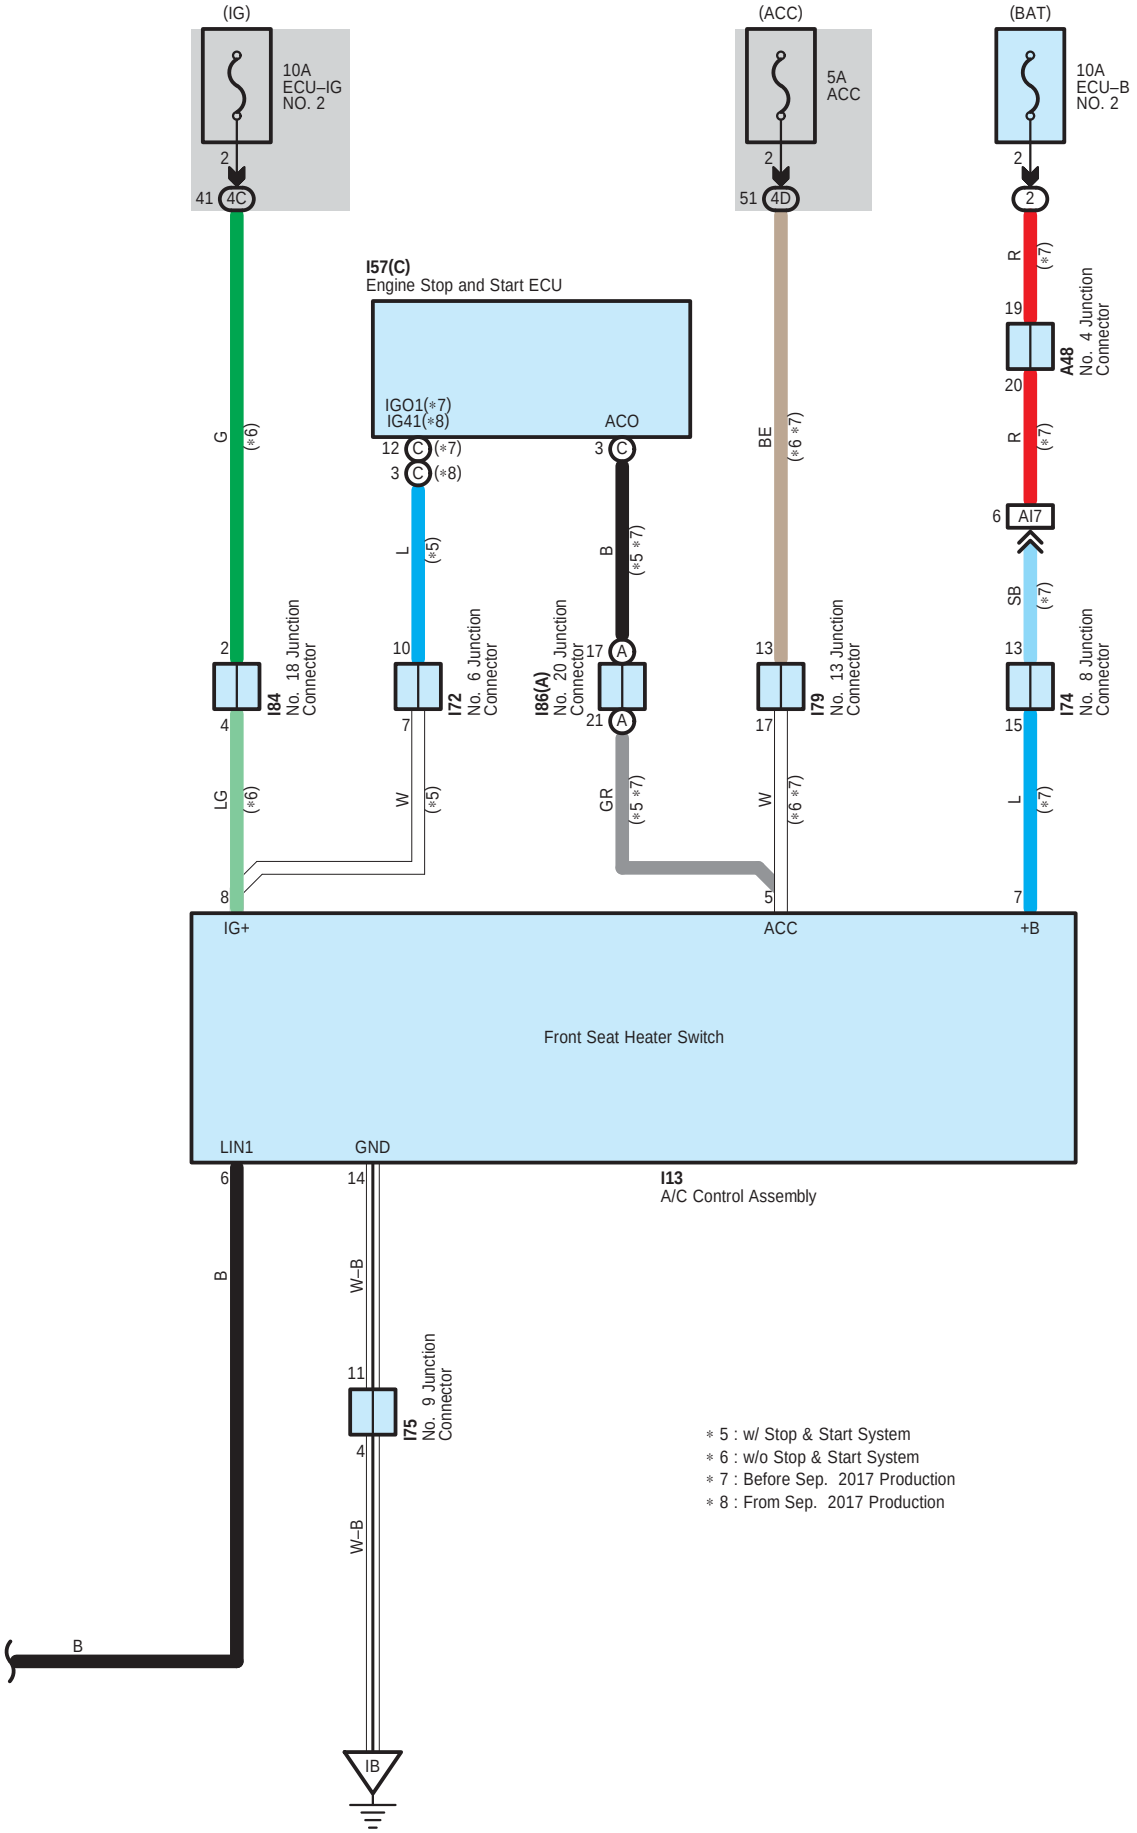
(IG)
10A
ECU–IG
NO. 2
(ACC)
5A
ACC
(BAT)
10A
ECU–B
NO. 2
I57(C)
Engine Stop and Start ECU
IGO1(*7)
IG41(*8)
ACO
I84
No. 18 Junction Connector
I72
No. 6 Junction Connector
I86(A)
No. 20 Junction Connector
I79
No. 13 Junction Connector
A48
No. 4 Junction Connector
AI7
I74
No. 8 Junction Connector
IG+
ACC
+B
Front Seat Heater Switch
LIN1
GND
I13
A/C Control Assembly
I75
No. 9 Junction Connector
IB
* 5 : w/ Stop & Start System
* 6 : w/o Stop & Start System
* 7 : Before Sep. 2017 Production
* 8 : From Sep. 2017 Production

A48
Blue

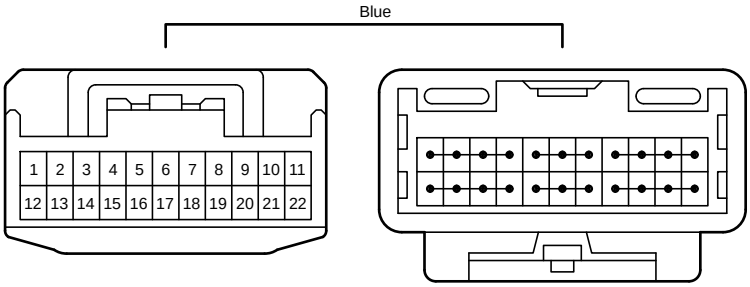

90980-12372

I13
Black

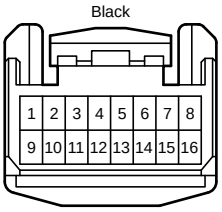

90980-12553

I50
White

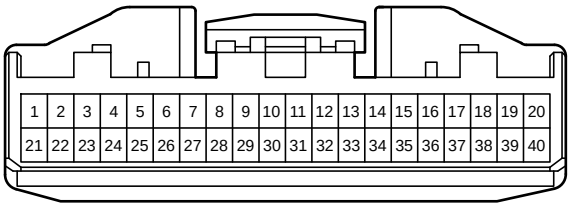

90980-12557

I54
White

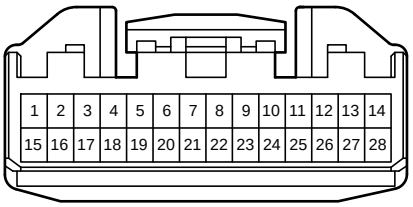

90980-12555

I57
Black

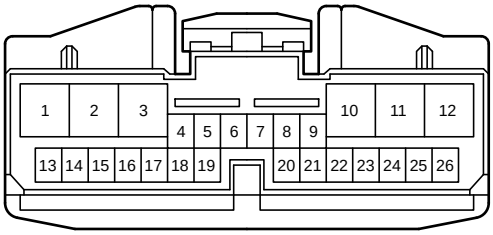

82824-12510

I72
Gray

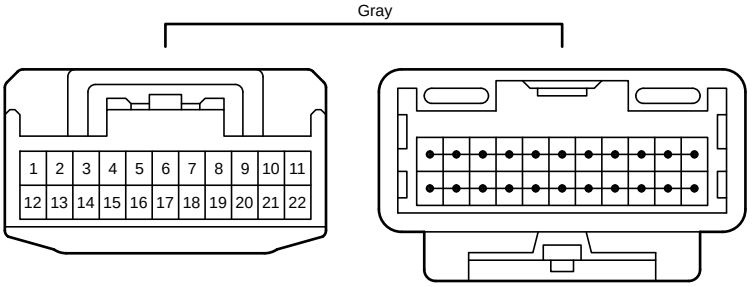

90980-12372

I74
Black

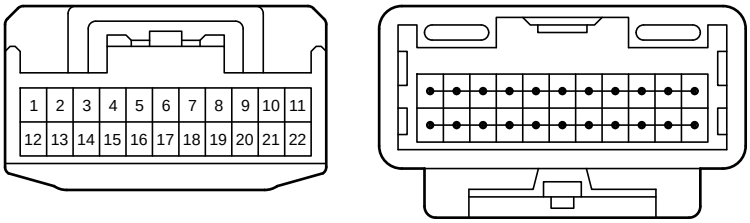

90980-12372

I75

Gray

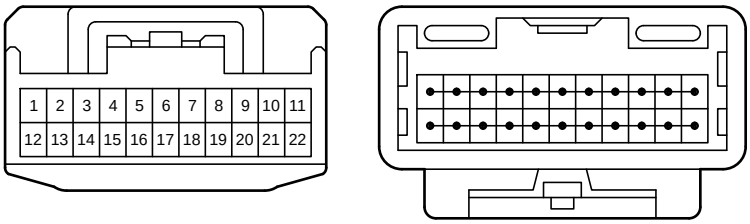

90980-12372
(LHD Before Sep. 2017 Production)

I75

White

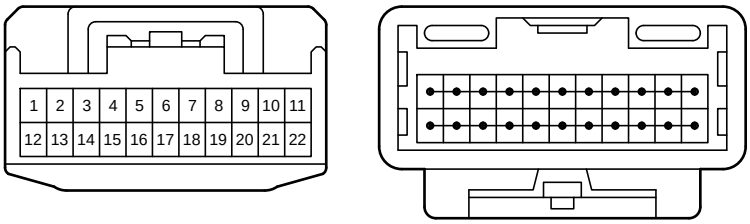

90980-12372
(LHD From Sep. 2017 Production)

I75

Blue

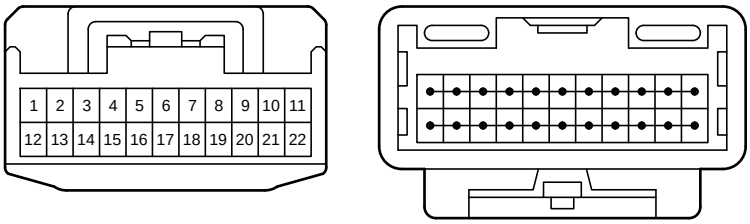

90980-12372
(RHD)

I79

Gray

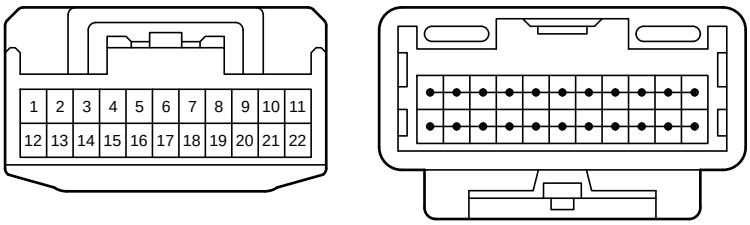

90980-12372

I84
Black

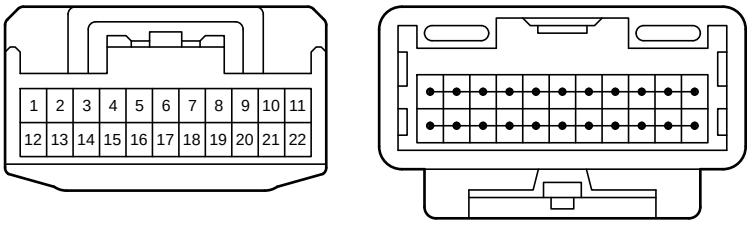

90980-12372
(LHD)

I84
Gray

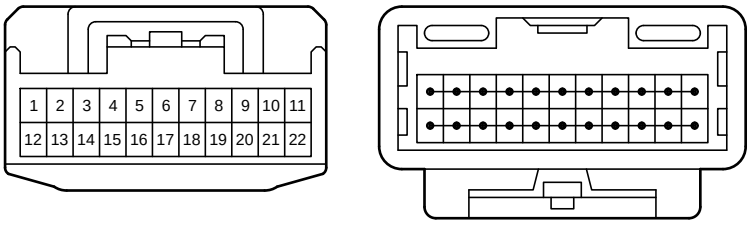

90980-12372
(RHD)

I86
Blue

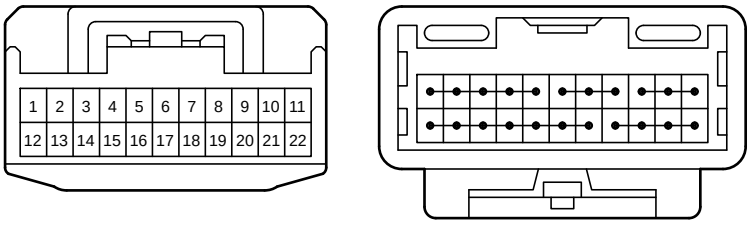

90980-12372
(LHD)

I86
White

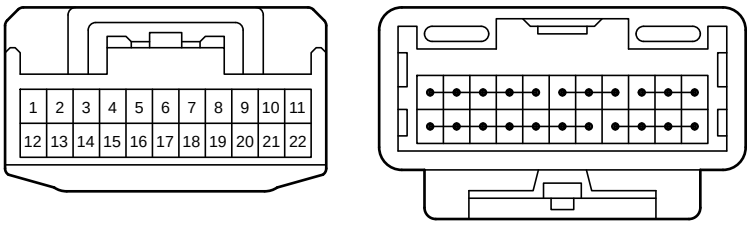

90980-12372
(RHD)

P43
White

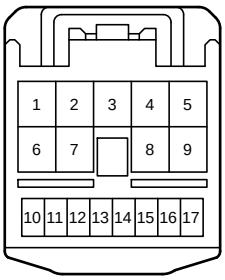

90980-12374

Q48
White

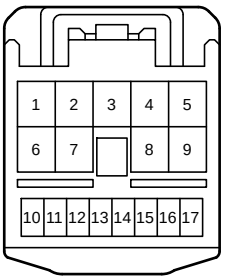

90980-12374

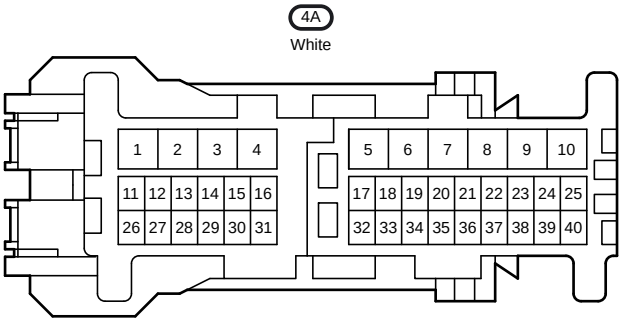

90980-12884

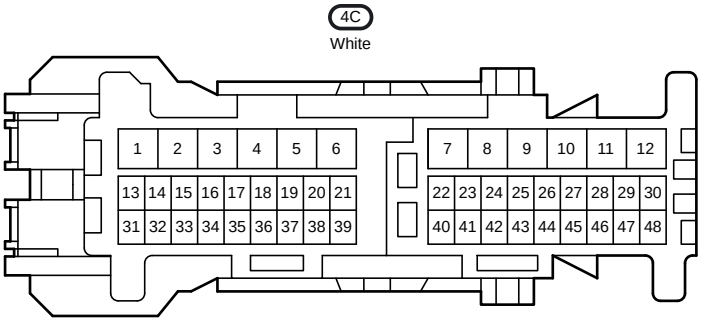

90980-12887

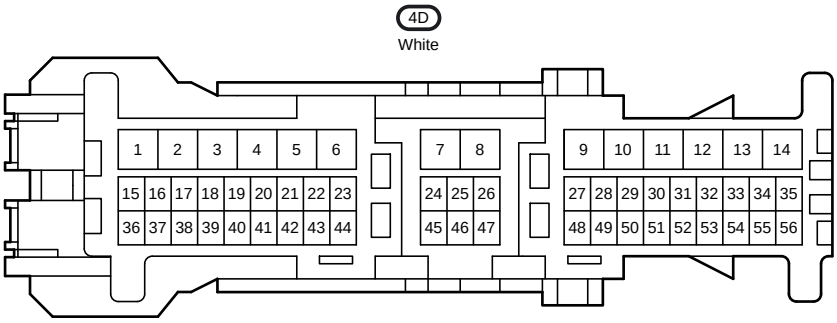

90980-12890

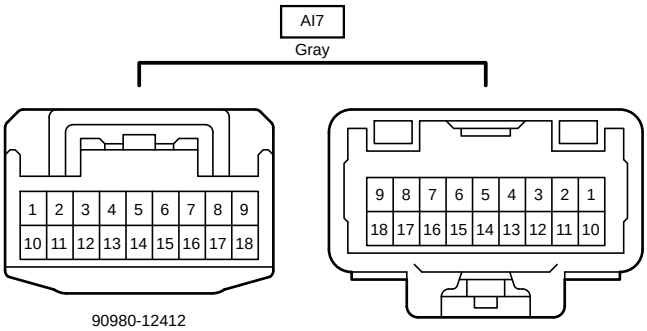

90980-12412

90980-12411

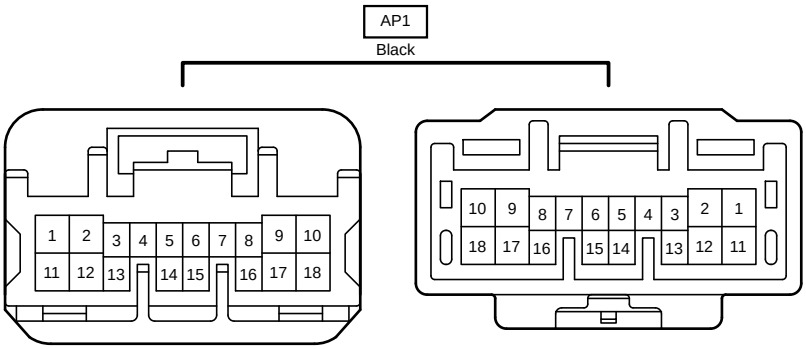

90980-12739

90980-12738

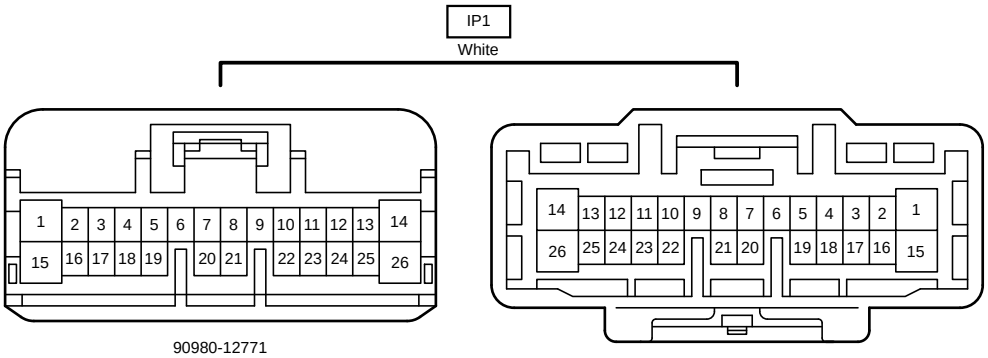

90980-12771

90980-12770

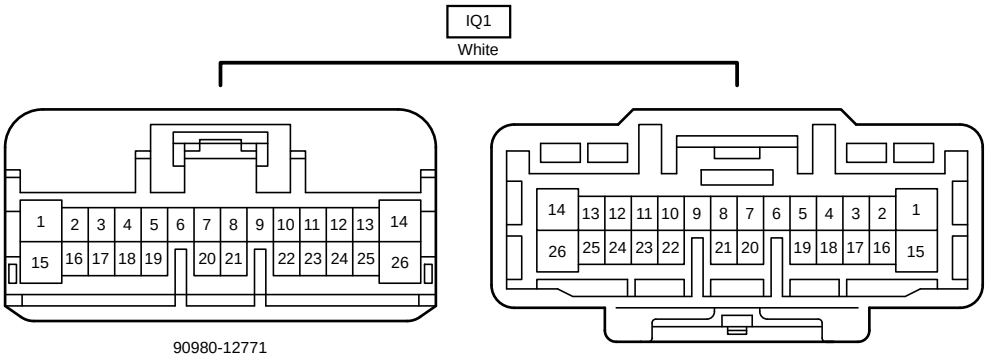

90980-12771

90980-12770