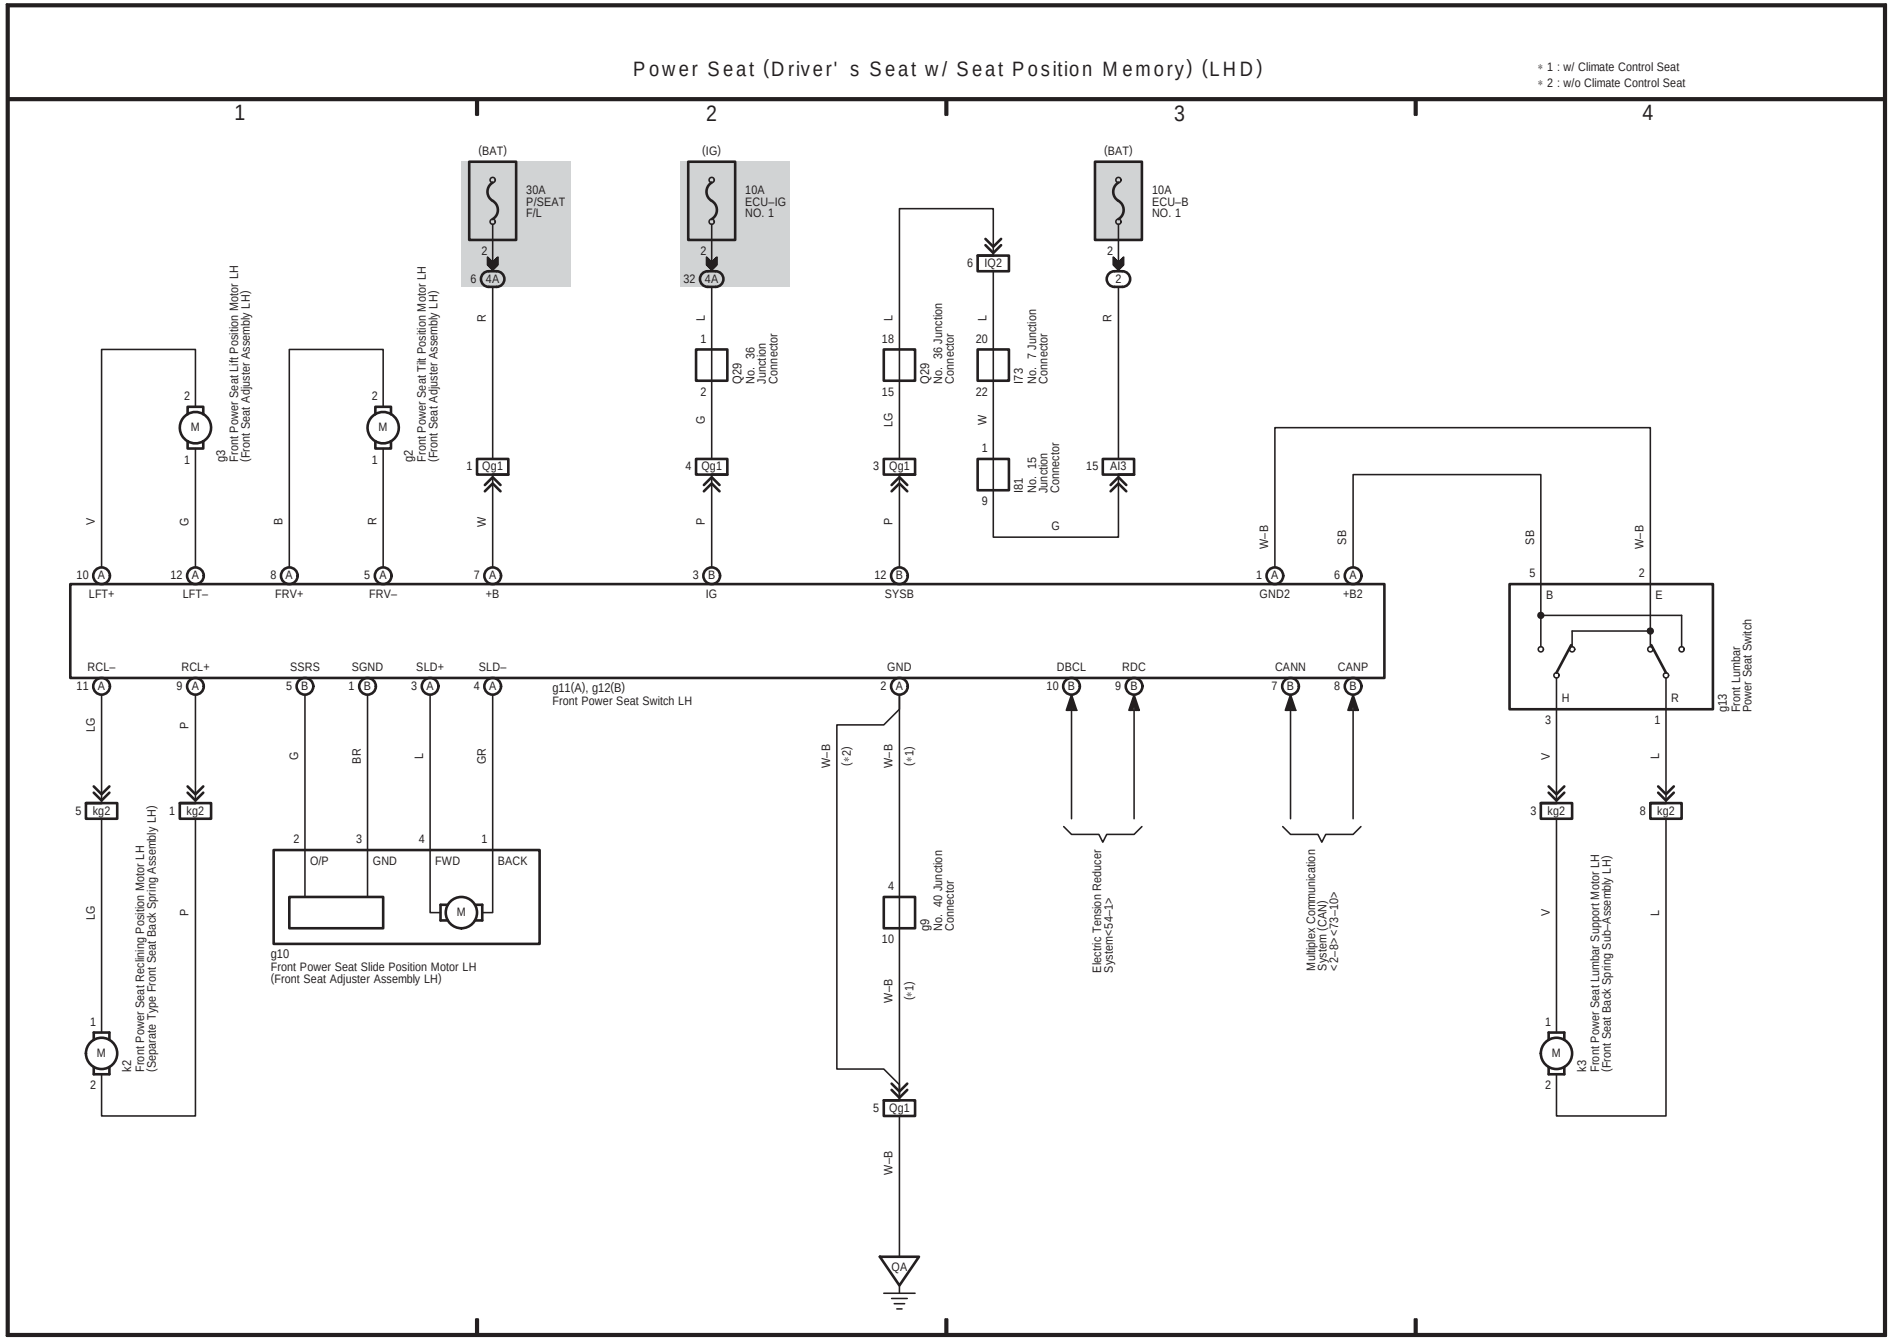
Power Seat (Driver' s Seat w/ Seat Position Memory) (LHD)
* 1 : w/ Climate Control Seat
* 2 : w/o Climate Control Seat
1
2
3
4
(BAT)
30A
P/SEAT
F/L
(IG)
10A
ECU–IG
NO. 1
(BAT)
10A
ECU–B
NO. 1
g3
Front Power Seat Lift Position Motor LH
(Front Seat Adjuster Assembly LH)
g2
Front Power Seat Tilt Position Motor LH
(Front Seat Adjuster Assembly LH)
Q29
No. 36
Junction
Connector
Q29
No. 36 Junction
Connector
I73
No. 7 Junction
Connector
I81
No. 15
Junction
Connector
LFT+
LFT–
FRV+
FRV–
+B
IG
SYSB
GND2
+B2
RCL–
RCL+
SSRS
SGND
SLD+
SLD–
GND
DBCL
RDC
CANN
CANP
g11(A), g12(B)
Front Power Seat Switch LH
g13
Front Lumbar
Power Seat Switch
k2
Front Power Seat Reclining Position Motor LH
(Separate Type Front Seat Back Spring Assembly LH)
O/P
GND
FWD
BACK
g10
Front Power Seat Slide Position Motor LH
(Front Seat Adjuster Assembly LH)
g9
No. 40 Junction
Connector
Electric Tension Reducer
System<54–1>
Multiplex Communication
System (CAN)
<2–B><73–10>
k3
Front Power Seat Lumbar Support Motor LH
(Front Seat Back Spring Sub-Assembly LH)