(Cont. next page)

Climate Control Seat (LHD), Seat Heater (w/ Climate Control Seat) (LHD)

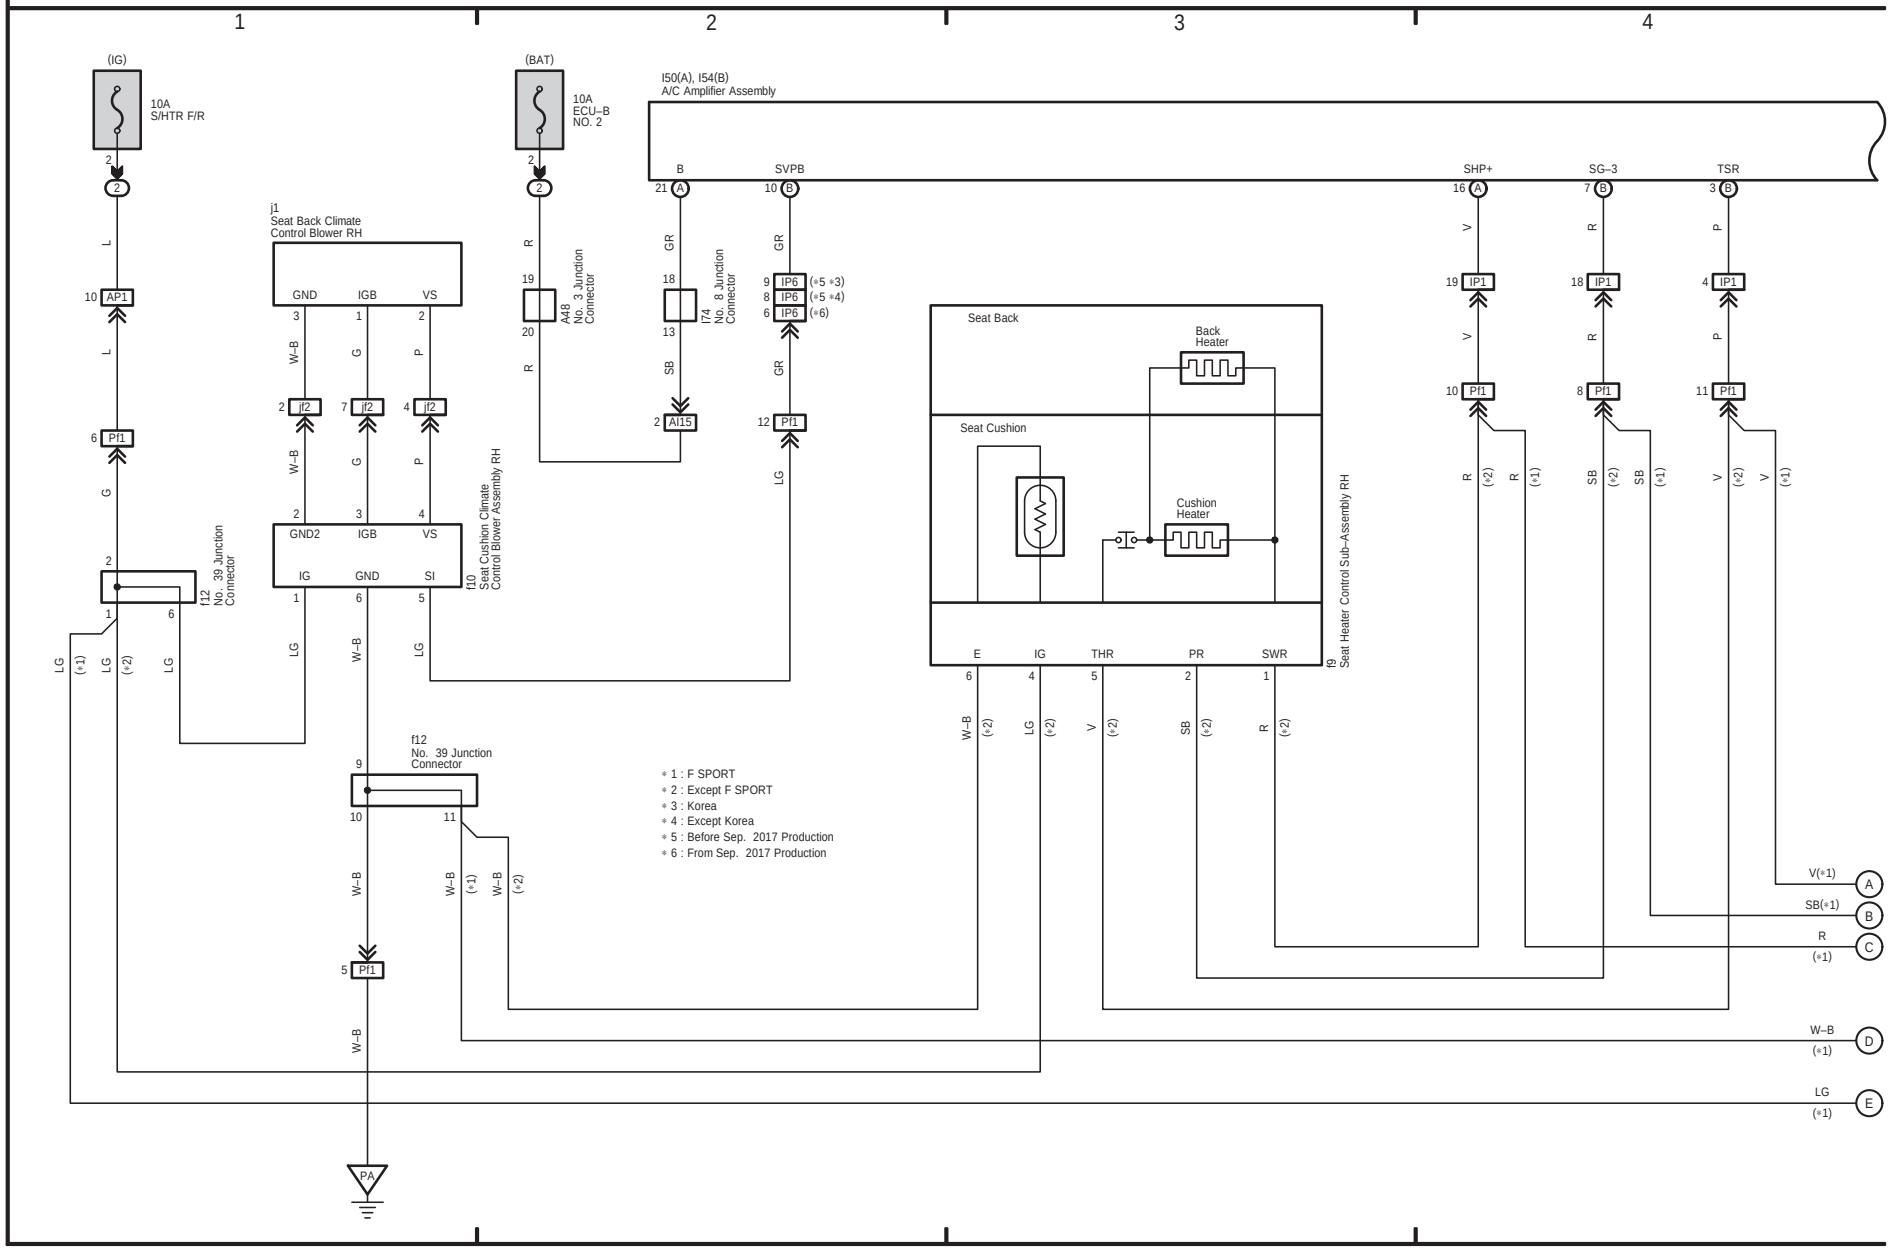

(Cont. next page)

Climate Control Seat (LHD), Seat Heater (w/ Climate Control Seat) (LHD)

* 1 : F SPORT
* 2 : Except F SPORT

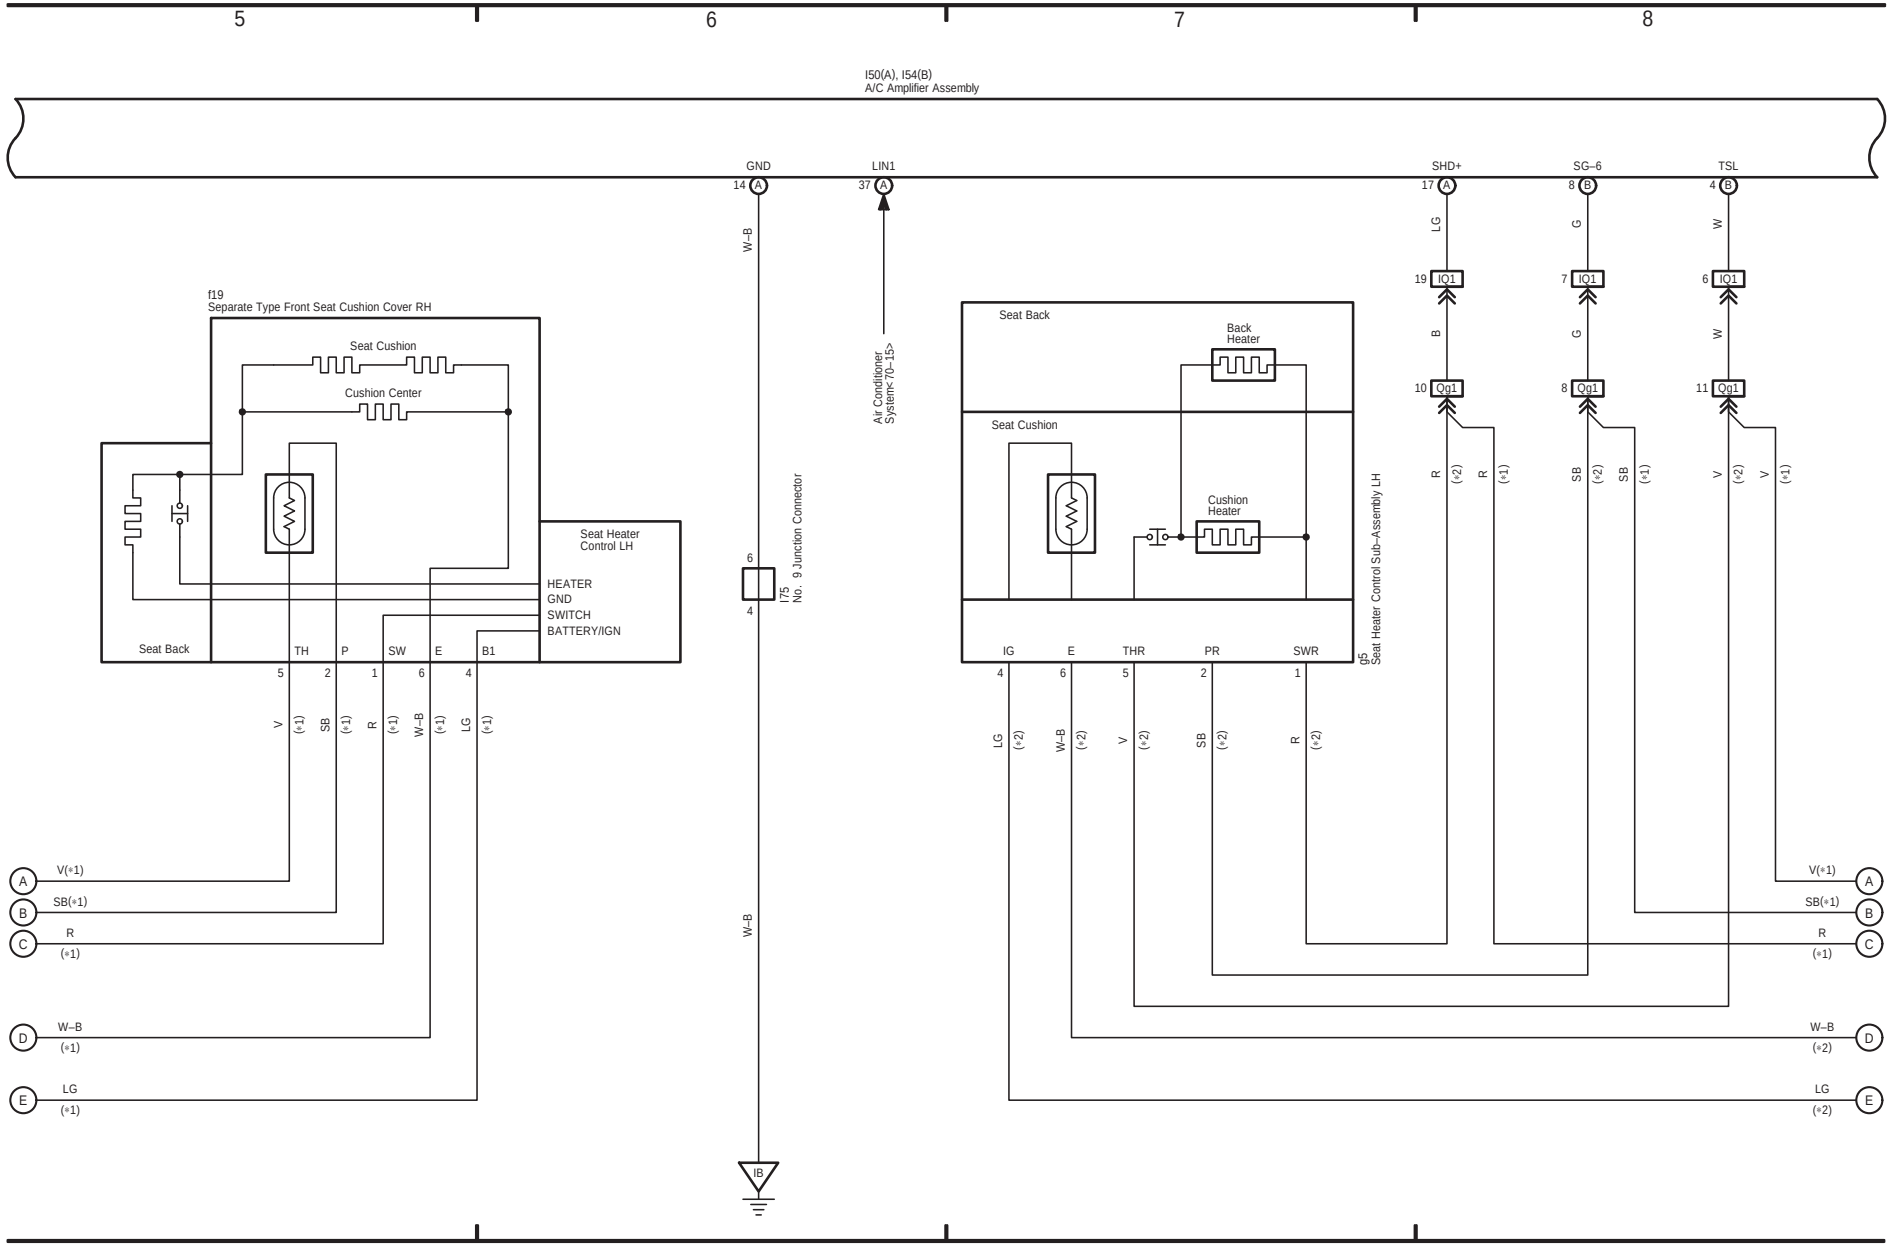

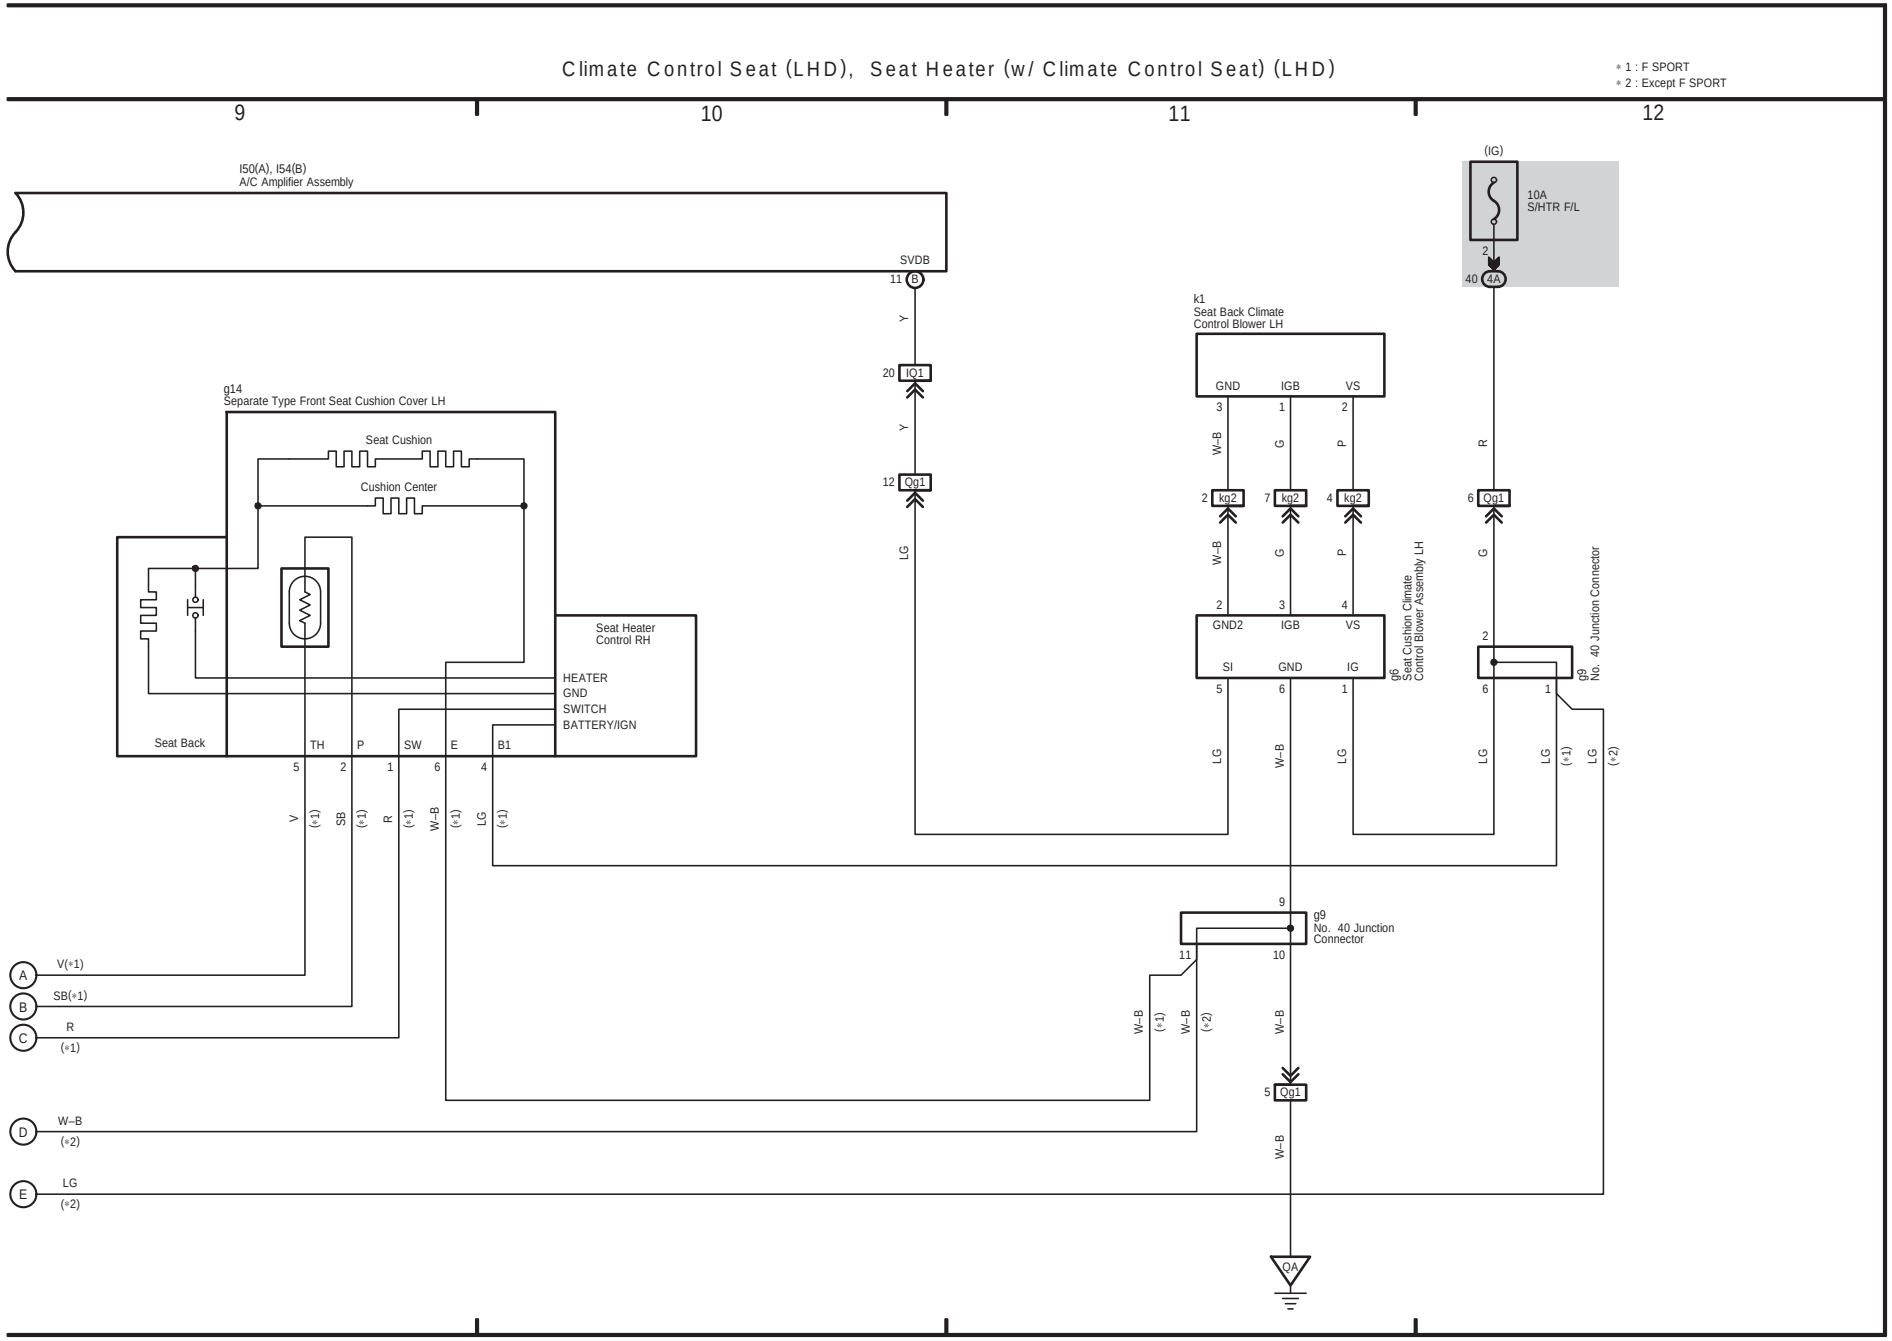
Climate Control Seat (LHD), Seat Heater (w/ Climate Control Seat) (LHD)
* 1 : F SPORT
* 2 : Except F SPORT
9
10
11
12
I50(A), I54(B)
A/C Amplifier Assembly
SVDB
11 B
Y
20 IQ1
Y
12 Qg1
LG
(IG)
10A
S/HTR F/L
2
40 4A
k1
Seat Back Climate
Control Blower LH
GND
IGB
VS
3
1
2
W–B
G
P
2 kg2
7 kg2
4 kg2
W–B
G
P
2
3
4
GND2
IGB
VS
SI
GND
IG
5
6
1
g6
Seat Cushion Climate
Control Blower Assembly LH
R
6 Qg1
G
2
6
1
g9
No. 40 Junction Connector
LG
W–B
LG
LG
LG
(*1)
LG
(*2)
g14
Separate Type Front Seat Cushion Cover LH
Seat Cushion
Cushion Center
Seat Back
Seat Heater
Control RH
HEATER
GND
SWITCH
BATTERY/IGN
TH
P
SW
E
B1
5
2
1
6
4
V
(*1)
SB
(*1)
R
(*1)
W–B
(*1)
LG
(*1)
9
g9
No. 40 Junction
Connector
11
10
W–B
(*1)
W–B
(*2)
W–B
5 Qg1
W–B
QA
A
V(*1)
B
SB(*1)
C
R
(*1)
D
W–B
(*2)
E
LG
(*2)