Position of Parts in Instrument Panel (LHD)

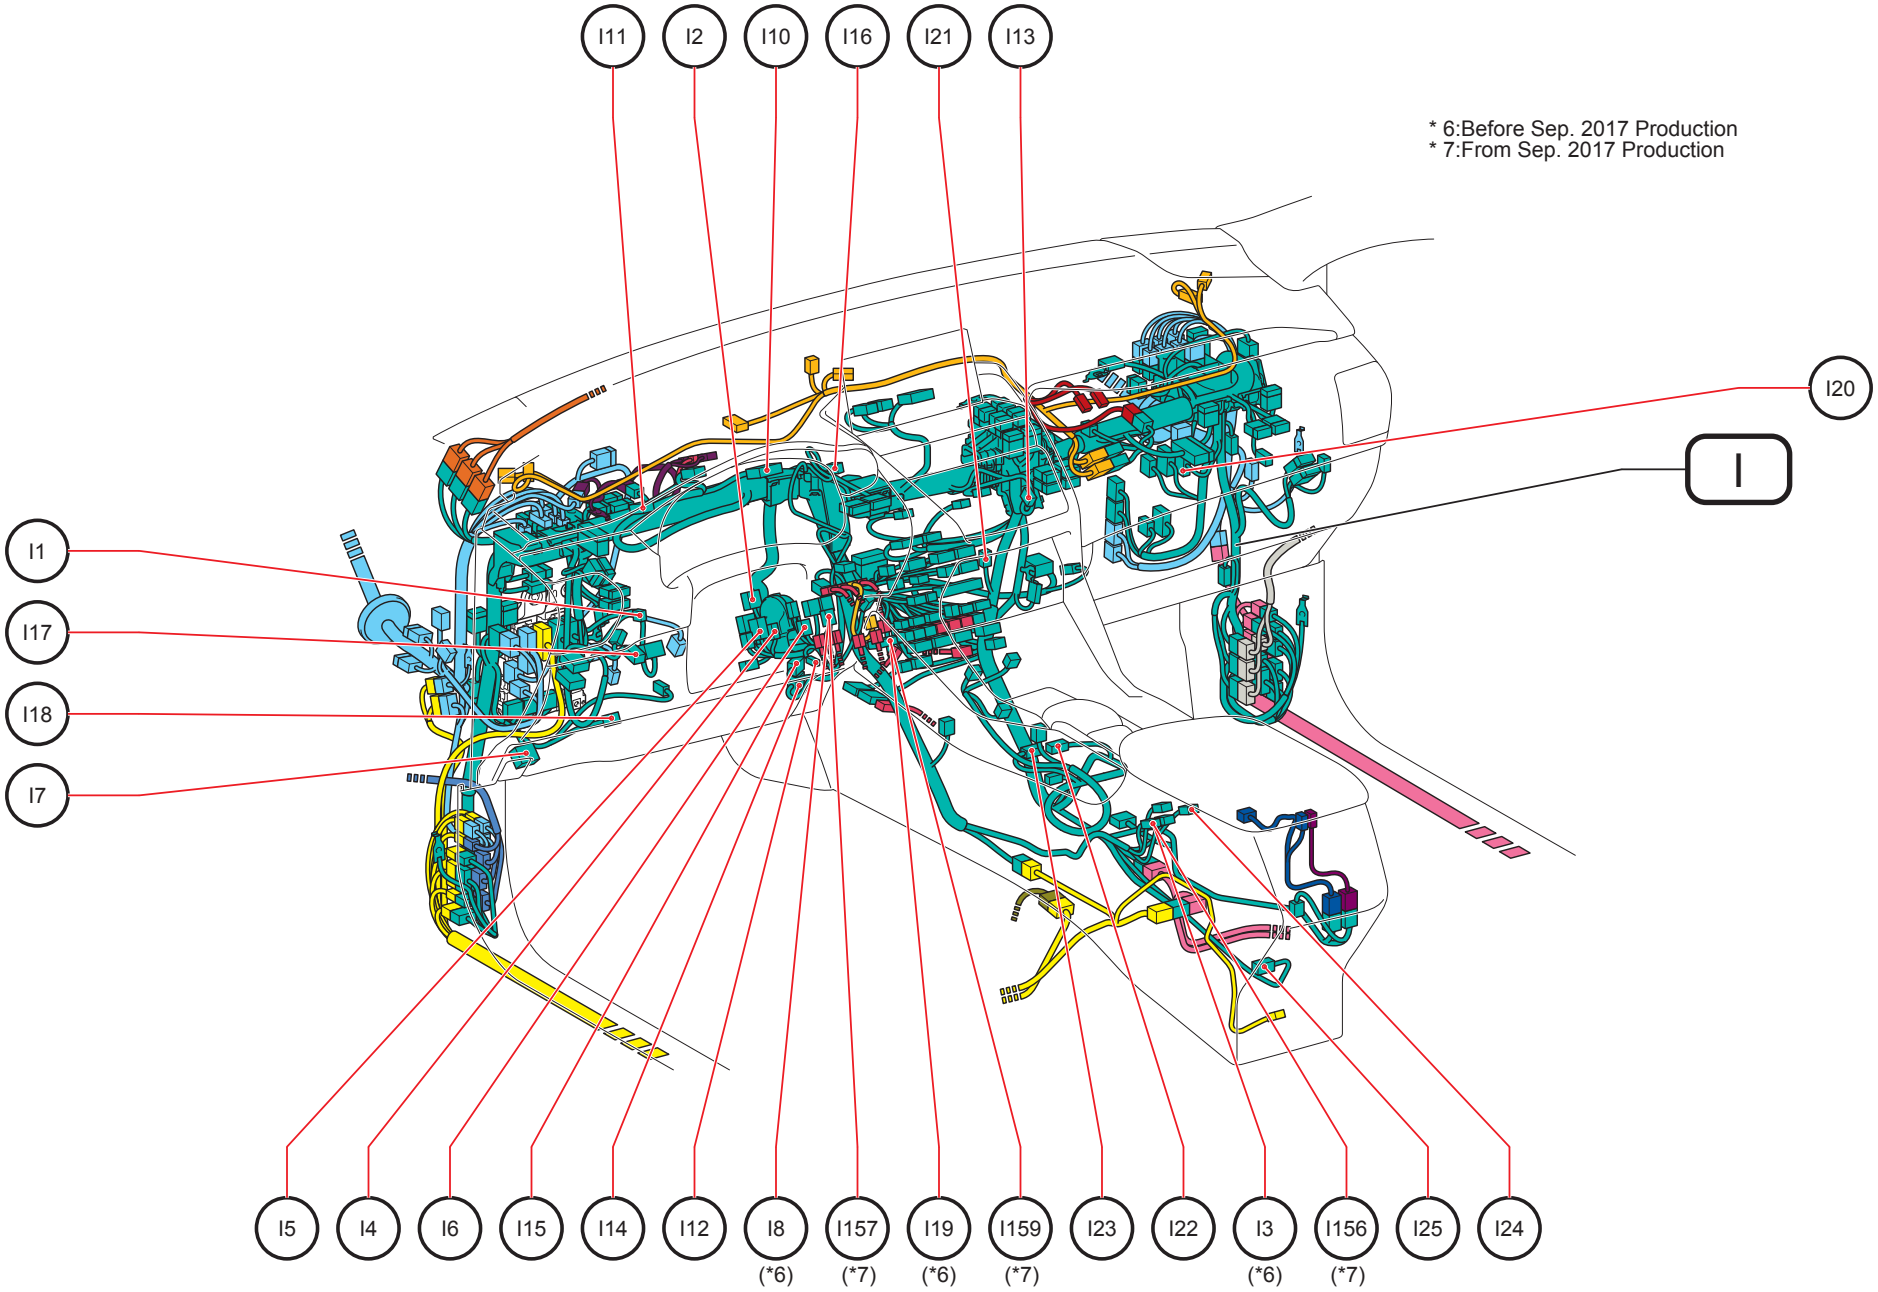

I1	Trip Switch
I2	Steering Lock Actuator Assembly
I3	No. 1 Stereo Jack Adapter Assembly
I4	Spiral Cable with Sensor Sub-Assembly
I5	Spiral Cable with Sensor Sub-Assembly
I6	Steering Sensor (Spiral Cable with Sensor Sub-Assembly)
I7	DLC3
I8	Spiral Cable with Sensor Sub-Assembly
I10	Combination Meter Assembly
I11	Combination Meter Assembly
I12	Cooler (Room Temperature Sensor) Thermistor
I13	A/C Control Assembly
I14	Quick Heater Assembly
I15	Quick Heater Assembly
I16	Power Switch
I17	No. 1 Fold Seat Switch Assembly
I18	Lower No. 1 Instrument Panel Airbag Assembly
I19	Driving Support ECU Assembly
I20	Clearance Warning ECU Assembly
I21	No. 1 Clearance Warning Buzzer
I22	Shift Lock Control ECU (Shift Lock Control Unit Assembly)
I23	Transmission Control Switch (Shift Lock Control Unit Assembly)
I24	No. 1 Power Outlet Socket Assembly
I25	No. 2 Indoor Electrical Key Antenna Assembly
I156	No. 1 Stereo Jack Adapter Assembly
I157	Spiral Cable with Sensor Sub-Assembly
I159	Driving Support ECU Assembly

I1
White

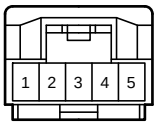

90980-11909

I2
Black

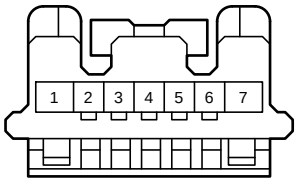

90980-12092

I3
White

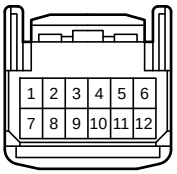

90980-12552

I4
Black

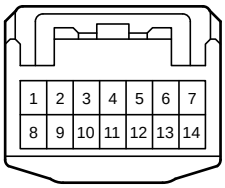

90980-12370

I5
Yellow

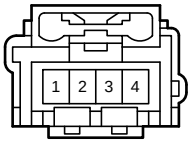

90980-12160

I6
Black

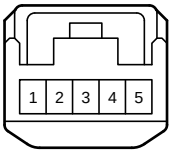

90980-12366

I7
White

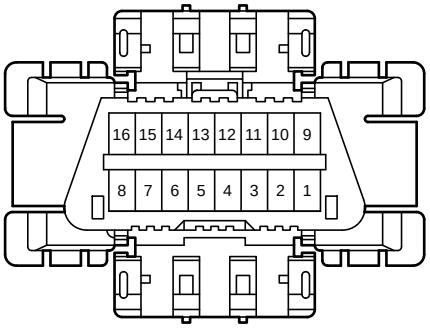

90980-11978

I8
Black



90980-10795

I10
Black

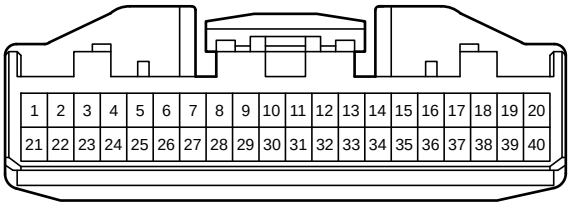

90980-12557

I11
Black

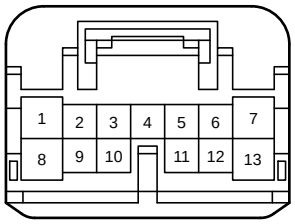

90980-12767

I12
Black



90980-12128

I13
Black

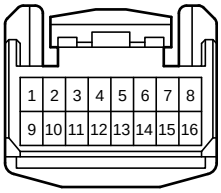

90980-12553

I14
White

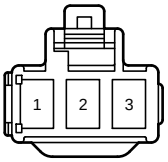

90980-10956

I15
White

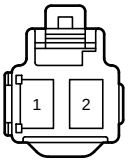

90980-10903

I16
Black

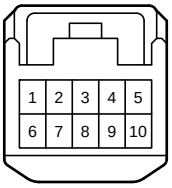

90980-12368

I17
Black

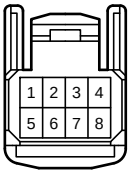

90980-12551

I18
Black



90980-12452

I19
White

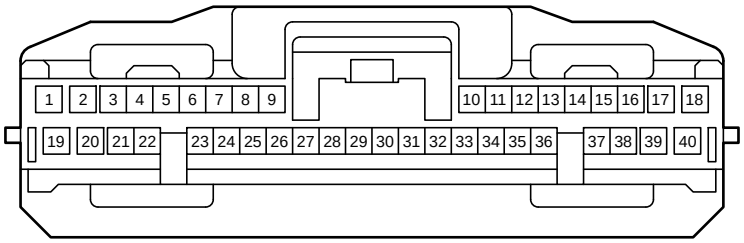

90980-12708

I20
Black

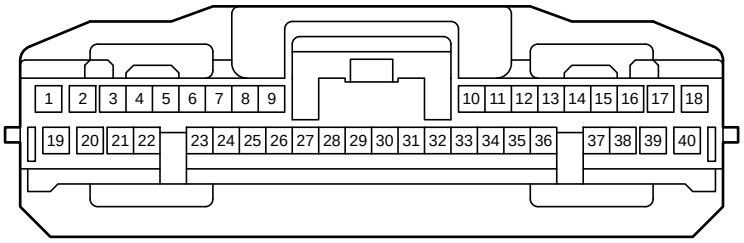

90980-12924

I21
Black



90980-10825

I22
White

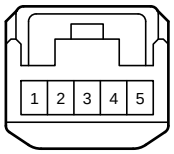

90980-12366

I23
White

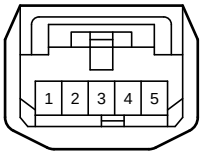

90980-12954

I24
White



90980-12498

I25
White

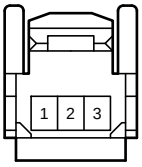

90980-12795

I156
White

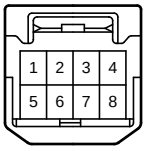

90980-12910

I157
Black



90980-12A94

I159
White

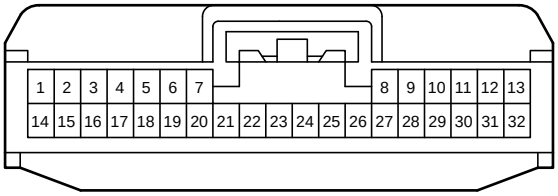

90980-12422