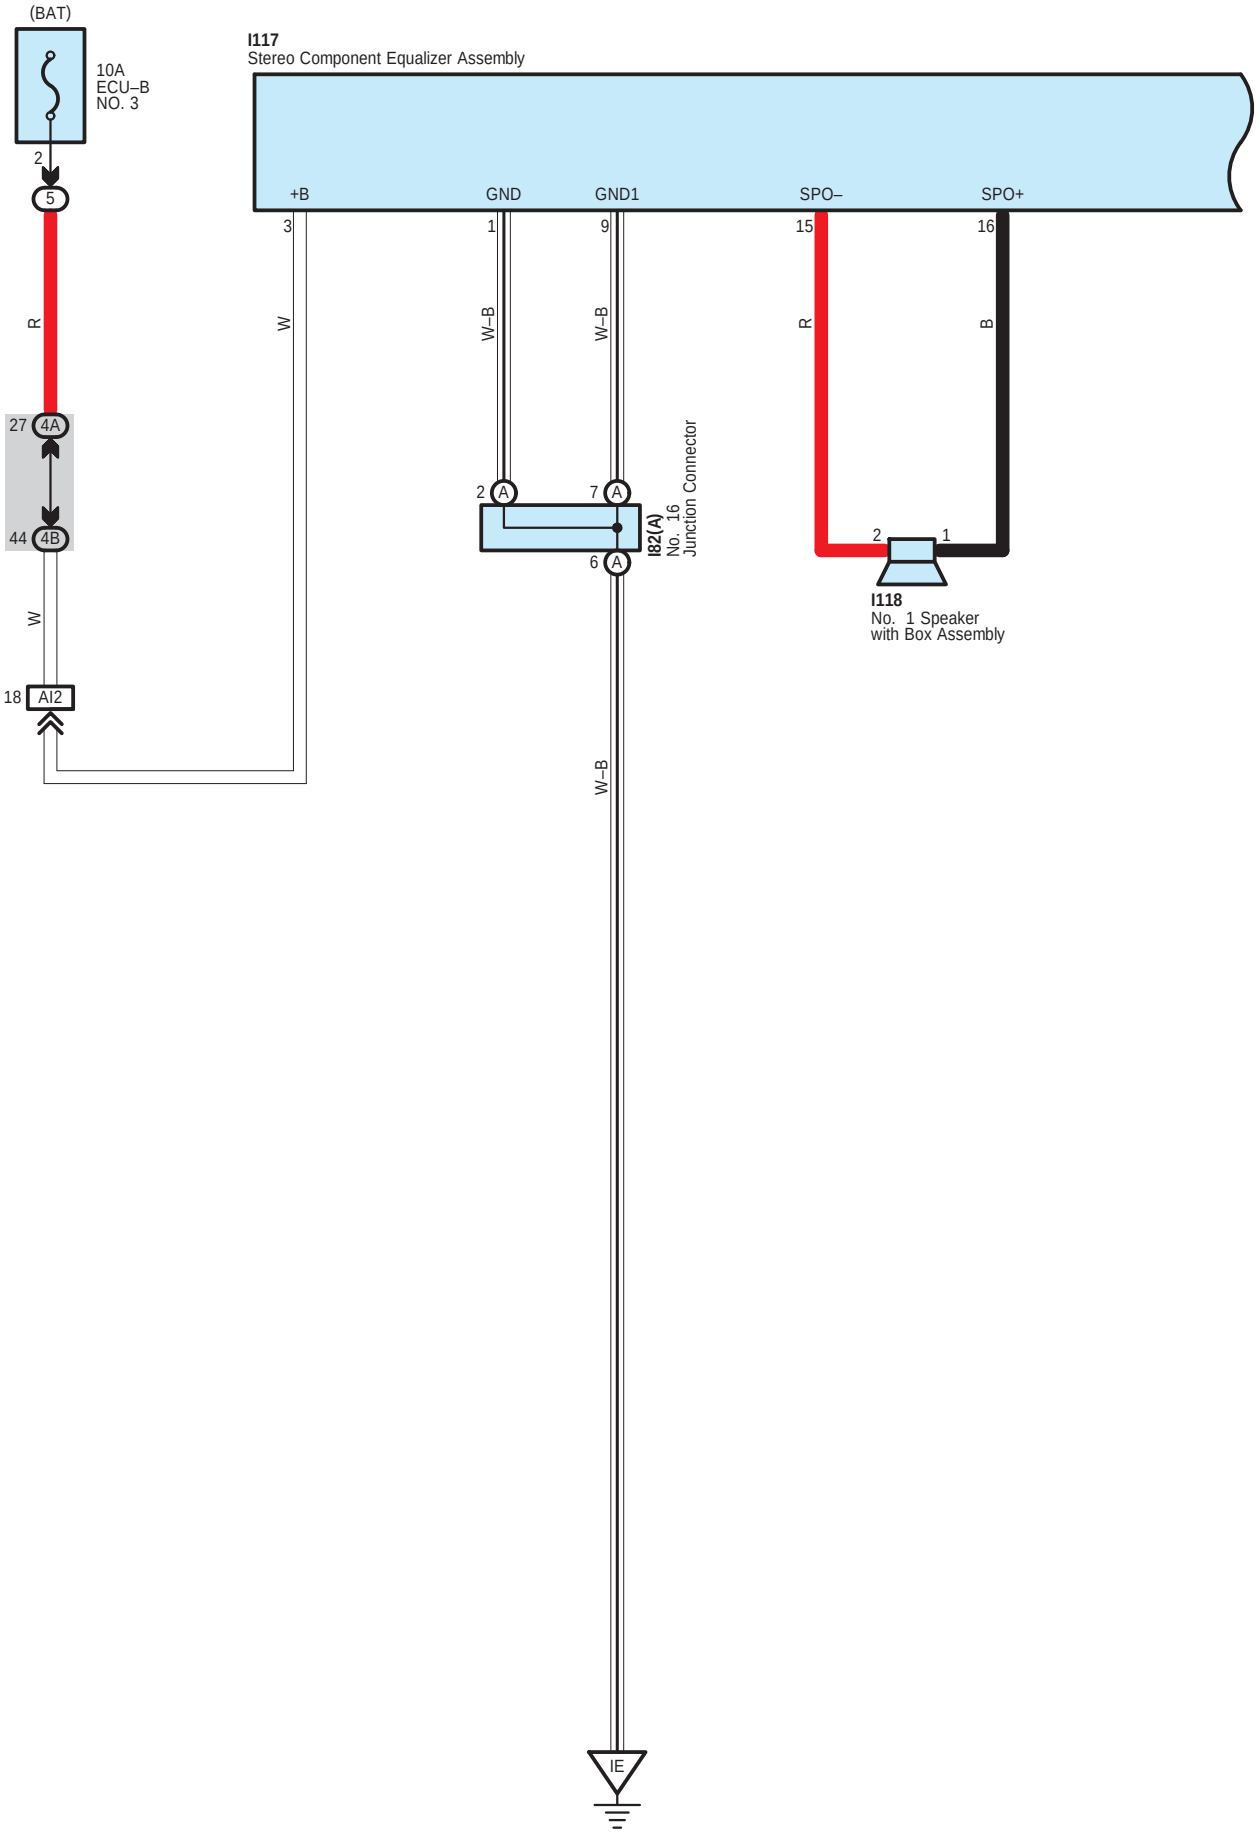
(BAT)
10A
ECU–B
NO. 3
2
5
R
27
4A
44
4B
W
18
AI2
I117
Stereo Component Equalizer Assembly
+B
GND
GND1
SPO–
SPO+
3
1
9
15
16
W
W–B
W–B
R
B
2
A
7
A
6
A
I82(A)
No. 16
Junction Connector
2
1
I118
No. 1 Speaker
with Box Assembly
W–B
IE

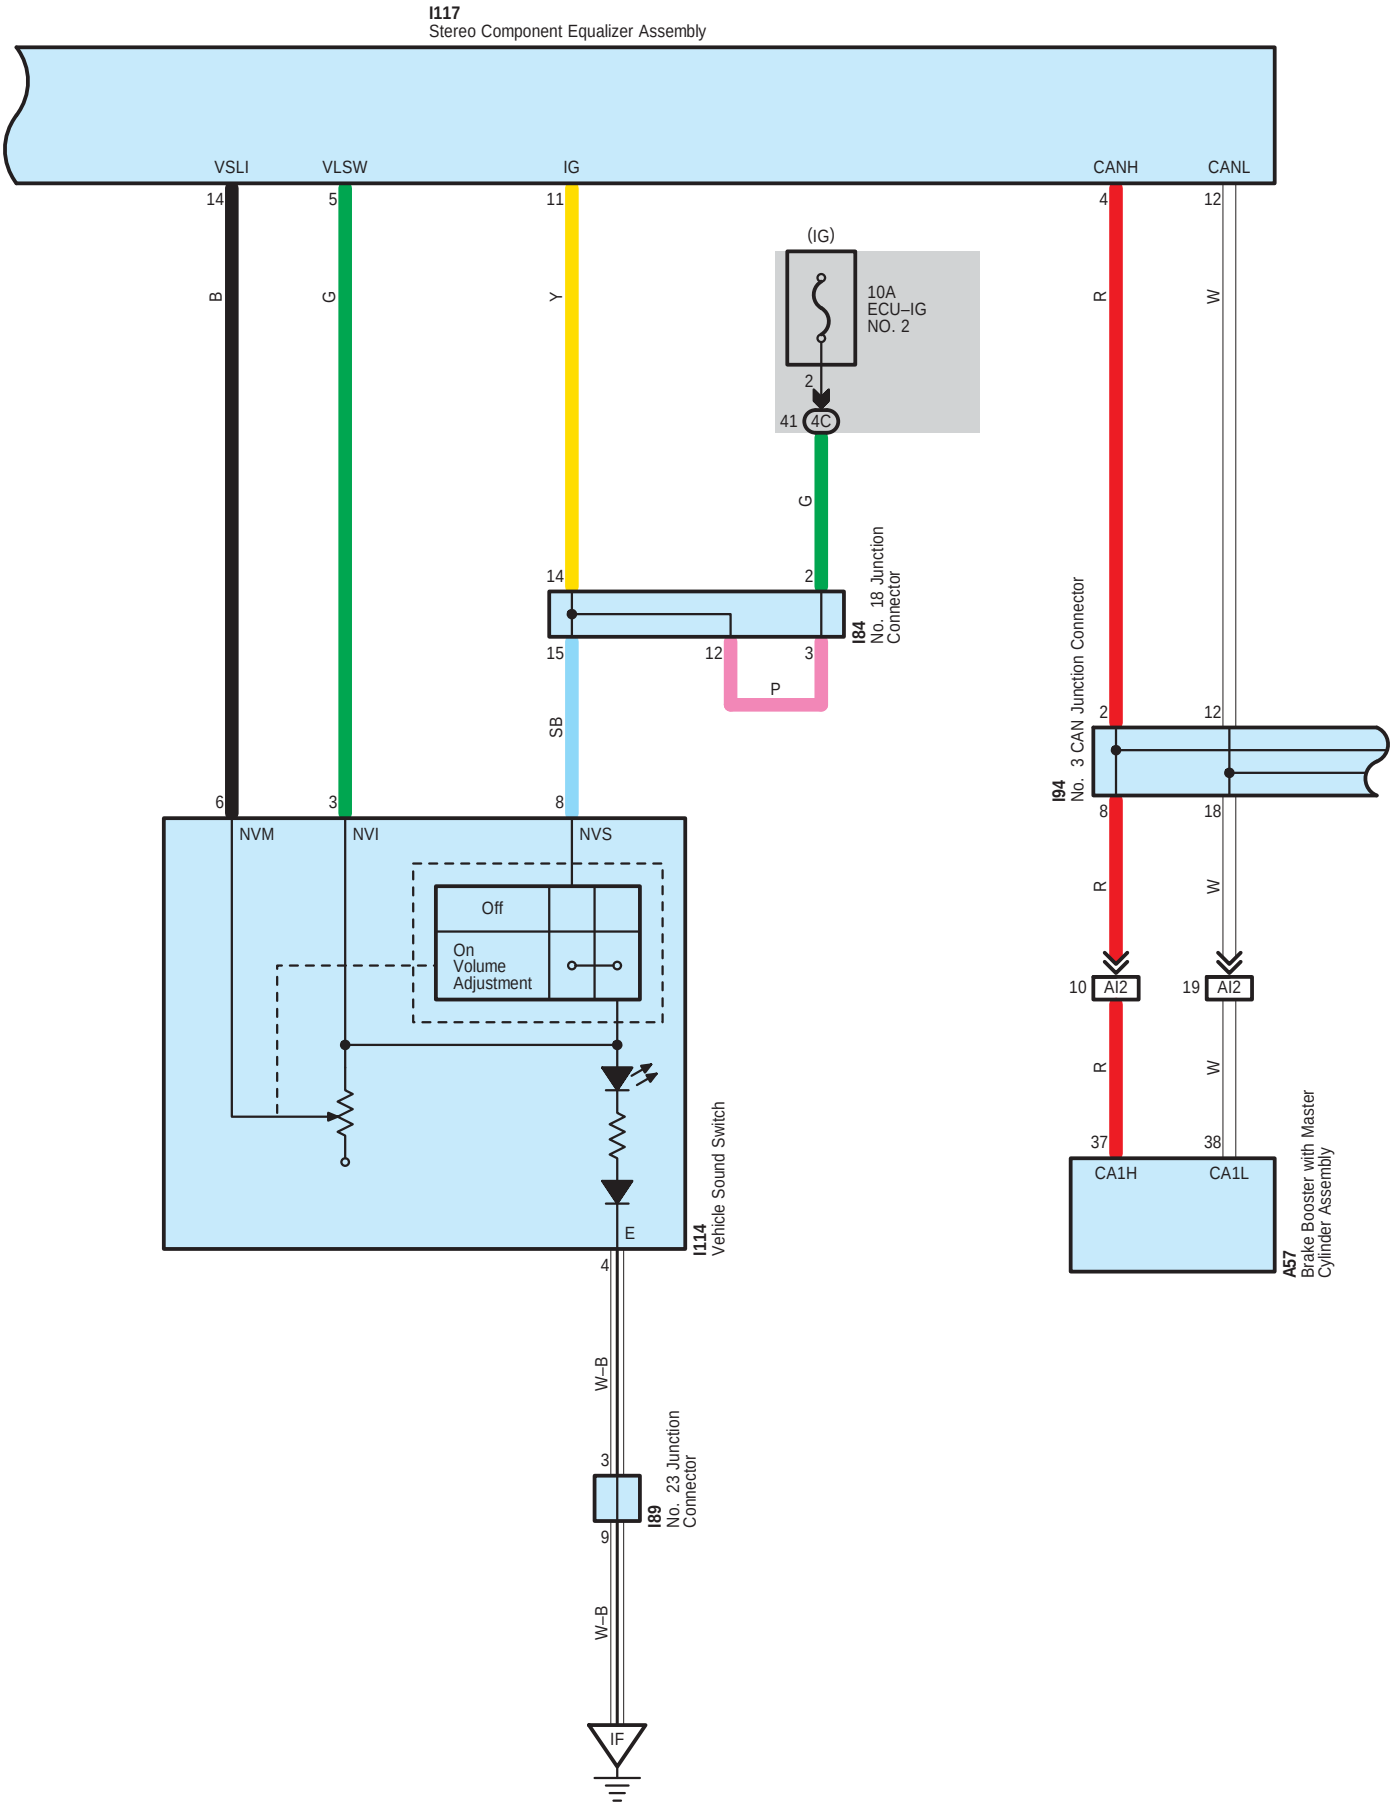
I117
Stereo Component Equalizer Assembly
VSLI
VLSW
IG
CANH
CANL
14
5
11
4
12
B
G
Y
R
W
(IG)
10A
ECU–IG
NO. 2
2
41
4C
G
14
2
I84
No. 18 Junction
Connector
15
12
3
P
SB
I94
No. 3 CAN Junction Connector
2
12
6
3
8
8
18
NVM
NVI
NVS
Off
On
Volume
Adjustment
R
W
10
AI2
19
AI2
R
W
37
38
CA1H
CA1L
A57
Brake Booster with Master
Cylinder Assembly
E
I114
Vehicle Sound Switch
4
W–B
3
I89
No. 23 Junction
Connector
9
W–B
IF

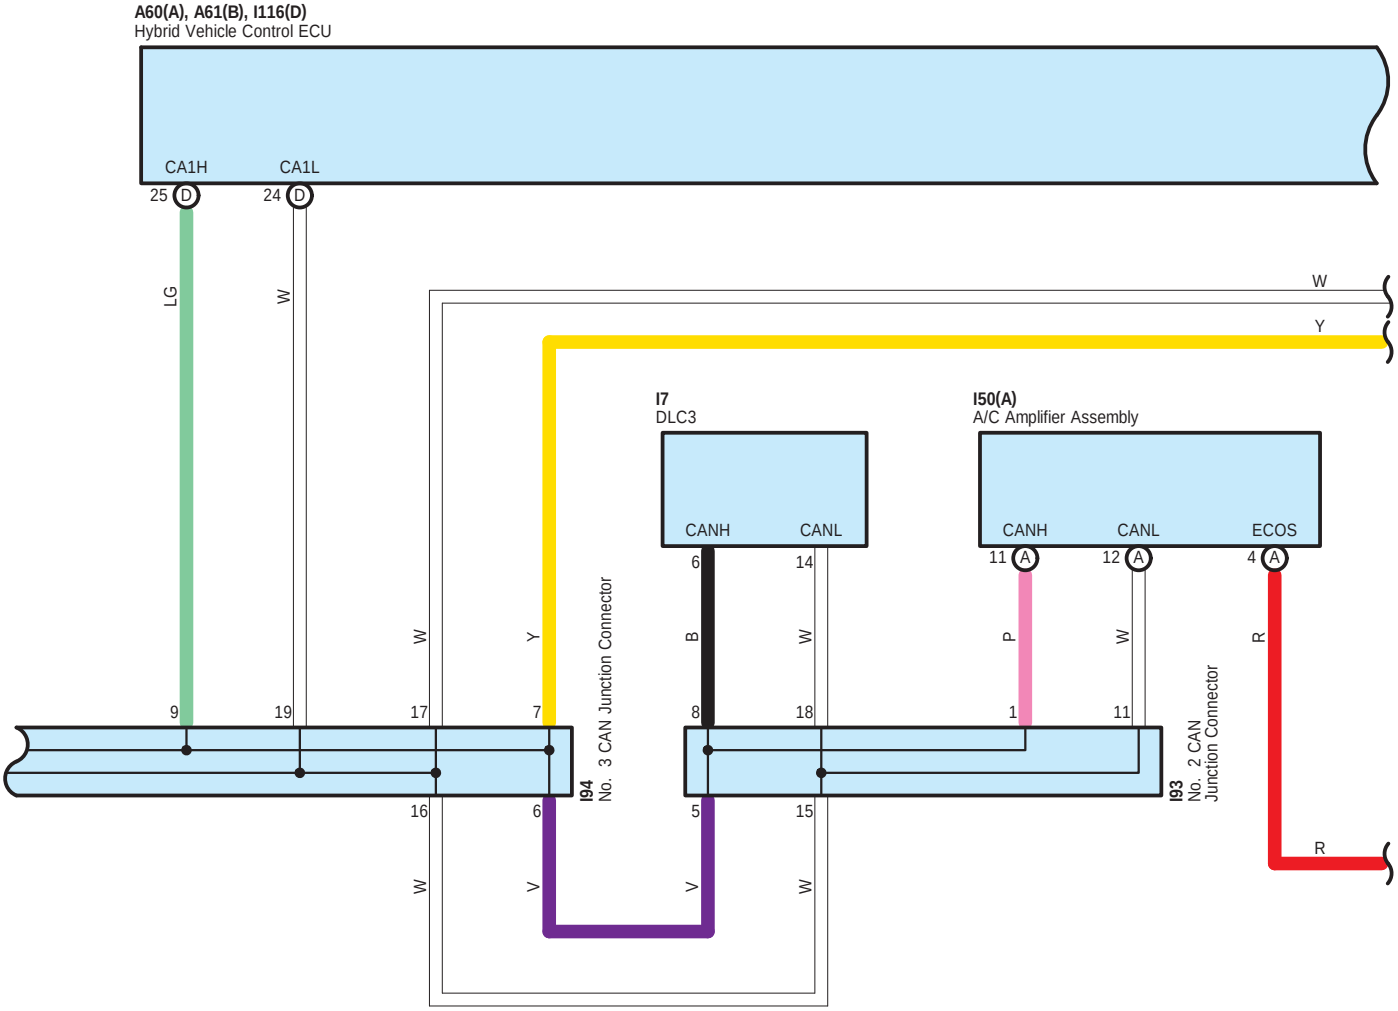

∗ 1 : w/ Adaptive Variable Suspension
∗ 2 : w/o Adaptive Variable Suspension

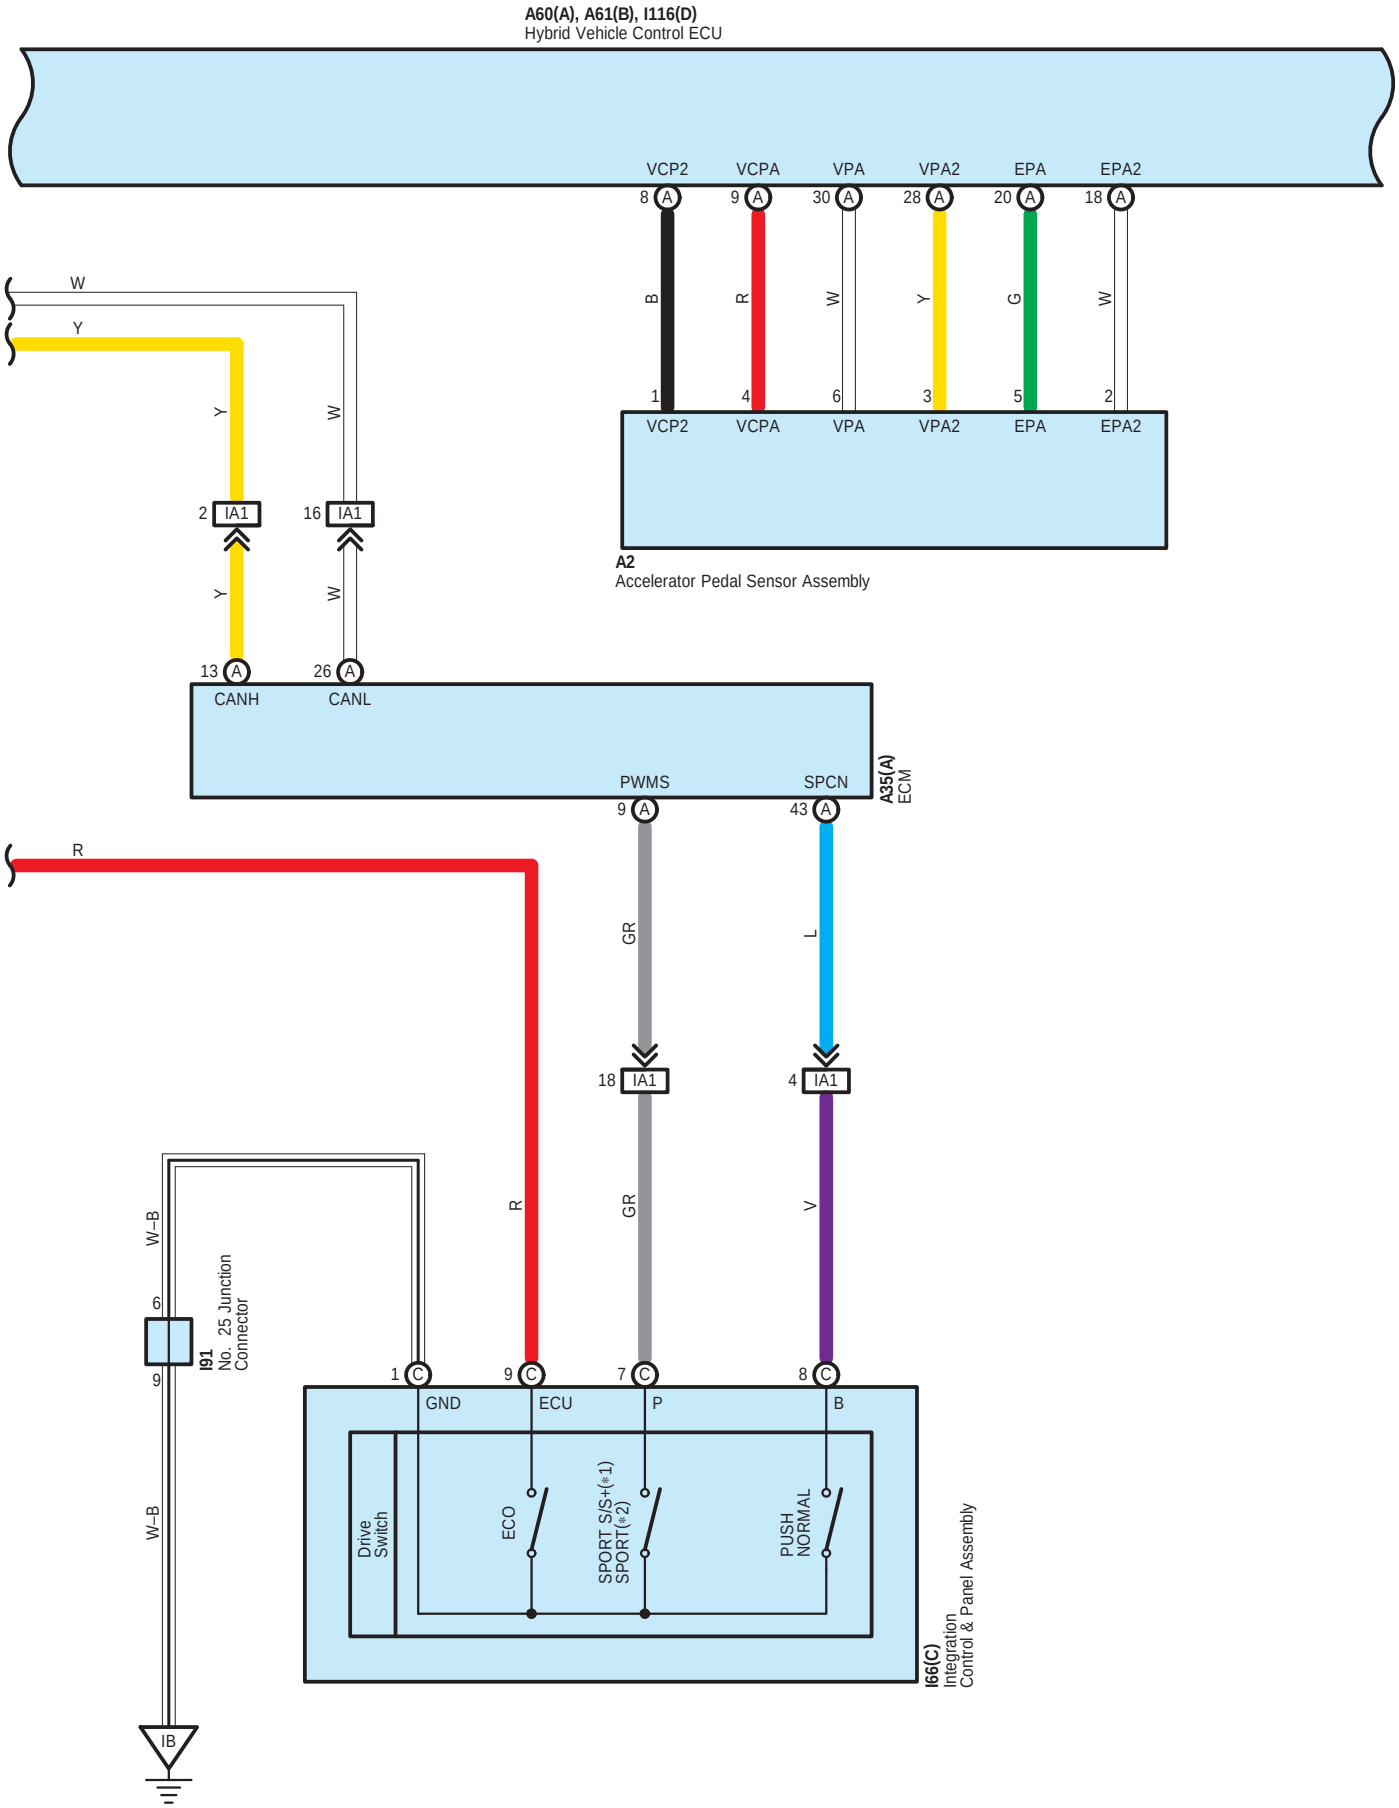
A60(A), A61(B), I116(D)
Hybrid Vehicle Control ECU
VCP2
VCPA
VPA
VPA2
EPA
EPA2
8 A
9 A
30 A
28 A
20 A
18 A
B
R
W
Y
G
W
1
4
6
3
5
2
VCP2
VCPA
VPA
VPA2
EPA
EPA2
A2
Accelerator Pedal Sensor Assembly
W
Y
Y
W
2 IA1
16 IA1
Y
W
13 A
26 A
CANH
CANL
PWMS
SPCN
9 A
43 A
A35(A)
ECM
R
GR
L
18 IA1
4 IA1
R
GR
V
W–B
6
9
I91
No. 25 Junction
Connector
W–B
1 C
9 C
7 C
8 C
GND
ECU
P
B
Drive
Switch
ECO
SPORT S/S+(*1)
SPORT(*2)
PUSH
NORMAL
I66(C)
Integration
Control & Panel Assembly
IB

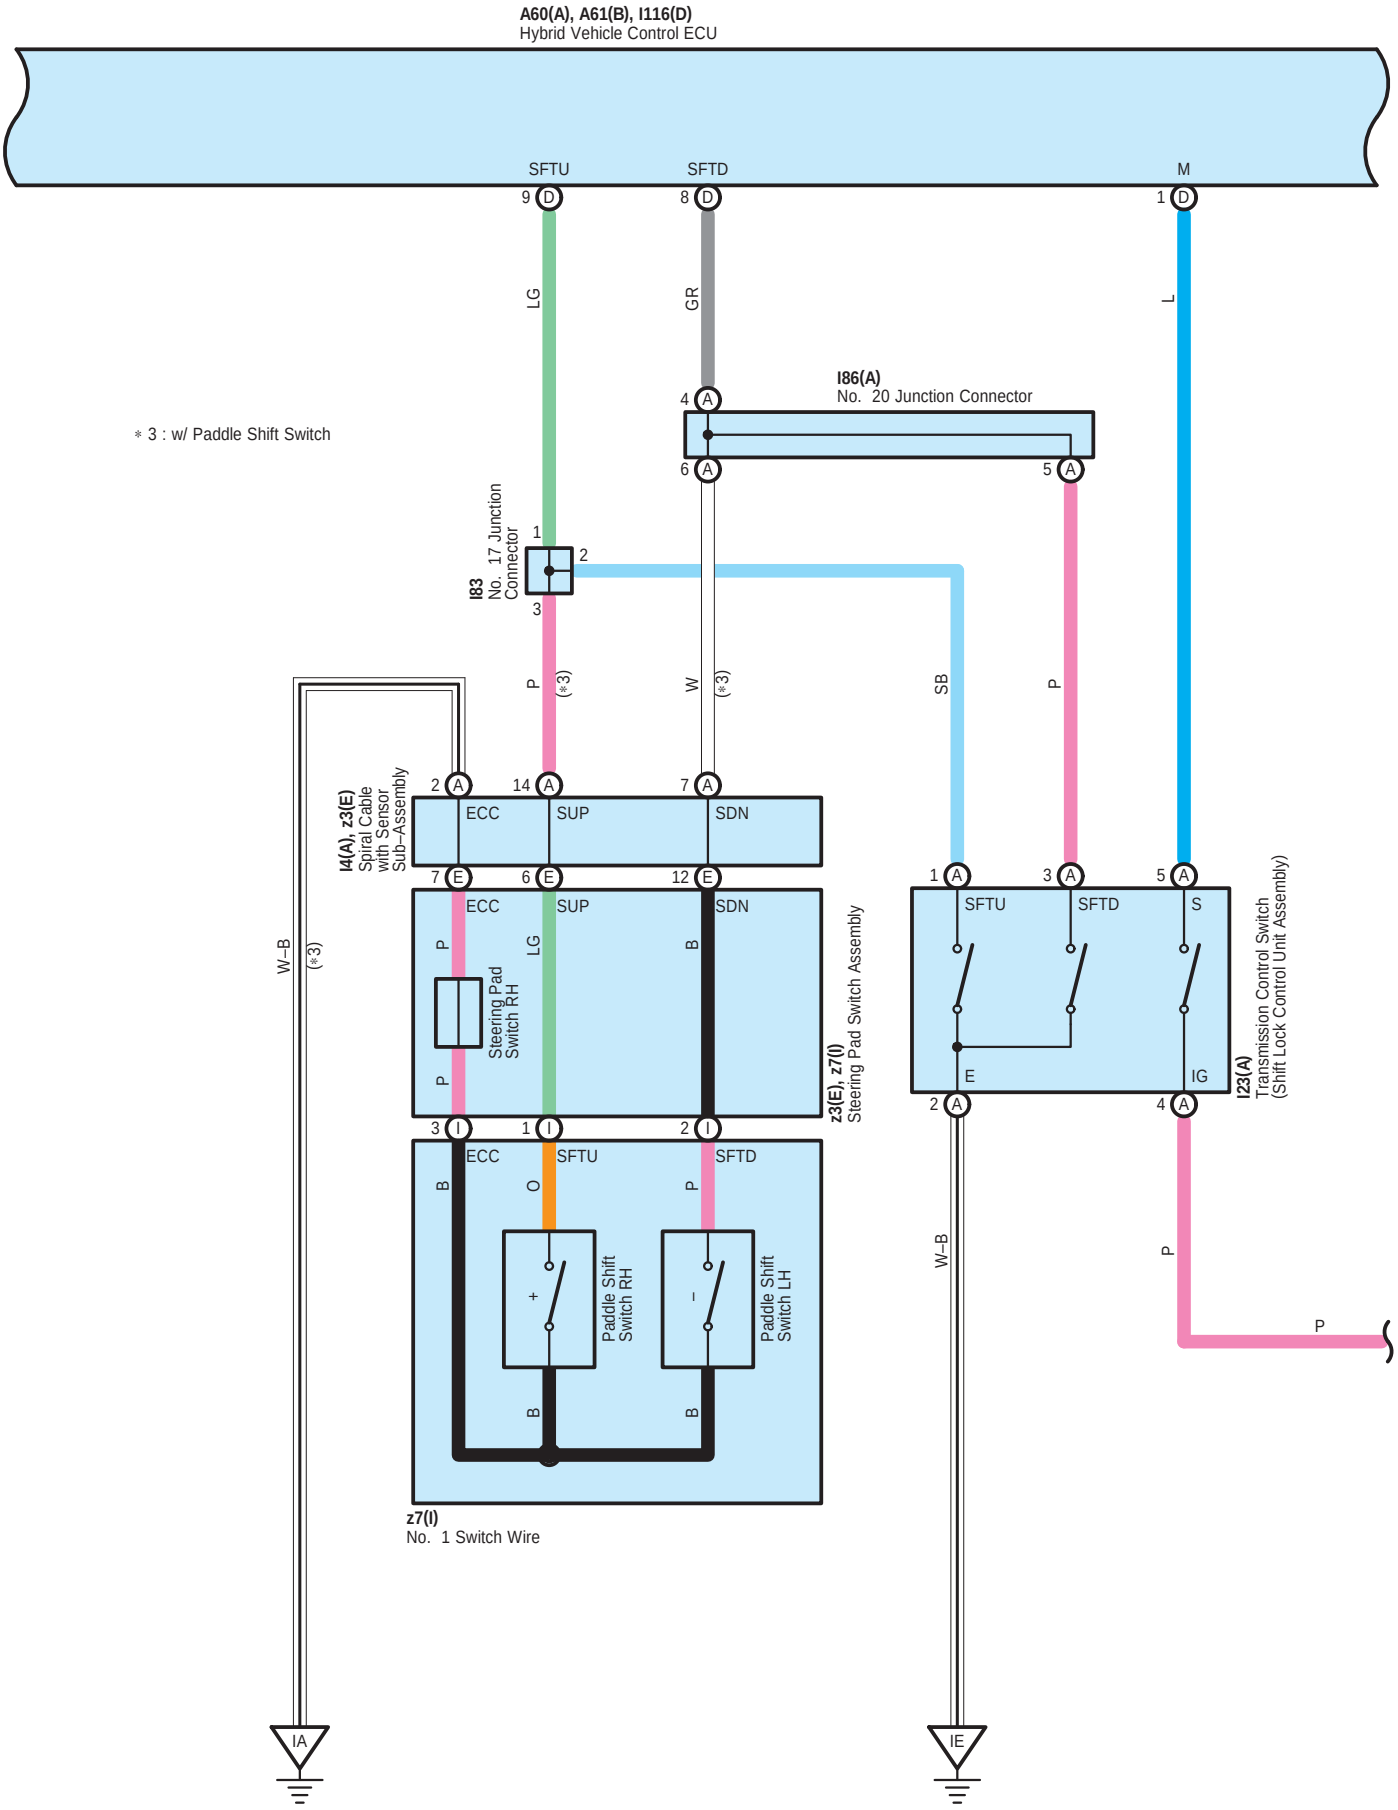
A60(A), A61(B), I116(D)
Hybrid Vehicle Control ECU
SFTU
SFTD
M
9 D
8 D
1 D
LG
GR
L
I86(A)
No. 20 Junction Connector
4 A
6 A
5 A
∗ 3 : w/ Paddle Shift Switch
I83
No. 17 Junction Connector
1
2
3
P
(∗3)
W
(∗3)
SB
P
I4(A), z3(E)
Spiral Cable with Sensor Sub-Assembly
2 A
14 A
7 A
ECC
SUP
SDN
7 E
6 E
12 E
ECC
SUP
SDN
P
LG
B
Steering Pad Switch RH
P
z3(E), z7(I)
Steering Pad Switch Assembly
3 I
1 I
2 I
ECC
SFTU
SFTD
B
O
P
Paddle Shift Switch RH
Paddle Shift Switch LH
B
B
z7(I)
No. 1 Switch Wire
1 A
3 A
5 A
SFTU
SFTD
S
E
IG
2 A
4 A
I23(A)
Transmission Control Switch (Shift Lock Control Unit Assembly)
W-B
(∗3)
W-B
P
P
IA
IE

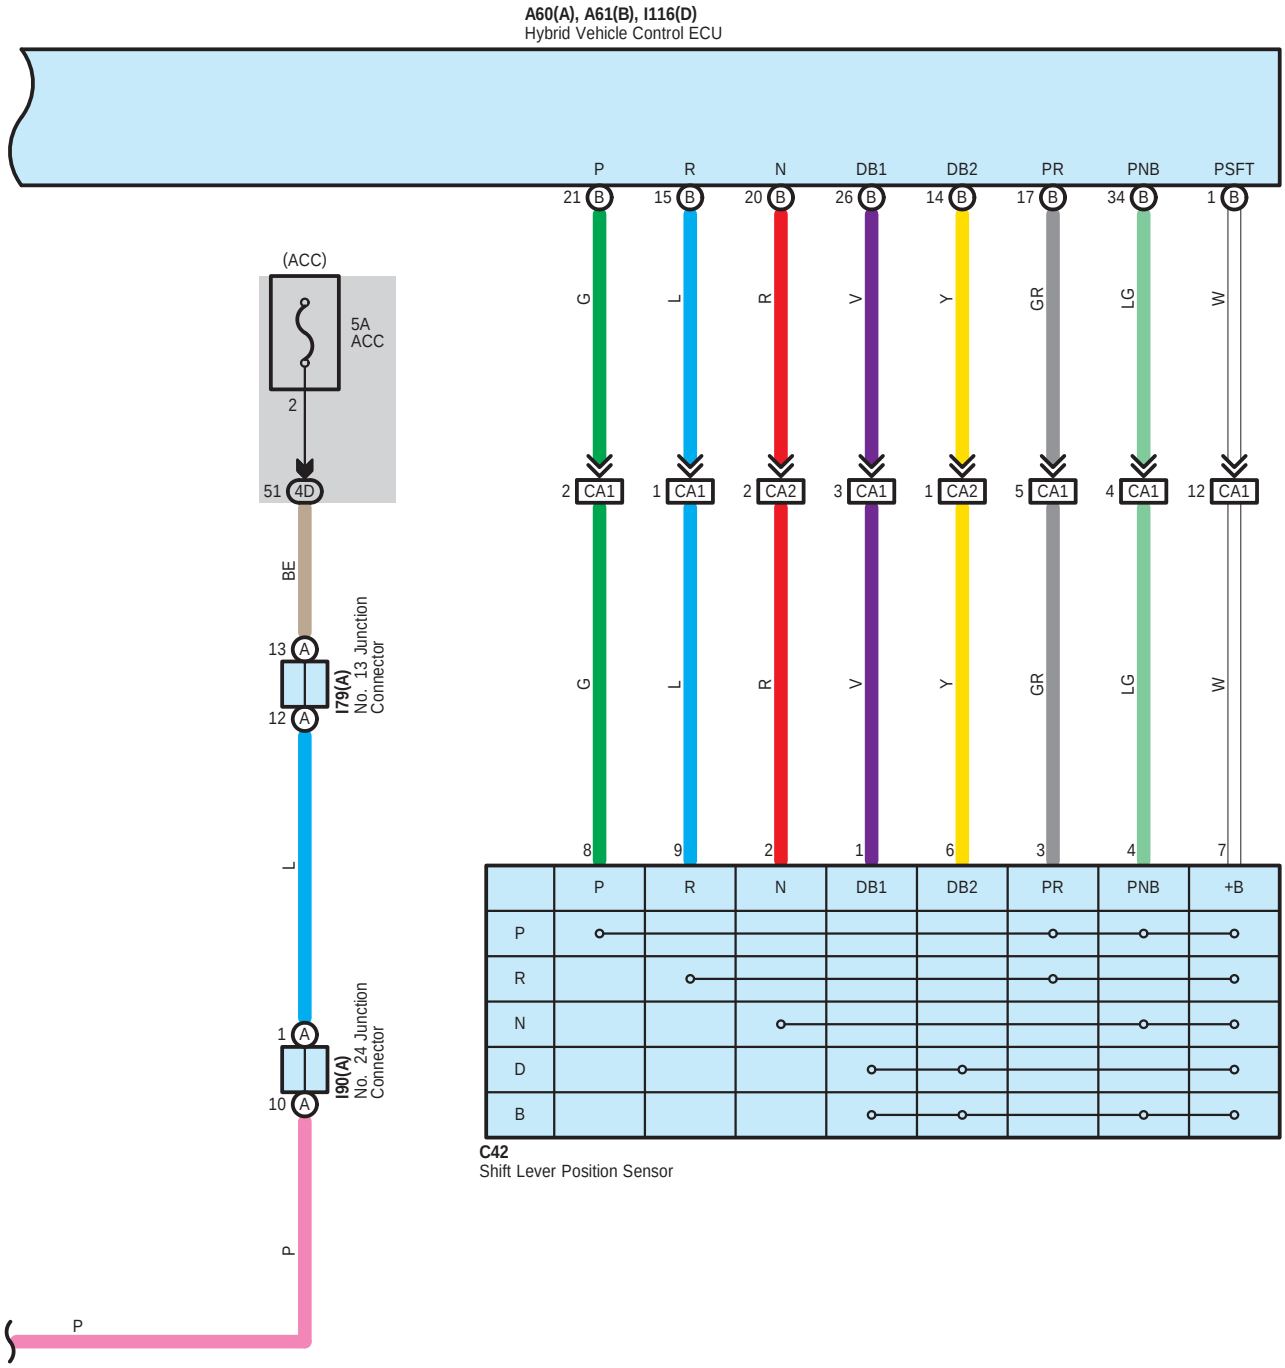
A60(A), A61(B), I116(D)
Hybrid Vehicle Control ECU
P
R
N
DB1
DB2
PR
PNB
PSFT
21 B
15 B
20 B
26 B
14 B
17 B
34 B
1 B
G
L
R
V
Y
GR
LG
W
(ACC)
5A
ACC
2
51 4D
2 CA1
1 CA1
2 CA2
3 CA1
1 CA2
5 CA1
4 CA1
12 CA1
BE
13 A
12 A
I79(A)
No. 13 Junction
Connector
8
9
2
1
6
3
4
7
+B
1 A
10 A
I90(A)
No. 24 Junction
Connector
D
B
C42
Shift Lever Position Sensor

A2
Black

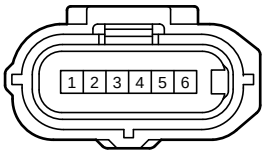

90980-12831

A35
Black

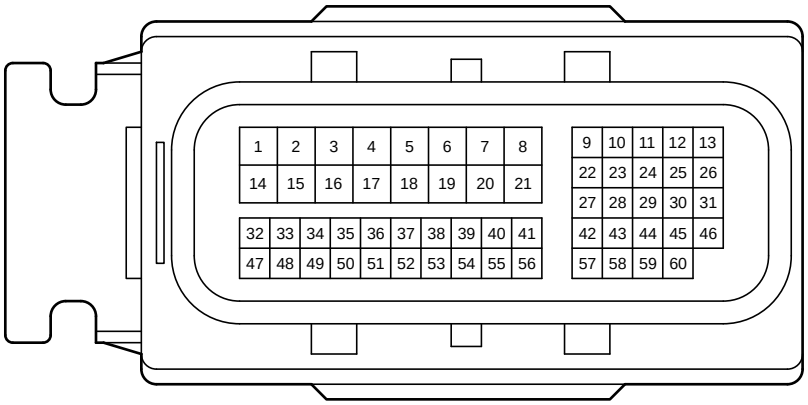

90980-12931

A57
Black

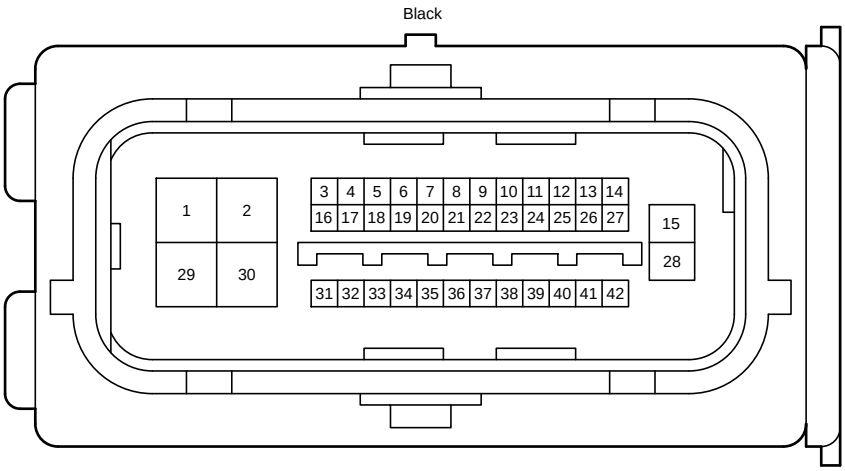

90980-12828

A60
Gray

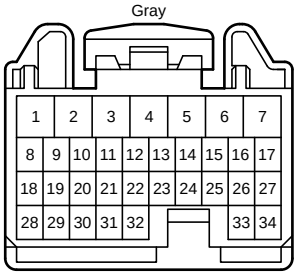

90980-12430

A61
Gray

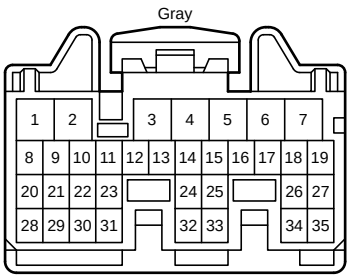

90980-12428

C42
Black

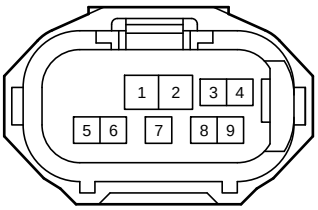

90980-12A23

I4
Black

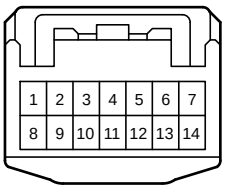

90980-12370

I7
White

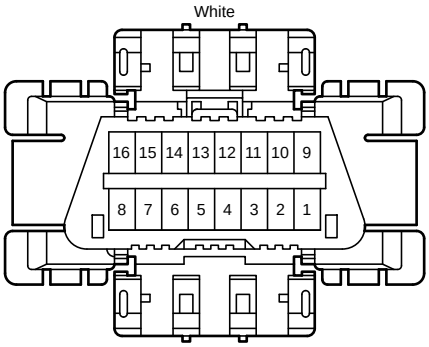

90980-11978

I23
White

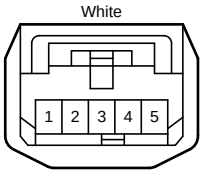

90980-12954

I50
White

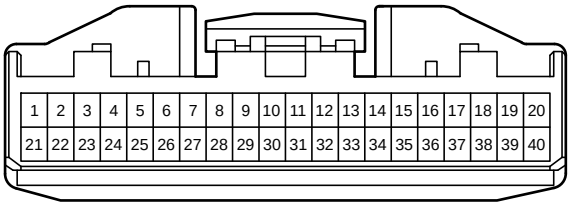

90980-12557

I66
Black

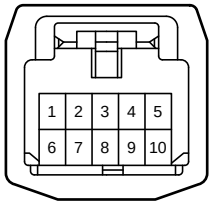

82824-78040

I79
Gray

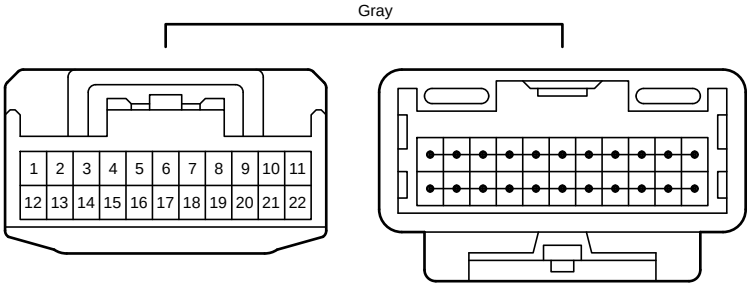

90980-12372

I82
Blue

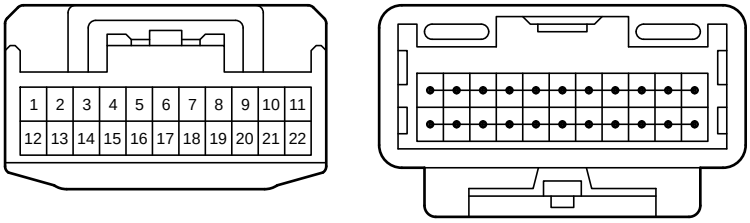

90980-12372
(LHD)

I82
White

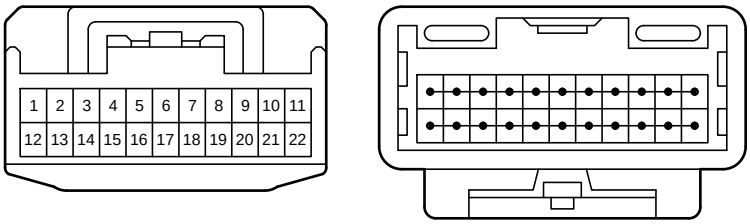

90980-12372
(RHD)

I83
Black

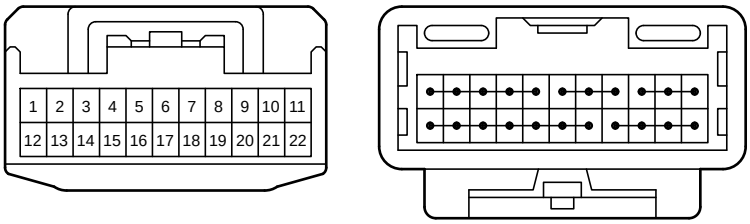

90980-12372
(LHD)

I83
White

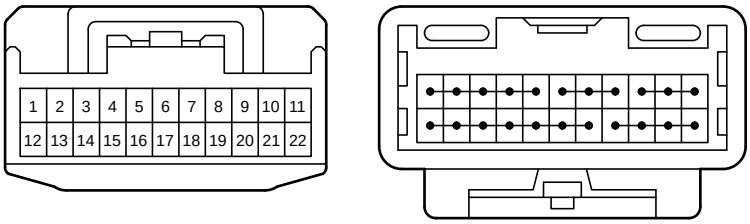

90980-12372
(RHD)

I84
Black

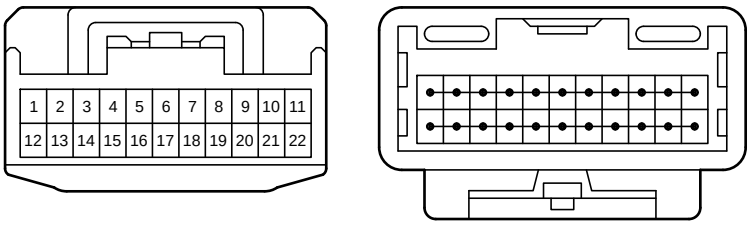

90980-12372
(LHD)

I84
Gray

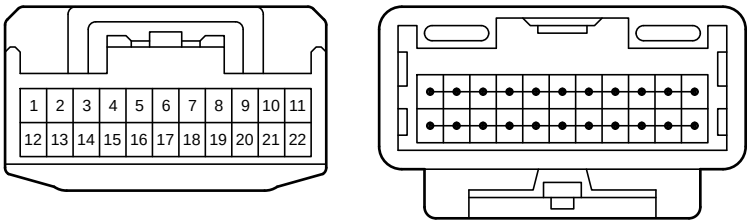

90980-12372
(RHD)

I86
Blue

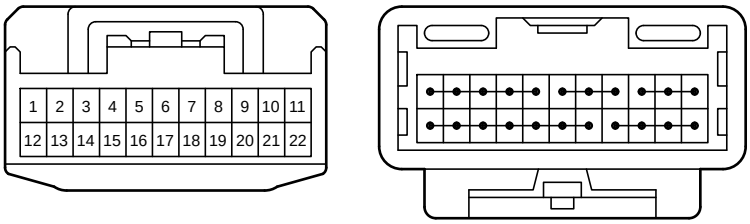

90980-12372
(LHD)

I86
White

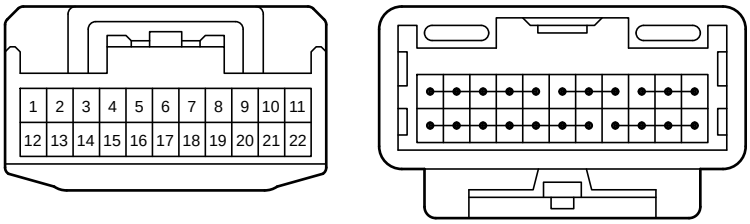

90980-12372
(RHD Before Sep. 2017 Production)

I86
Black

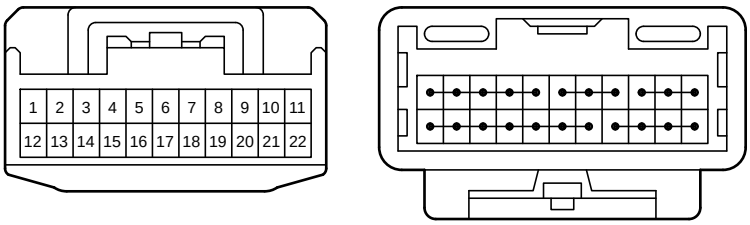

90980-12372
(RHD From Sep. 2017 Production)

I89

White

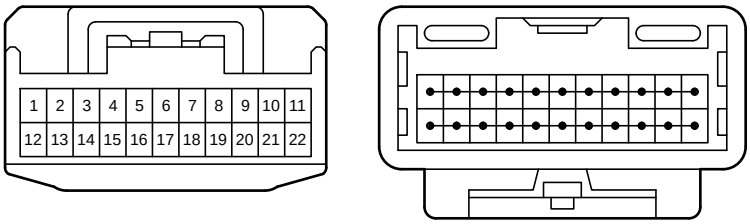

90980-12372

I90

Black

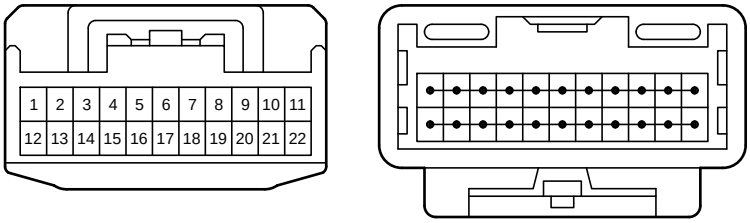

90980-12372

I91

Gray

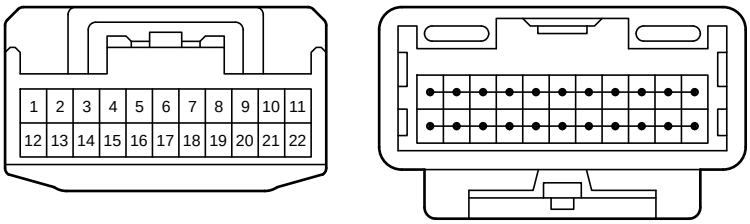

90980-12372
(LHD)

I91

Black

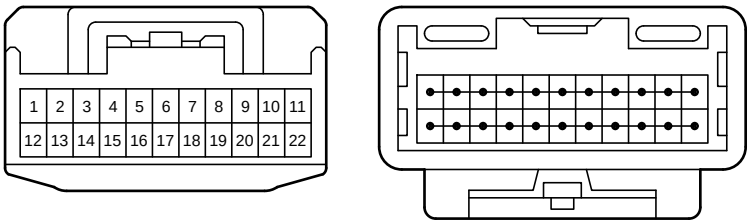

90980-12372
(RHD)

I93
White

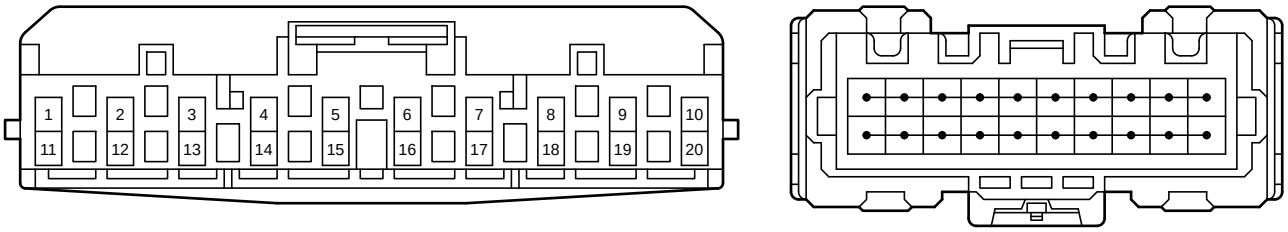

90980-12A58

I94
White

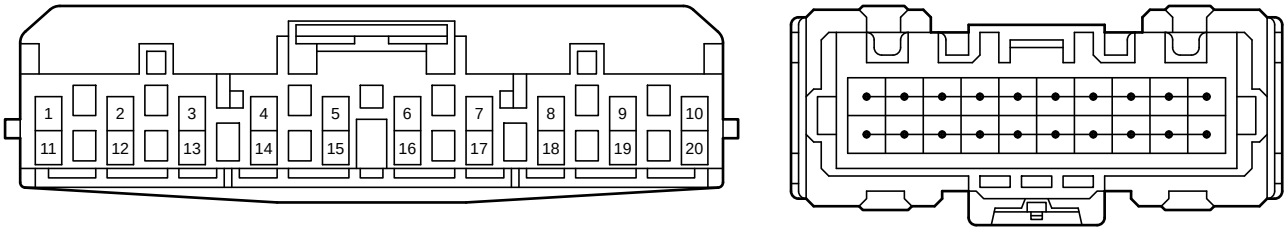

90980-12A58

I114
Black

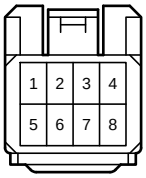

90980-12113

I116
Gray

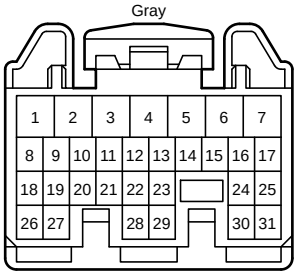

90980-12431

I117
White

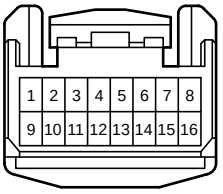

90980-12553

I118
White

90980-10935

z3
Black

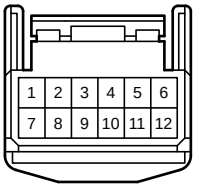

90980-12559

z7
White



90980-12211

4A
White

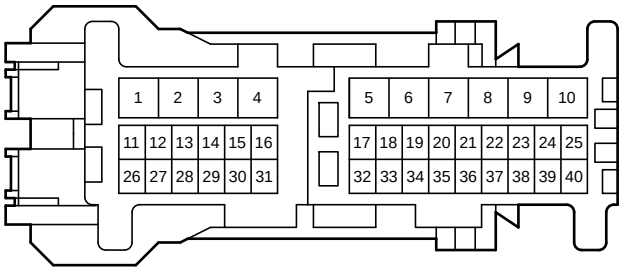

90980-12884

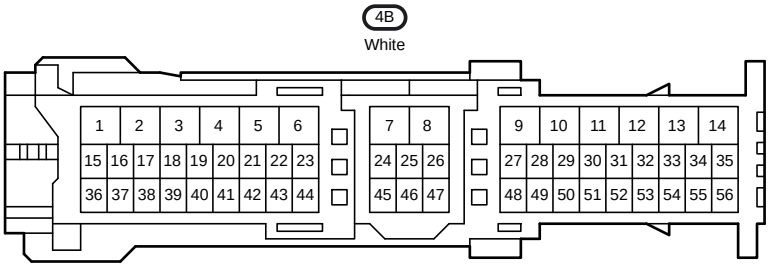

90980-12A15

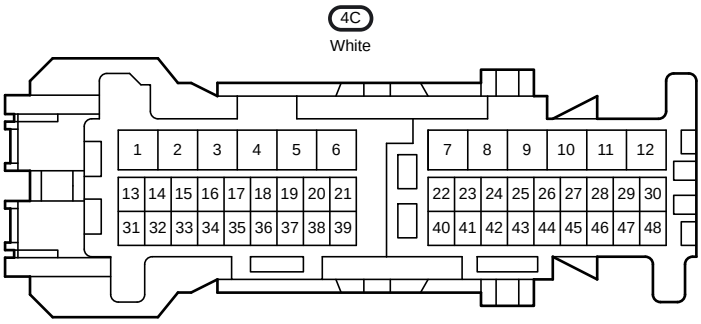

90980-12887

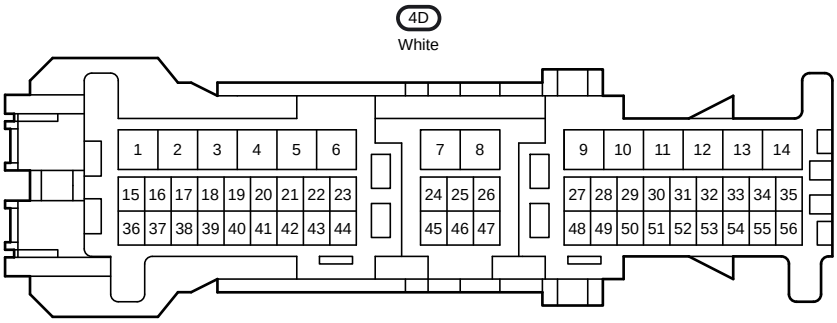

90980-12890

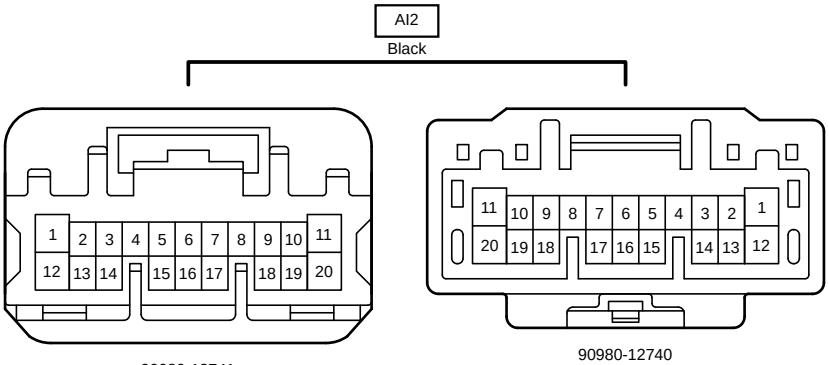

90980-12741

90980-12740

(LHD)

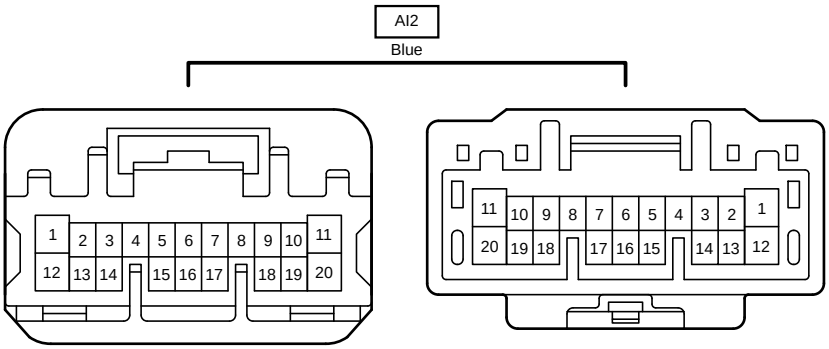

90980-12741

90980-12740

(RHD)

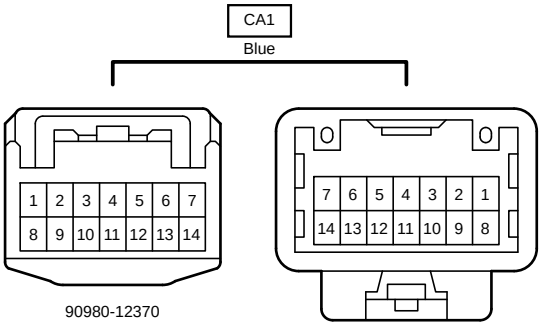

90980-12370

90980-12369

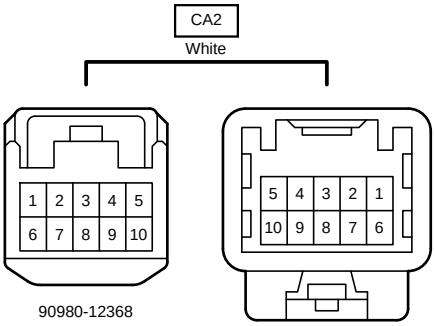

90980-12368

90980-12367

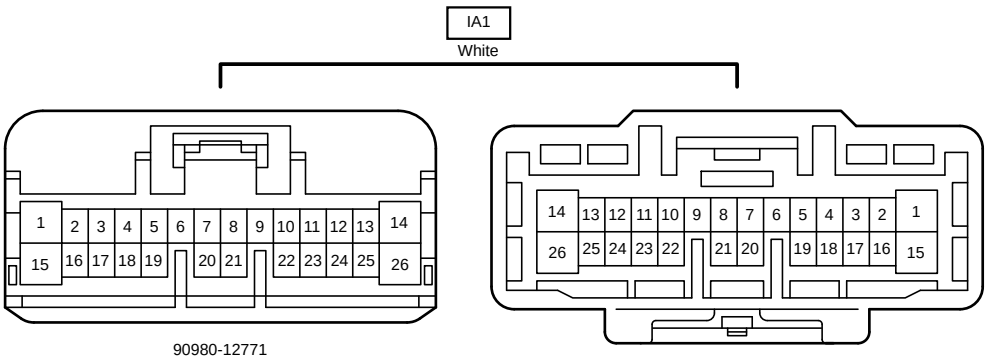

90980-12771

90980-12770