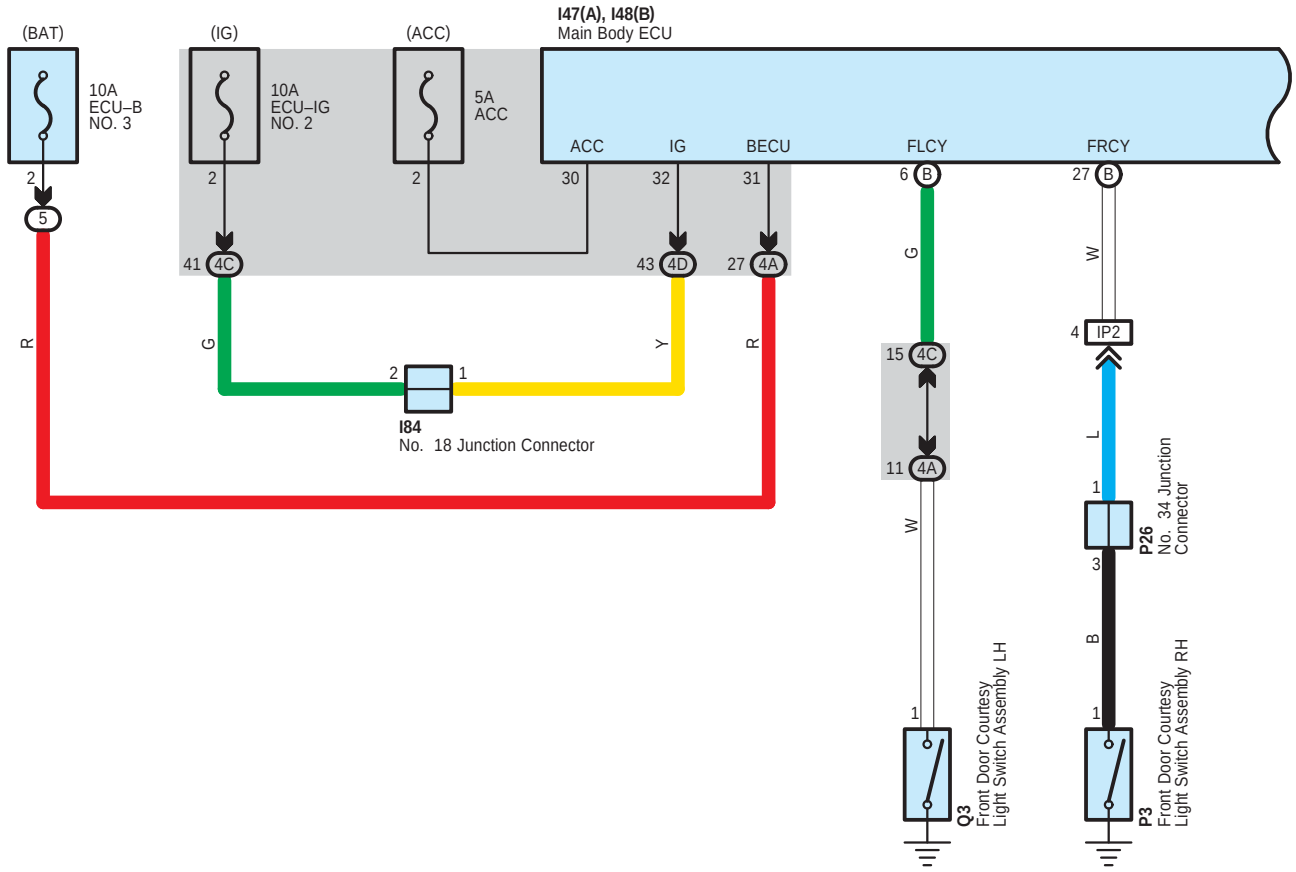

* 1 : w/ Power Back Door
* 2 : w/o Power Back Door
* 3 : w/ Power Seat (Rear Passenger' s Seat)
* 4 : w/o Power Seat (Rear Passenger' s Seat)

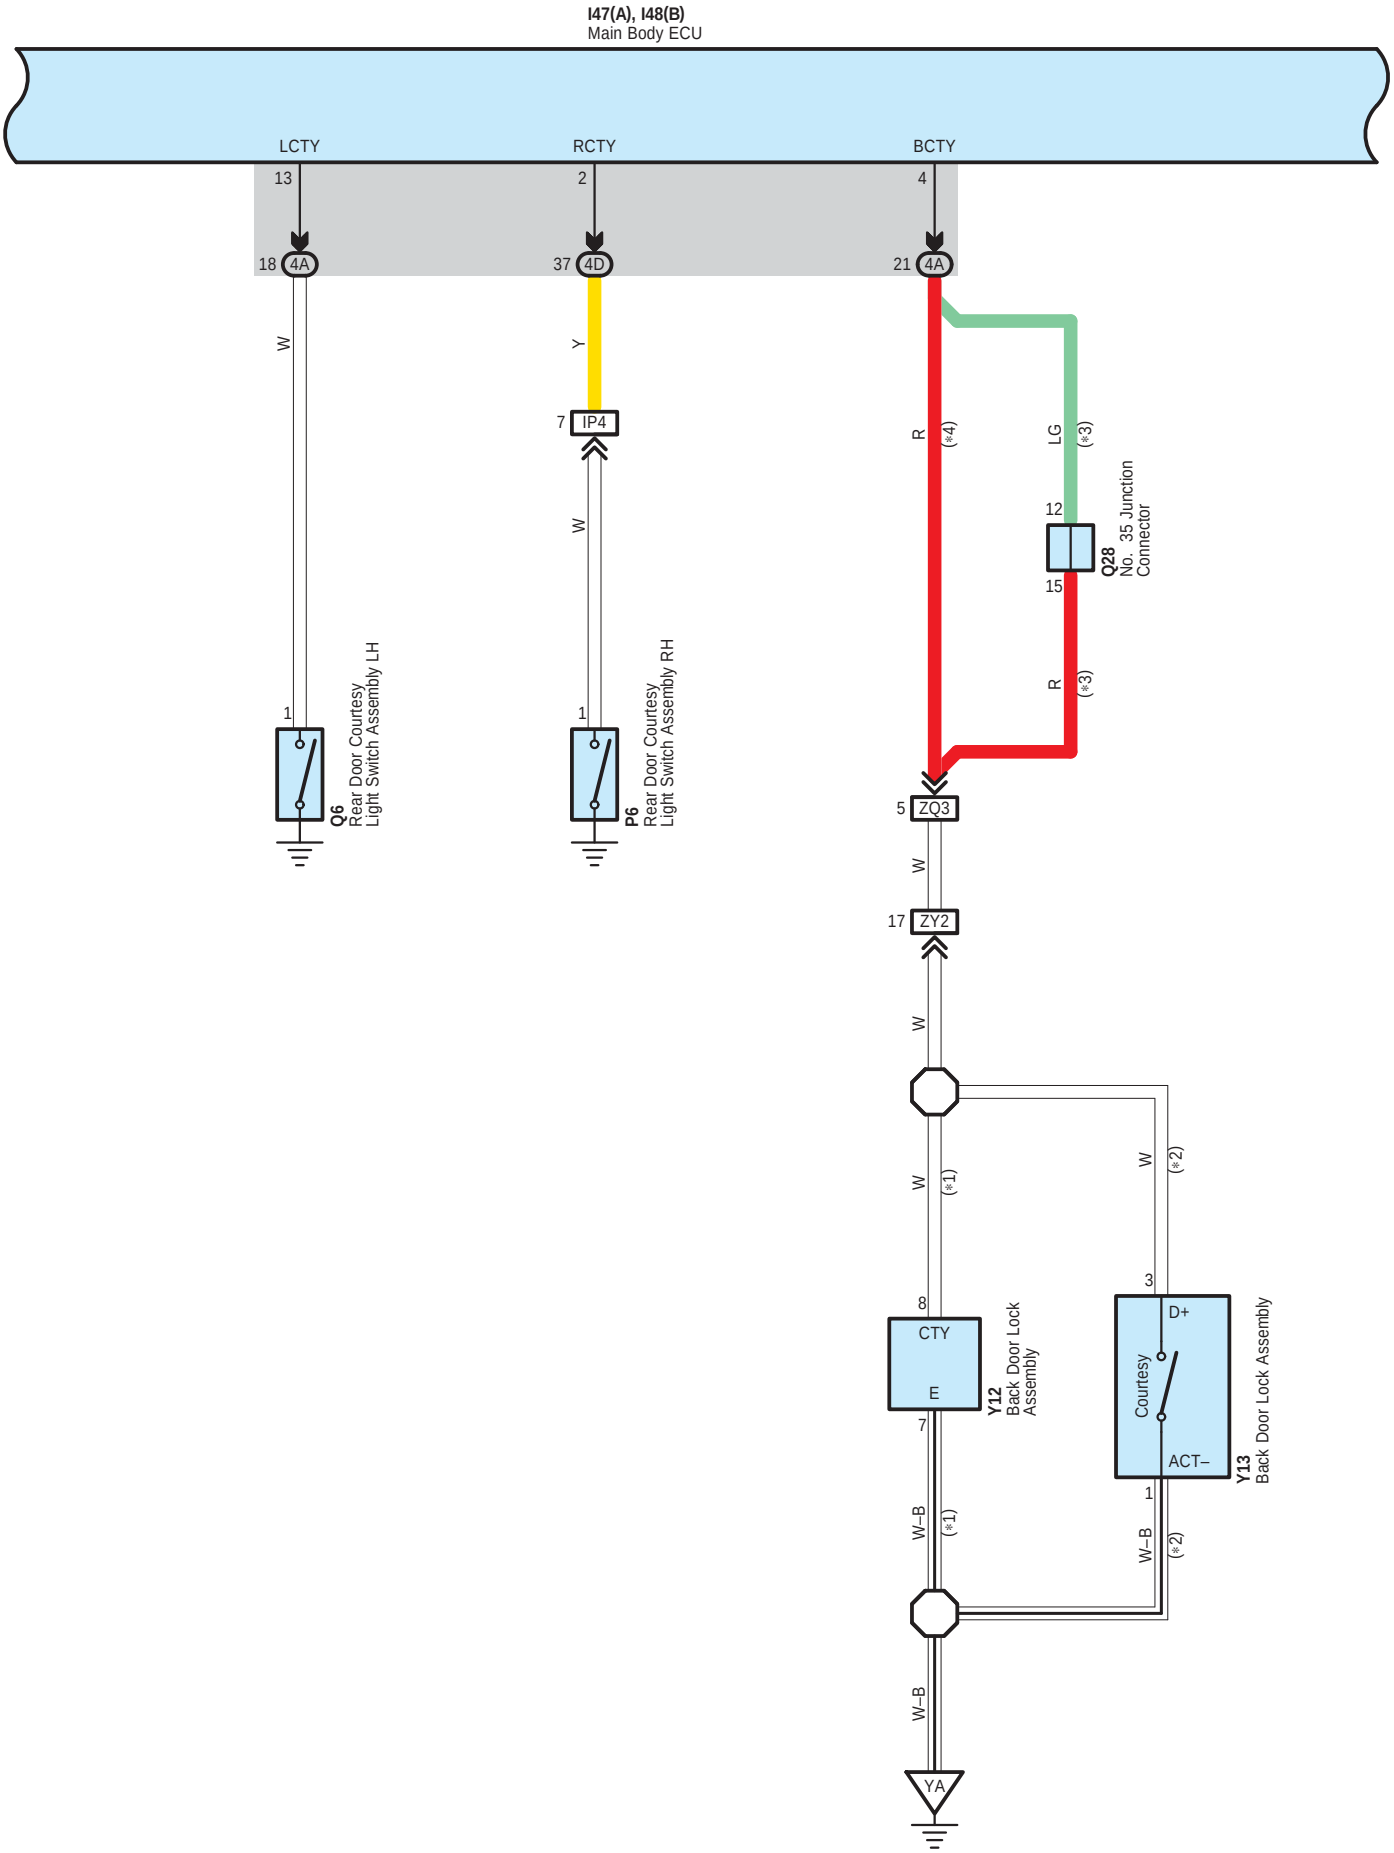
I47(A), I48(B)
Main Body ECU
LCTY
RCTY
BCTY
13
2
4
18 4A
37 4D
21 4A
W
Y
7 IP4
W
R (*4)
LG (*3)
12
15
Q28
No. 35 Junction Connector
R (*3)
1
Q6
Rear Door Courtesy Light Switch Assembly LH
1
P6
Rear Door Courtesy Light Switch Assembly RH
5 ZQ3
W
17 ZY2
W
W (*1)
W (*2)
8
CTY
E
Y12
Back Door Lock Assembly
7
3
D+
Courtesy
ACT–
1
Y13
Back Door Lock Assembly
W–B (*1)
W–B (*2)
W–B
YA

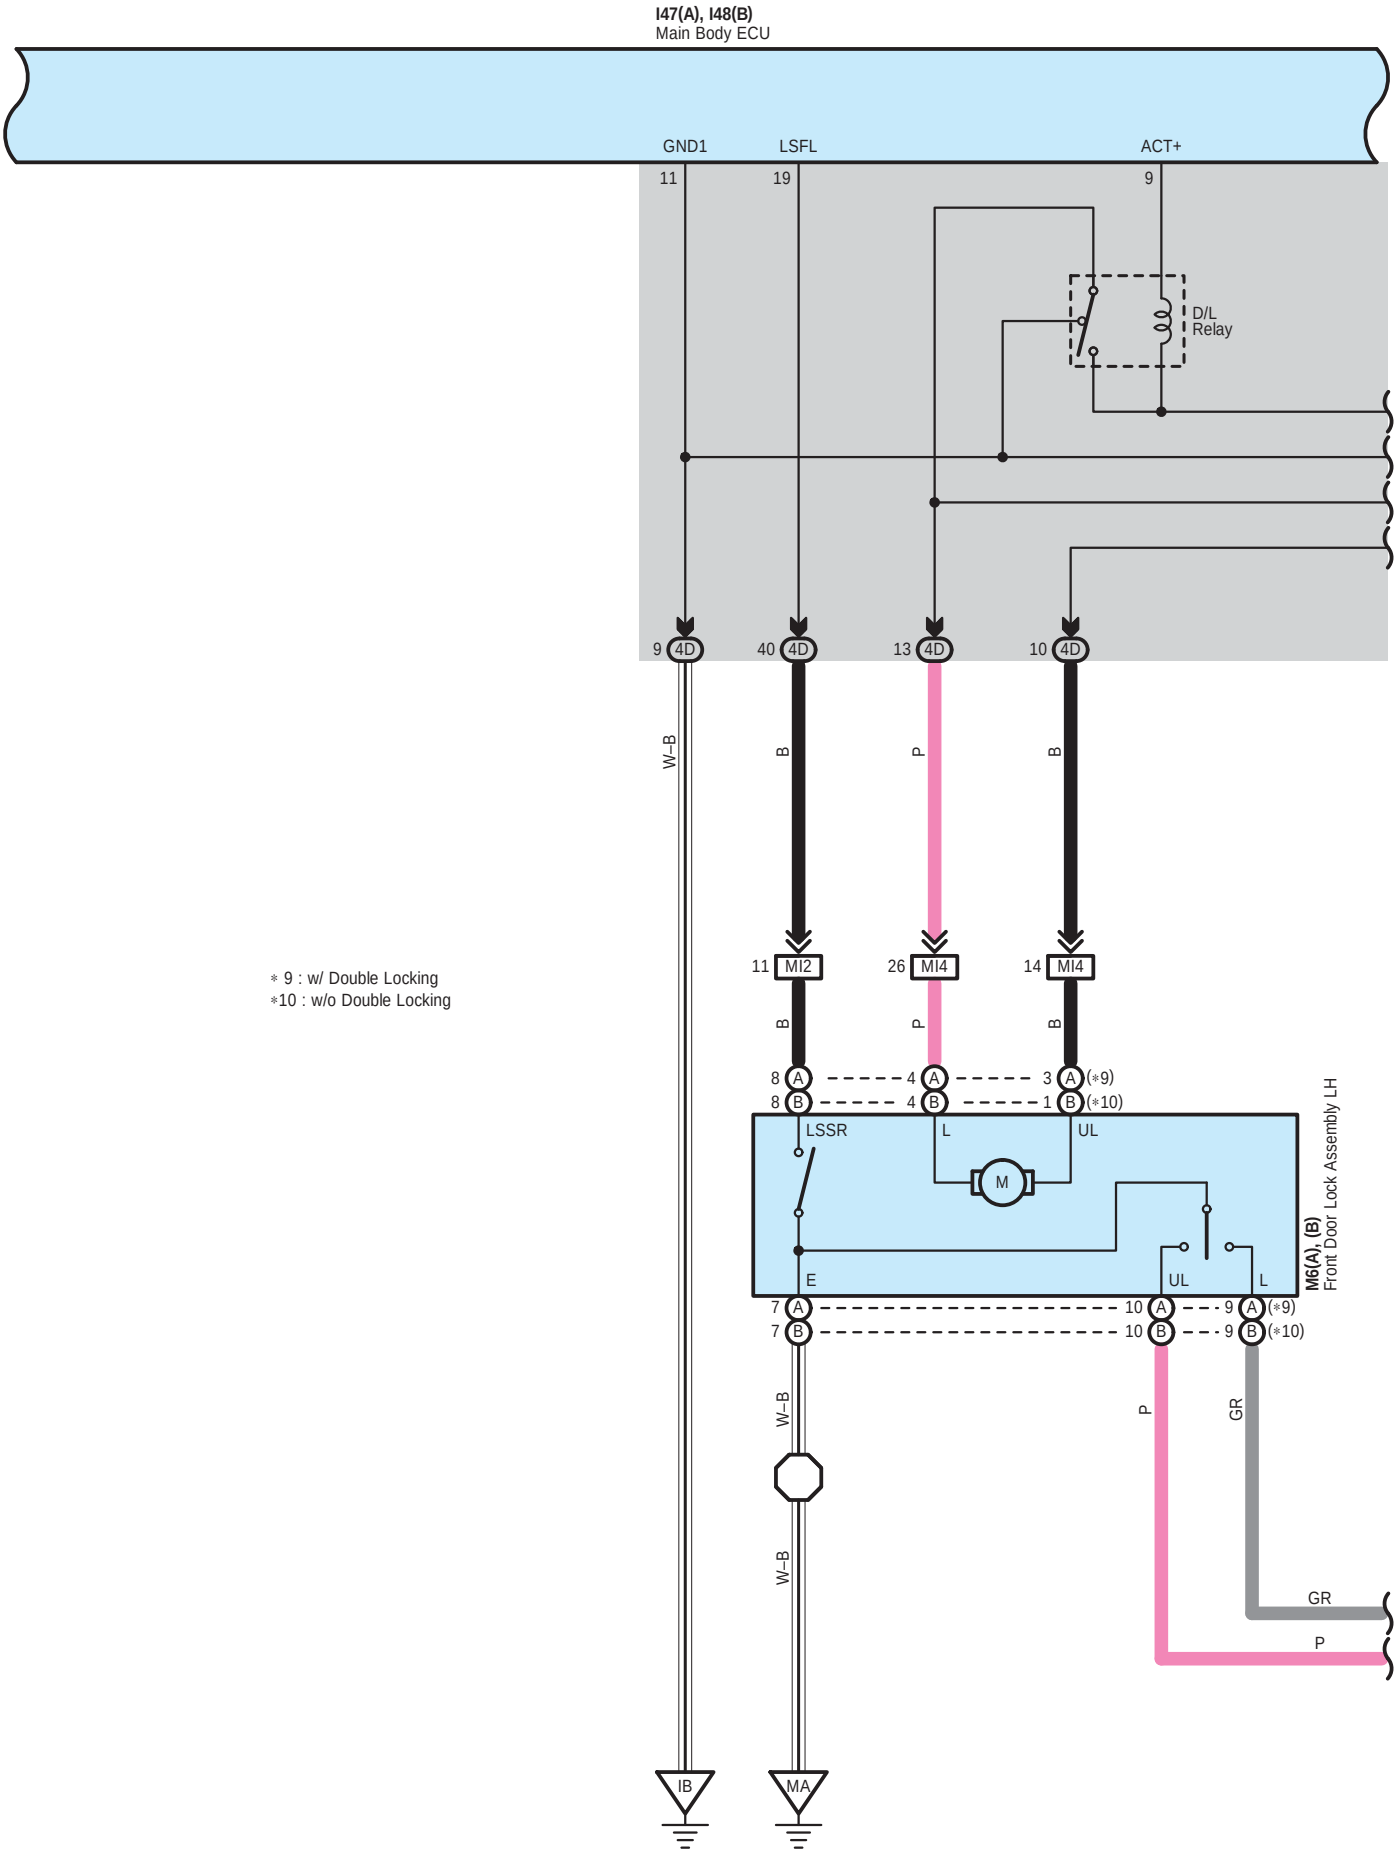

∗ 9 : w/ Double Locking
∗10 : w/o Double Locking

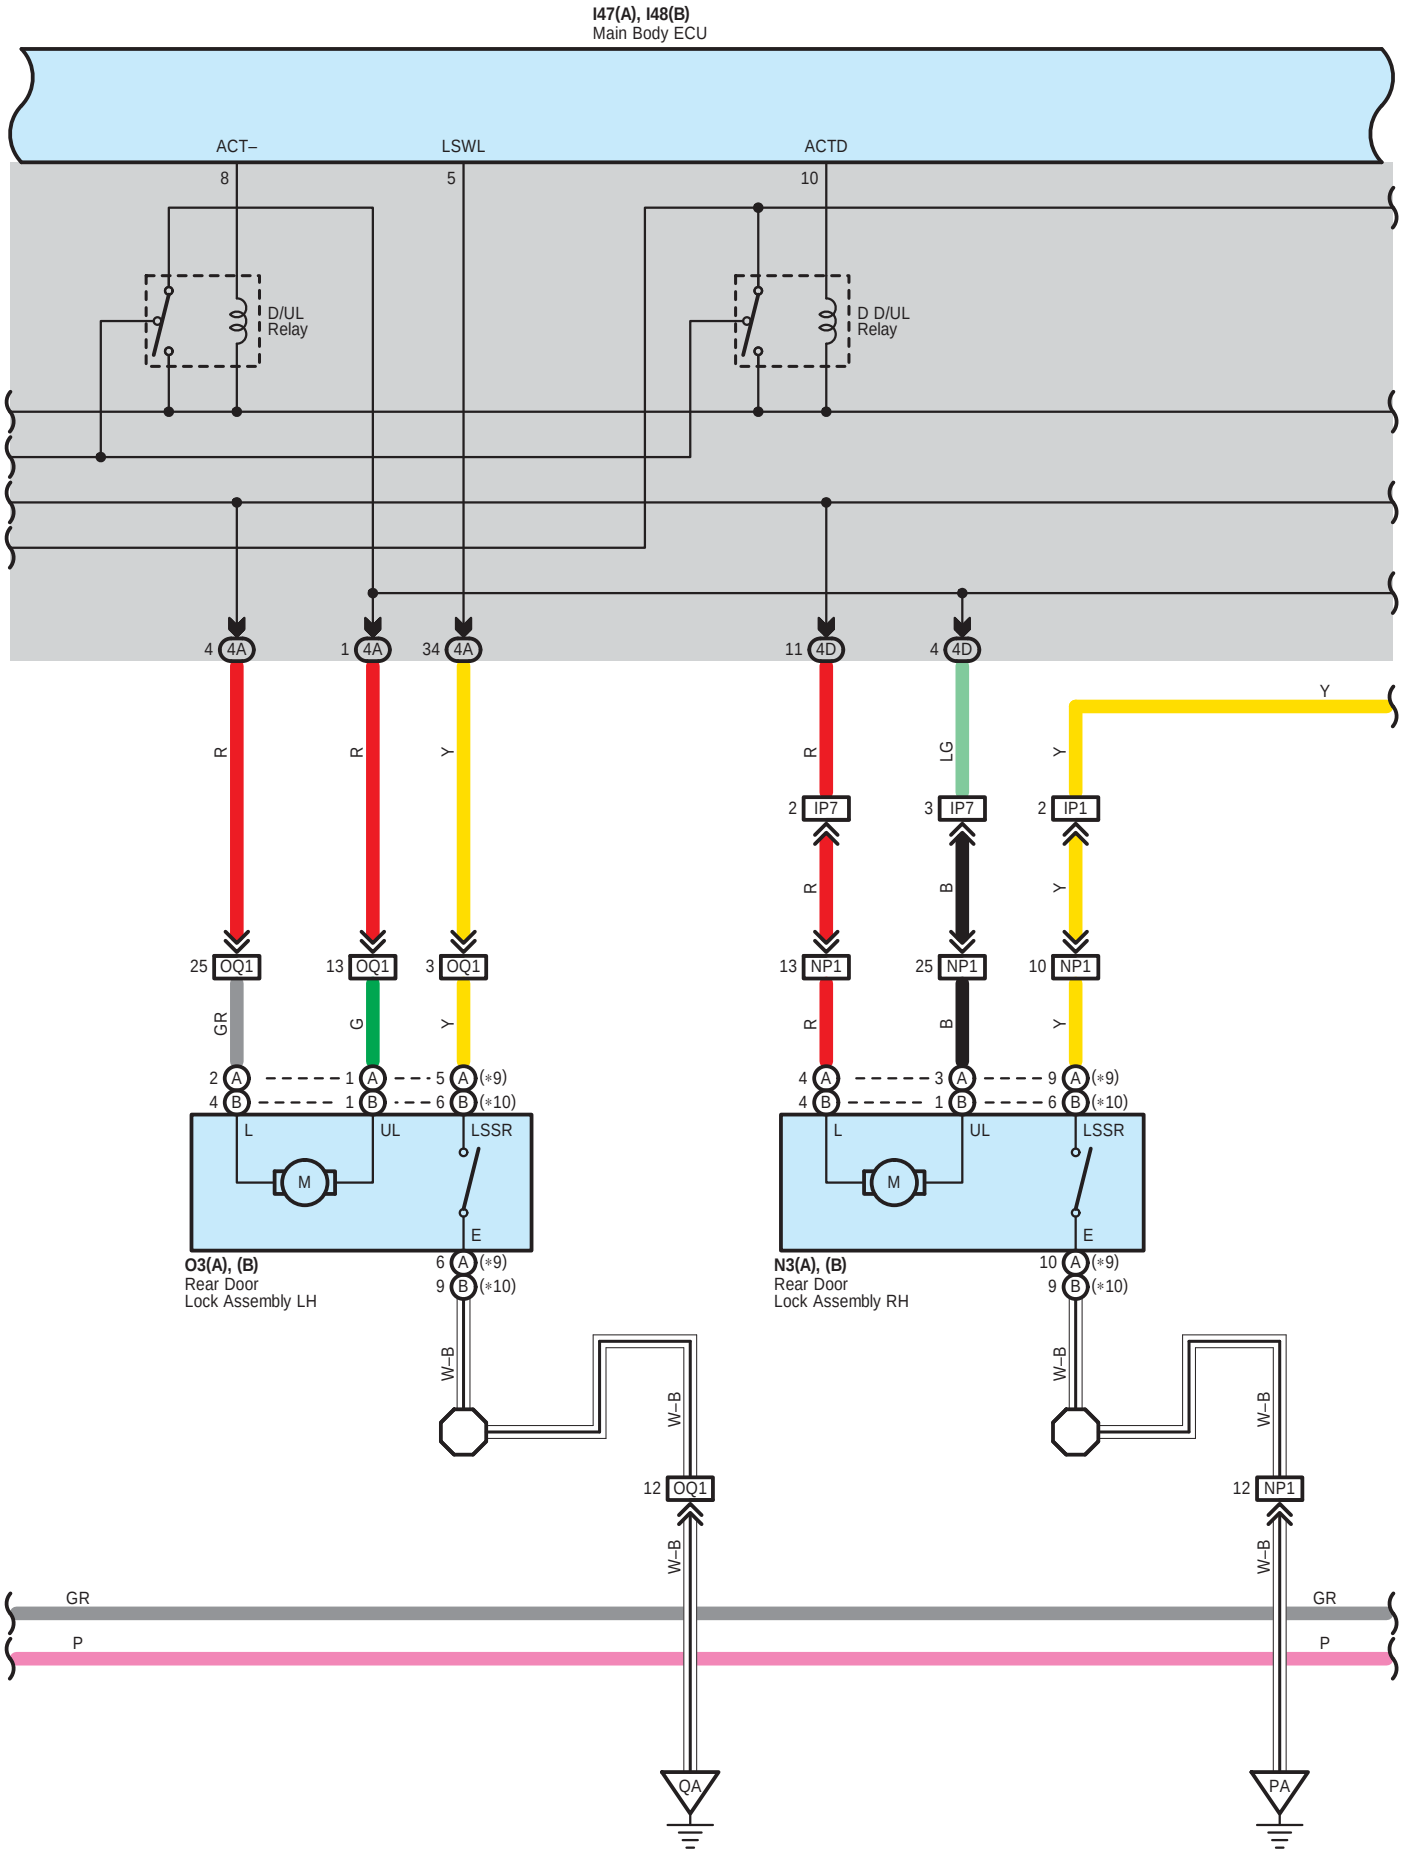
I47(A), I48(B)
Main Body ECU
ACT–
LSWL
ACTD
8
5
10
D/UL Relay
D D/UL Relay
4 4A
1 4A
34 4A
11 4D
4 4D
R
R
Y
R
LG
Y
Y
2 IP7
3 IP7
2 IP1
R
B
Y
25 OQ1
13 OQ1
3 OQ1
13 NP1
25 NP1
10 NP1
GR
G
Y
R
B
Y
2 A
4 B
1 A
1 B
5 A (*9)
6 B (*10)
4 A
4 B
3 A
1 B
9 A (*9)
6 B (*10)
L
UL
LSSR
M
E
O3(A), (B)
Rear Door
Lock Assembly LH
6 A (*9)
9 B (*10)
N3(A), (B)
Rear Door
Lock Assembly RH
10 A (*9)
9 B (*10)
W–B
W–B
W–B
W–B
12 OQ1
12 NP1
W–B
W–B
GR
P
GR
P
QA
PA

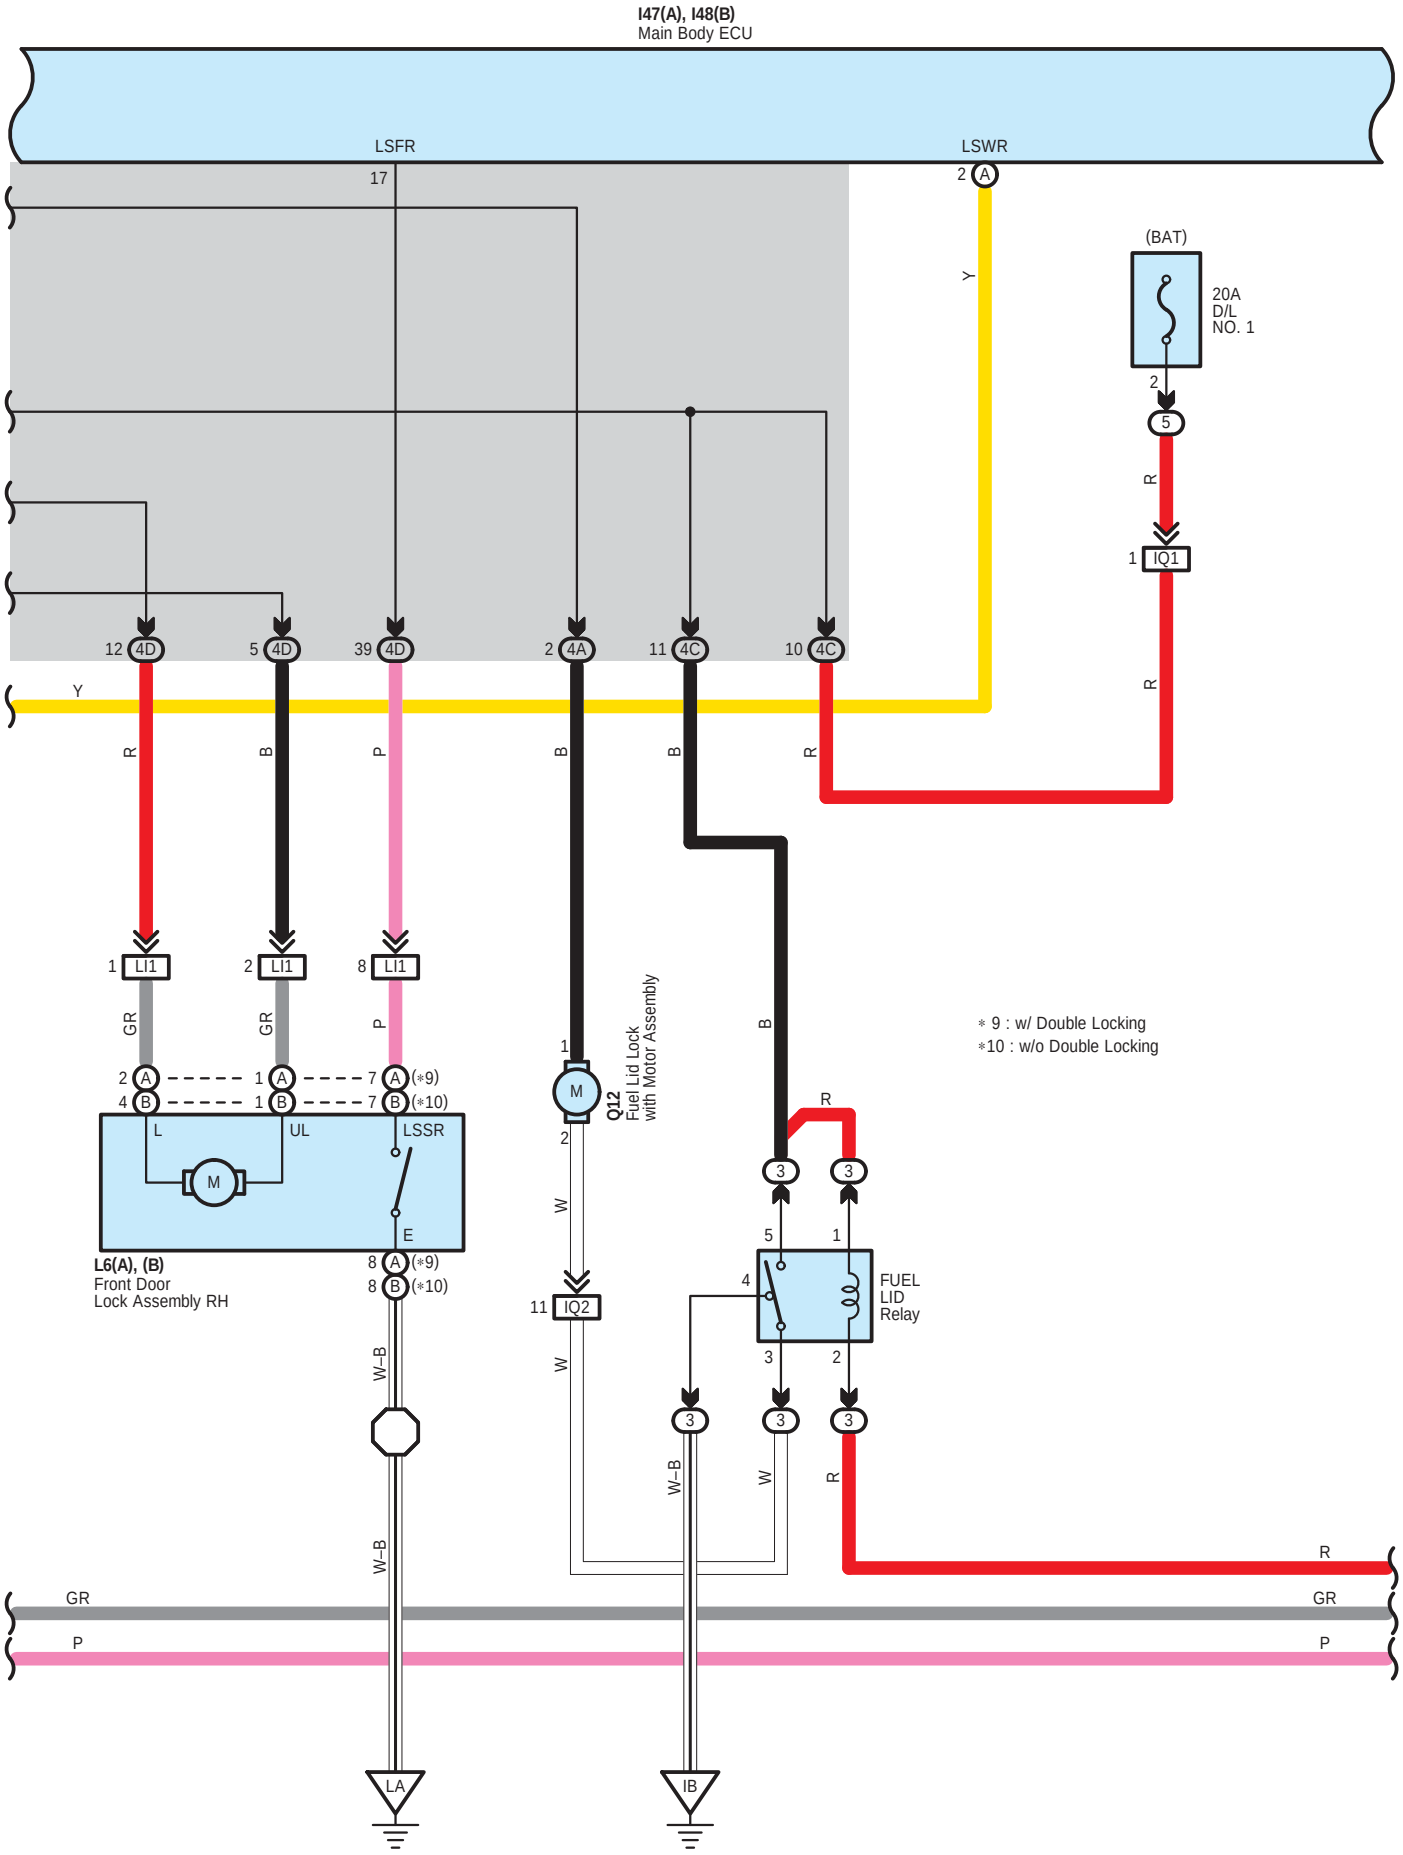
I47(A), I48(B)
Main Body ECU
LSFR
17
LSWR
2 A
Y
(BAT)
20A
D/L
NO. 1
2
5
R
1 IQ1
R
12 4D
5 4D
39 4D
2 4A
11 4C
10 4C
Y
R
B
P
B
B
R
1 LI1
2 LI1
8 LI1
GR
GR
P
2 A
4 B
1 A
1 B
7 A (*9)
7 B (*10)
L
UL
LSSR
M
E
L6(A), (B)
Front Door
Lock Assembly RH
8 A (*9)
8 B (*10)
W–B
W–B
1
M
2
Q12
Fuel Lid Lock
with Motor Assembly
W
11 IQ2
W
B
R
3
3
5
1
4
3
2
FUEL
LID
Relay
3
3
3
W–B
W
R
R
GR
GR
P
P
LA
IB
* 9 : w/ Double Locking
*10 : w/o Double Locking

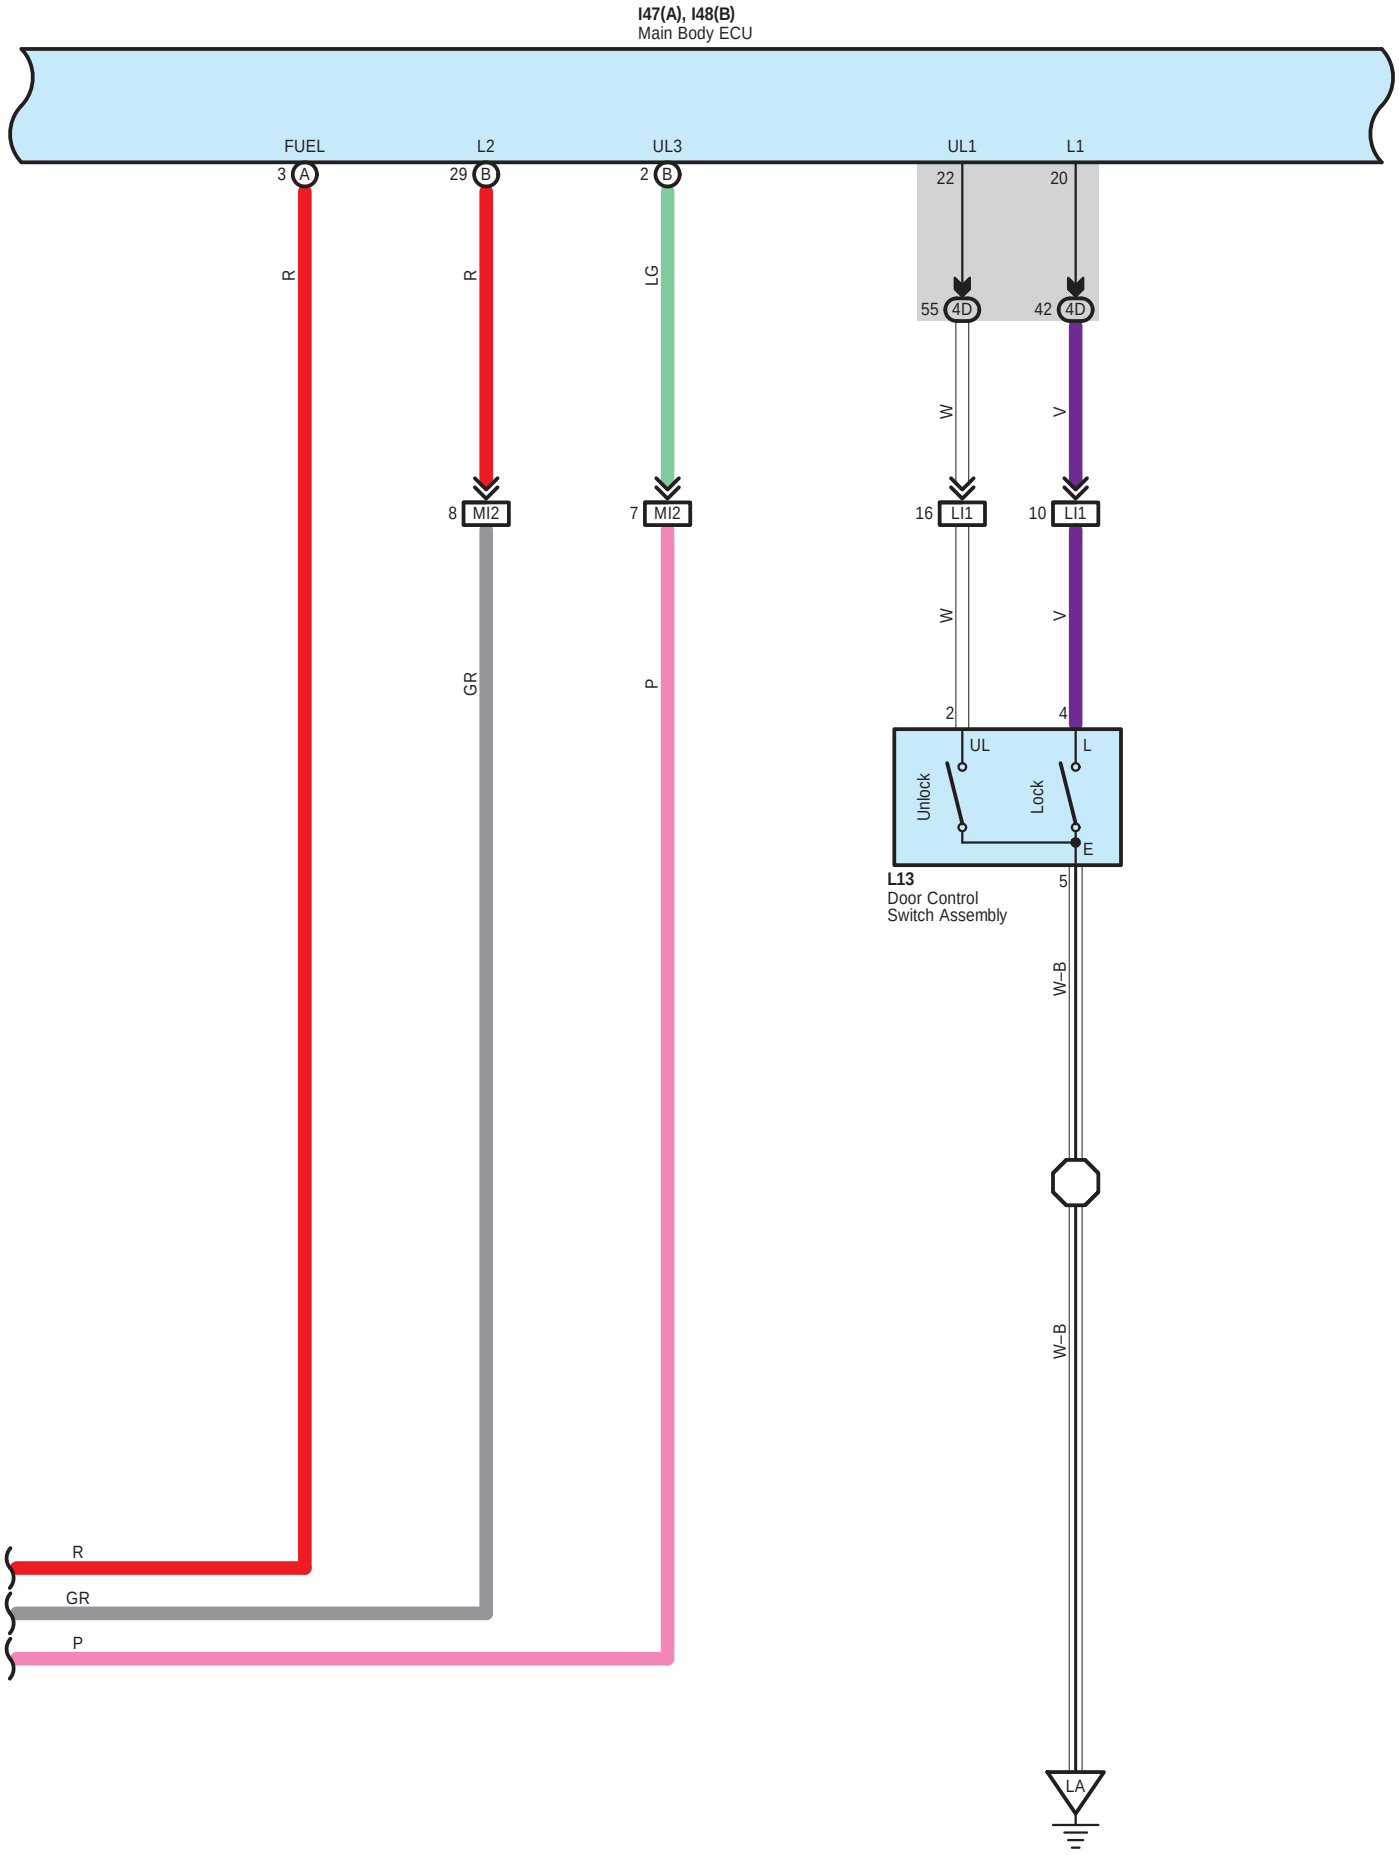
I47(A), I48(B)
Main Body ECU
FUEL
L2
UL3
UL1
L1
3 A
29 B
2 B
22
20
55 4D
42 4D
R
R
LG
W
V
8 MI2
7 MI2
16 LI1
10 LI1
W
V
GR
P
2
4
UL
L
Unlock
Lock
E
L13
Door Control
Switch Assembly
5
W–B
W–B
LA
R
GR
P

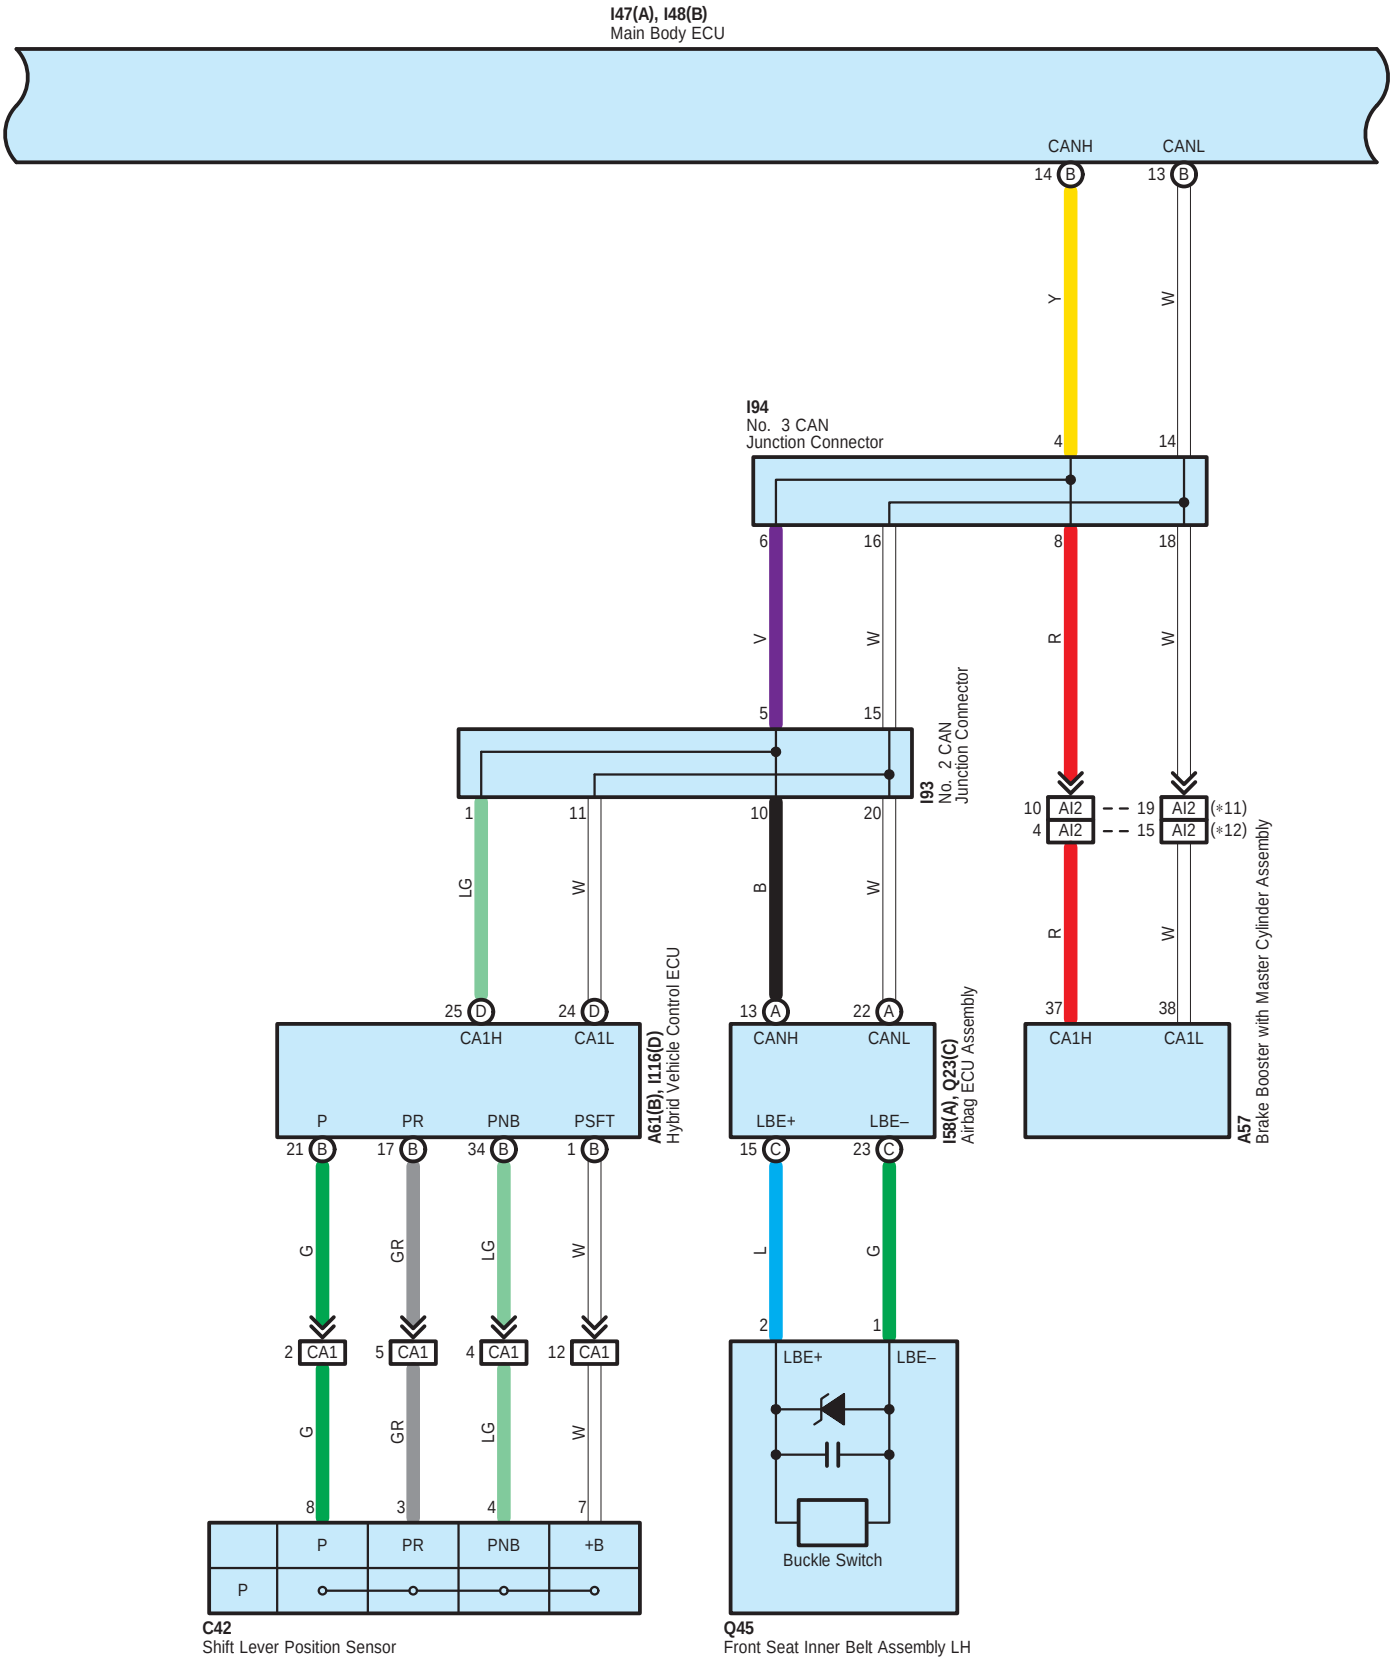
I47(A), I48(B)
Main Body ECU
CANH
CANL
14 B
13 B
Y
W
I94
No. 3 CAN
Junction Connector
4
14
6
16
8
18
V
W
R
W
5
15
I93
No. 2 CAN
Junction Connector
1
11
10
20
10 AI2
4 AI2
19 AI2 (*11)
15 AI2 (*12)
LG
W
B
W
R
W
25 D
24 D
13 A
22 A
37
38
CA1H
CA1L
CANH
CANL
CA1H
CA1L
A61(B), I116(D)
Hybrid Vehicle Control ECU
I58(A), Q23(C)
Airbag ECU Assembly
A57
Brake Booster with Master Cylinder Assembly
P
PR
PNB
PSFT
LBE+
LBE–
21 B
17 B
34 B
1 B
15 C
23 C
G
GR
LG
W
L
G
2 CA1
5 CA1
4 CA1
12 CA1
2
1
LBE+
LBE–
G
GR
LG
W
8
3
4
7
Buckle Switch
P
PR
PNB
+B
P
C42
Shift Lever Position Sensor
Q45
Front Seat Inner Belt Assembly LH

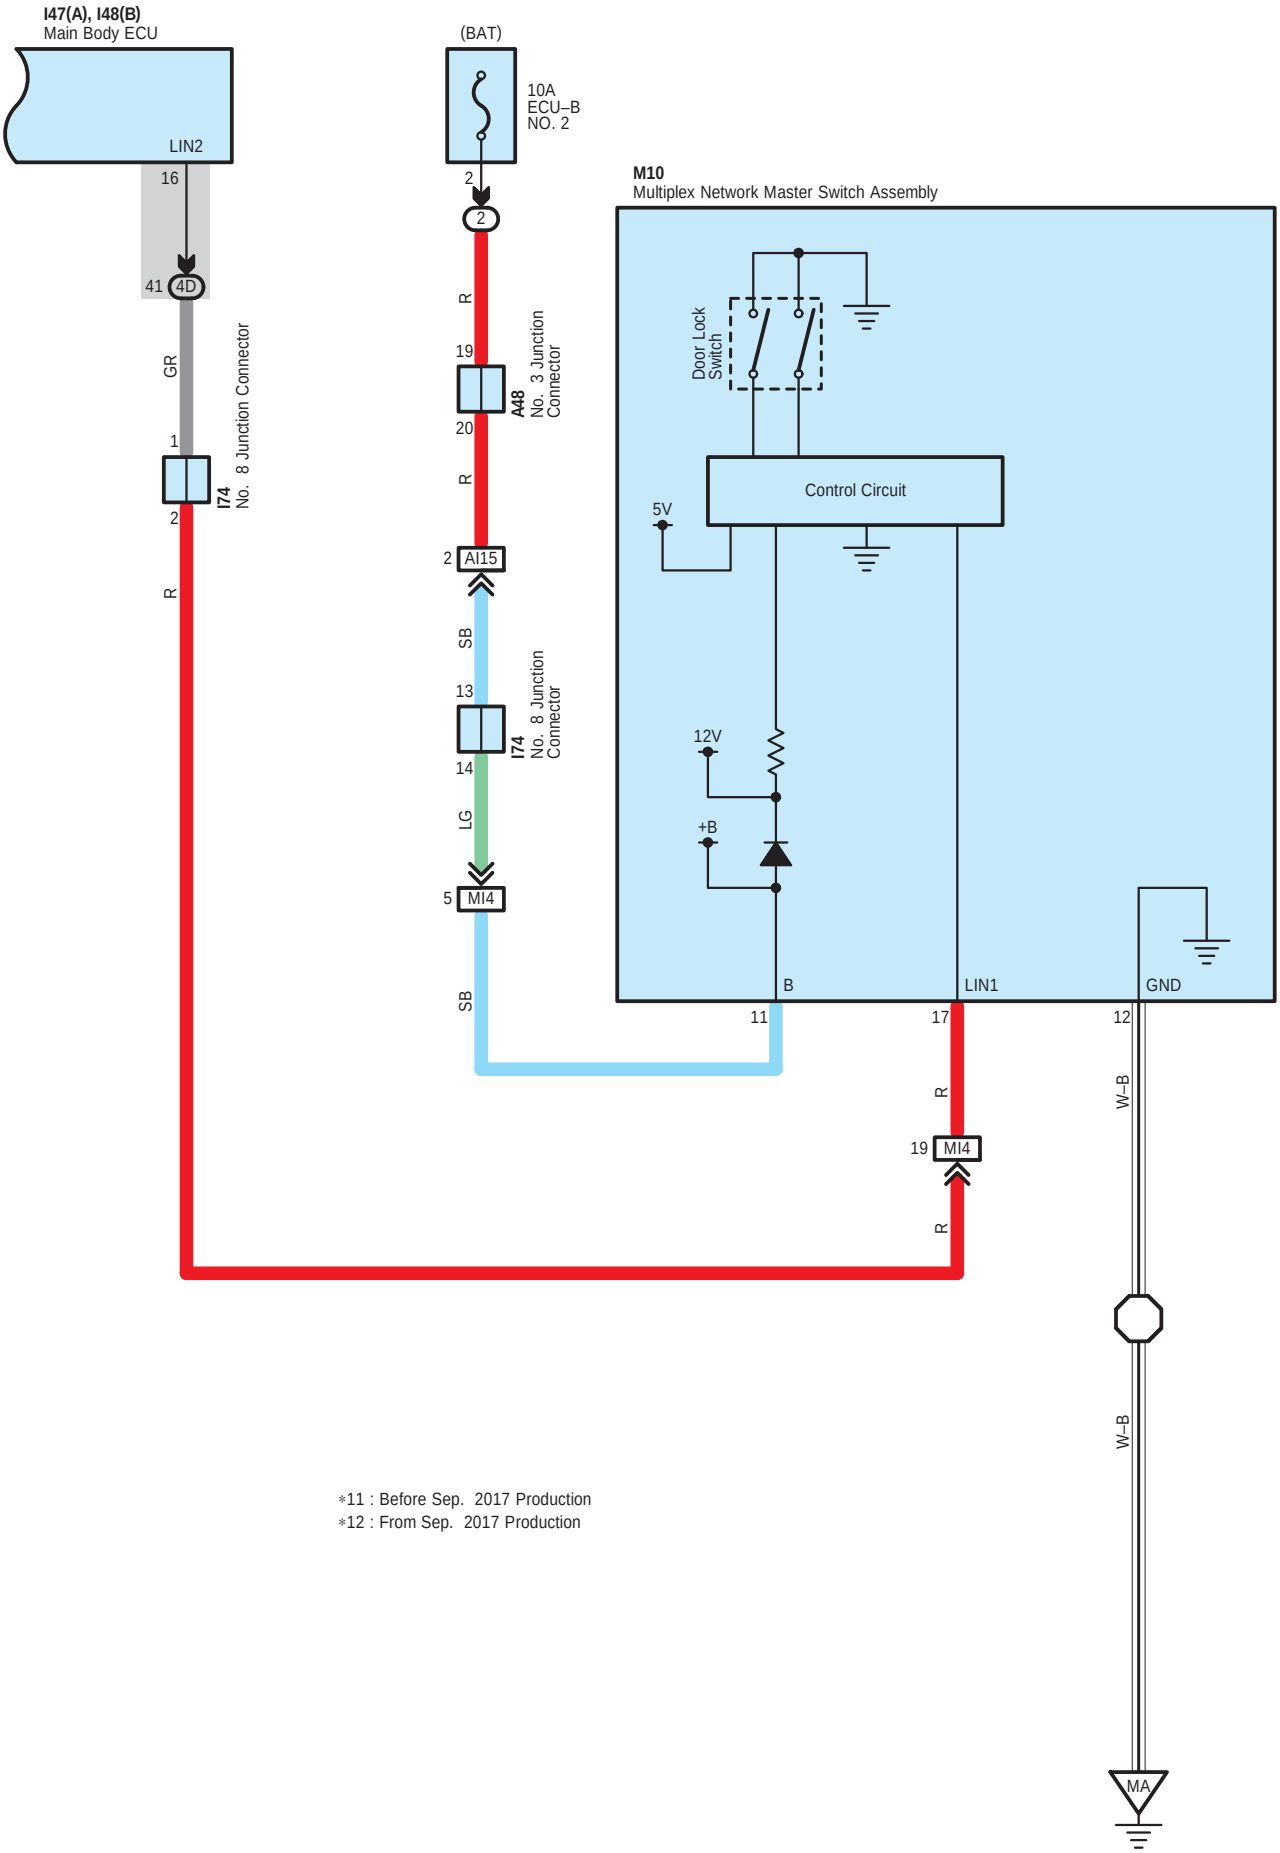

∗11 : Before Sep. 2017 Production
∗12 : From Sep. 2017 Production

A48
Blue

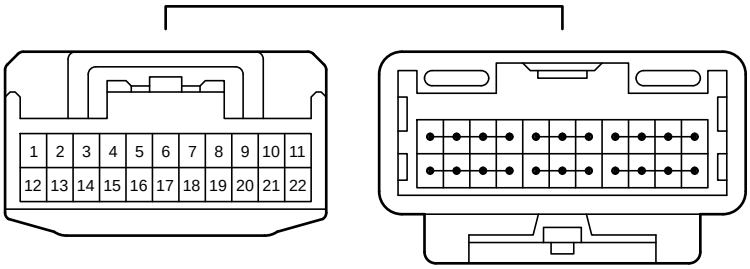

90980-12372

A57
Black

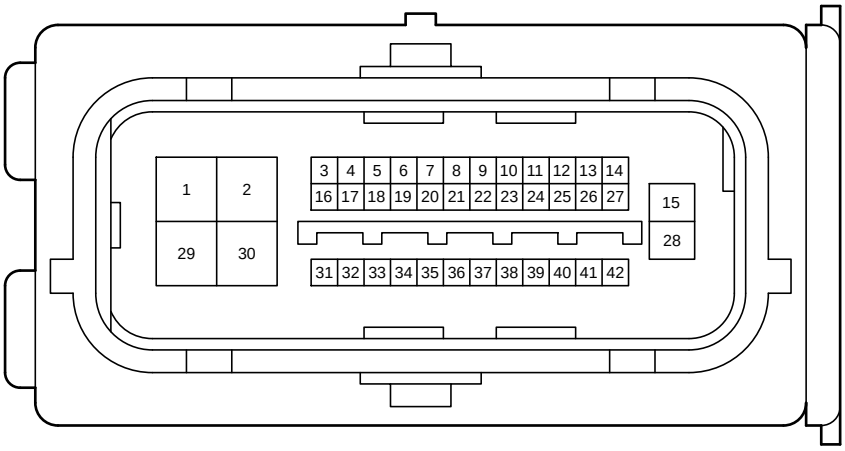

90980-12828

A61
Gray

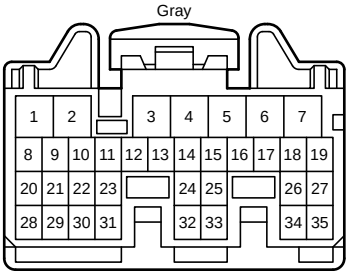

90980-12428

C42
Black

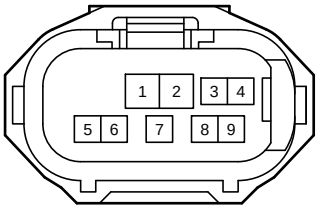

90980-12A23

I47
White

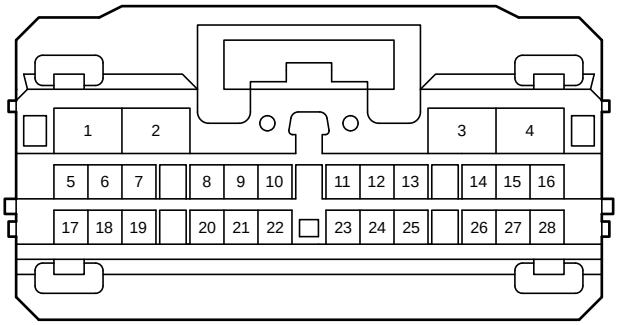

90980-12908

I48
White

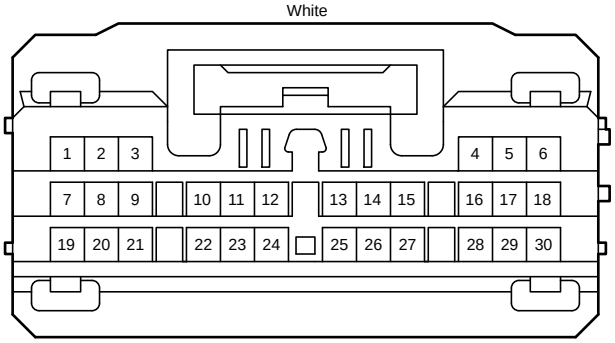

90980-12909

I58
Yellow

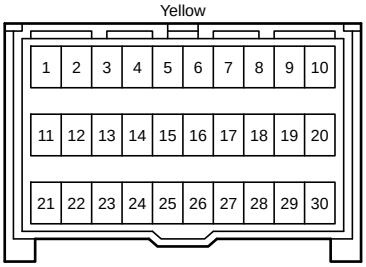

90980-12391

I74

Black

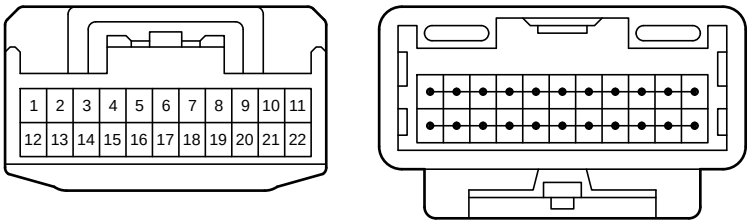

90980-12372
(LHD, RHD Before Sep. 2017 Production)

I74

White

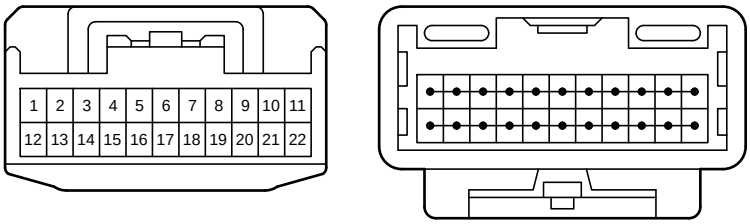

90980-12372
(RHD From Sep. 2017 Production)

I84

Black

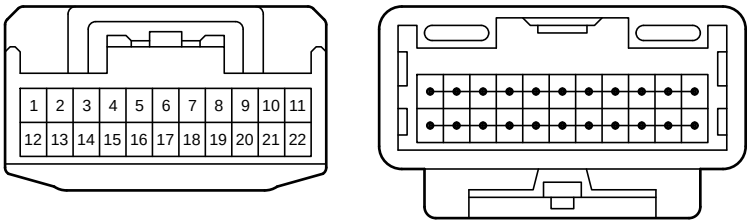

90980-12372
(LHD)

I84

Gray

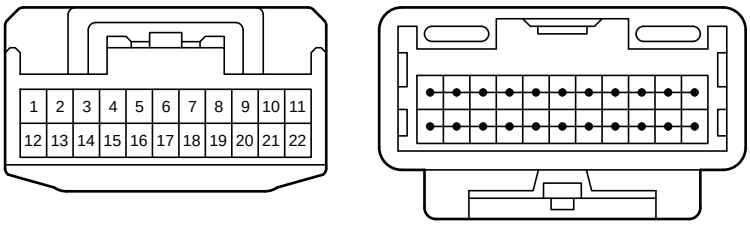

90980-12372
(RHD)

I93
White

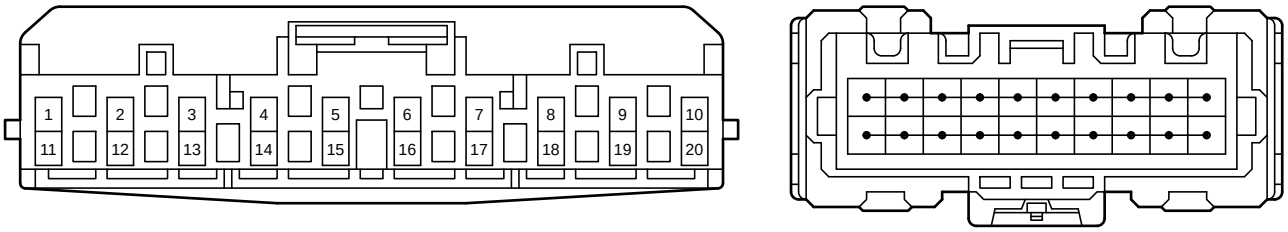

90980-12A58

I94
White

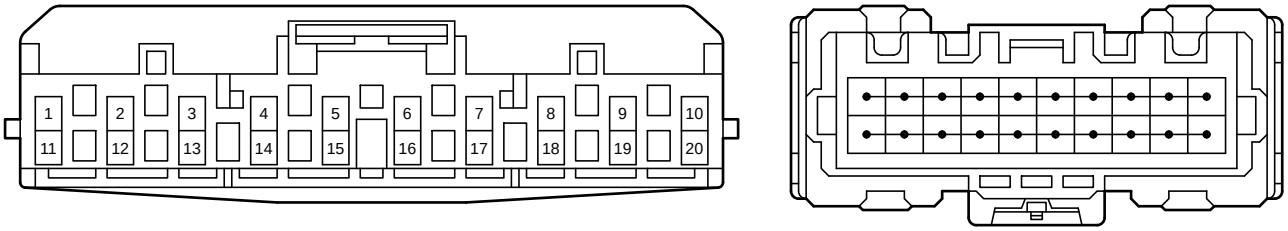

90980-12A58

I116
Gray

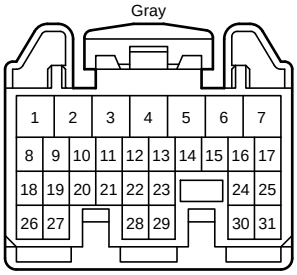

90980-12431

L6
White

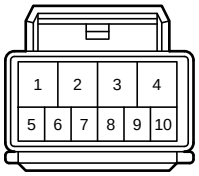

90980-12226

L13
Black

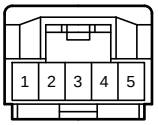

90980-11909

M6
White

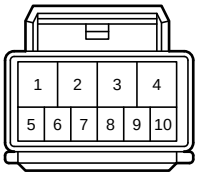

90980-12226

M10
White

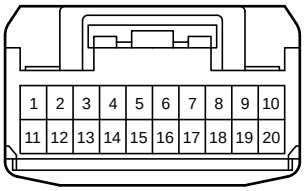

90980-12460

N3
White

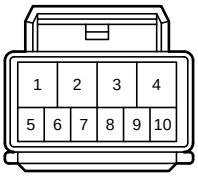

90980-12226

O3
White

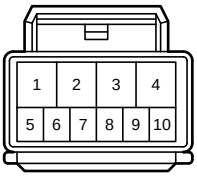

90980-12226

P3
Black

90980-10871

P6
Black

90980-10871

P26
White

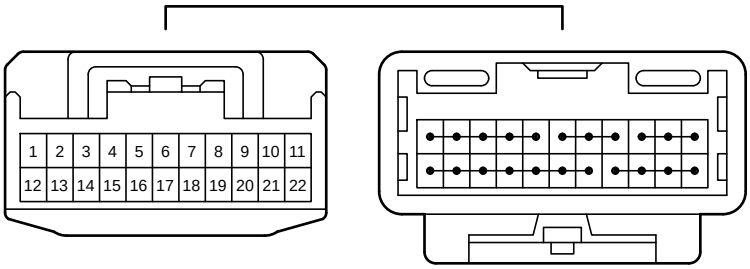

90980-12372

Q3
Black

90980-10871

Q6
Black

90980-10871

Q12
Black



90980-10860

Q23
Yellow

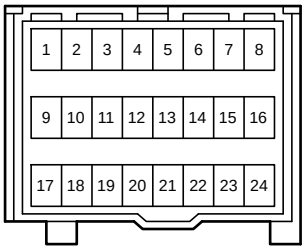

90980-12390

Q28
White

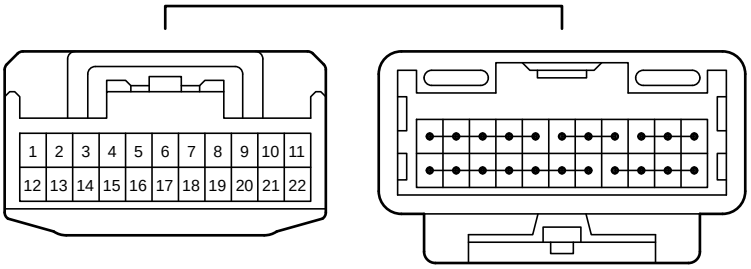

90980-12372

Q45
White

90980-10942

Y12
White

90980-10799

Y13
Black

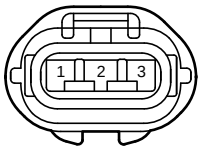

90980-11349

4A
White

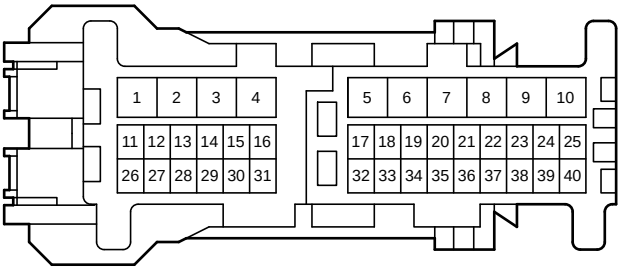

90980-12884

4C
White

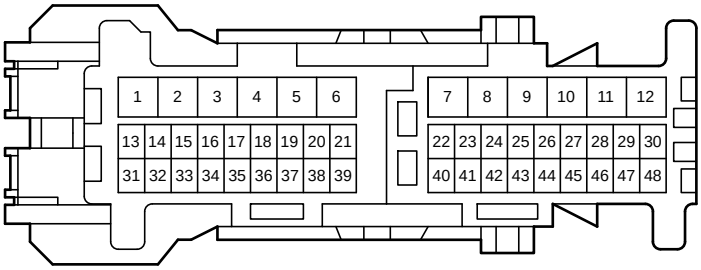

90980-12887

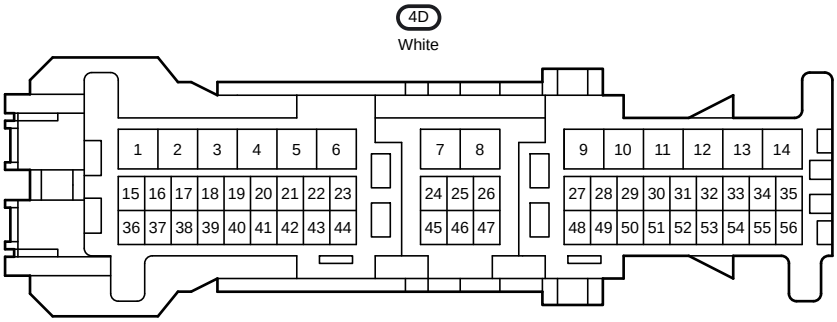

90980-12890

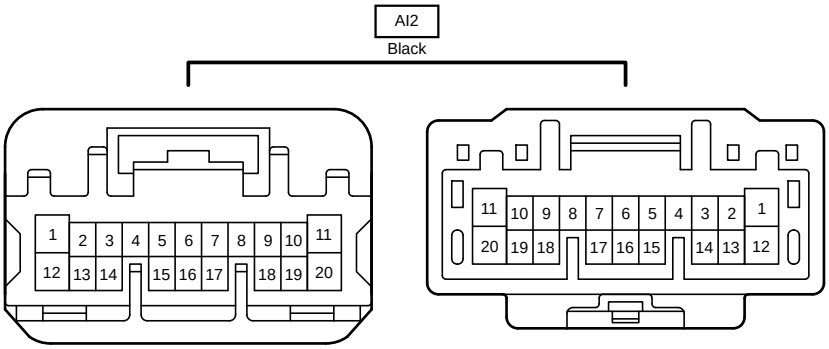

90980-12741

90980-12740

(LHD)

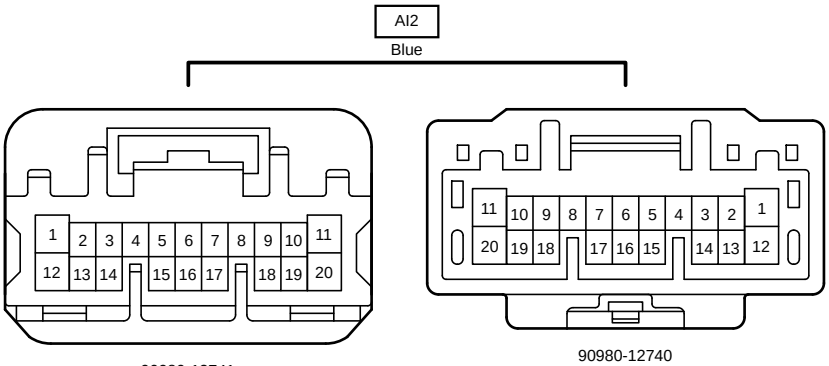

90980-12741

90980-12740

(RHD)

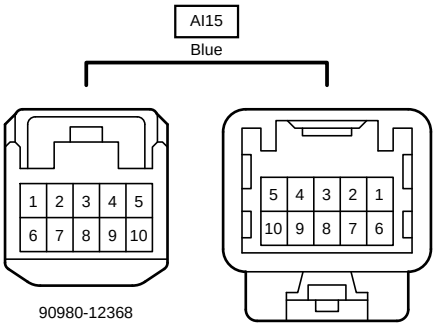

90980-12368

90980-12367

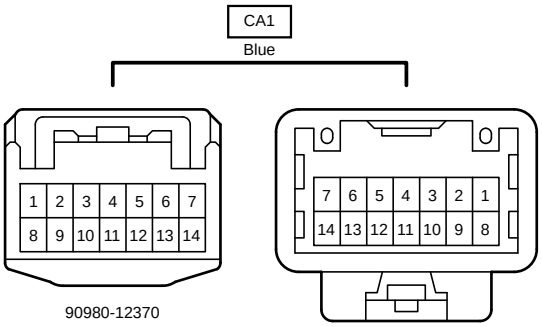

90980-12370

90980-12369

IP1
White

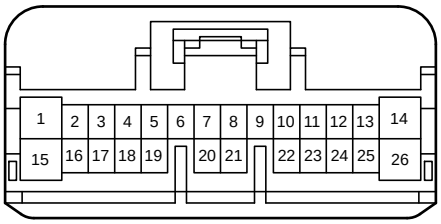

90980-12771

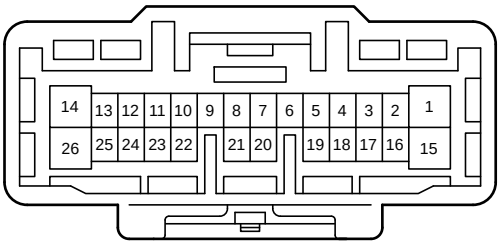

90980-12770

IP2
Blue

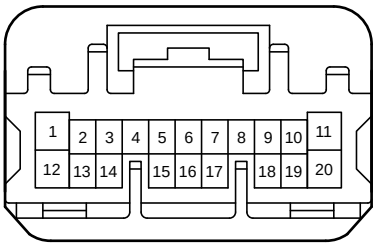

90980-12741

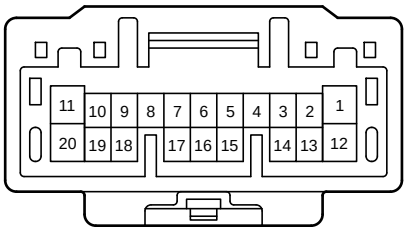

90980-12740

IP4
Gray

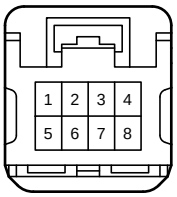

90980-12735

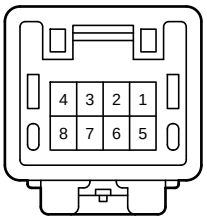

90980-12734

IP7
Black

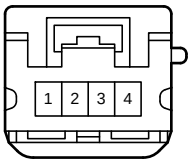

90980-12733

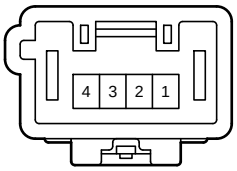

90980-12732

IQ1
White

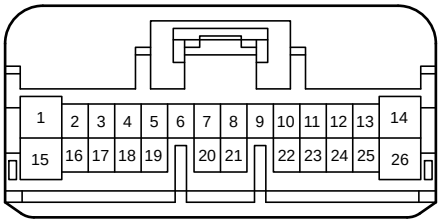

90980-12771

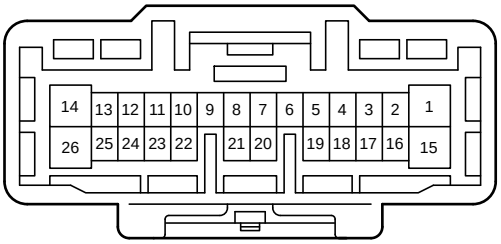

90980-12770

IQ2
Blue

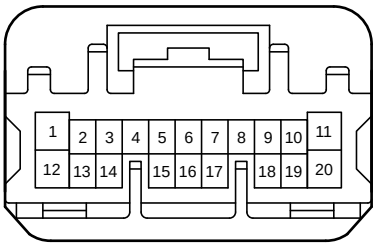

90980-12741

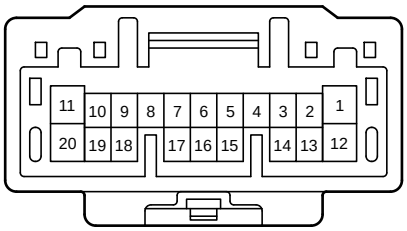

90980-12740

LI1
White

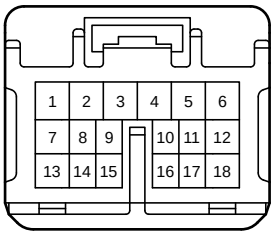

90980-12745

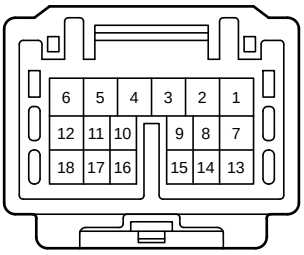

90980-12744

MI2
Gray

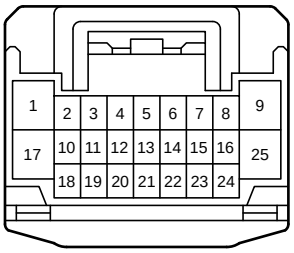

90980-12414

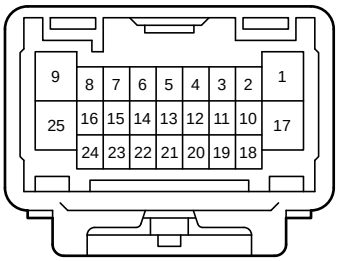

90980-12413

MI4
Black

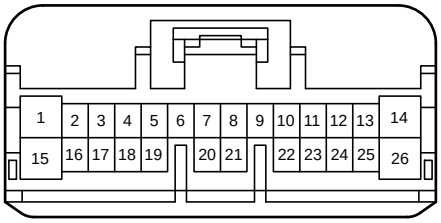

90980-12771

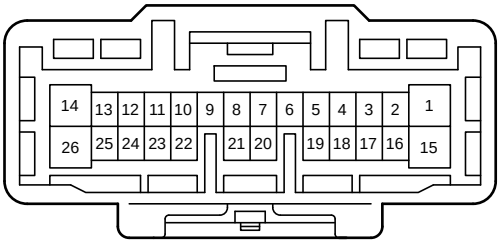

90980-12770

NP1
White

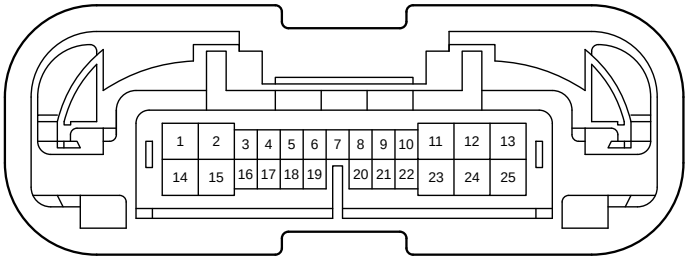

90980-12802

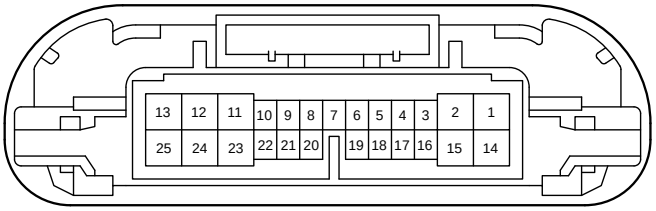

90980-12801

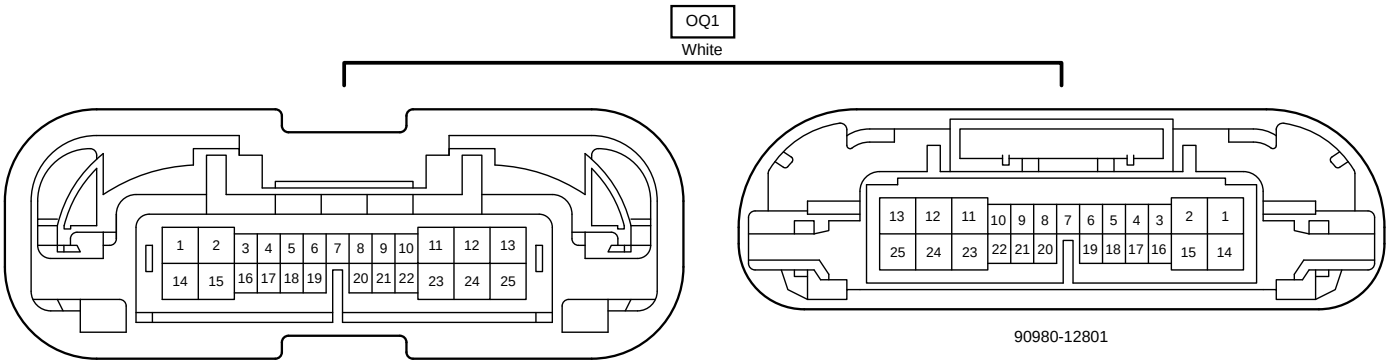

90980-12802

90980-12801

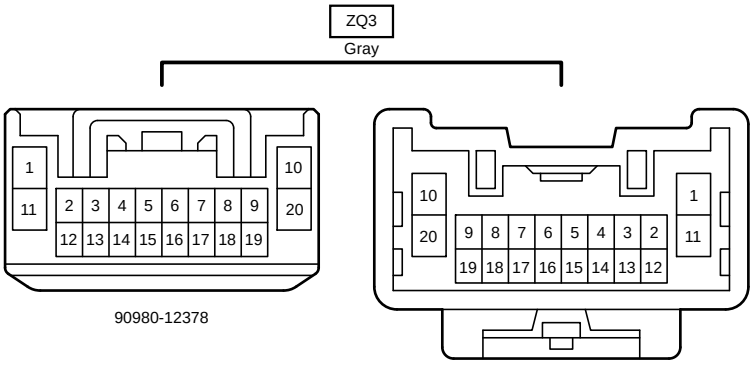

90980-12378

90980-12377

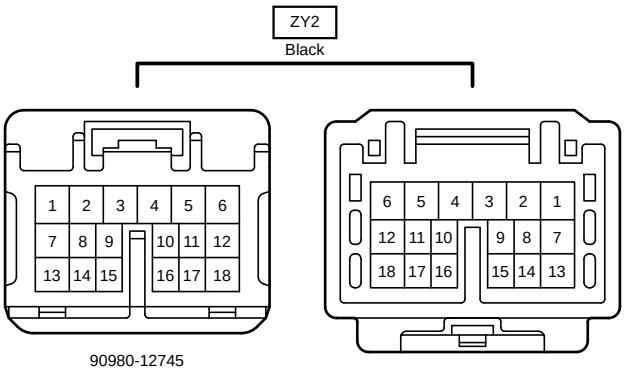

90980-12745

90980-12744