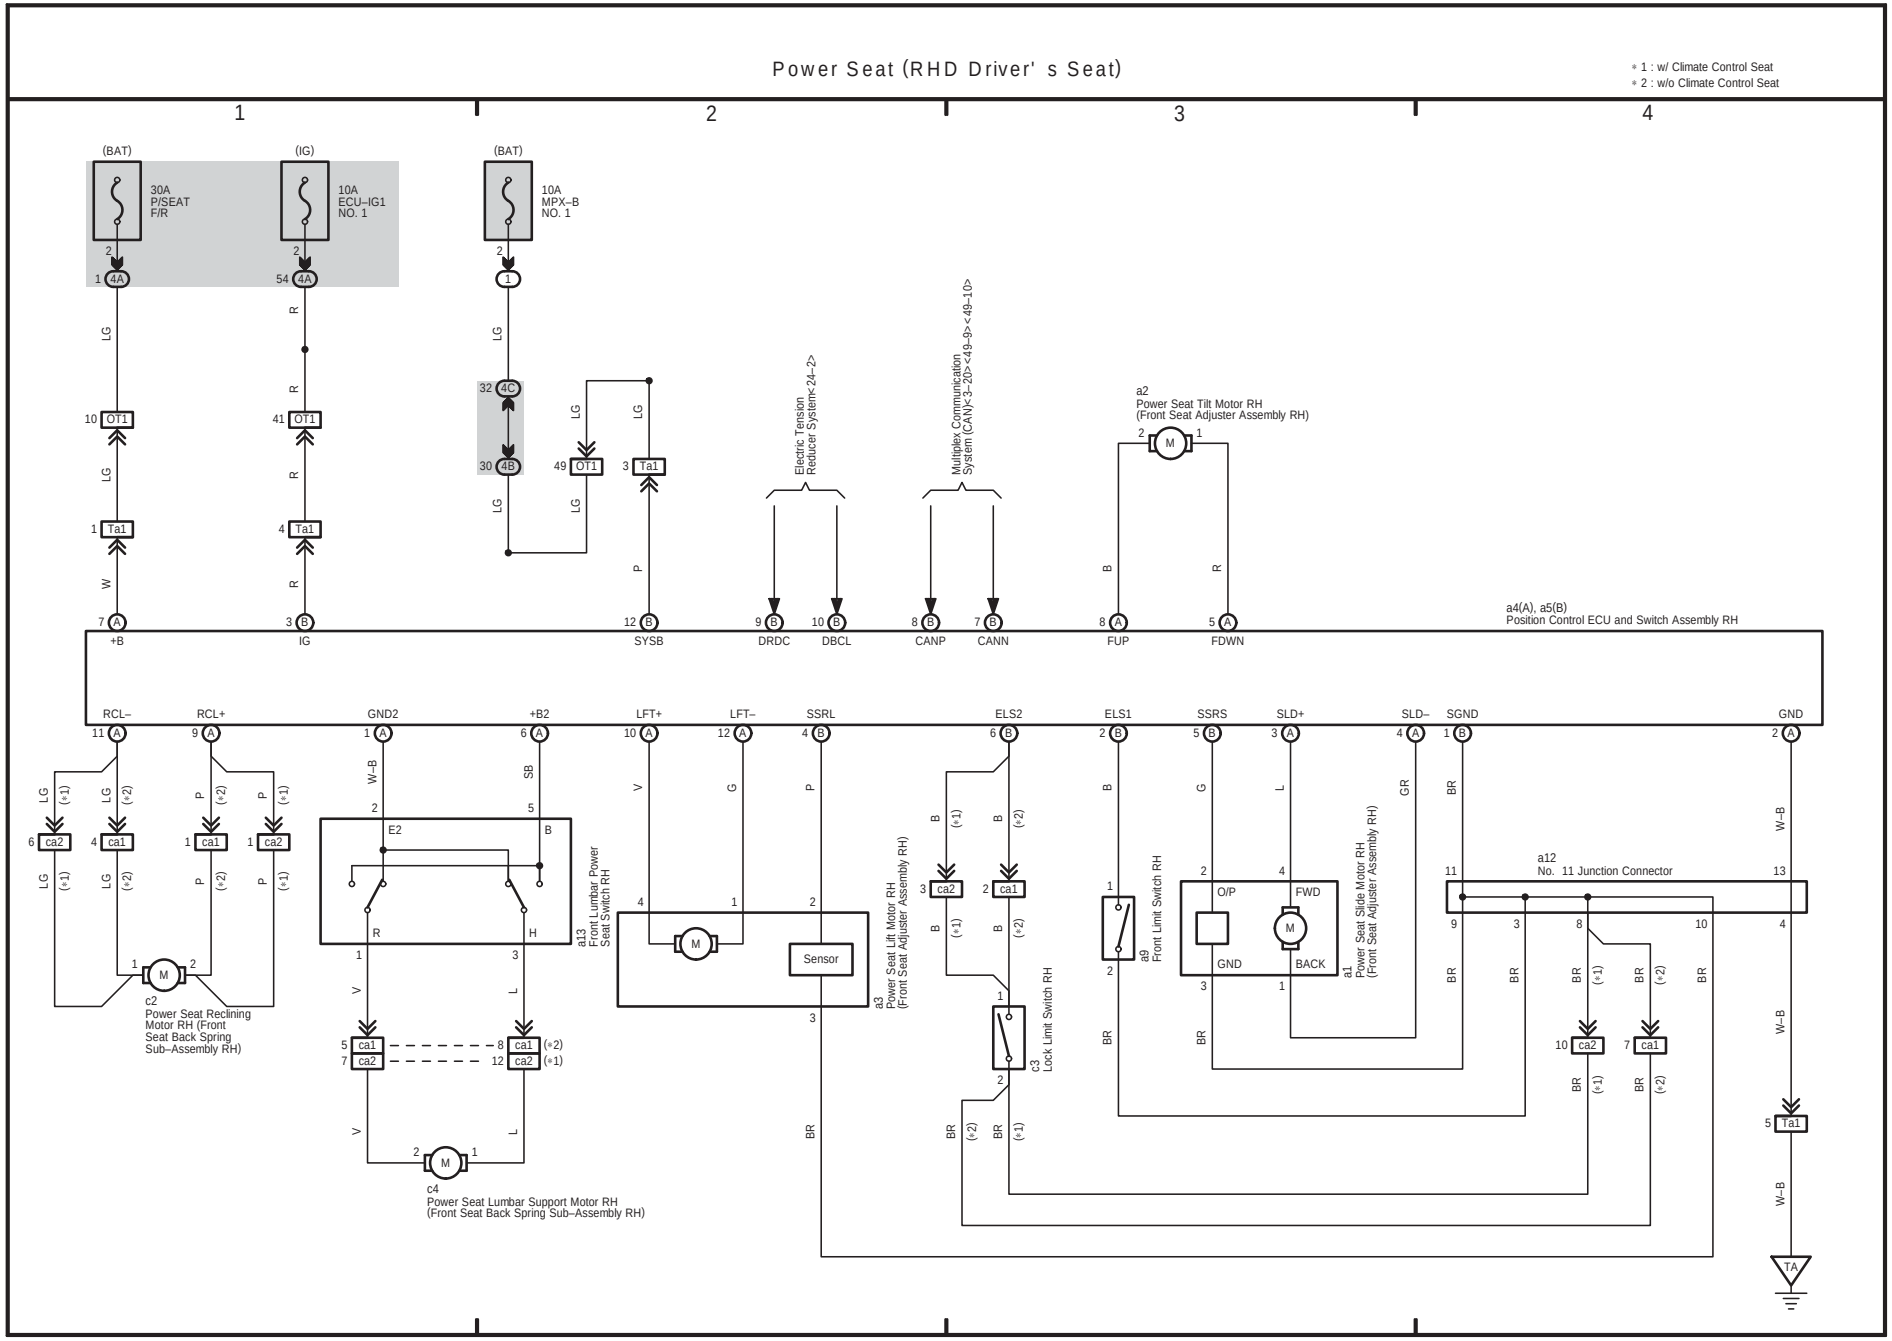
Power Seat (RHD Driver' s Seat)
* 1 : w/ Climate Control Seat
* 2 : w/o Climate Control Seat
1
2
3
4
(BAT)
30A
P/SEAT
F/R
(IG)
10A
ECU–IG1
NO. 1
(BAT)
10A
MPX–B
NO. 1
Electric Tension Reducer System<24–2>
Multiplex Communication System (CAN)<3–20><49–9><49–10>
a2
Power Seat Tilt Motor RH
(Front Seat Adjuster Assembly RH)
a4(A), a5(B)
Position Control ECU and Switch Assembly RH
+B
IG
SYSB
DRDC
DBCL
CANP
CANN
FUP
FDWN
RCL–
RCL+
GND2
+B2
LFT+
LFT–
SSRL
ELS2
ELS1
SSRS
SLD+
SLD–
SGND
GND
c2
Power Seat Reclining Motor RH (Front Seat Back Spring Sub–Assembly RH)
a13
Front Lumbar Power Seat Switch RH
c4
Power Seat Lumbar Support Motor RH
(Front Seat Back Spring Sub–Assembly RH)
a3
Power Seat Lift Motor RH
(Front Seat Adjuster Assembly RH)
Sensor
c3
Lock Limit Switch RH
a9
Front Limit Switch RH
a1
Power Seat Slide Motor RH
(Front Seat Adjuster Assembly RH)
O/P
FWD
GND
BACK
a12
No. 11 Junction Connector
TA