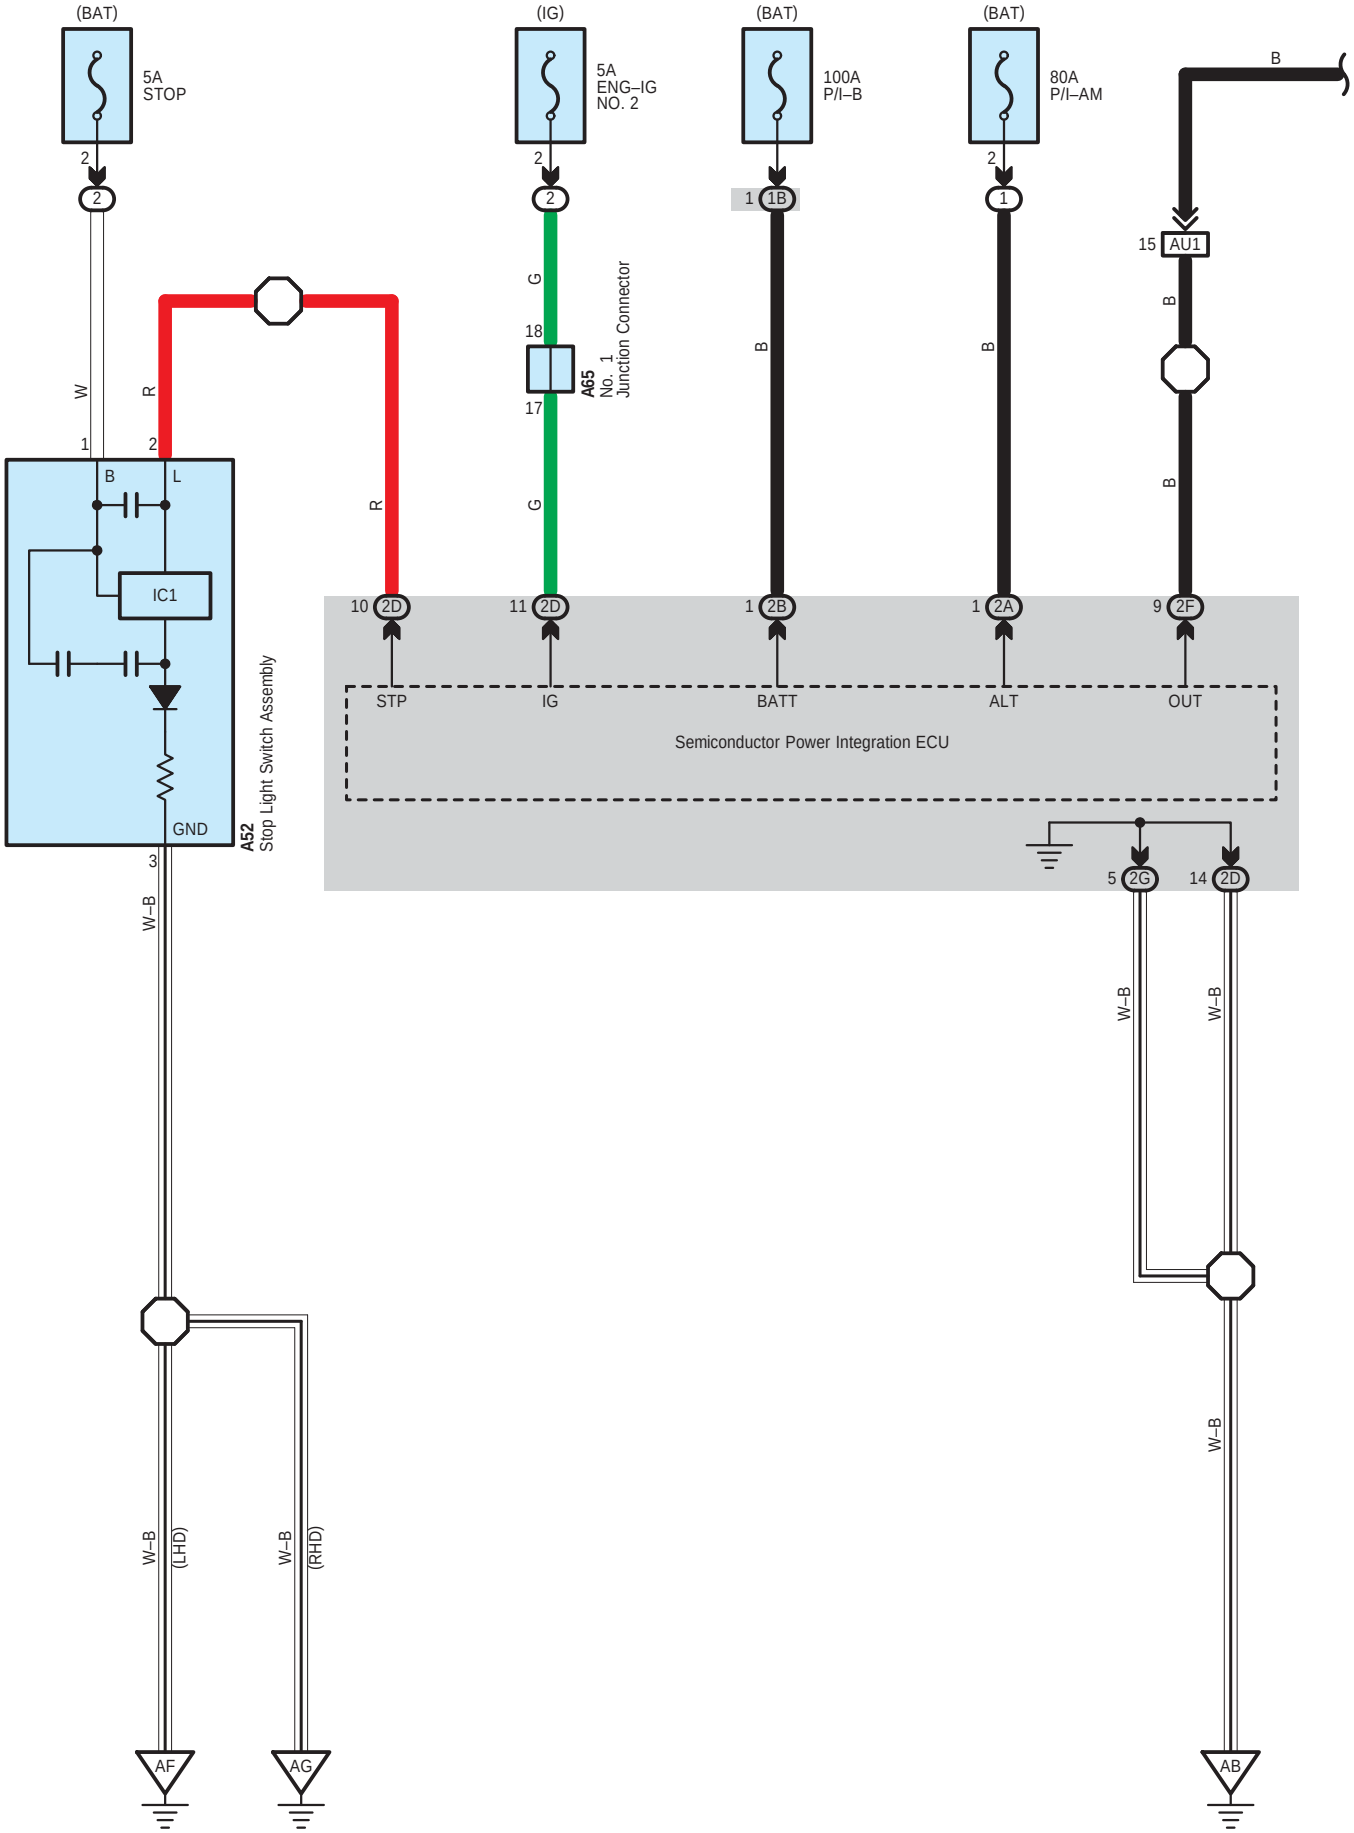
(BAT)
5A
STOP
(IG)
5A
ENG–IG
NO. 2
(BAT)
100A
P/I–B
(BAT)
80A
P/I–AM
B
15 AU1
A65
No. 1
Junction Connector
A52
Stop Light Switch Assembly
IC1
GND
10 2D
11 2D
1 2B
1 2A
9 2F
STP
IG
BATT
ALT
OUT
Semiconductor Power Integration ECU
5 2G
14 2D
W–B
(LHD)
(RHD)
AF
AG
AB

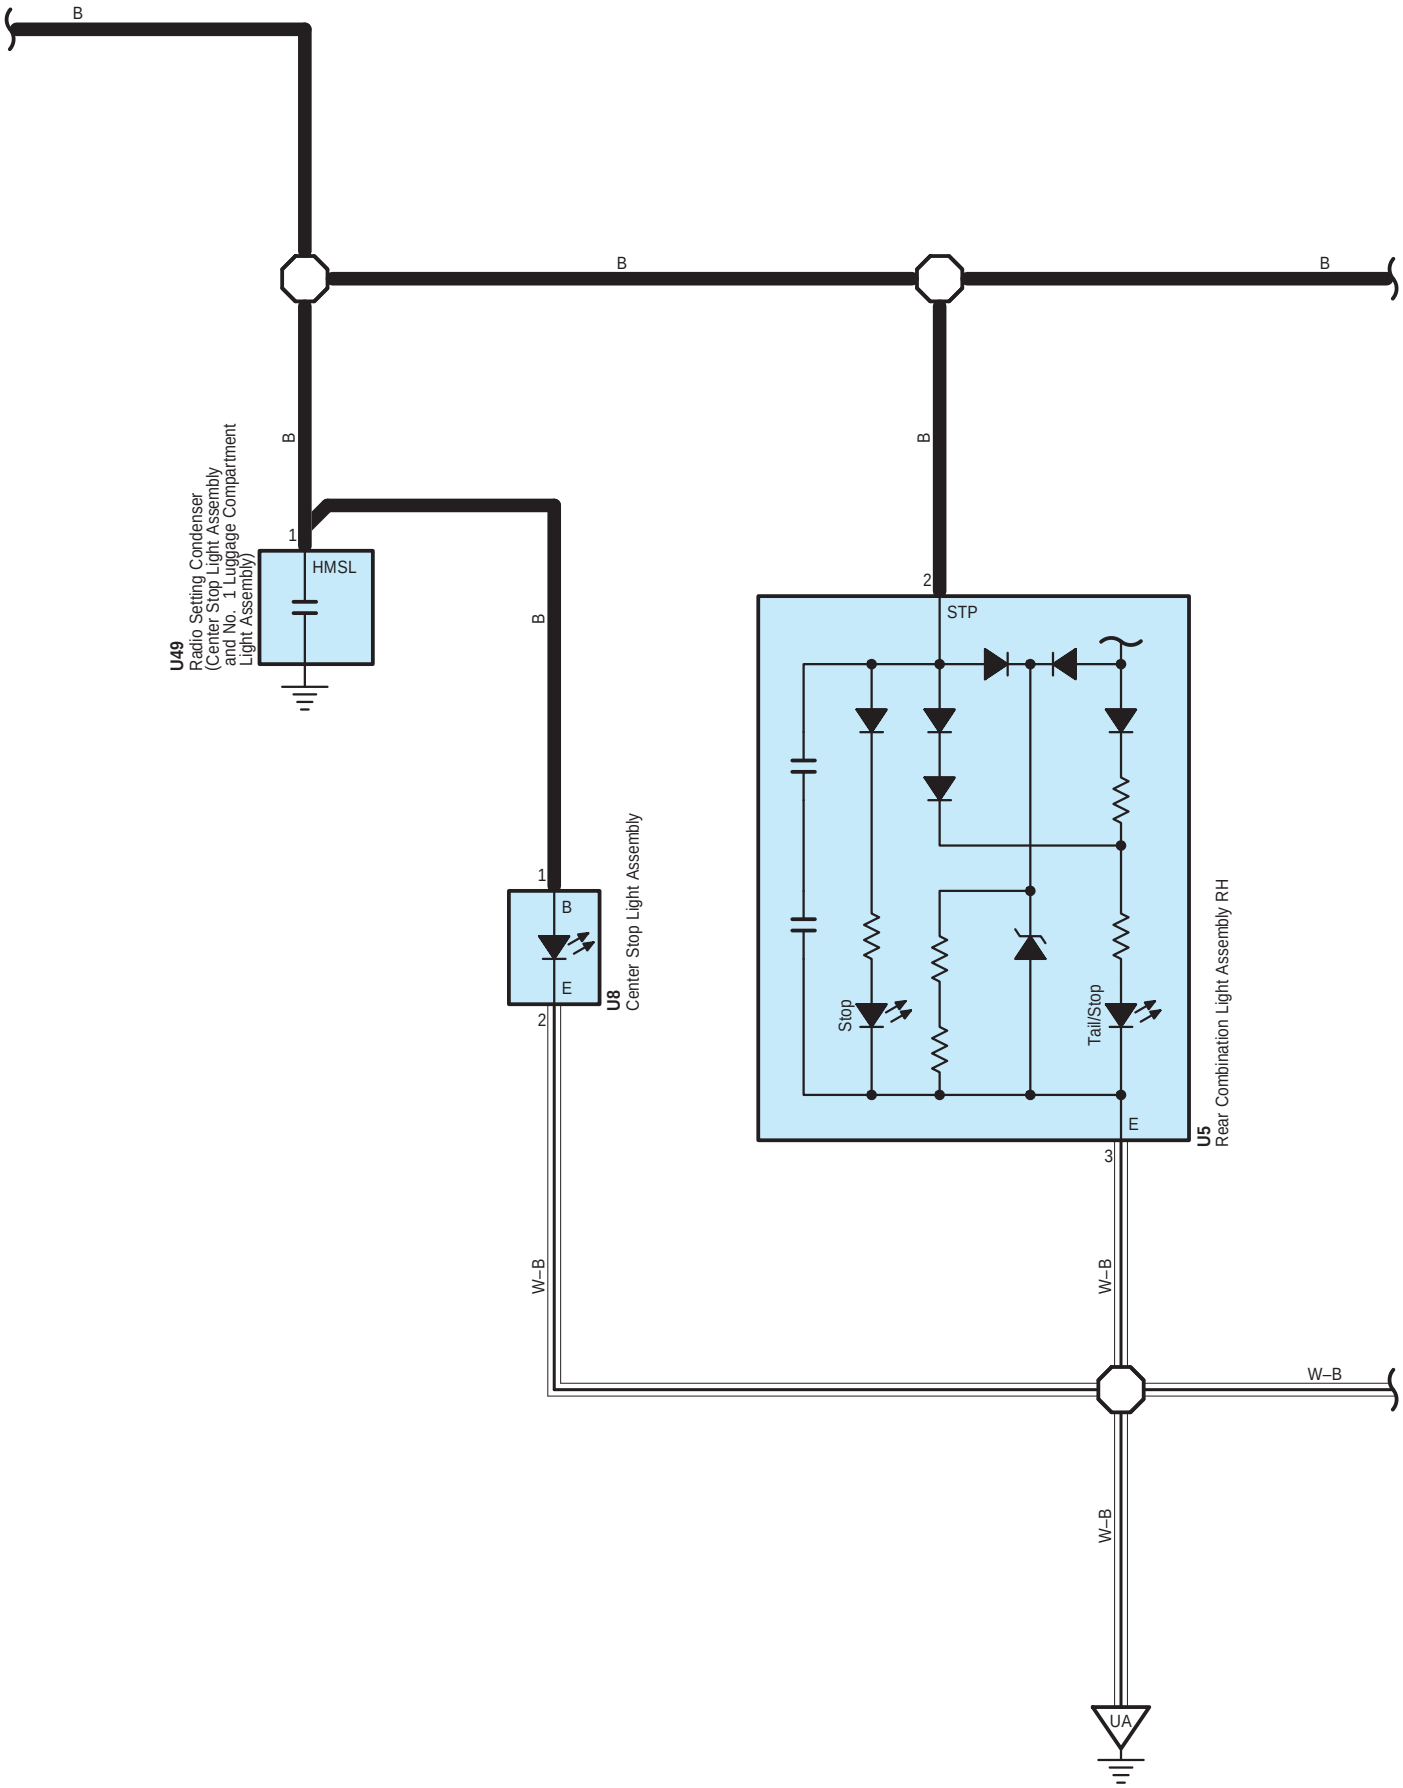
B
B
B
B
B
B
1
HMSL
U49
Radio Setting Condenser
(Center Stop Light Assembly
and No. 1 Luggage Compartment
Light Assembly)
1
B
E
2
U8
Center Stop Light Assembly
2
STP
Stop
Tail/Stop
E
3
U5
Rear Combination Light Assembly RH
W–B
W–B
W–B
W–B
UA

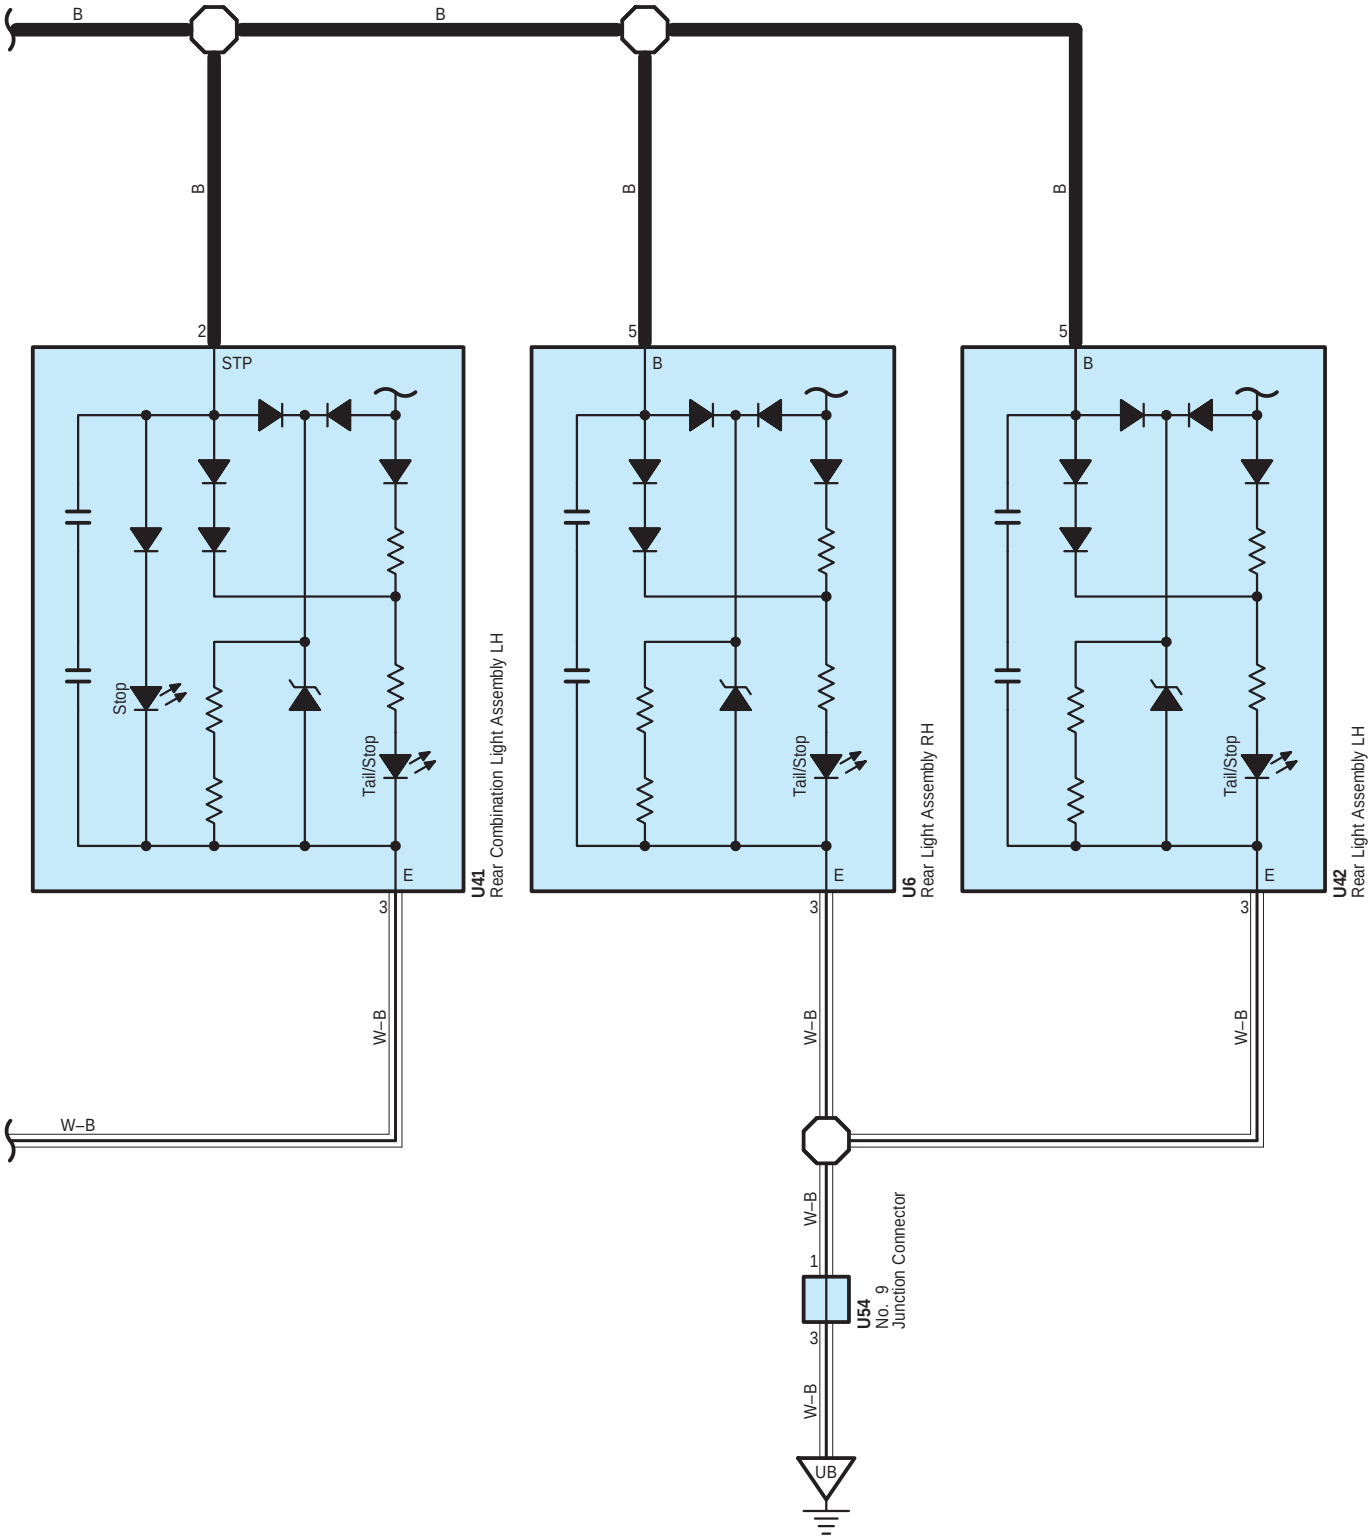
B
B
B
B
B
2
5
5
STP
B
B
Stop
Tail/Stop
Tail/Stop
Tail/Stop
E
E
E
U41
Rear Combination Light Assembly LH
U6
Rear Light Assembly RH
U42
Rear Light Assembly LH
3
3
3
W–B
W–B
W–B
W–B
W–B
1
3
U54
No. 9
Junction Connector
W–B
UB

A52
White

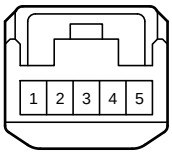

90980-12366

A65
White

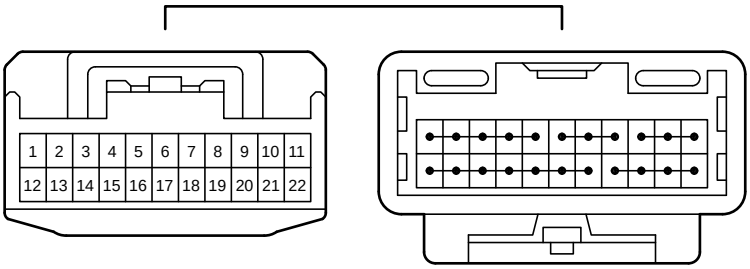

90980-12372

U5
White

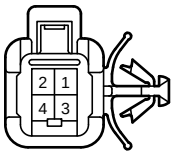

90980-11399

U6
White

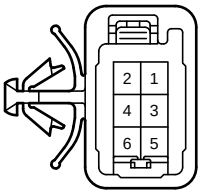

90980-11587

U8
White



90980-11918

U41
White

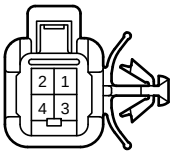

90980-11399

U42
White

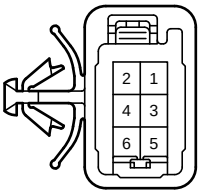

90980-11587

U49
Black



U54
Black

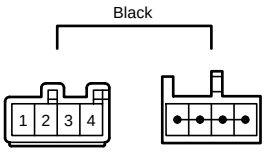

90980-11398

1B



2A
Black



82660-30C00

2B
Black



82660-30D50

2D
White

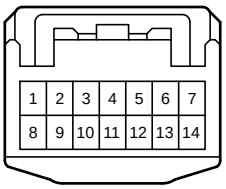

90980-12370

2F
White

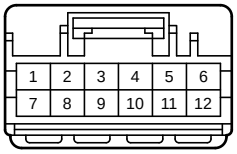

90980-12A56

2G
White

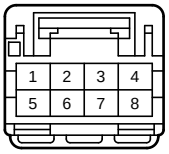

90980-12A54

AU1
White

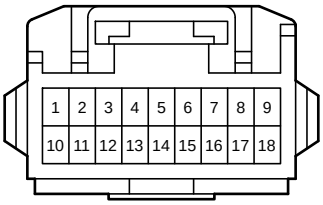

82824-53070

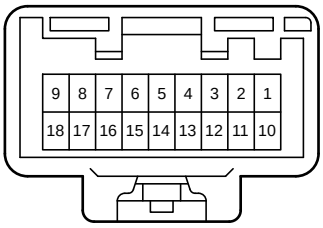

82824-53060