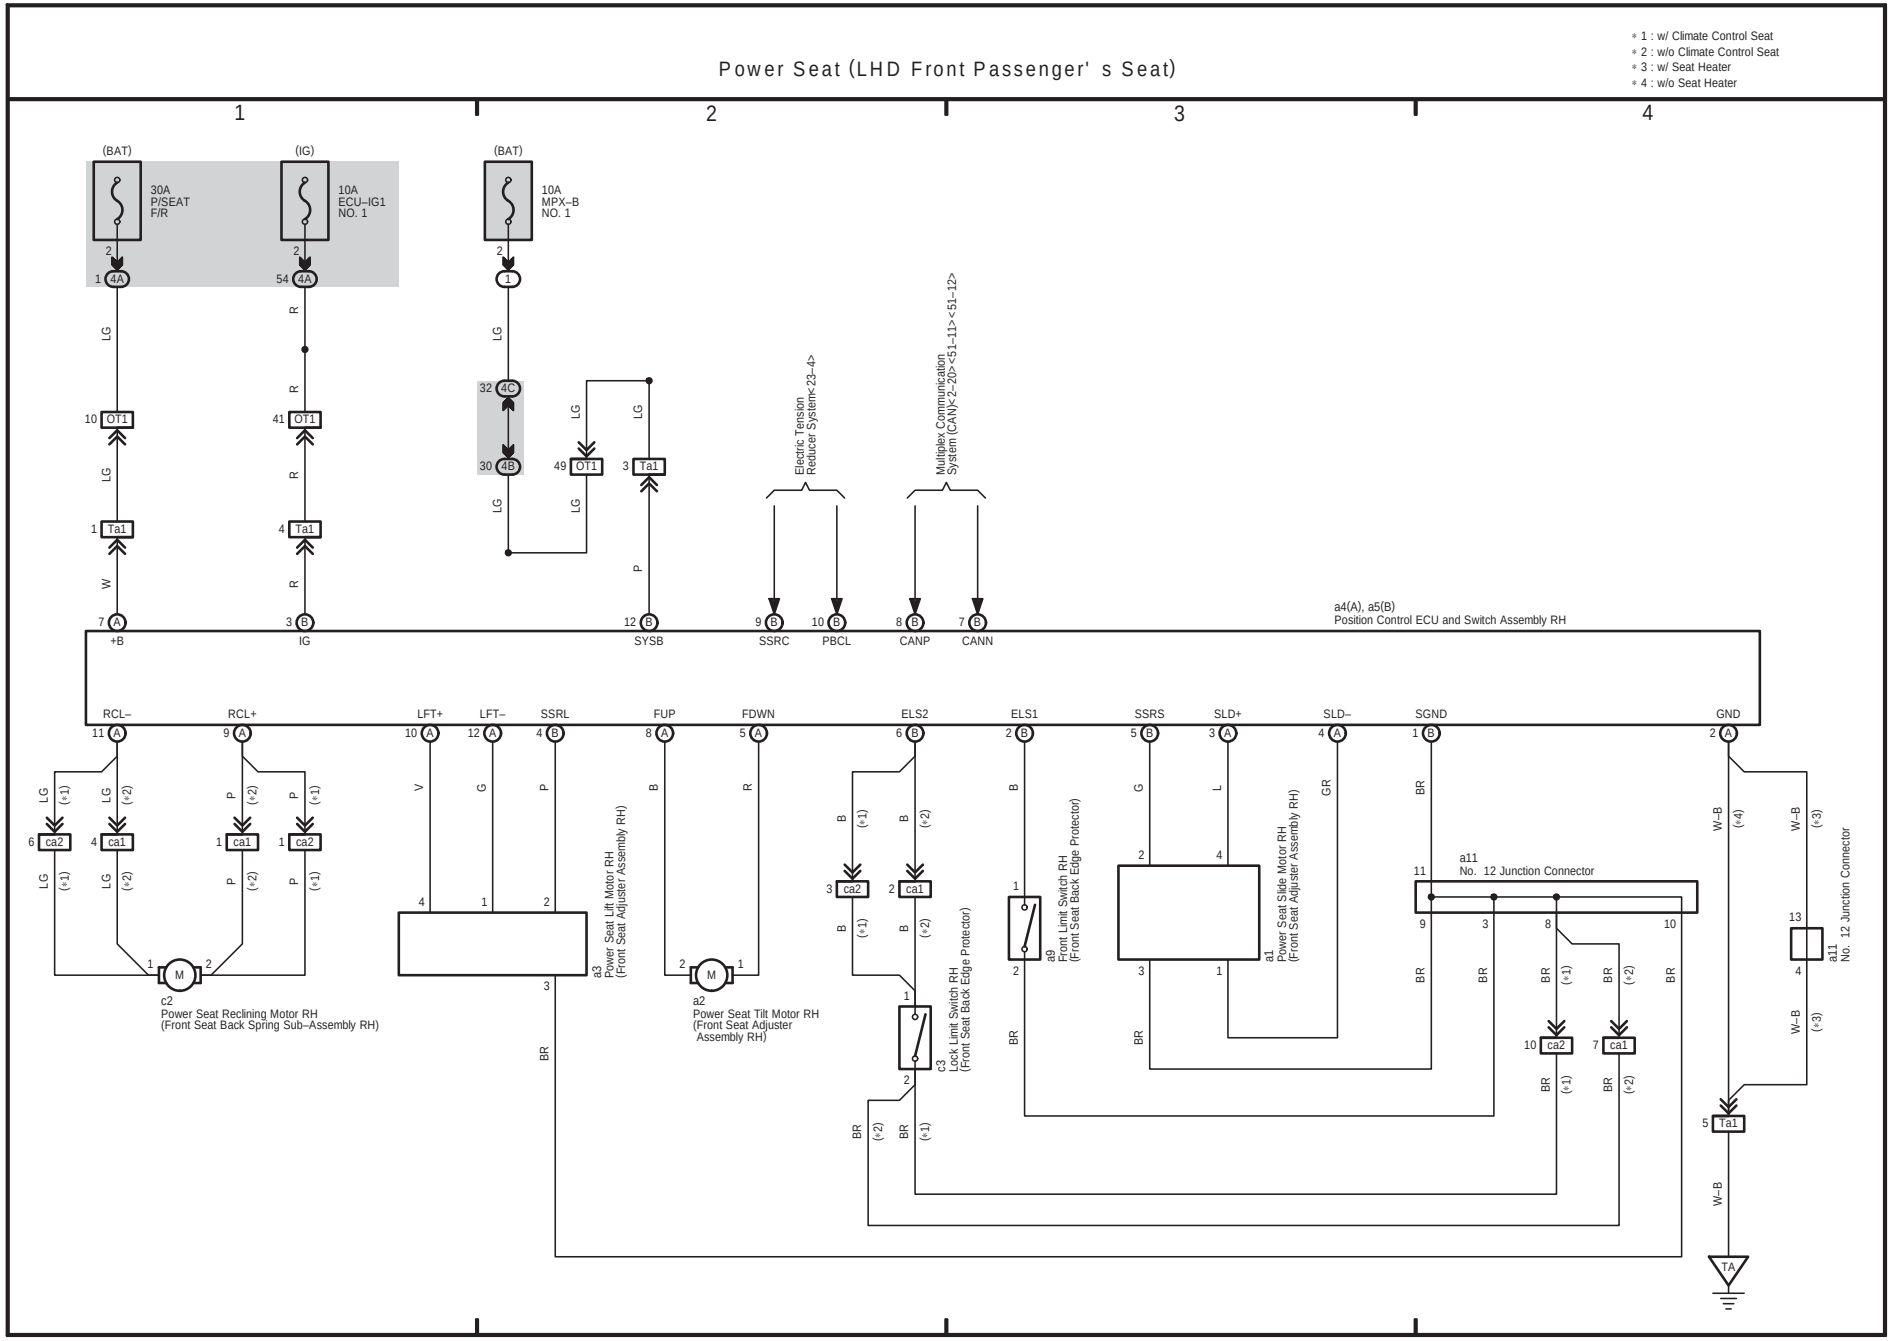
Power Seat (LHD Front Passenger' s Seat)
* 1 : w/ Climate Control Seat
* 2 : w/o Climate Control Seat
* 3 : w/ Seat Heater
* 4 : w/o Seat Heater
1
2
3
4
(BAT)
30A
P/SEAT
F/R
(IG)
10A
ECU–IG1
NO. 1
(BAT)
10A
MPX–B
NO. 1
Electric Tension Reducer System<23–4>
Multiplex Communication System (CAN)<2–20><51–11><51–12>
a4(A), a5(B)
Position Control ECU and Switch Assembly RH
+B
IG
SYSB
SSRC
PBCL
CANP
CANN
RCL–
RCL+
LFT+
LFT–
SSRL
FUP
FDWN
ELS2
ELS1
SSRS
SLD+
SLD–
SGND
GND
c2
Power Seat Reclining Motor RH
(Front Seat Back Spring Sub–Assembly RH)
a3
Power Seat Lift Motor RH
(Front Seat Adjuster Assembly RH)
a2
Power Seat Tilt Motor RH
(Front Seat Adjuster
Assembly RH)
c3
Lock Limit Switch RH
(Front Seat Back Edge Protector)
a9
Front Limit Switch RH
(Front Seat Back Edge Protector)
a1
Power Seat Slide Motor RH
(Front Seat Adjuster Assembly RH)
a11
No. 12 Junction Connector
a11
No. 12 Junction Connector
TA