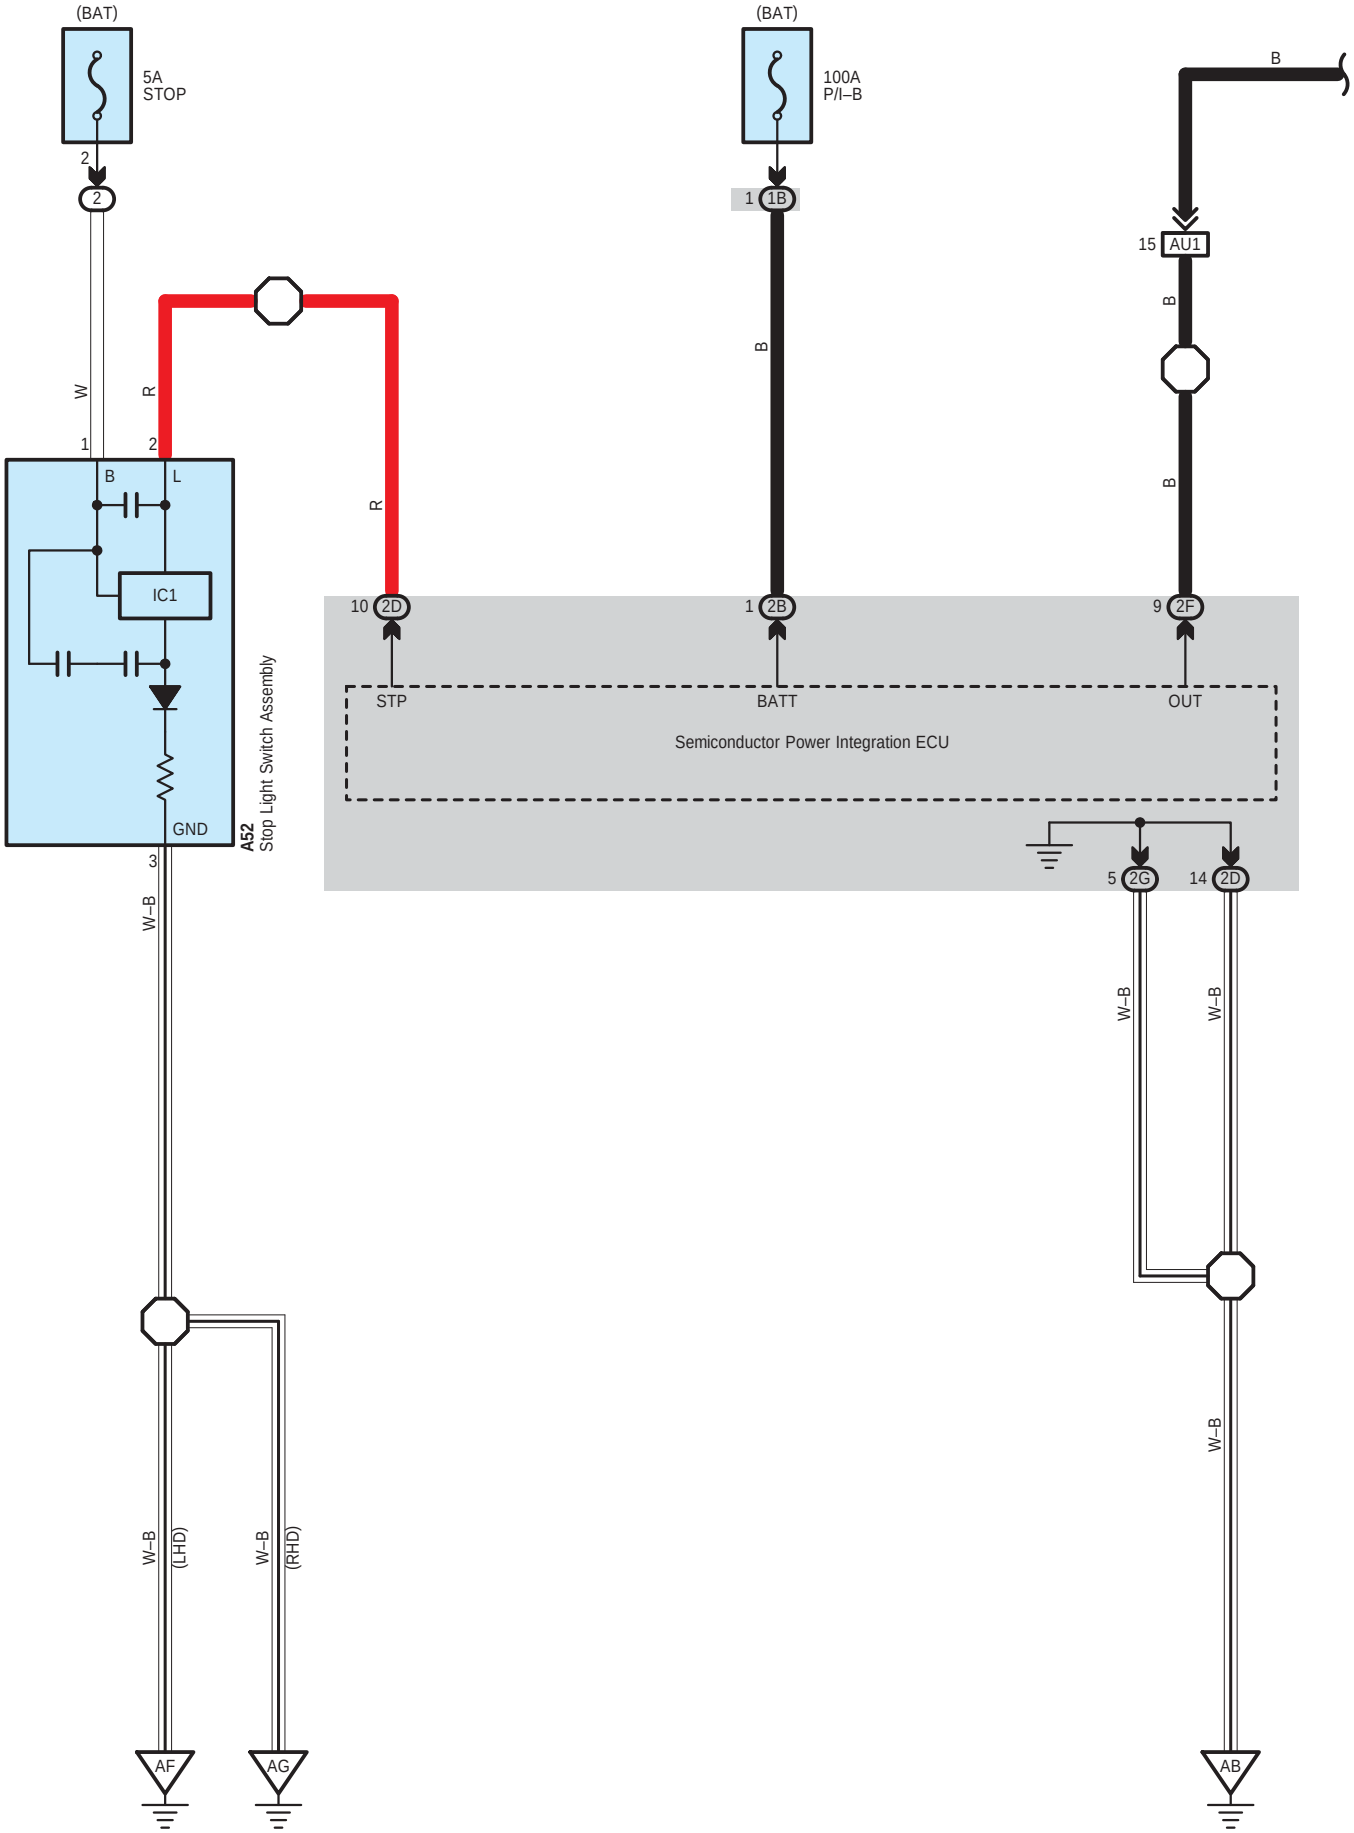
(BAT)
5A
STOP
2
2
W
R
1
2
B
L
IC1
GND
3
A52
Stop Light Switch Assembly
W–B
W–B
(LHD)
W–B
(RHD)
AF
AG
(BAT)
100A
P/I–B
1
1B
B
B
15
AU1
B
B
10
2D
1
2B
9
2F
STP
BATT
OUT
Semiconductor Power Integration ECU
5
2G
14
2D
W–B
W–B
W–B
AB

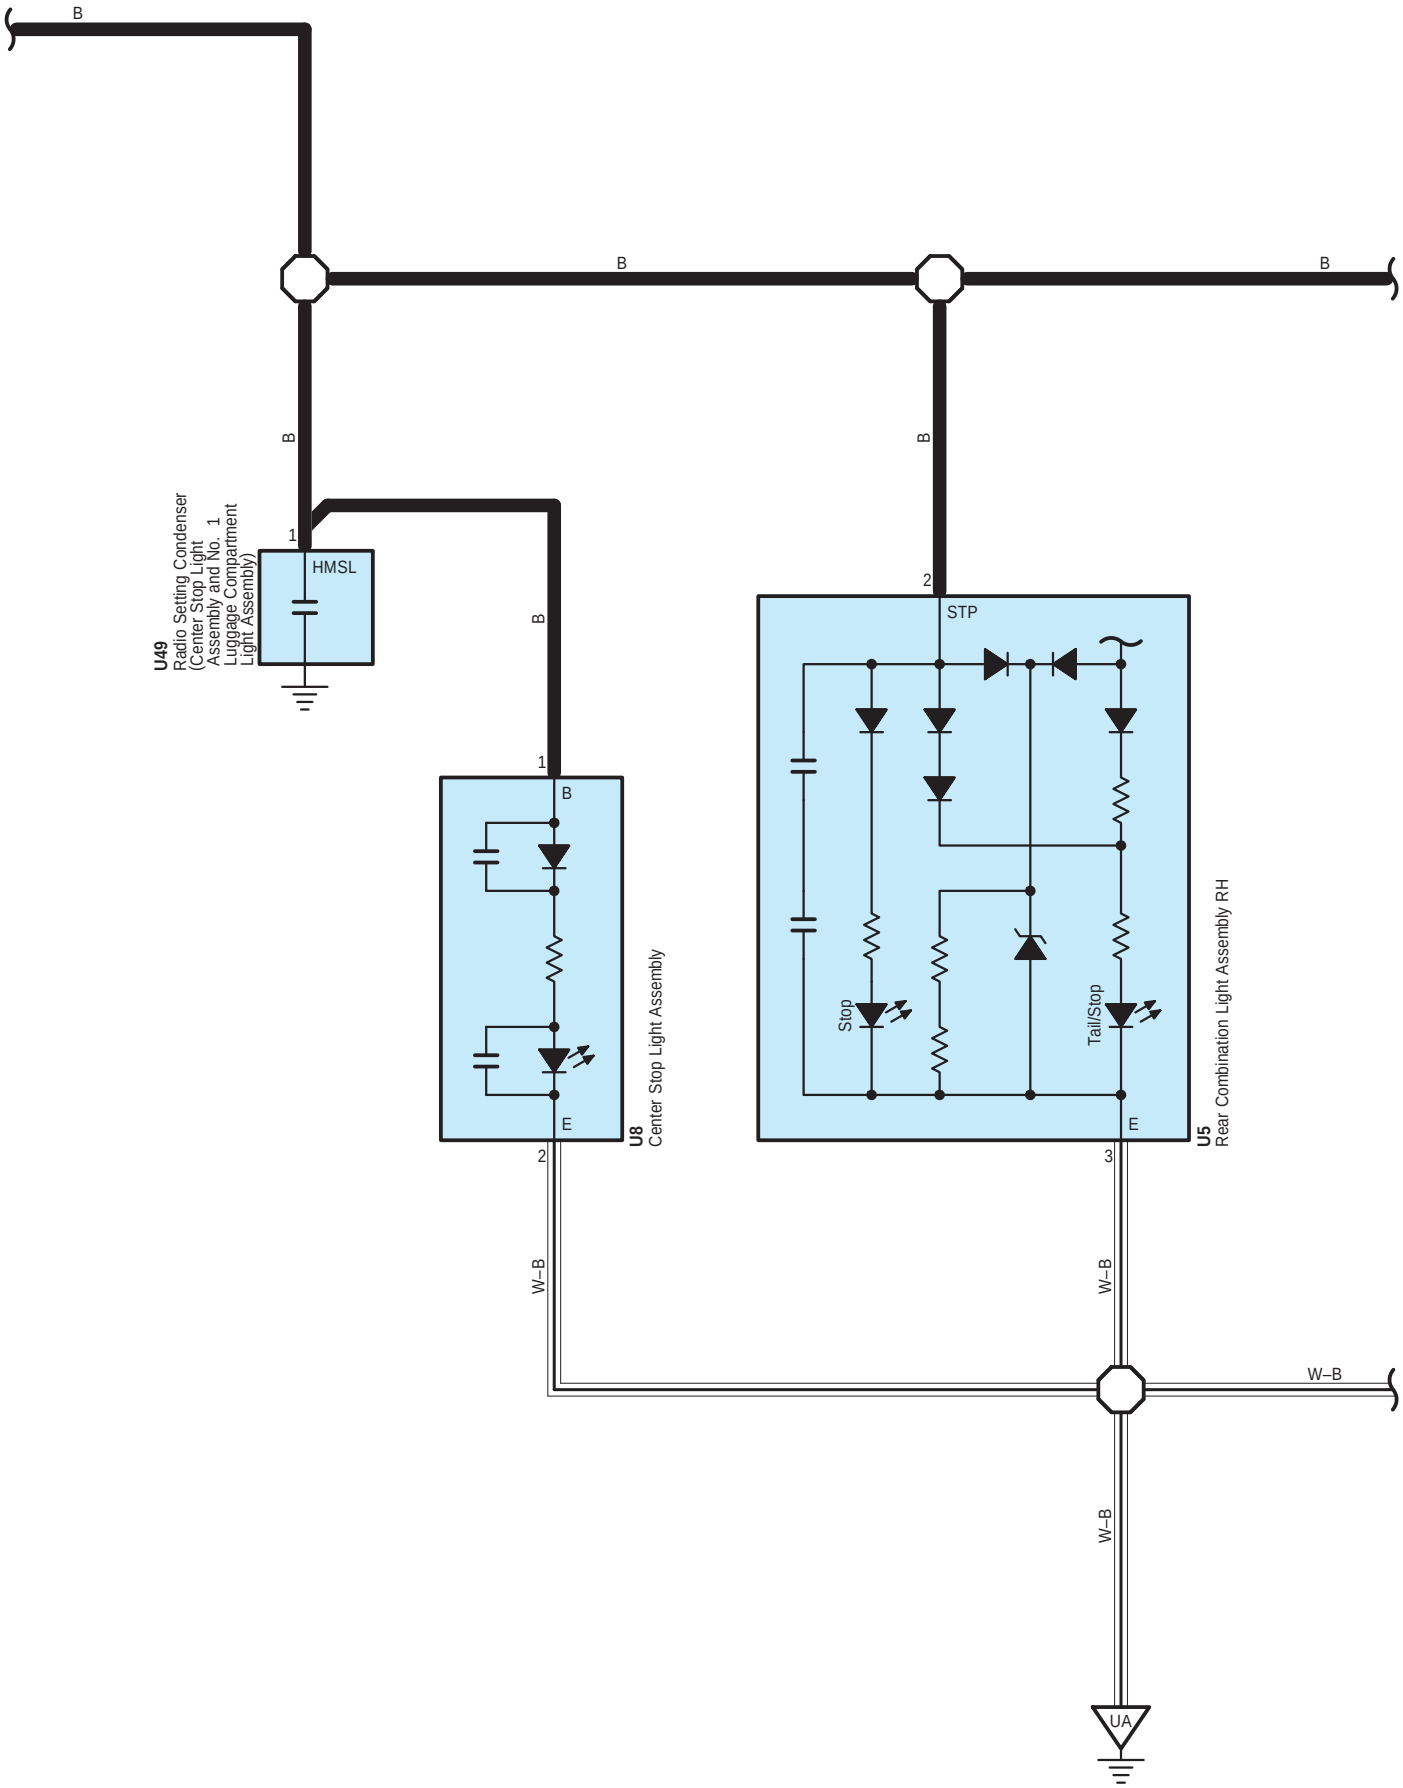
B
B
B
B
B
B
1
HMSL
U49
Radio Setting Condenser
(Center Stop Light
Assembly and No. 1
Luggage Compartment
Light Assembly)
1
B
E
2
U8
Center Stop Light Assembly
2
STP
Stop
Tail/Stop
E
3
U5
Rear Combination Light Assembly RH
W–B
W–B
W–B
W–B
UA

＊1 : w/o Rear Fog Light

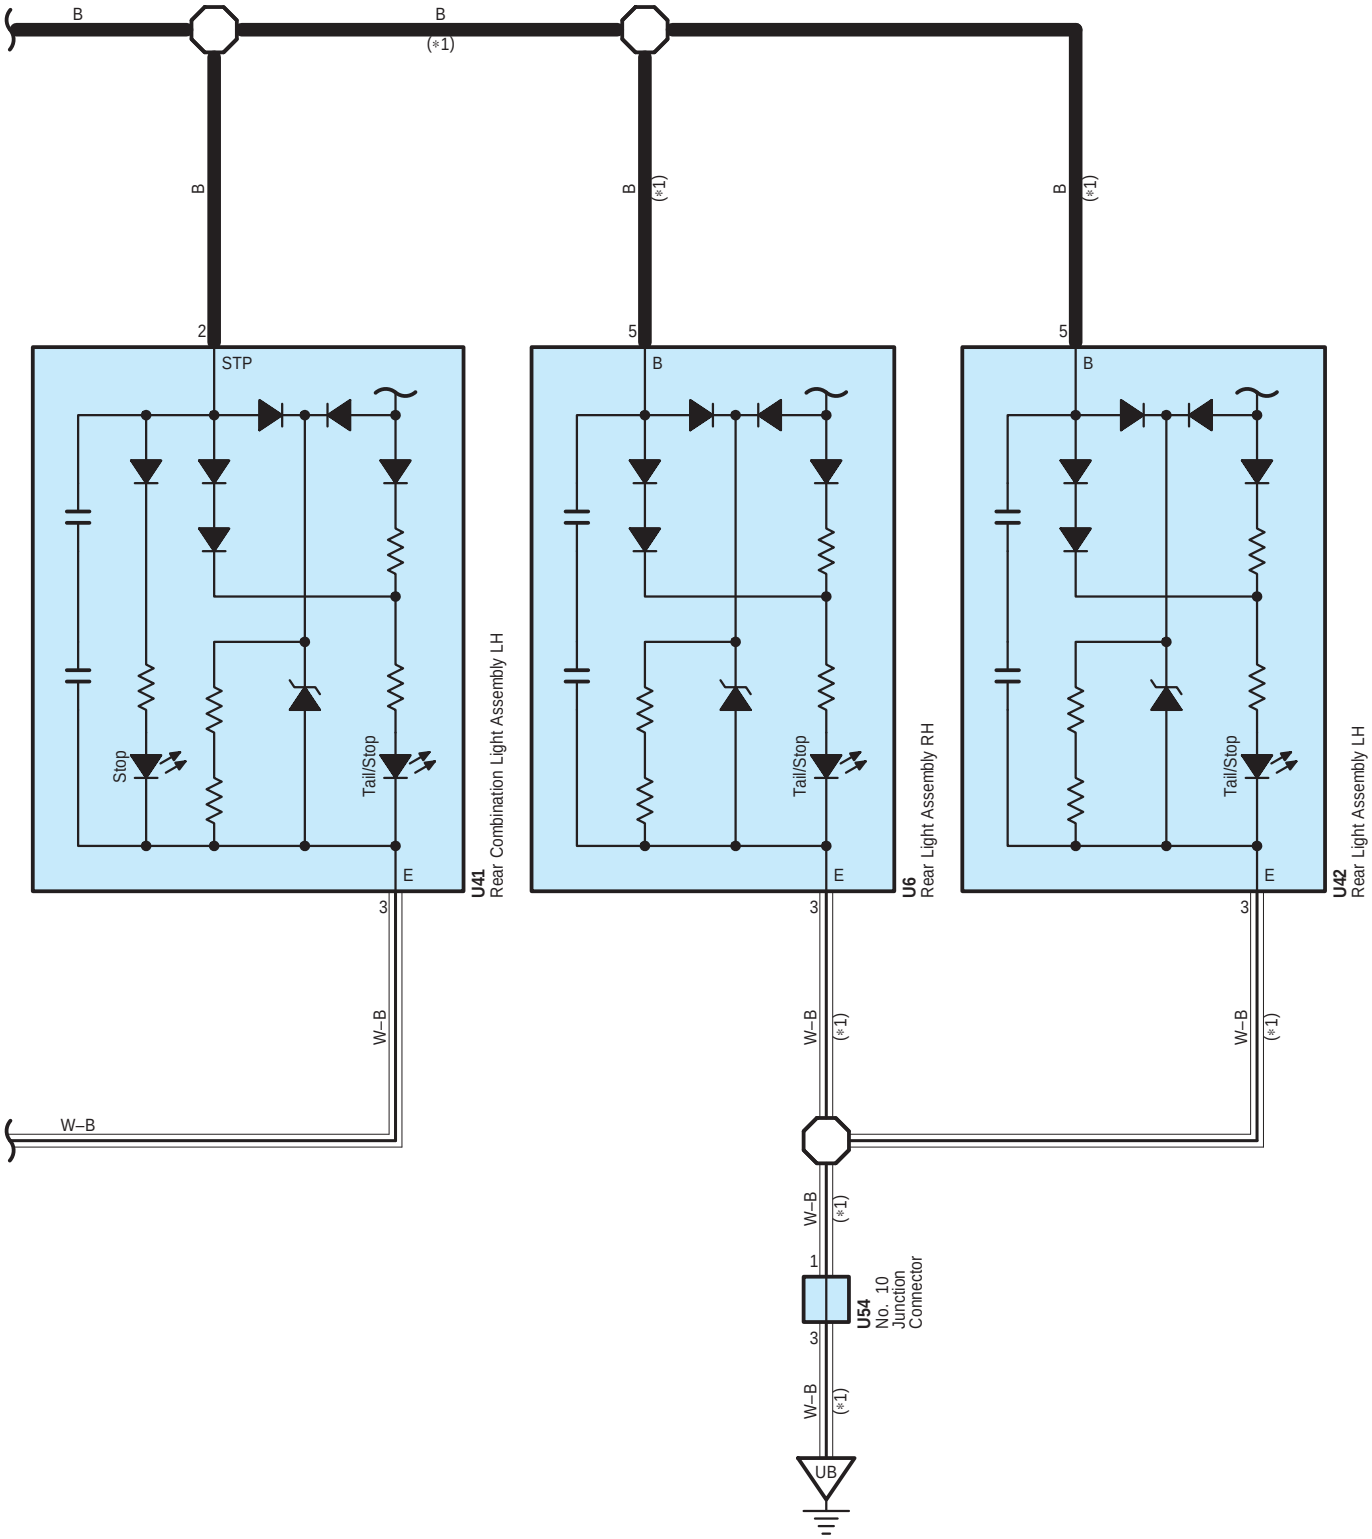

Stop Light

A52
White

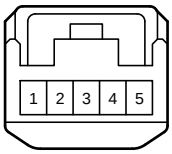

90980-12366

U5
White

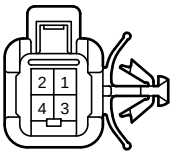

90980-11399

U6
White

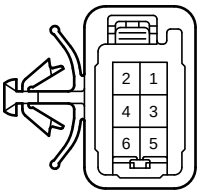

90980-11587

U8
White



90980-11918

U41
White

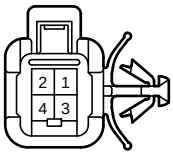

90980-11399

U42
White

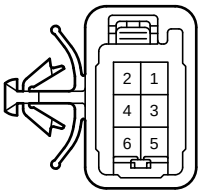

90980-11587

U49
Black



U54
Black

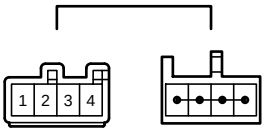

90980-11398

1B
White



2B
Black



82660-30D50

2D
White

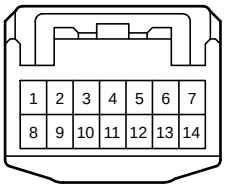

90980-12370

2F
White

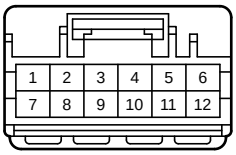

90980-12A56

2G
White

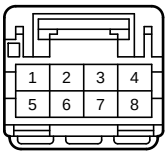

90980-12A54

AU1
White

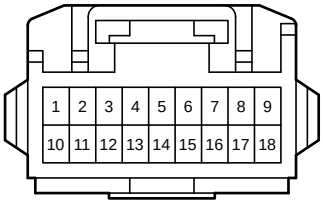

82824-53070

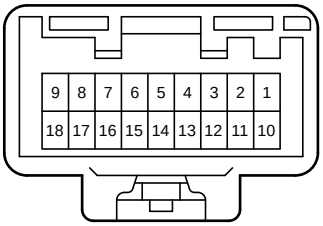

82824-53060