(Cont. next page)

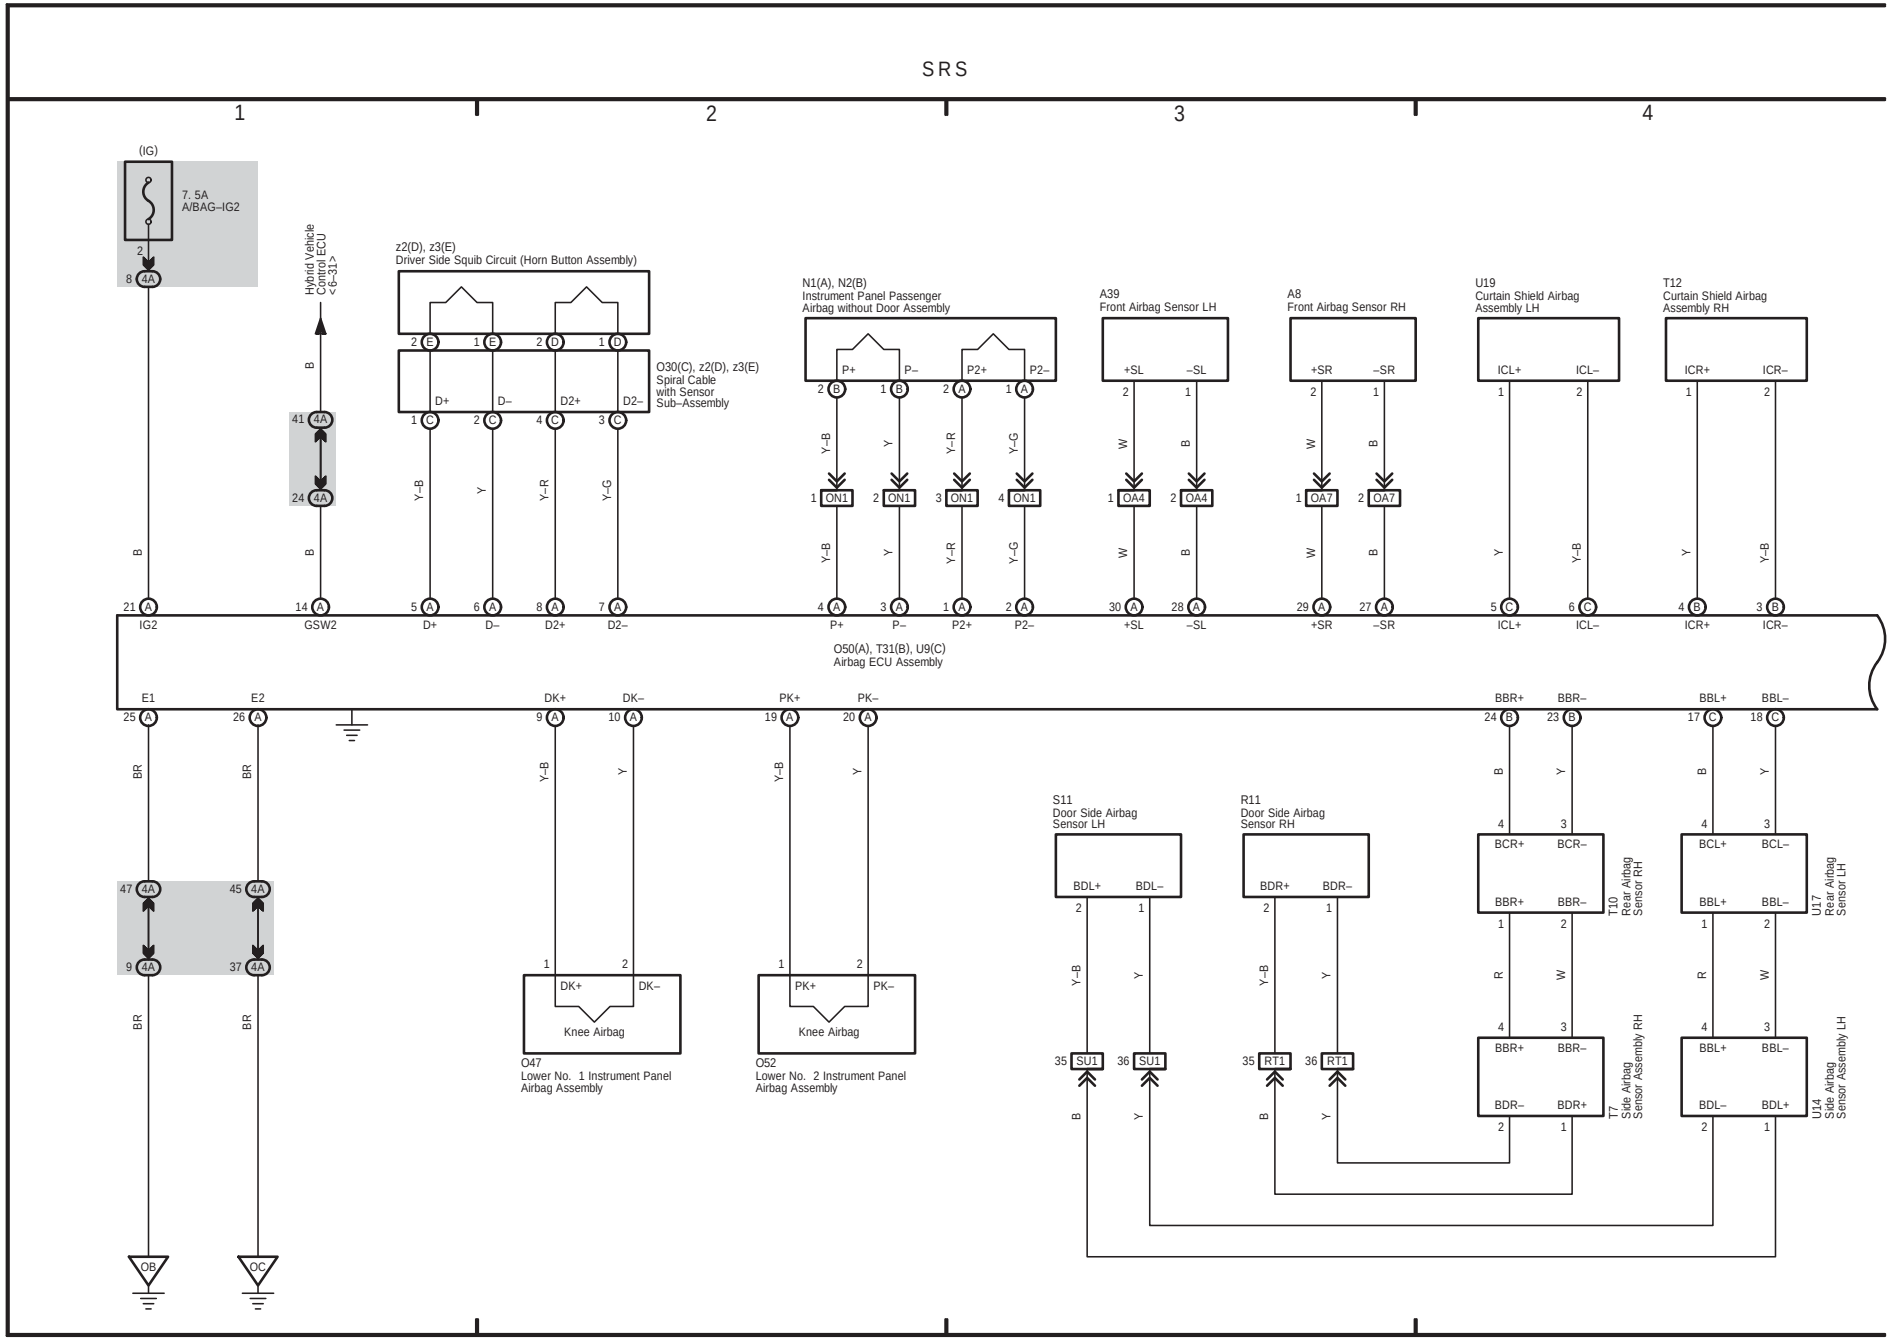

(Cont. next page)

SRS

* 1 : w/ PASSENGER AIRBAG ON/OFF Indicator
* 2 : w/ Airbag Cut Off Switch
* 3 : w/ Rear Pretensioner

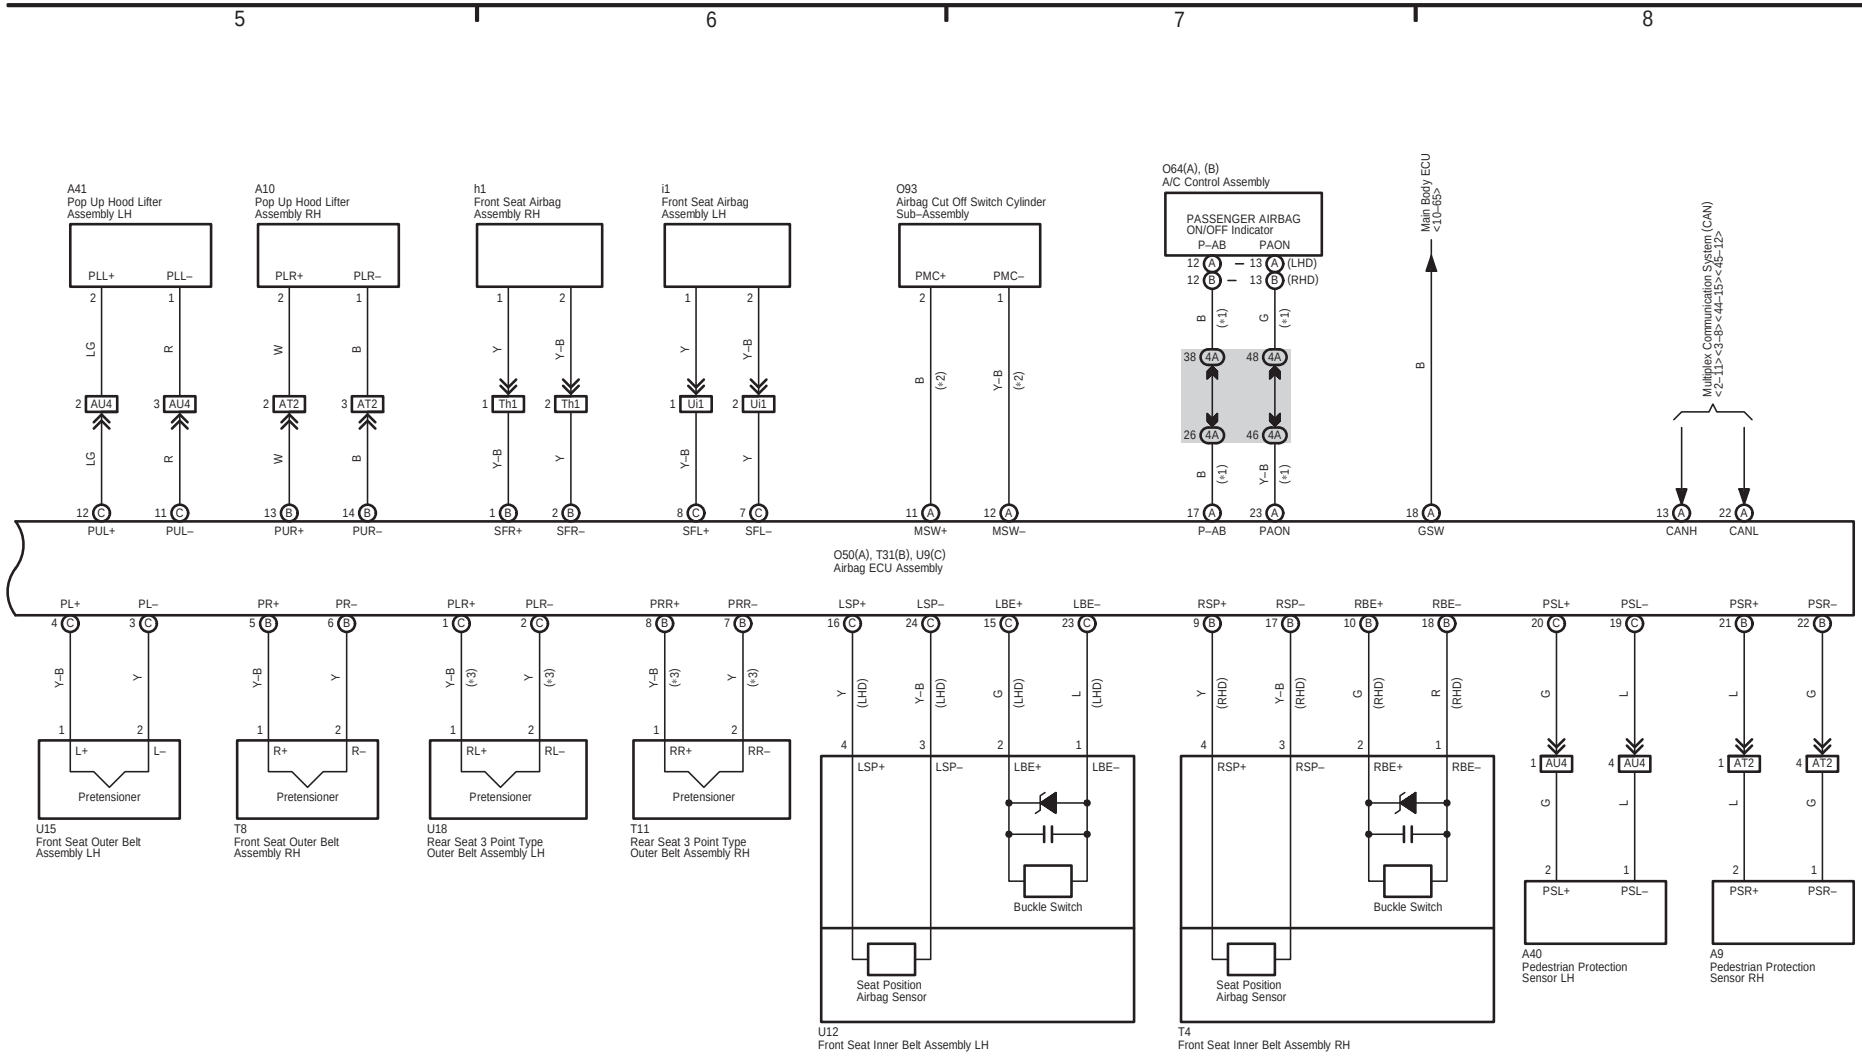

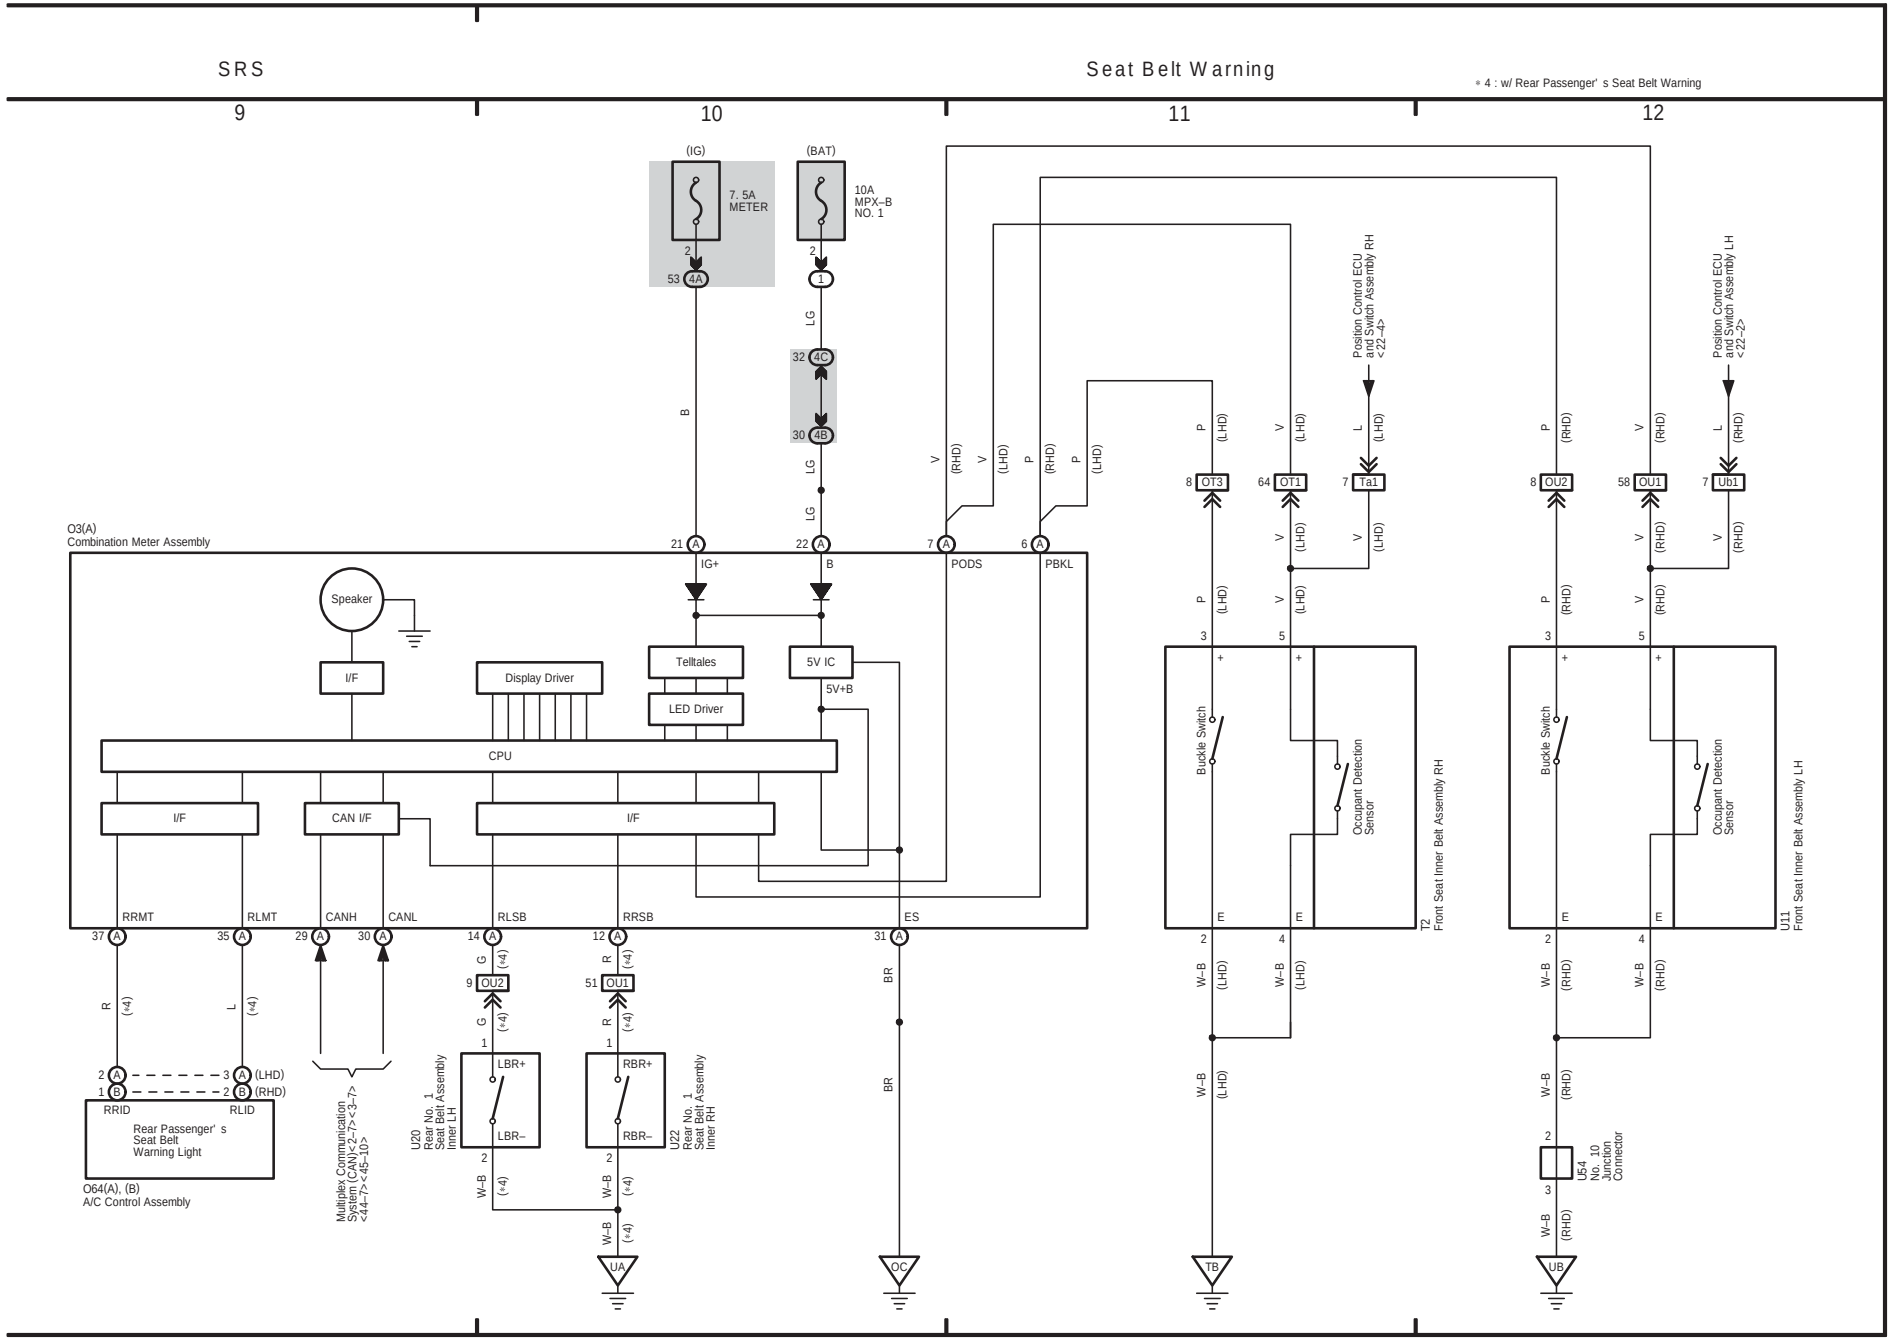
SRS
Seat Belt Warning
* 4 : w/ Rear Passenger' s Seat Belt Warning
9
10
11
12
(IG)
(BAT)
7. 5A METER
10A MPX–B NO. 1
O3(A) Combination Meter Assembly
Speaker
I/F
Display Driver
Telltales
LED Driver
5V IC
5V+B
CPU
CAN I/F
IG+
B
PODS
PBKL
RRMT
RLMT
CANH
CANL
RLSB
RRSB
ES
Position Control ECU and Switch Assembly RH <22–4>
Position Control ECU and Switch Assembly LH <22–2>
Buckle Switch
Occupant Detection Sensor
T2 Front Seat Inner Belt Assembly RH
U11 Front Seat Inner Belt Assembly LH
Rear Passenger' s Seat Belt Warning Light
O64(A), (B) A/C Control Assembly
Multiplex Communication System (CAN)<2–7><3–7><44–7><45–10>
U20 Rear No. 1 Seat Belt Assembly Inner LH
U22 Rear No. 1 Seat Belt Assembly Inner RH
LBR+
LBR–
RBR+
RBR–
U54 No. 10 Junction Connector
UA
OC
TB
UB