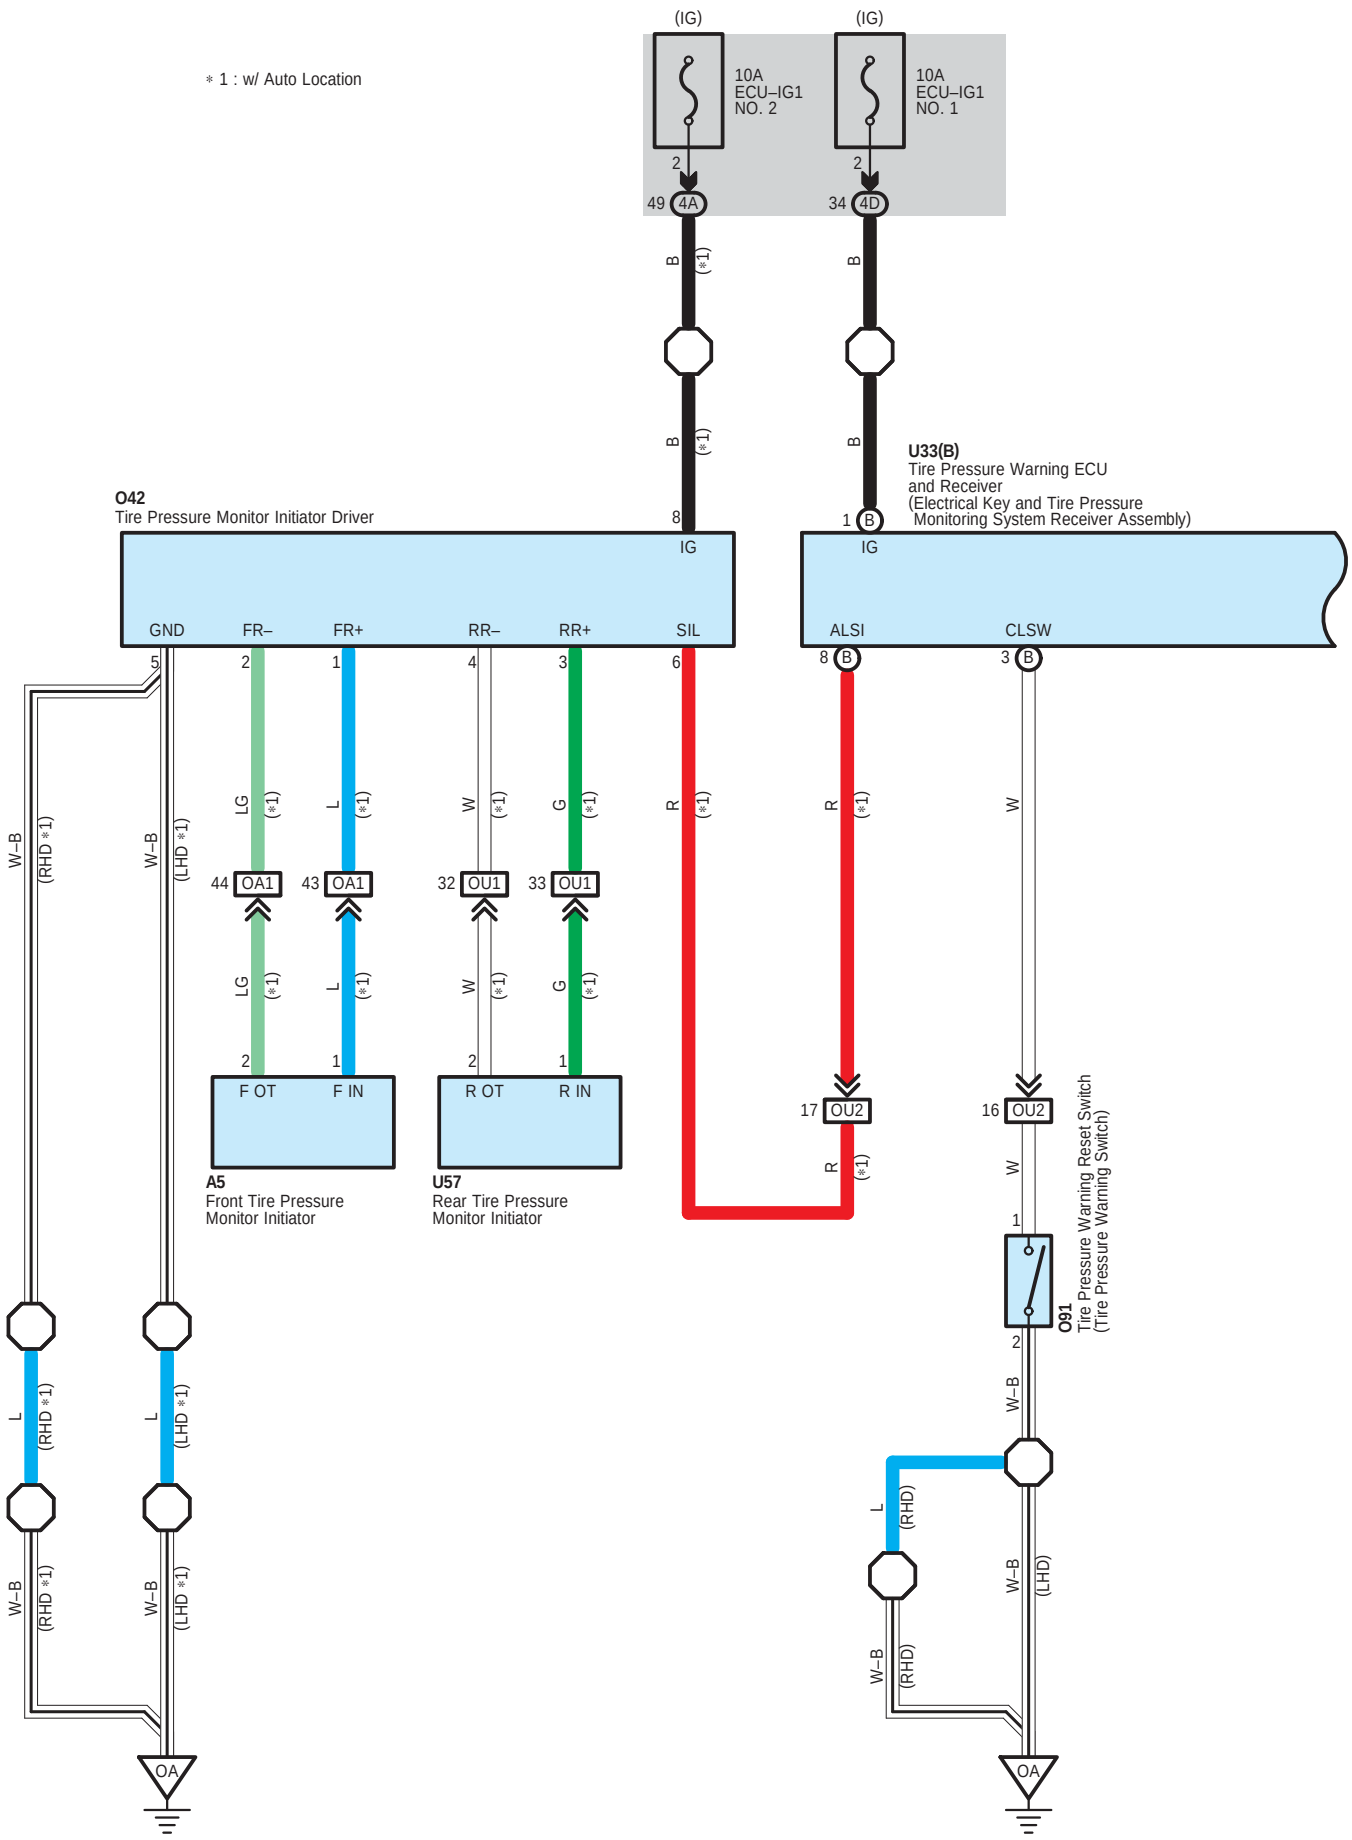
∗ 1 : w/ Auto Location
(IG)
10A
ECU–IG1
NO. 2
(IG)
10A
ECU–IG1
NO. 1
49 4A
34 4D
U33(B)
Tire Pressure Warning ECU
and Receiver
(Electrical Key and Tire Pressure
Monitoring System Receiver Assembly)
O42
Tire Pressure Monitor Initiator Driver
IG
GND
FR–
FR+
RR–
RR+
SIL
ALSI
CLSW
44 OA1
43 OA1
32 OU1
33 OU1
F OT
F IN
R OT
R IN
A5
Front Tire Pressure
Monitor Initiator
U57
Rear Tire Pressure
Monitor Initiator
17 OU2
16 OU2
O91
Tire Pressure Warning Reset Switch
(Tire Pressure Warning Switch)
(RHD ∗1)
(LHD ∗1)
(RHD)
(LHD)
OA

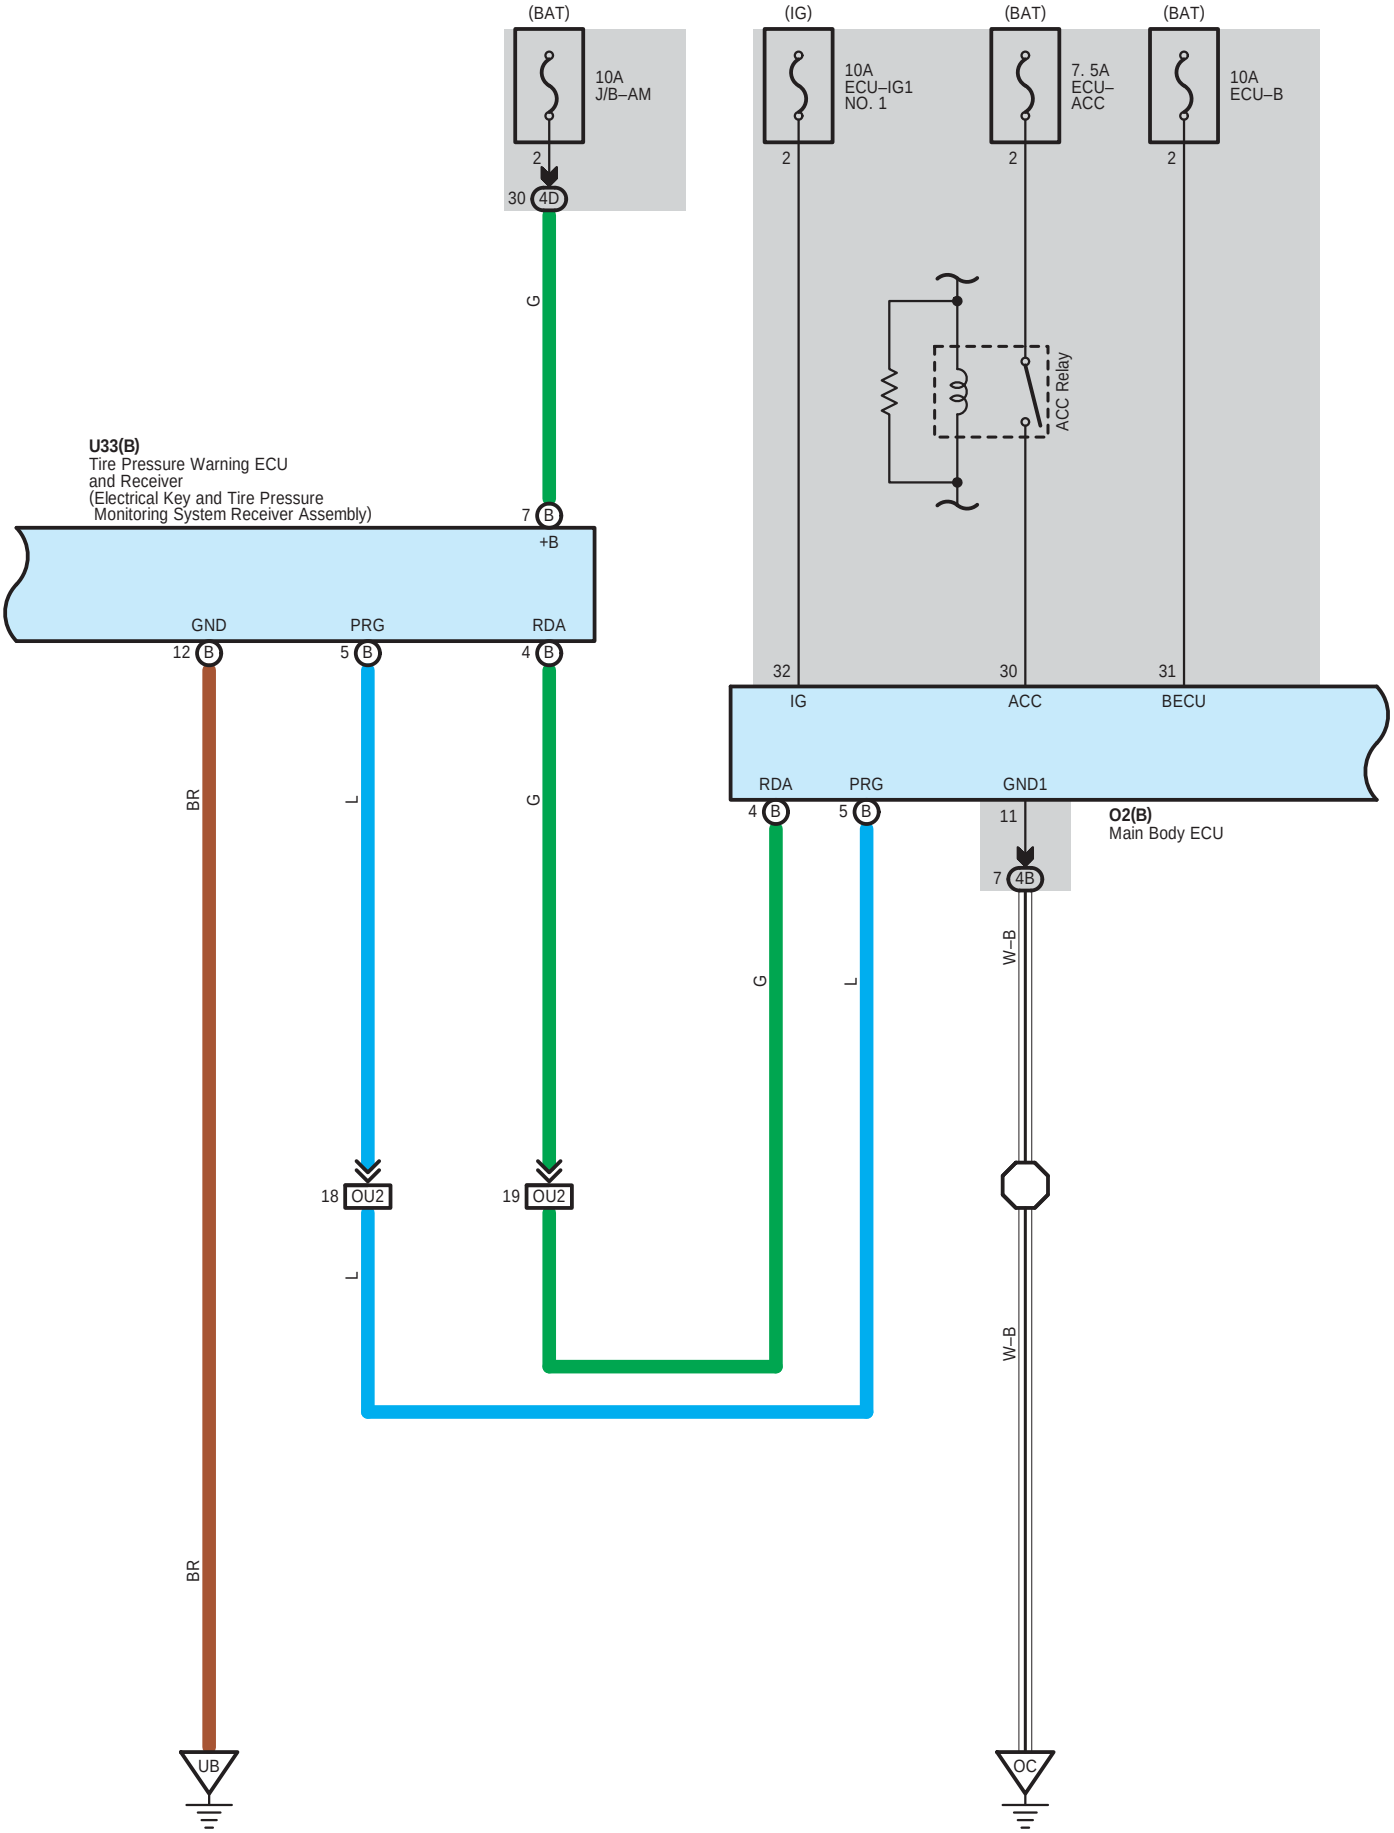
(BAT)
10A
J/B–AM
2
30 4D
G
(IG)
10A
ECU–IG1
NO. 1
2
(BAT)
7. 5A
ECU–
ACC
2
(BAT)
10A
ECU–B
2
ACC Relay
U33(B)
Tire Pressure Warning ECU
and Receiver
(Electrical Key and Tire Pressure
Monitoring System Receiver Assembly)
7 B
+B
GND
PRG
RDA
12 B
5 B
4 B
32
IG
30
ACC
31
BECU
RDA
PRG
GND1
4 B
5 B
11
O2(B)
Main Body ECU
7 4B
BR
L
G
G
L
W–B
18 OU2
19 OU2
L
W–B
BR
UB
OC

∗ 2 : Before Nov. 2017 Production
∗ 3 : From Nov. 2017 Production
∗ 4 : Before Oct. 2018 Production
∗ 5 : From Oct. 2018 Production

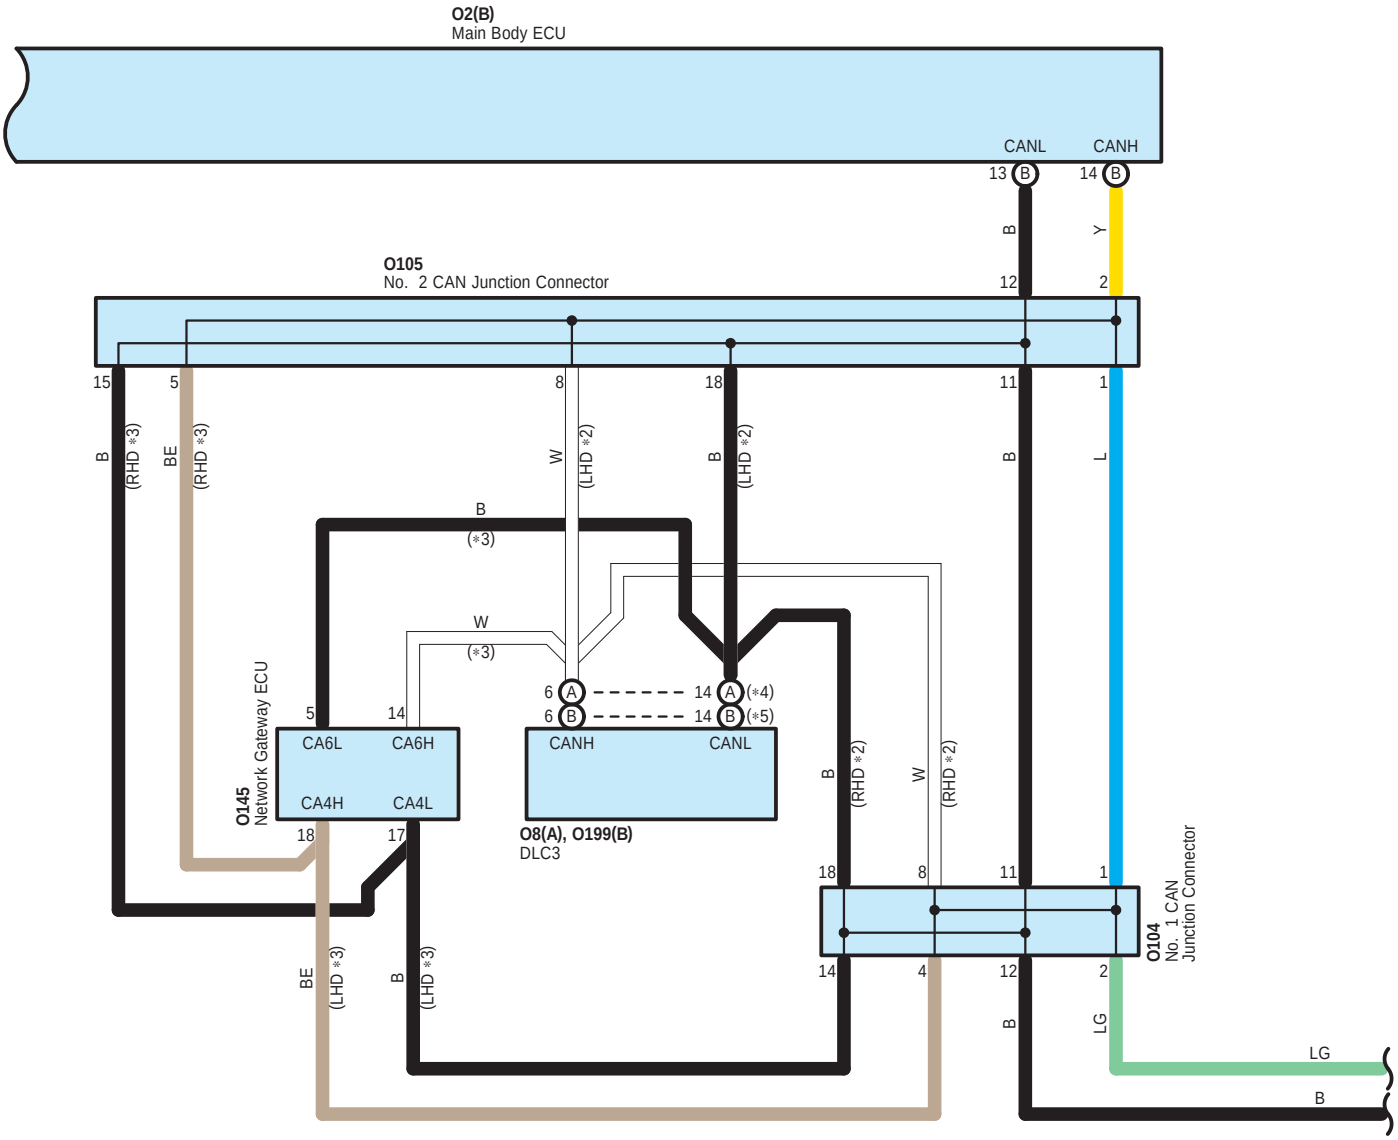

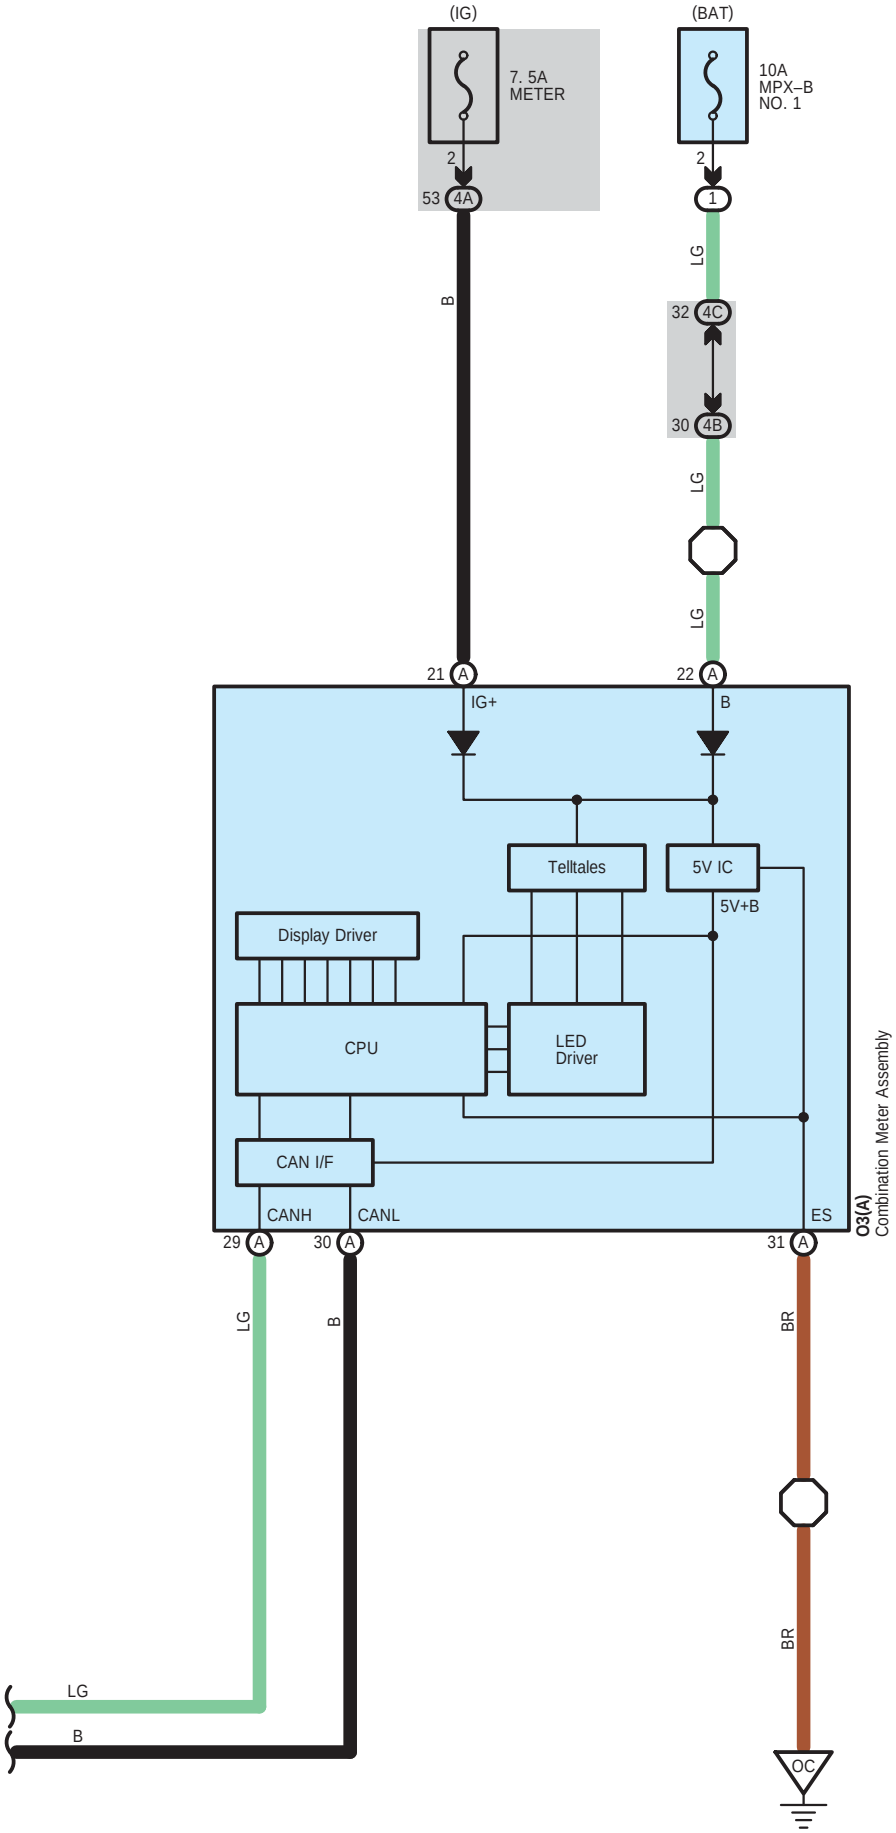
(IG)
7. 5A
METER
2
53 4A
B
(BAT)
10A
MPX–B
NO. 1
2
1
LG
32 4C
30 4B
LG
LG
21 A
22 A
IG+
B
Telltales
5V IC
5V+B
Display Driver
CPU
LED
Driver
CAN I/F
CANH
CANL
ES
O3(A)
Combination Meter Assembly
29 A
30 A
31 A
LG
B
BR
BR
LG
B
OC

A5
Black

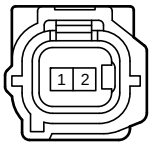

90980-12416

O2
White

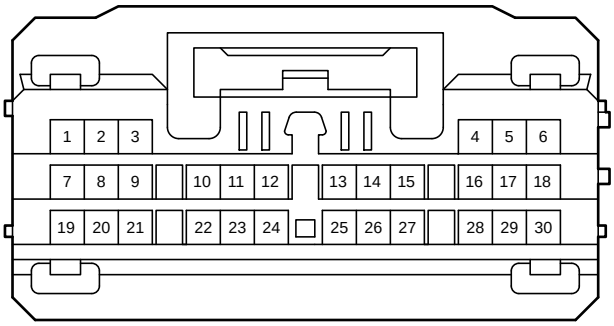

90980-12909

O3
Black

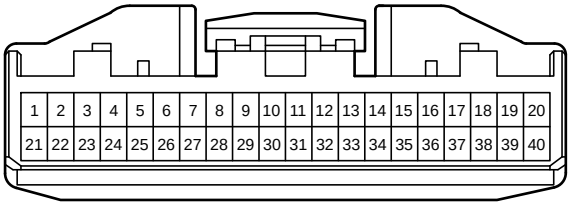

90980-12557

O8
White

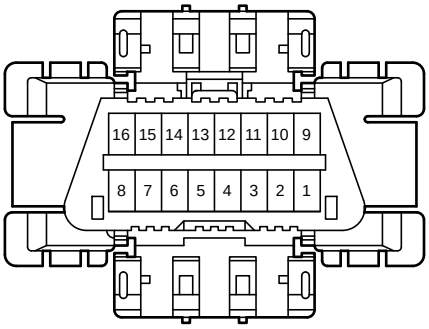

90980-11665

O42
White

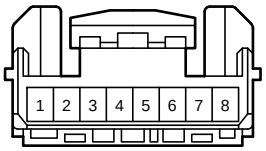

90980-12558

O91
Black



90980-10906

O104
White

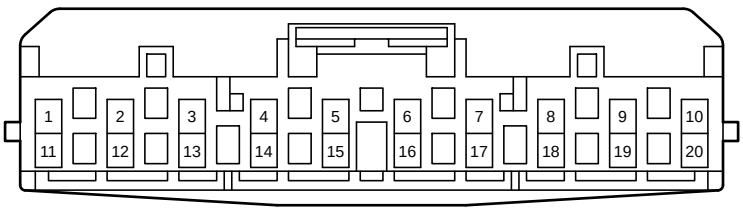

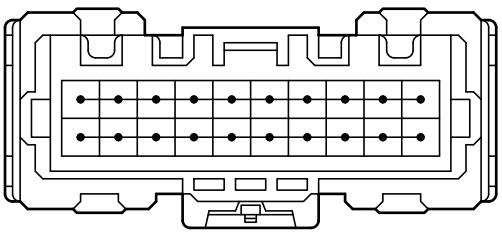

90980-12A58

O105
White

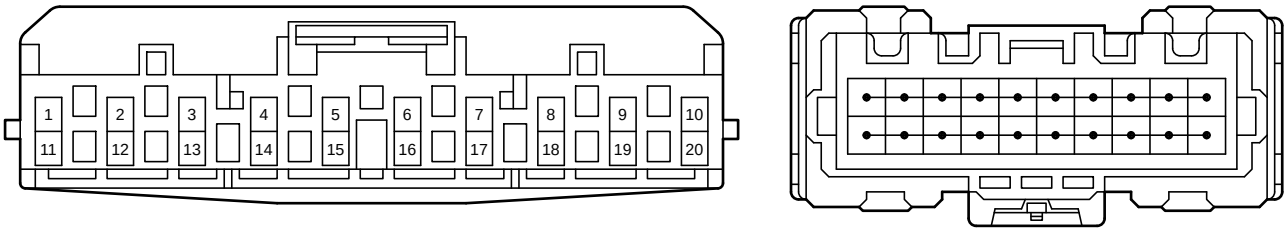

90980-12A58

O145
Black

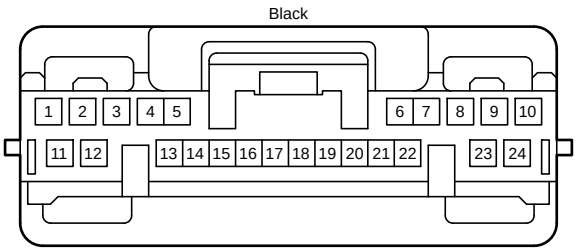

90980-12912

O199
White

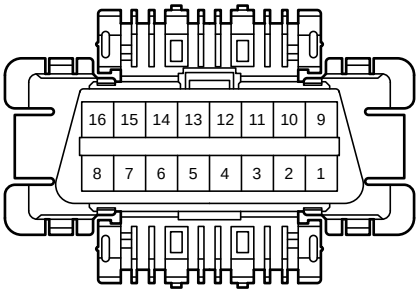

90980-12D97

U33
White

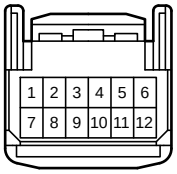

90980-12552

U57
White

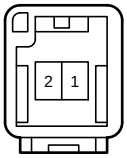

90980-11917

4A
White

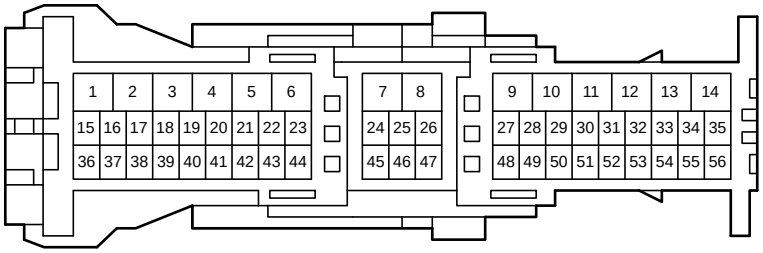

90980-12943

4B
White

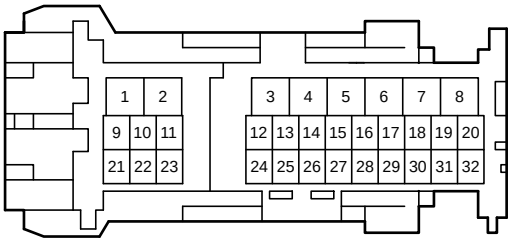

90980-12A48

4C
White

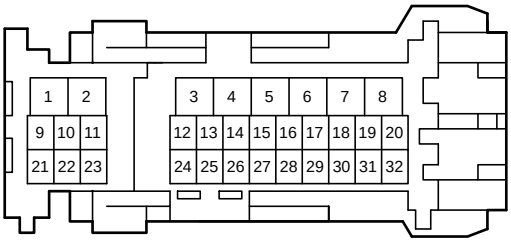

90980-12A47

4D
White

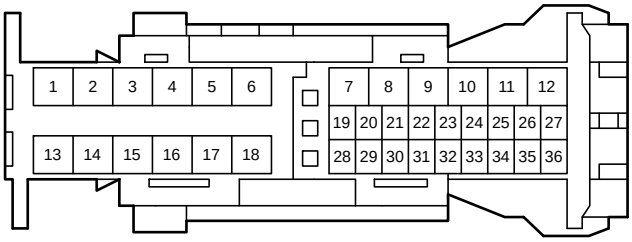

90980-12944

OA1
White

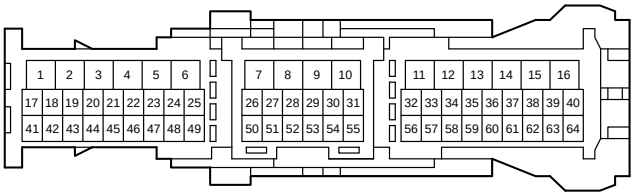

90980-12774

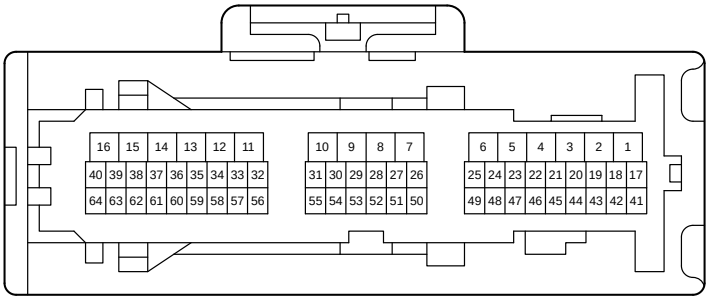

90980-12798

OU1
White

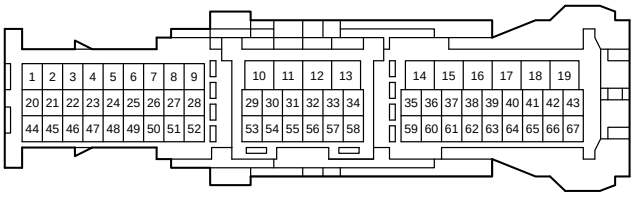

90980-12783

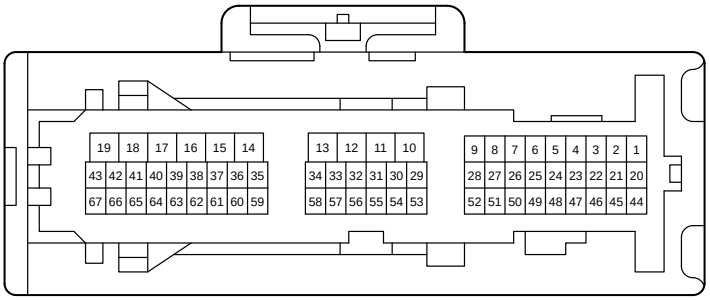

90980-12800

OU2
White

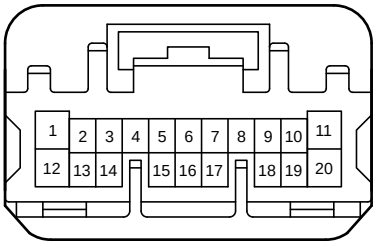

90980-12741

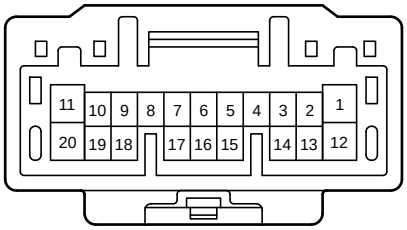

90980-12740